


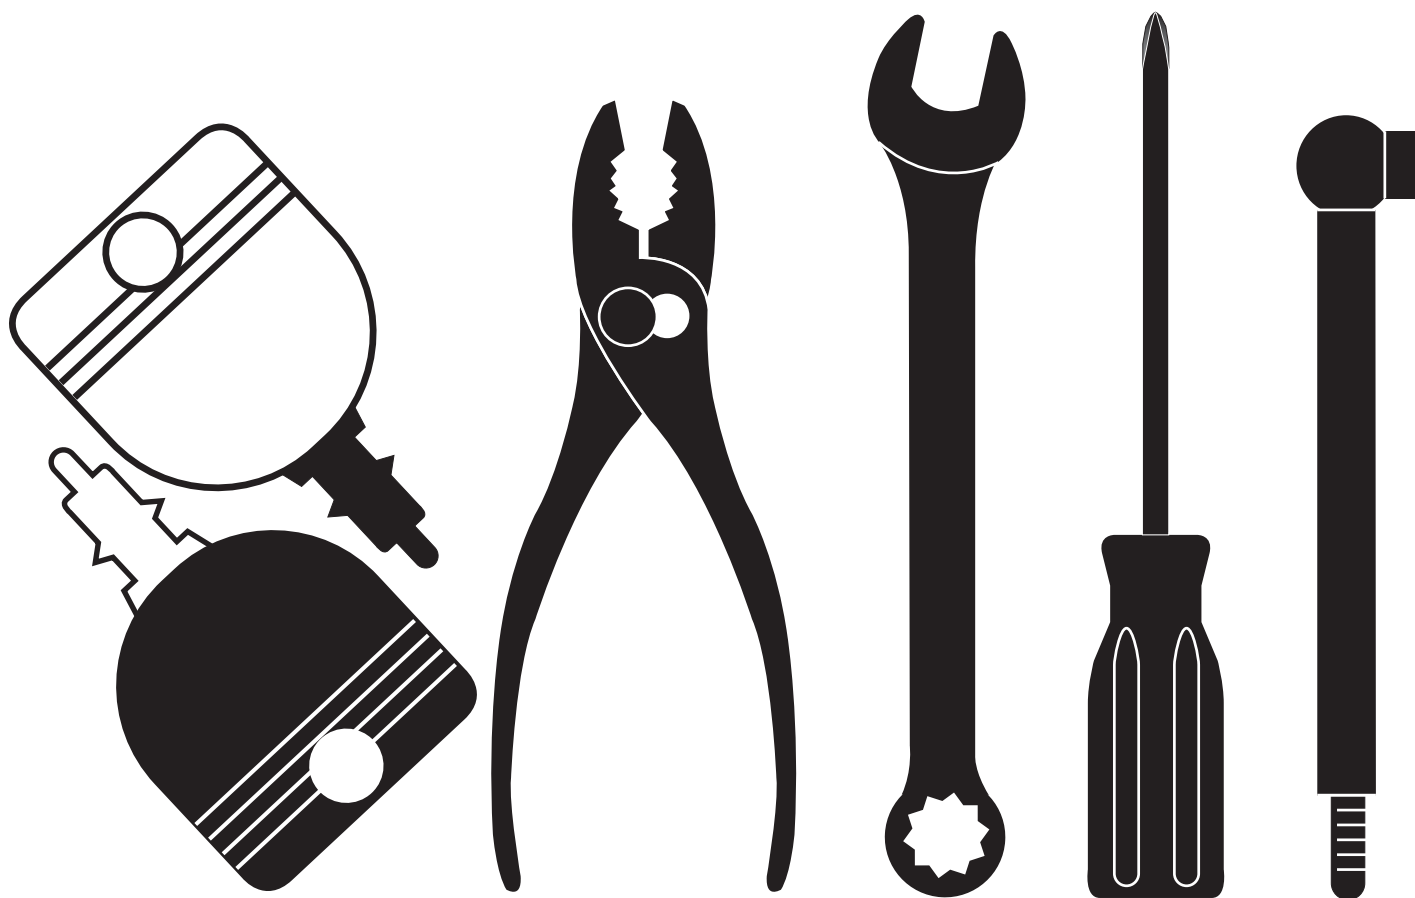

REPAIR PARTS MANUAL

MODEL NO. SO18542LT (96012009200)

18.5 HP 42 INCH

LAWN TRACTOR

For Parts and Service, contact our authorized distributor:
call 1-800-849-1297 For Technical Assistance: call 1-800-829-5886



HOW TO USE THIS MANUAL

This manual is designed to provide the customer with a means to identify the parts on his/her tractor when ordering repair parts. The illustrations may or may not represent the actual assemblies; therefore, it is not recommended to use this manual as a guide to assemble or disassemble the tractor. Some hardware and parts are drawn larger in order to more readily identify them.

Each tractor has its own model number.

The model number for your tractor can be found on the fender under the seat.

When ordering parts, always give the following information:

- Product - "TRACTOR"
- MODEL NUMBER - "SO18542LT" (96012009200)"
- Part Number
- Part Description

TABLE OF CONTENTS

SCHEMATIC 3

ELECTRICAL..... 4-5

CHASSIS 6-7

DRIVE..... 8-9

ENGINE..... 10-11

STEERING 12

SEAT 13

MOWER DECK 14-15

DECALS..... 16


MOWER LIFT..... 17

WARRANTY..... 18

TRACTOR - - MODEL NUMBER SO18542LT (96012009200), PRODUCT NO. 960 12 00-92
SCHEMATIC



SCH11

NOTE
YOUR TRACTOR IS EQUIPPED WITH A SPECIAL ALTERNATOR SYSTEM. THE LIGHTS ARE NOT CONNECTED TO THE BATTERY, BUT HAVE THEIR OWN ELECTRICAL SOURCE. BECAUSE OF THIS, THE BRIGHTNESS OF THE LIGHTS WILL CHANGE WITH ENGINE SPEED. AT IDLE THE LIGHTS WILL DIM. AS THE ENGINE IS SPEEDED UP, THE LIGHTS WILL BECOME THEIR BRIGHTEST.

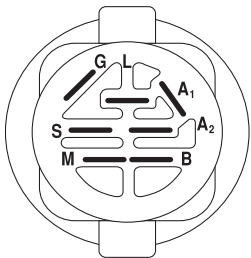


IGNITION SWITCH

POSITION	CIRCUIT	"MAKE"
OFF	M+G+A1	
RUN/OVERRIDE	B+A1	
RUN	B+A1	L+A2
START	B + S + A1	

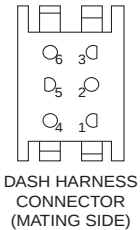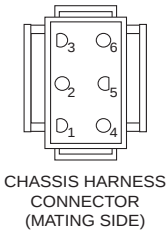


WIRING INSULATED CLIPS
NOTE: IF WIRING INSULATED CLIPS WERE REMOVED FOR SERVICING OF UNIT, THEY SHOULD BE RE-INSTALLED TO PROPERLY SECURE YOUR WIRING.

NON-REMOVABLE CONNECTIONS
REMOVABLE CONNECTIONS

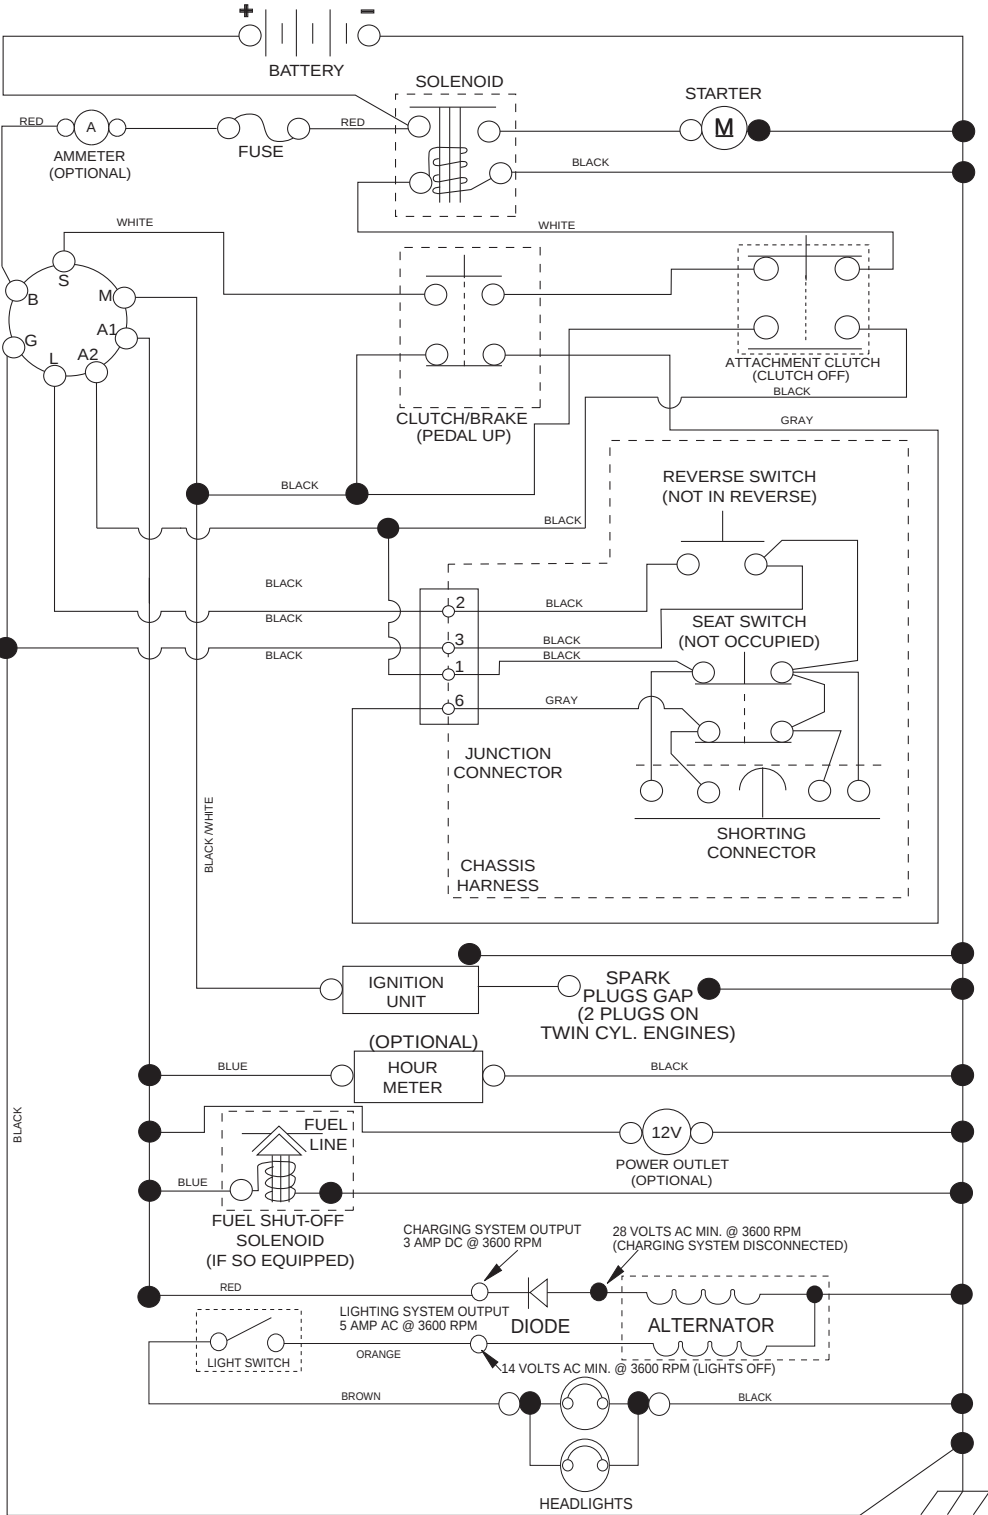

**TRACTOR - - MODEL NUMBER SO18542LT (96012009200), PRODUCT NO. 960 12 00-92
ELECTRICAL**

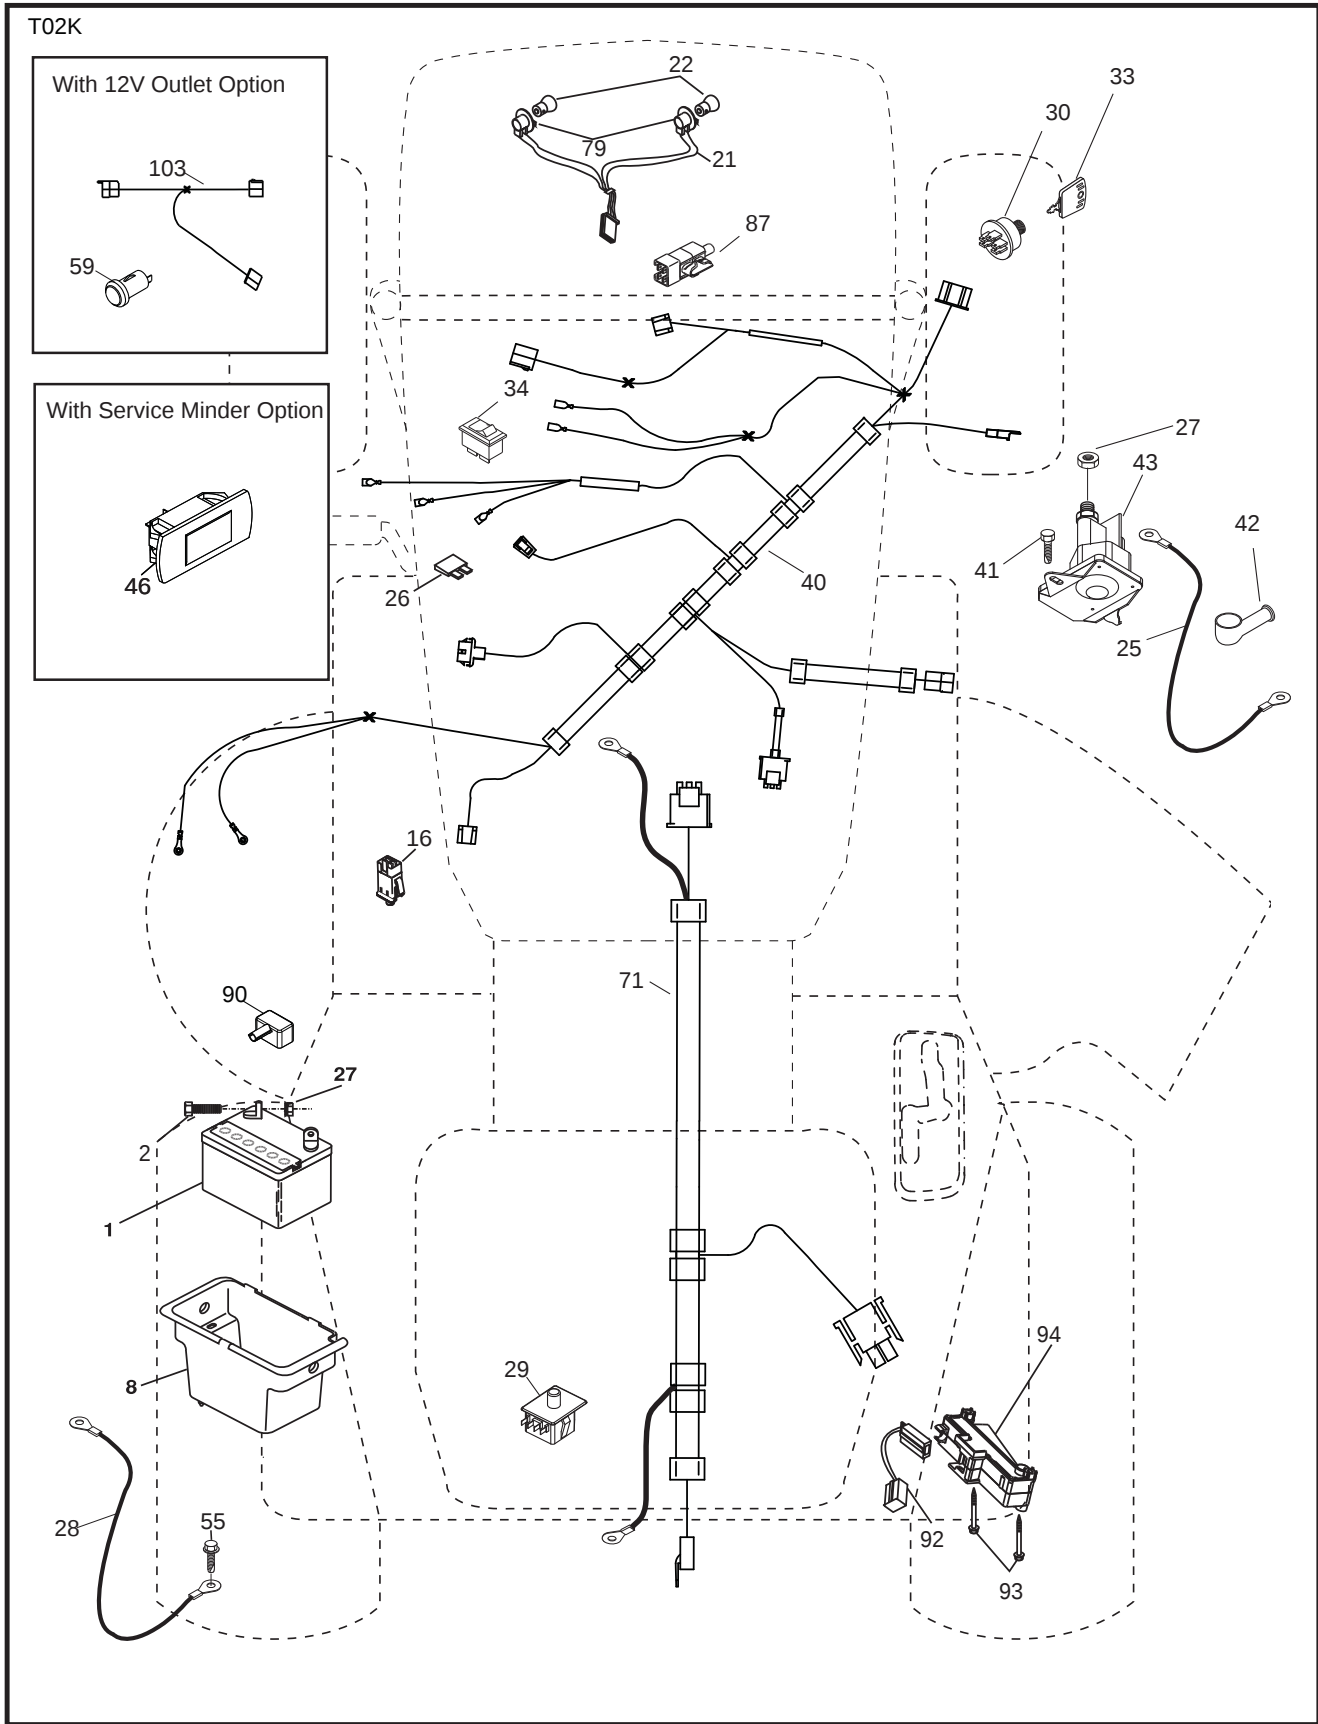


**TRACTOR - - MODEL NUMBER SO18542LT (96012009200), PRODUCT NO. 960 12 00-92
ELECTRICAL**

KEY NO.	PART NO.	DESCRIPTION
1	163465	Battery
2	74760412	Bolt Hex Hd 1/4-20 unc x 3/4
8	193228	Box Battery
16	176138	Switch Interlock
21	183759	Harness Asm Light w/4152j
22	4152J	Bulb Light #1156
25	412894	Cable Starter
26	175158	Fuse 20 AMP
27	73510400	Nut Keps Hex 1/4-20 unc
28	198885	Cable Ground 22" Black
29	192749	Switch Seat
30	193350	Switch Ign
33	411933	Key/Chain
34	110712X	Switch Light/Reset
40	401098	Harness Ign Dash
41	17720408	Bolt Blk Fin Hex 1/4-20 x 1/2
42	131563	Cover Terminal Red
43	192507	Solenoid
55	17060512	Screw 5/16-18 x 3/4
71	400449	Harness IGN Chassis
79	175242	Socket Asm. Bulb Twistlock
87	197802	Switch Interlock Clutch Cable
90	400725	Cover Terminal Battery
92	196615	Harness Pigtail
93	192540	Screw Plastite 10-14 x 2.0
94	191834	Module Reverse ROS

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm.

TRACTOR - - MODEL NUMBER SO18542LT (96012009200), PRODUCT NO. 960 12 00-92 CHASSIS

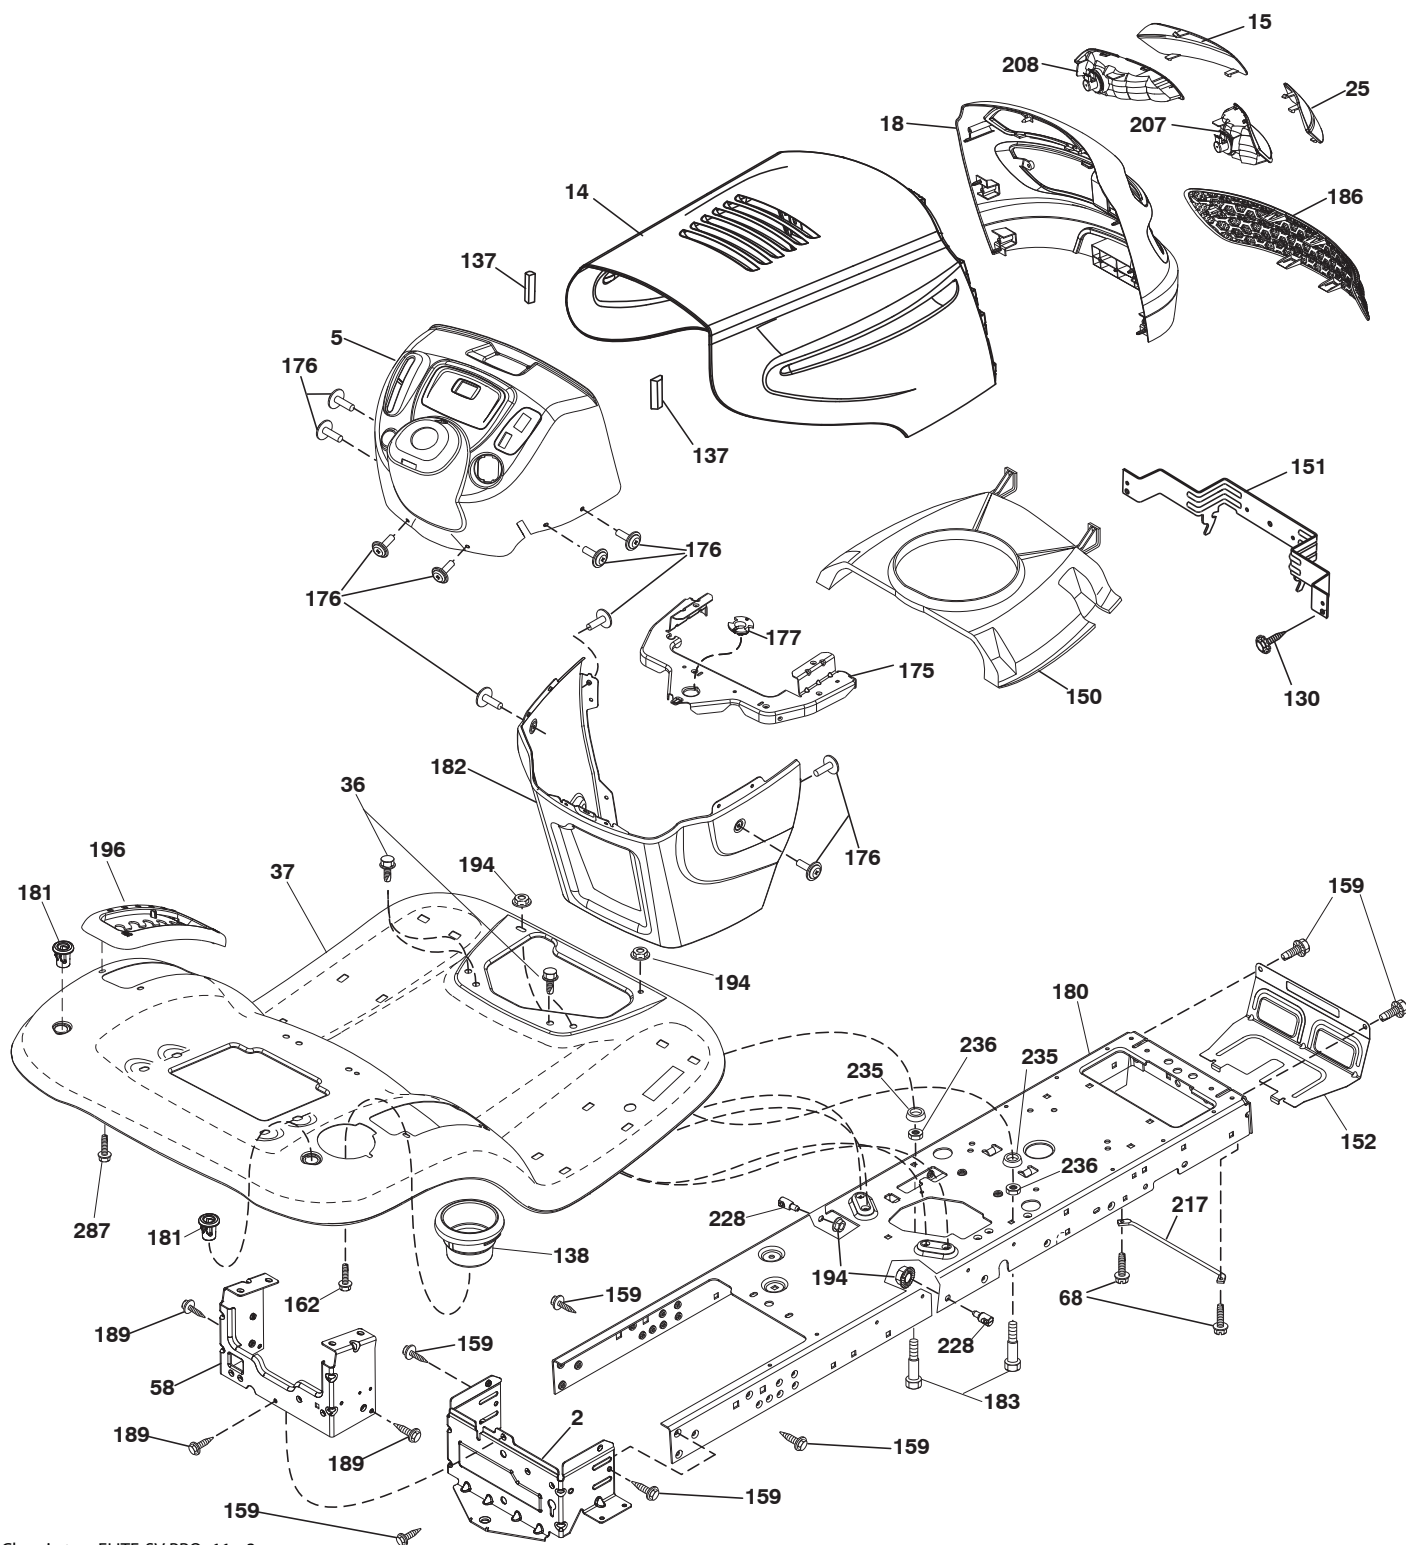

Chassis-tex_ELITE-SV PRO_11_r3

**TRACTOR - - MODEL NUMBER SO18542LT (96012009200), PRODUCT NO. 960 12 00-92
CHASSIS**

KEY NO.	PART NO.	DESCRIPTION
2	412282	Drawbar Lower
5	197783X428	Dash
14	183393X505	Hood
15	183834X599	Lens Grille LH
18	188223X505	Grille
25	183835X599	Lens Grille RH
36	17060512	Screw 5/16-18 x 3/4
37	414872X505	Fender
58	412280	Drawbar Upper
68	17490508	Screw Thdrol 5/16-18 x 1/2
130	416358	Screw #10 x 0.750
137	184921	Bumper Hood
138	193224X428	Cupholder
150	184322	Duct Heat Hood
151	407807	Bracket Pivot
152	194329	Shield Browning/Debris
159	17000612	Screw Hexwsh Thdrol 3/8-16 x 3/4
162	142432	Screw Hex Wsh Hi-Lo 1/4 x 1/2
175	193243	Crossmember
176	400776	Screw 10-24 x 5/8 Wshd Qdrx
177	195228	Bushing Steering
180	194260	Chassis
181	193102X428	Bushing Mtg. Fender Crgo.
182	193057	Dash Lower
183	74780520	Bolt Fin Hex 5/16-18 x 1-1/4
186	183829X428	Insert Grille
189	17000512	Screw 5/16-18 x 3/4
194	73900500	Nut Lock Hex Flange 5/16-18
196	414579	Console Asm. Deck Lift
207	183833	Bezel Grille RH
208	183832	Bezel Grille LH
217	409167	Rod Pivot Hood
228	195161	Stud Fastener
235	406129	Spacer Fender
236	73930500	Nut Center Lock 5/16-18
287	17600406	Screw 1/4-20 x 3/8

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

This exploded view diagram illustrates the assembly of a drive-tex_peerless_fender_33. The main components and their assembly sequence are as follows:

- Base Components:** The assembly starts with the main fender body (1) and the drive shaft (2). The drive shaft is connected to the drive pulley (61) and the fender pulley (50).
- Bracket and Support Assembly:** The fender body (1) is supported by a bracket (134) and a support arm (139). The support arm is connected to the drive shaft (2) via a pulley (140) and a bracket (141).
- Roller and Guide Assembly:** The fender body (1) is guided by a roller (51) and a guide arm (52). The roller is connected to the drive shaft (2) via a pulley (50) and a bracket (51).
- Fasteners and Hardware:** Various fasteners, including screws (125, 126, 127, 128, 129, 130, 131, 132, 133, 134, 135, 136, 137, 138, 139, 140, 141, 142, 143, 144, 145, 146, 147, 148, 149, 150, 151, 152, 153, 154, 155, 156, 157, 158, 159, 160, 161, 162, 163, 164, 165, 166, 167, 168, 169, 170, 171, 172, 173, 174, 175, 176, 177, 178, 179, 180, 181, 182, 183, 184, 185, 186, 187, 188, 189, 190, 191, 192, 193, 194, 195, 196, 197, 198, 199, 200, 201, 202, 203, 204, 205, 206, 207, 208, 209, 210, 211, 212, 213, 214, 215, 216, 217, 218, 219, 220, 221, 222, 223, 224, 225, 226, 227, 228, 229, 230, 231, 232, 233, 234, 235, 236, 237, 238, 239, 240, 241, 242, 243, 244, 245, 246, 247, 248, 249, 250, 251, 252, 253, 254, 255, 256, 257, 258, 259, 260, 261, 262, 263, 264, 265, 266, 267, 268, 269, 270, 271, 272, 273, 274, 275, 276, 277, 278, 279, 280, 281, 282, 283, 284, 285, 286, 287, 288, 289, 290, 291, 292, 293, 294, 295, 296, 297, 298, 299, 300), washers (125, 126, 127, 128, 129, 130, 131, 132, 133, 134, 135, 136, 137, 138, 139, 140, 141, 142, 143, 144, 145, 146, 147, 148, 149, 150, 151, 152, 153, 154, 155, 156, 157, 158, 159, 160, 161, 162, 163, 164, 165, 166, 167, 168, 169, 170, 171, 172, 173, 174, 175, 176, 177, 178, 179, 180, 181, 182, 183, 184, 185, 186, 187, 188, 189, 190, 191, 192, 193, 194, 195, 196, 197, 198, 199, 200, 201, 202, 203, 204, 205, 206, 207, 208, 209, 210, 211, 212, 213, 214, 215, 216, 217, 218, 219, 220, 221, 222, 223, 224, 225, 226, 227, 228, 229, 230, 231, 232, 233, 234, 235, 236, 237, 238, 239, 240, 241, 242, 243, 244, 245, 246, 247, 248, 249, 250, 251, 252, 253, 254, 255, 256, 257, 258, 259, 260, 261, 262, 263, 264, 265, 266, 267, 268, 269, 270, 271, 272, 273, 274, 275, 276, 277, 278, 279, 280, 281, 282, 283, 284, 285, 286, 287, 288, 289, 290, 291, 292, 293, 294, 295, 296, 297, 298, 299, 300), and nuts (125, 126, 127, 128, 129, 130, 131, 132, 133, 134, 135, 136, 137, 138, 139, 140, 141, 142, 143, 144, 145, 146, 147, 148, 149, 150, 151, 152, 153, 154, 155, 156, 157, 158, 159, 160, 161, 162, 163, 164, 165, 166, 167, 168, 169, 170, 171, 172, 173, 174, 175, 176, 177, 178, 179, 180, 181, 182, 183, 184, 185, 186, 187, 188, 189, 190, 191, 192, 193, 194, 195, 196, 197, 198, 199, 200, 201, 202, 203, 204, 205, 206, 207, 208, 209, 210, 211, 212, 213, 214, 215, 216, 217, 218, 219, 220, 221, 222, 223, 224, 225, 226, 227, 228, 229, 230, 231, 232, 233, 234, 235, 236, 237, 238, 239, 240, 241, 242, 243, 244, 245, 246, 247, 248, 249, 250, 251, 252, 253, 254, 255, 256, 257, 258, 259, 260, 261, 262, 263, 264, 265, 266, 267, 268, 269, 270, 271, 272, 273, 274, 275, 276, 277, 278, 279, 280, 281, 282, 283, 284, 285, 286, 287, 288, 289, 290, 291, 292, 293, 294, 295, 296, 297, 298, 299, 300) are used to secure the components.

TRACTOR - - MODEL NUMBER SO18542LT (96012009200), PRODUCT NO. 960 12 00-92 DRIVE

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	-----	Transaxle, Peerless 206-565	160	169484	Retainer Clip
2	123583X	Key Square	161	105709X	Spring, Return, Clutch
15	19131316	Washer 13/32 x 13/16 x 16 Ga.	165	196212	Busing Shaft Brake Hand Control
17	197297	Spring, Brake	166	197290	Nut Push .625
22	197660	Rod Shift	167	405257	Latch Brake Parking
23	106933X	Knob	172	197657	Strap Torque LH
26	197455	Spring Brake RTN	174	197289	Nut Push
29	197267	Rod, Brake	175	197858	Shaft Asm Shift
33	12000001	Ring E	176	196214	Arm Clevis Rod Shift
35	197722	Rod, Brake, Park	178	197456	Spring Shift
37	121749X	Washer 25/32 x 1-1/4 x 16 Ga.	183	137057	Spacer, Axle
42	8883R	Cover, Foot Pedal	184	198403X505	Handle Parking Brake
49	72110614	Bolt	185	72110622	Bolt
50	194327	Pulley Idler Flat	186	194321	Spacer Retainer
51	73900600	Lock Nut 3/8-16	187	19133210	Washer
52	194326	Idler V-Groove	188	194323	Link Clutch Ground Drive
56	194346	V-Belt, Drive	189	194317	Bellcrank Ground Drive
61	123666X	Pulley Transaxle	190	194318	Keeper Bellcrank Ground Drive
64	196200	Shaft Asm. Pedal Brake Control	192	150360	Nut Lock Center 1/4-28
70	193225X428	Console	193	17060512	Screw 5/16-18 x 3/4
73	74490544	Bolt 5/16-18 Gr. 5	195	197332	Bracket Brake Rod
74	142432	Screw 1/4 x 1/2	202	197859	Link Shift
116	73900500	Nut Lock Hex Flange 5/16-18	203	19111116	Washer 11/32 x 11/16 x 16 Ga.
125	17000512	Screw 5/16-18 x 3/4	205	121748X	Washer 25/32 x 1-5/8 x 16 Ga.
134	197857	Arm Shift	221	403187	Retainer Spring Clip Handle
139	74550412	Bolt 1/4-20 unf Gr. 8 w/Patch	232	74780716	Bolt 7/16-14 x 1 Gr. 5
140	10040400	Washer Lock Hvy Helical 1/4	233	405296	Washer Serrated
141	19091210	Washer 9/32 x 3/4 x 10 Ga.			
155	12000028	Ring Retainer			
157	105701X	Washer Plate Shf			
158	194352	Keeper T/A			
159	76020412	Pin Cotter 1/8 x 3/4			

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

This exploded view diagram illustrates the assembly of a generator. The main components are labeled as follows:

- 1**: Generator housing and internal assembly.
- 2**: Fuel tank with a handle.
- 9**: Grounding bracket.
- 12**: Pulley for the drive belt.
- 15**: Battery box.
- 18**: Battery terminal cap.
- 20**: Air filter assembly.
- 21**: Air filter mounting screw.
- 28**: Drive belt.
- 37**: Drive belt mounting pins.
- 42**: Pulley mounting pin.
- 45**: Mounting pin for the fuel tank.
- 50**: Mounting pin for the battery box.
- 51**: Mounting pin for the generator housing.
- 52**: Mounting pin for the fuel tank.
- 53**: Mounting pin for the battery box.
- 54**: Mounting pin for the generator housing.
- 55**: Mounting pin for the fuel tank.
- 56**: Mounting pin for the battery box.
- 57**: Mounting pin for the generator housing.
- 58**: Mounting pin for the fuel tank.
- 59**: Mounting pin for the battery box.
- 60**: Mounting pin for the generator housing.
- 61**: Mounting pin for the fuel tank.
- 62**: Mounting pin for the battery box.
- 63**: Mounting pin for the generator housing.
- 64**: Mounting pin for the fuel tank.
- 65**: Mounting pin for the battery box.
- 66**: Mounting pin for the generator housing.
- 67**: Mounting pin for the fuel tank.
- 68**: Mounting pin for the battery box.
- 69**: Mounting pin for the generator housing.
- 70**: Mounting pin for the fuel tank.
- 71**: Mounting pin for the battery box.
- 72**: Mounting pin for the generator housing.
- 73**: Mounting pin for the fuel tank.
- 74**: Mounting pin for the battery box.
- 75**: Mounting pin for the generator housing.
- 76**: Mounting pin for the fuel tank.
- 77**: Mounting pin for the battery box.
- 78**: Mounting pin for the generator housing.
- 79**: Mounting pin for the fuel tank.
- 80**: Mounting pin for the battery box.
- 81**: Fuel line.
- 82**: Fuel line fitting.
- 83**: Fuel line fitting.
- 84**: Fuel line fitting.
- 85**: Fuel line fitting.
- 86**: Fuel line fitting.
- 87**: Fuel line fitting.
- 88**: Fuel line fitting.
- 89**: Fuel line fitting.
- 90**: Fuel line fitting.
- 91**: Fuel line fitting.
- 92**: Fuel line fitting.
- 93**: Fuel line fitting.
- 94**: Fuel line fitting.
- 95**: Fuel line fitting.
- 96**: Fuel line fitting.
- 97**: Fuel line fitting.

Spark Arrester

10

TRACTOR - - MODEL NUMBER SO18542LT (96012009200), PRODUCT NO. 960 12 00-92 ENGINE

KEY NO.	PART NO.	DESCRIPTION
1	-----	Engine B&S Model No. 31N707
2	137352	Muffler
9	194319	Keeper Belt Engine
12	401985	Pulley Engine
15	407545	Tank Fuel 1.50
18	425162	Cap Asm
20	176636X428	Control Throttle/Choke
21	416358	Screw #10 x 0.750
28	401137	Fuel Line
29	137180	Spark Arrester Kit
37	123487X	Clamp Hose
42	10040700	Washer Lock 7/16
45	73510400	Nut Keps Hex 1/4-20 unc
69	165291	Gasket
79	192334	Screw Socket Hd 5/16-18 x .75
81	148456	Tube Drain Oil Easy
82	181654	Plug Drain Oil
84	17060620	Screw 3/8-16 x 1-1/4
85	173937	Bolt Hex 7/16-20 x 4 x Gr. 5-1.5
90	17000616	Screw 3/8-16 x 1.0
96	19091416	Washer 9/32 x 7/8 x 16 Ga.
97	17670412	Screw 1/4-20 x 3/4

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm


For engine service and replacement parts, call the toll free
number for your engine manufacturer listed below:

Briggs & Stratton 1-800-233-3723

Engine Power Rating Information


The gross power rating for individual gas engine models is labeled in accordance with SAE (Society of Automotive Engineers) code J11940 (Small Engine Power & Torque Rating Procedure), and rating performance has been obtained and corrected in accordance with SAE J1995 (Revision 2002-5). Actual gross engine power will be lower and is affected by, among other things, ambient operating conditions and engine-to-engine variability. Given both the wide array of products on which engines are placed and the variety of environmental issues applicable to operating the equipment, the gas engine will not develop the rated gross power when used in a given piece of power equipment (actual "on-site" or net horsepower). This difference is due to a variety of factors including, but not limited to, accessories (air cleaner, exhaust, charging, cooling, carburetor, fuel pump, etc.), application limitations, ambient operating conditions (temperature, humidity, altitude), and engine-to-engine variability. Due to manufacturing and capacity limitations, Briggs & Stratton may substitute an engine of higher rated power for this Series engine.

**TRACTOR - - MODEL NUMBER SO18542LT (96012009200), PRODUCT NO. 960 12 00-92
STEERING**



NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - - MODEL NUMBER SO18542LT (96012009200), PRODUCT NO. 960 12 00-92
SEAT

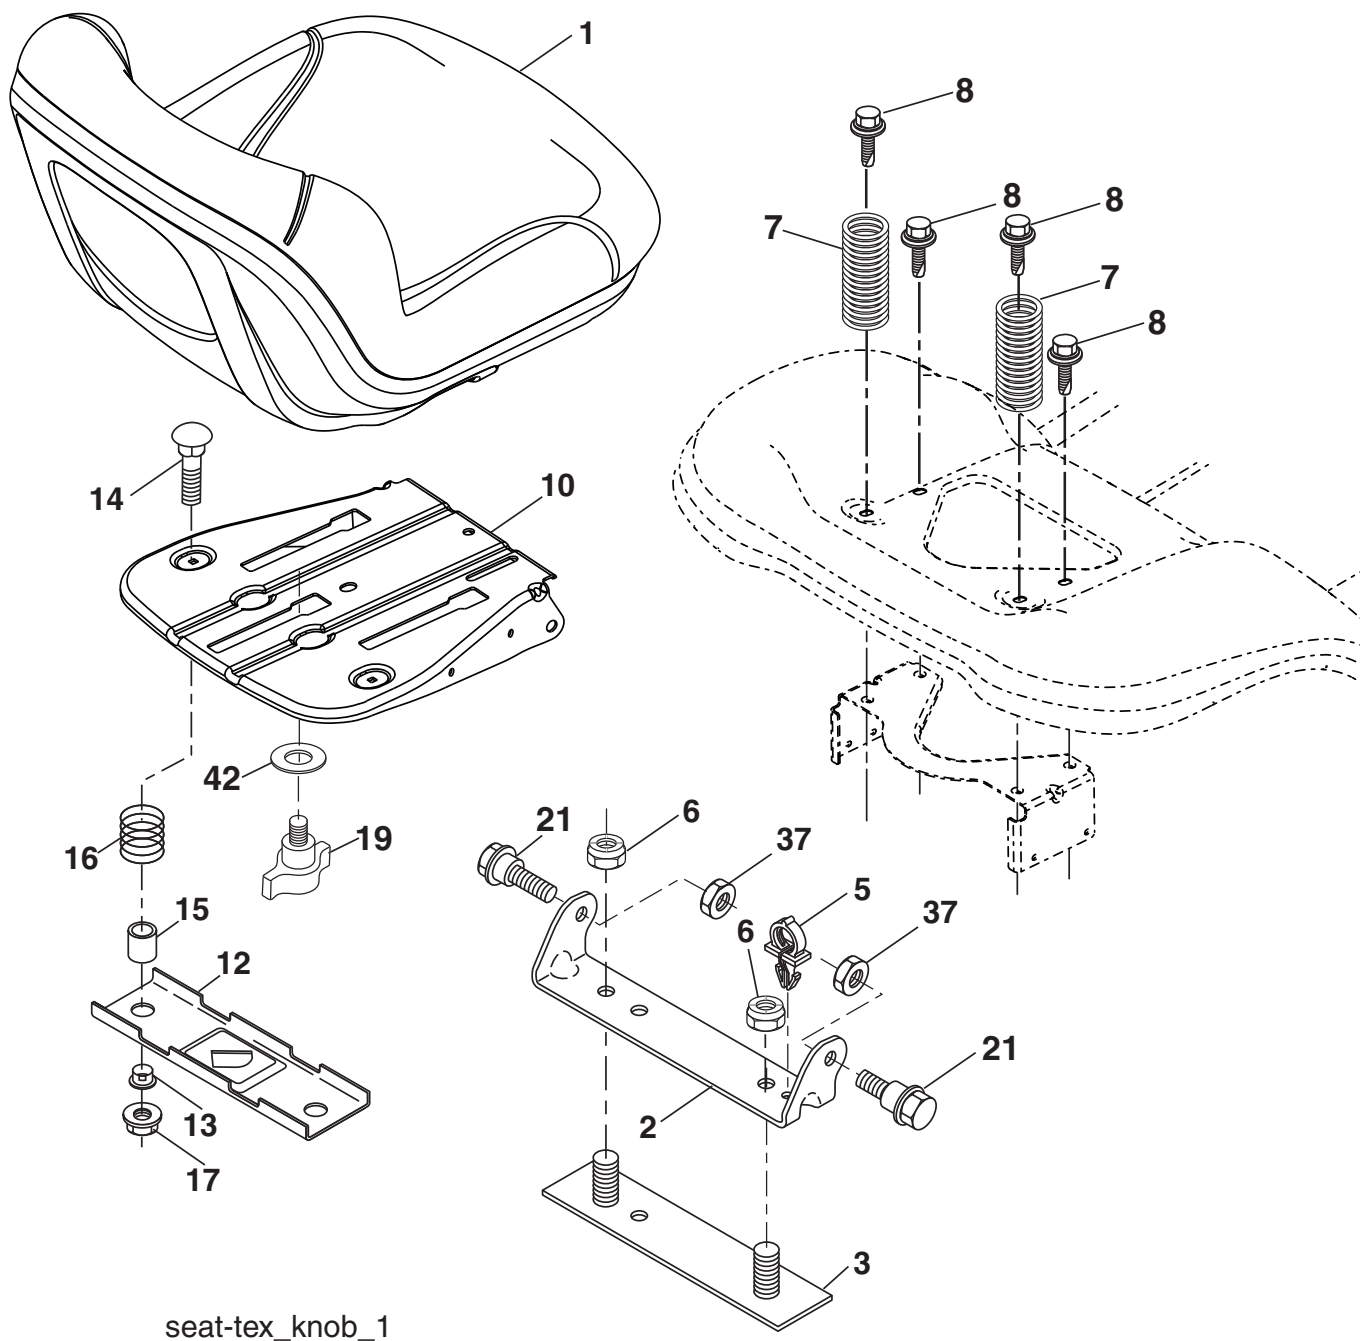


KEY NO.	PART NO.	DESCRIPTION
1	197511	Seat
2	180166	Bracket Pivot Fender
3	140675	Strap, Asm Fender
5	145006	Clip Push-In Hinged
6	73800600	Nut, Lock w/Ins. 3/8-16 unc
7	124181X	Spring, Seat Cprsn
8	171877	Bolt 5/16-18 unc x 3/4 w/Sems
10	199180	Pan, Seat
12	199370	Bracket Seat
13	121248X	Bushing Snap
14	72050412	Bolt RDHD SHT NK 1/4-20 x 1-1/2

KEY NO.	PART NO.	DESCRIPTION
15	134300	Spacer Split 28 x .96
16	123740X	Spring CRPSN Plate SW 1.310
17	123976X	Nut Lock 1/4
19	199372	Knob Seat
21	171852	Bolt, Shoulder 5/16-18
37	73800500	Nut, Lock 5/16-18 unc
42	199371	Washer Cup

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - - MODEL NUMBER SO18542LT (96012009200), PRODUCT NO. 960 12 00-92
MOWER DECK

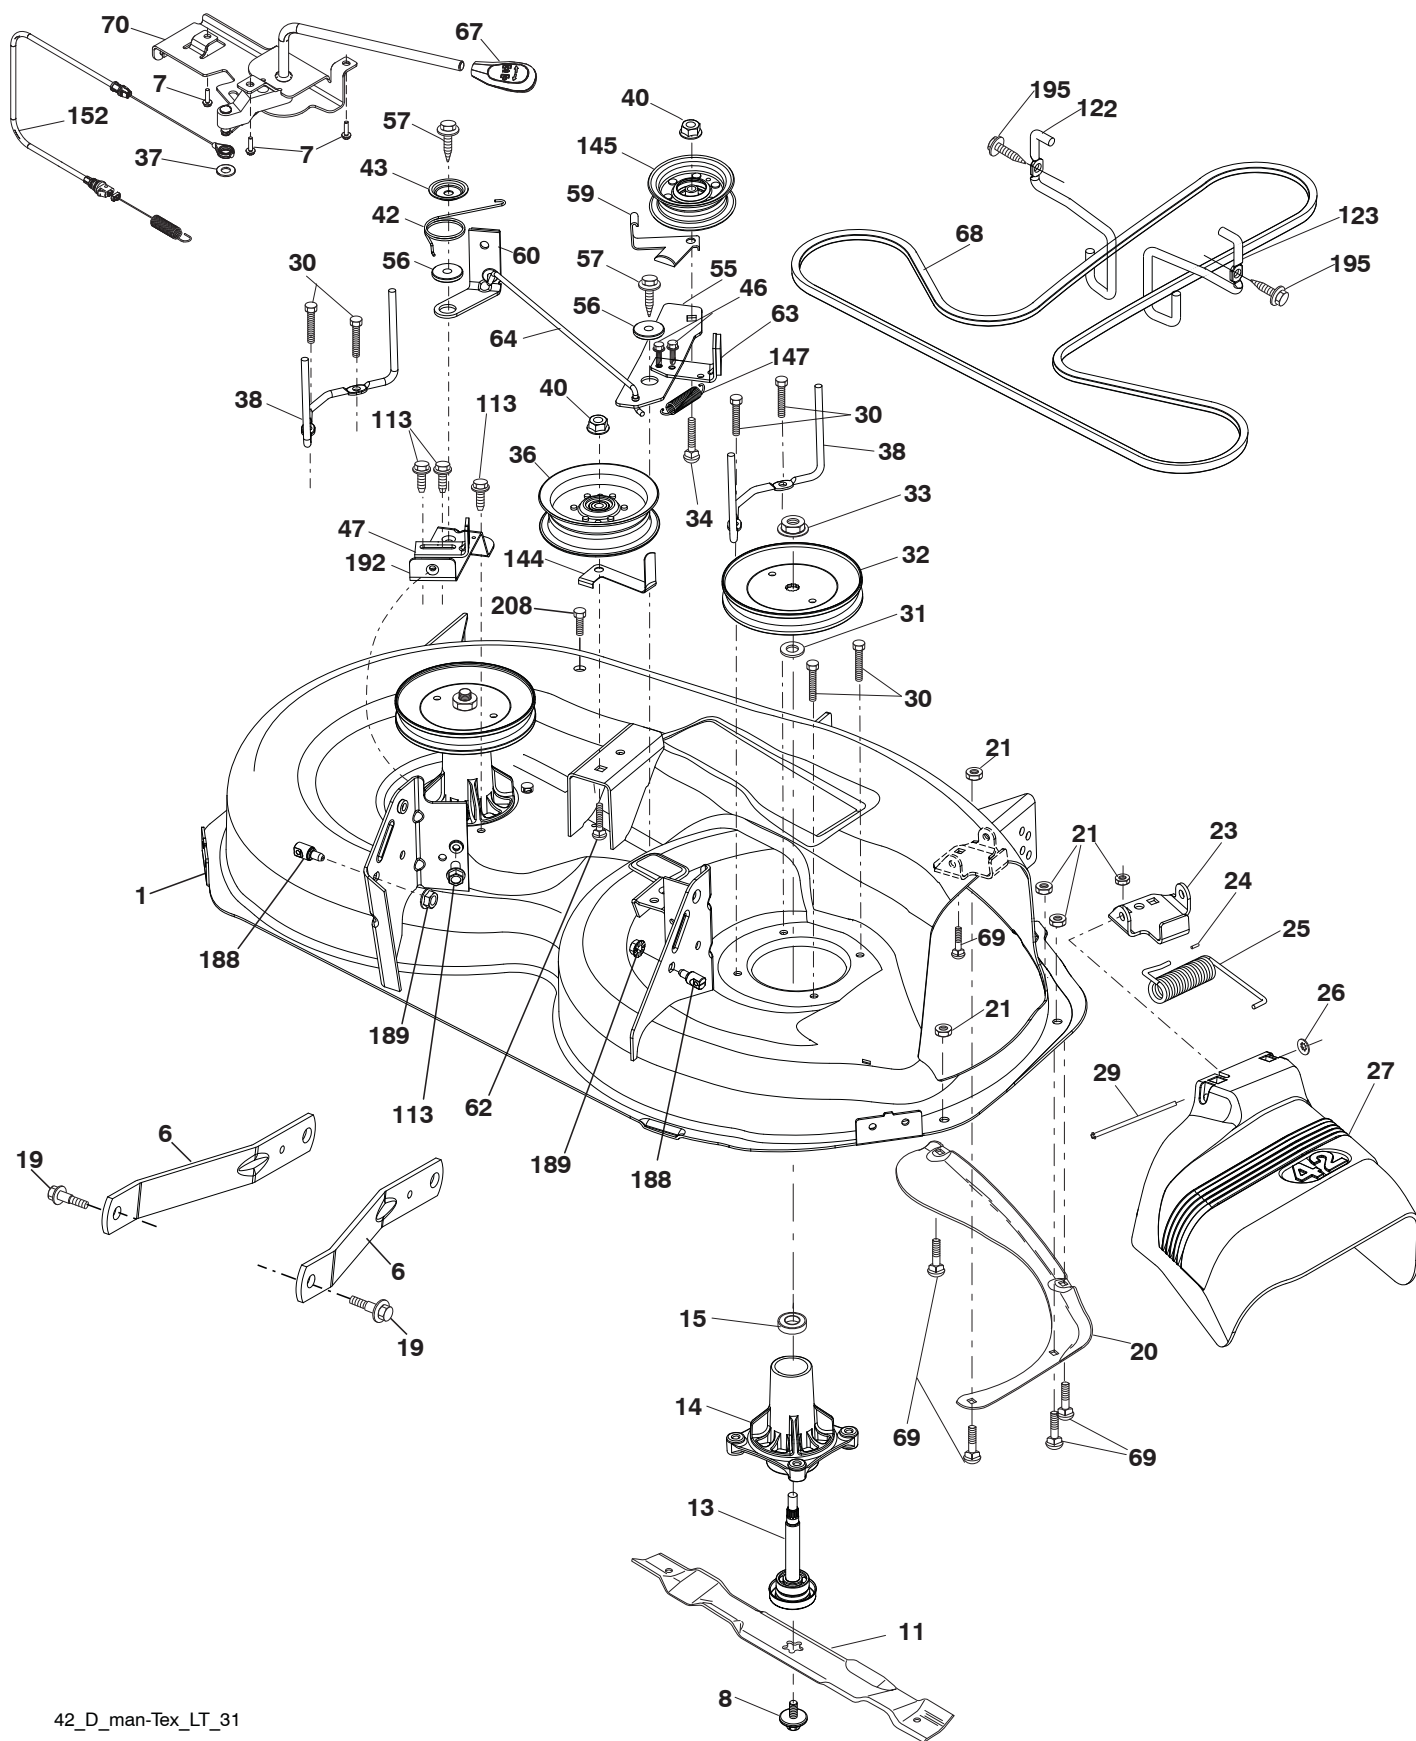


**TRACTOR - - MODEL NUMBER SO18542LT (96012009200), PRODUCT NO. 960 12 00-92
MOWER DECK**

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	199911	Mower Housing	47	197250	Bracket Clutch Cable
6	195186	Arm Suspension	55	197249	Arm, Idler
7	416358	Screw #10 x 0.750 BOS Thread	56	199092	Spacer, Retainer
8	193003	Bolt/Washer Asm 7/16-20 unf	57	17000616	Screw Hexwsh Thd 3/8-16 x 1
- -	139775	Blade, 42" Mulching Premium (For better wear when mulching)	59	141043	Guard, Tuv Idler (94)
11	138971	Blade, 42" Hi-Lift (For bagging or discharge)	60	197261	Arm Brake Mower
- -	134149	Blade, 42" Mulching Std (For mulching mowers only)	62	72110616	Bolt Rdhd Sqnk 3/8-16 unc x 2
13	192872	Shaft Assembly, Mandrel	63	199477	Arm Brake Mower
14	187281	Housing, Mandrel	64	199790	Linkage Brake
15	110485X	Bearing, Ball, Mandrel	67	198398X428	Handle, Clutch Cable
19	196539	Bolt, Shoulder	68	197253	V-Belt
20	159770	Baffle, Vortex	69	72140505	Bolt Rdhd Sqnk 5/16-18 x 5/8
21	73680500	Nut, Crownlock 5/16-18 unc	70	198332	Clutch Asm. Manual
23	192557	Bracket, Deflector	113	17000510	Screw 5/16-18
24	105304X	Cap, Sleeve	122	197258	Keeper Belt Eng. LH
25	197026	Spring, Torsion, Deflector	123	197259	Keeper Belt Eng. RH
26	110452X	Nut, Push	144	199204	Keeper Belt
27	193108X428	Shield, Deflector	145	193197	Pulley Idler Primary
29	131491	Rod, Hinge	147	401971	Spring Return
30	173984	Screw Thdrol Rolling Wsh Hd	152	408714	Cable Clutch Manual w/Spr.
31	187690	Washer, Spacer	188	195161	Stud Fastener
32	197473	Pulley, Mandrel	189	73900500	Nut Lock Hex Flange
33	400234	Nut, Toplock, Flanged	192	197260	Bracket Brake Stand LH
34	72110612	Bolt Carr Sh. 3/8-16 x 1-1/2 Gr. 5	195	17000612	Screw Hexwsh Thdr 3/8-16 x 3/4
36	197379	Pulley, Idler 4.50 RAW	208	17670608	Screw THDROL 3/8-16 x 1/2
37	19131316	Washer 13/32 x 13/16 x 16 Ga.	- -	192870	Mandrel Assembly (Includes housing, shaft assembly, and bearing only - pulley/nut/washer and blade bolt/washers not included)
38	199189	Keeper Belt LH Mandrel	- -	415241	Replacement Mower, Complete
40	73900600	Nut, Lock Flg. 3/8-16 unc			
42	198410	Spring Torsion Brake			
43	197256	Spring Torsion Retainer			
46	137729	Screw Thd Roll 1/4-20 x 5/8			


NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - - MODEL NUMBER SO18542LT (96012009200), PRODUCT NO. 960 12 00-92
DECALS

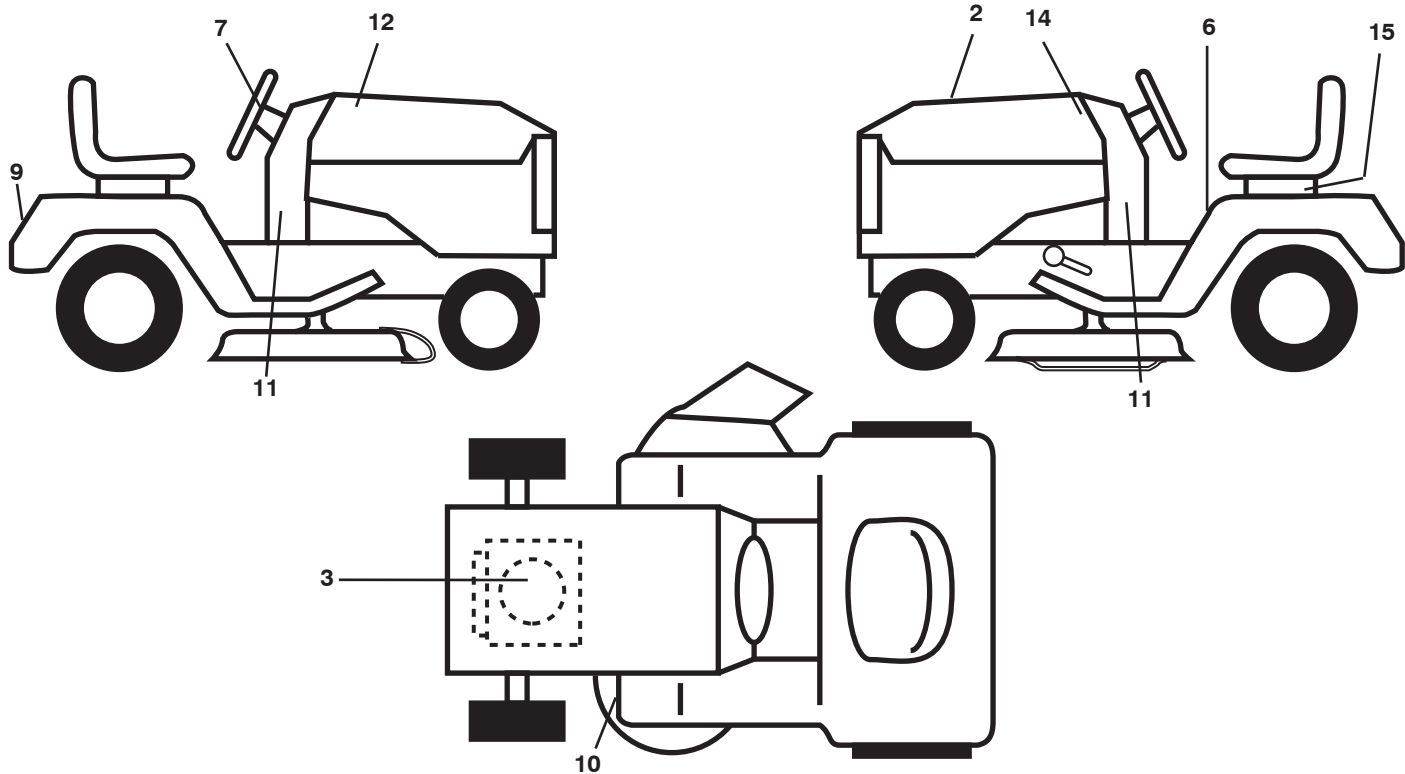

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
2	426688	Decal, Replacement	12	195413	Decal, Hood RH
3	408820	Decal, Engine HP	14	195414	Decal, Hood LH
6	411657	Decal, Fender Warning (E&F)	15	145005	Decal, Caution, Battery
7	427481	Decal, Ins Str Wh	--	193226X428	Pad Footrest LH
9	190429	Decal, Fender	--	193227X428	Pad Footrest RH
10	160396	Decal, V-Belt Sch.	--	427473	Manual, Operator's, English & French
11	402209	Decal, Dash Lower	--	427474	Manual, Parts, English & French


WHEELS & TIRES

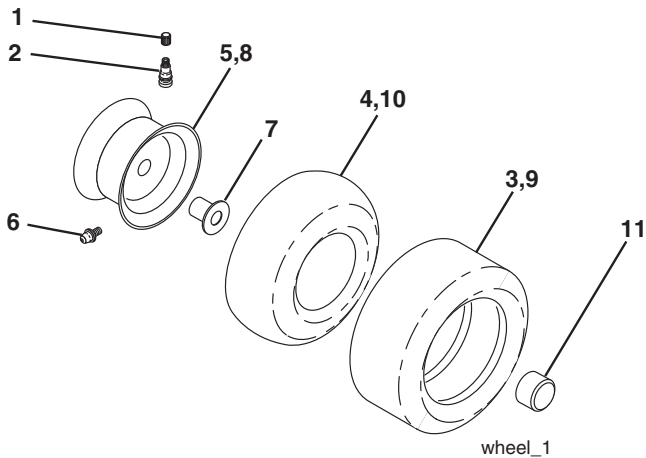

KEY NO.	PART NO.	DESCRIPTION
1	59192	Cap, Tire Valve
2	65139	Stem, Valve
3	106222X	Tire, Front
4	59904	Tube, Front (Service item only)
5	106732X624	Rim Assembly, 6" Front
6	278H	Fitting, Grease (Front wheel only)
7	9040H	Bearing, Flange (Front wheel only)
8	106108X624	Rim Assembly, 8" Rear
9	420531	Tire, Rear
10	7152J	Tube, Rear (Service item only)
11	104757X428	Cap, Hub Axle
--	144334	Sealant, Tire (10 oz. Tube)

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR - - MODEL NUMBER SO18542LT (96012009200), PRODUCT NO. 960 12 00-92
MOWER LIFT

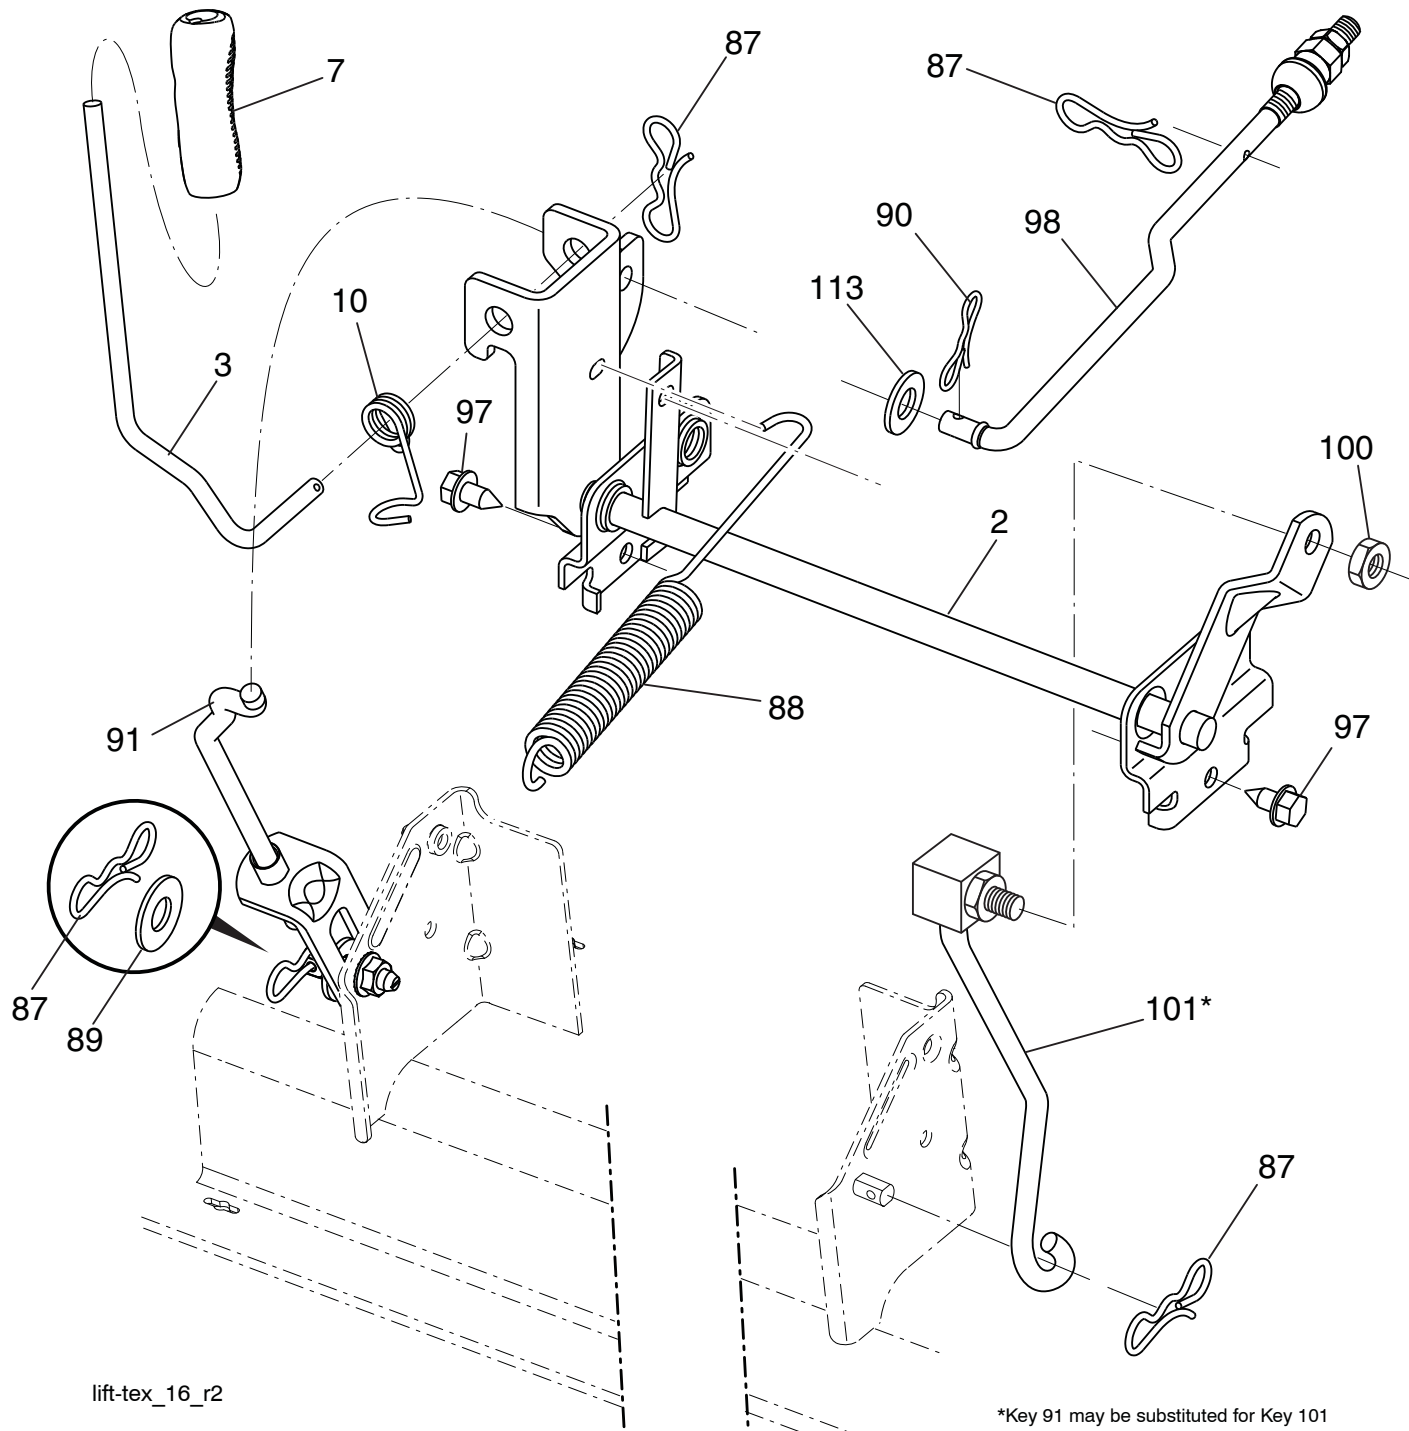

KEY NO.	PART NO.	DESCRIPTION
2	195223	Shaft Asm., Lift
3	195231	Lever Asm., Lift RH
7	196492X428	Grip, Lever
10	196314	Spring Torsion
87	194209	Pin Cotter 7/16 Bow Tie Lock
88	410710	Spring Lift Assist
89	19191912	Washer Clear Zinc
90	194208	Pin Cotter 5/16 Bow Tie Lock
91	195181	Link Lift Susp Mower Rear

KEY NO.	PART NO.	DESCRIPTION
97	17000612	Screw 3/8-16 x .75
98	195270	Link Lift Susp. Front Mower
100	73930600	Nut Lock 3/8-16 unc
101	407003	Link Asm. Lift FXD
113	19171912	Washer 17/32 x 1-3/16 x 12 Ga.

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

LIMITED WARRANTY

The Manufacturer warrants to the original consumer purchaser that this product as manufactured is free from defects in materials and workmanship. For a period of two (2) years from date of purchase by the original consumer purchaser, we will repair or replace, at our option, without charge for parts or labor incurred in replacing parts, any part which we find to be defective due to materials or workmanship. This Warranty is subject to the following limitations and exclusions.

1. This warranty does not apply to the engine, transaxle/transmission components, battery (except as noted below) or components parts thereof. Please refer to the applicable manufacturer's warranty on these items.
2. Transportation charges for the movement of any power equipment unit or attachment are the responsibility of the purchaser. Transportation charges for any parts submitted for replacement under this warranty must be paid by the purchaser unless such return is requested by the manufacturer.
3. Battery Warranty: On products equipped with a Battery, we will replace, without charge to you, any battery which we find to be defective in manufacture, during the first ninety (90) days of ownership. After ninety (90) days, we will exchange the Battery, charging you 1/12 of the price of a new Battery for each full month from the date of the original sale. Battery must be maintained in accordance with the instructions furnished.
4. The Warranty period for any products used for rental or commercial purposes is limited to 90 days from the date of original purchase.
5. This Warranty applies only to products which have been properly assembled, adjusted, operated, and maintained in accordance with the instructions furnished. This Warranty does not apply to any product which has been subjected to alteration, misuse, abuse, improper assembly or installation, delivery damage, or to normal wear of the product.
6. Exclusions: Excluded from this Warranty are belts, blades, blade adapters, normal wear, normal adjustments, standard hardware and normal maintenance.
7. In the event you have a claim under this Warranty, you must return the product to an authorized service dealer.

Should you have any unanswered questions concerning this Warranty, please contact:

HOP
Outdoor Products Customer Service Dept.
1030 Stevens Creek Road
Augusta, GA 30907 USA

In Canada contact:
HOP
5855 Terry Fox Way
Mississauga, Ontario
L5V 3E4

giving the model number, serial number and date of purchase of your product and the name and address of the authorized dealer from whom it was purchased.

THIS WARRANTY DOES NOT APPLY TO INCIDENTAL OR CONSEQUENTIAL DAMAGES AND ANY IMPLIED WARRANTIES ARE LIMITED TO THE SAME TIME PERIODS STATED HEREIN FOR OUR EXPRESSED WARRANTIES. Some areas do not allow the limitation of consequential damages or limitations of how long an implied Warranty may last, so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may have other rights which vary from locale to locale.

This is a limited Warranty within the meaning of that term as defined in the Magnuson-Moss Act of 1975.

GARANTIE LIMITEE

Le Fabricant garantit à l'acheteur initial que son produit tel que manufacturé est libre de défaut de matière et d'ouvrage. Pendant deux (2) ans, à compter de la date d'achat de la part de l'acheteur initial, nous réparerons ou remplacerons à notre choix, gratuitement, toute pièce, sur laquelle nous estimerons qu'il existe un défaut de matière ou d'ouvrage. Cette garantie est soumise aux limitations et exceptions suivantes:

1. Cette garantie ne couvre pas le moteur, la transmission/composants, la batterie (sauf comme mentionnée ci-dessous) ou les pièces détachées. Veuillez-vous consulter la garantie applicable du fabricant des articles.

2. L'acheteur est responsable des frais de transport de tous les équipements actionnés par moteur ou les accessoires. L'acheteur est responsable des frais aussi du transport de toutes les pièces (couvertes par cette garantie) soumis pour le remplacement à moins que manufacturé demande à l'acheteur de renvoyer les pièces.

3. Garantie de la batterie: Pour les produits équipés d'une batterie, nous remplacerons, gratuitement, toute batterie estimée défectueuse pendant les quatre-vingt-dix (90) jours initiaux suivant l'achat. Après quatre-vingt-dix (90) jours, nous échangerons la batterie, le coût pour vous être 1/12 du prix d'une nouvelle batterie pour chaque mois complet à compter de la date d'achat initiale. La batterie doit être entretenue selon les directives données dans la documentation appropriée.

4. La période de garantie applicable aux produits proposés en location ou à des fins commerciales est limitée à quatre-vingt-dix (90) jours à compter de la date d'achat initiale.

5. Cette garantie ne s'applique qu'aux produits correctement montés, réglés, utilisés et entretenus conformément aux instructions données dans la documentation appropriée. Cette garantie ne s'applique pas aux produits qui ont été modifiés, utilisés incorrectement, abusés, mal assemblés, mal installés ou avariés lors de la livraison ou usage normal.

6. Exclusions: Les courroies, les lames, les adaptateurs de lame, l'usage normal, les réglages normaux, la visserie standard, et l'entretien normal sont exclus de cette garantie.

7. En cas de problème entrant dans le cadre de cette garantie, veuillez-vous retourner votre machine à un concessionnaire autorisé.

Si vous auriez aucune question sans réponse concernant cette garantie, s'il vous plaît contactez:

HOP
Outdoor Products Customer Service Dept.
1030 Stevens Creek Road
Augusta, GA 30907 USA


Au Canada:
HOP
5855 Terry Fox Way
Mississauga, Ontario
L5V 3E4

en nous donnant le numéro du modèle, le numéro de série, la date d'achat de votre machine ainsi que l'adresse du concessionnaire autorisé chez qui vous l'avez achetée.

CETTE GARANTIE NE COUVRE AUCUN DOMMAGE INCIDENTEL OU CONSÉQUENT ET TOUTE GARANTIE IMPLICITE EST LIMITEE AUX MEMES PERIODES PRECISEES ICI POUR LES GARANTIES EXPLICITES DU FABRICANT. Certaines localités ne permettent aucune restriction des dommages conséquents ou de la durée d'une garantie implicite et; par conséquent, il se pourrait que les restrictions et exclusions énoncées ci-dessus ne s'appliquent pas à vous. Cette garantie vous donne droits légaux spécifiques et vous pouvez aussi jouir d'autres droits d'un endroit à un autre.

Cette garantie est une garantie limitée comme définie dans la loi Magnuson-Moss Act de 1975.


LEVAGE DE TONDEUSE



NO.	DE	REF.	PIECE	DESCRIPTION
-----	----	------	-------	-------------

NO. DE PIECE	DESCRIPTION
--------------------	-------------


*C'est possible No. de Ref. 101 sera substitué avec No. de Ref. 91

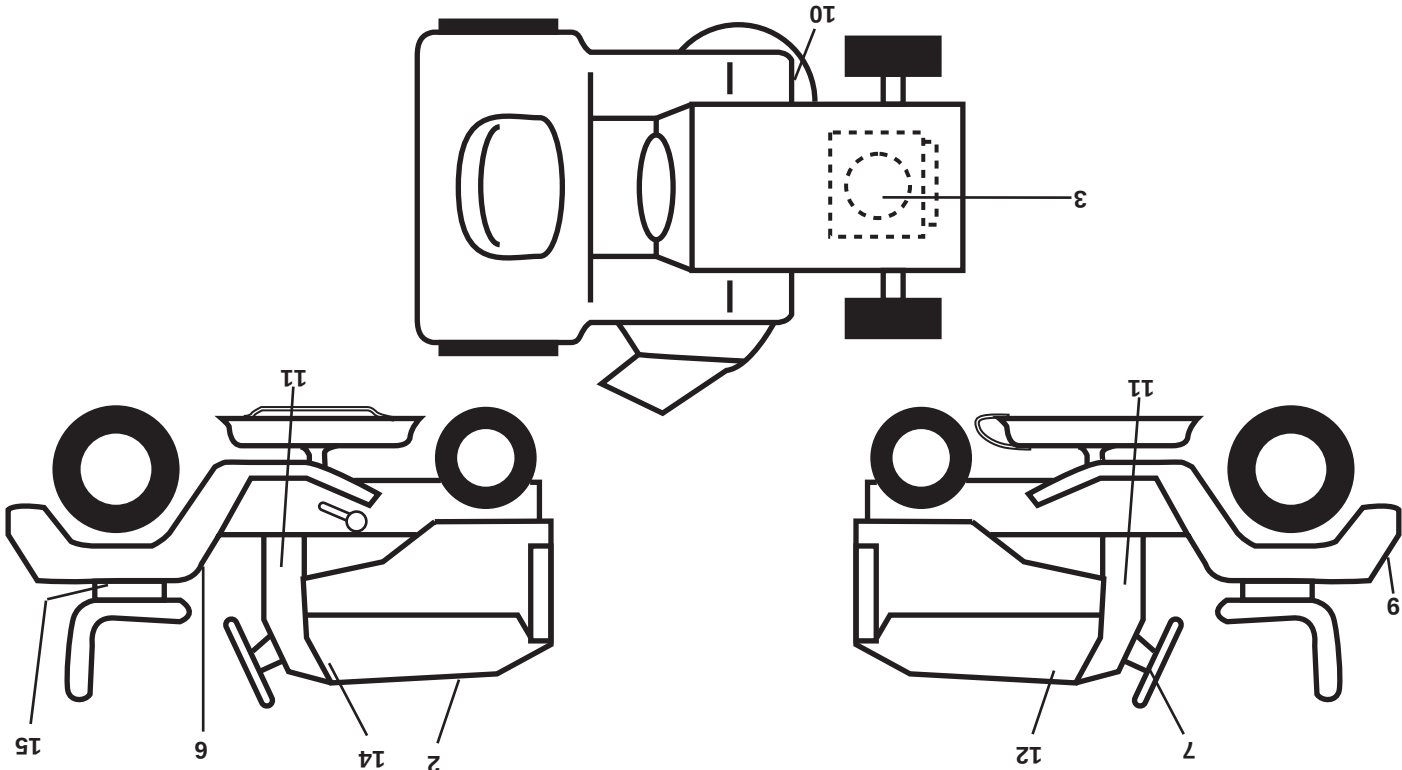

NO.	DE	RÉF.	DESCRIPTION
2	DE	426688	Décalcomanie Remplacer
3	DE	408820	Décalcomanie de C.V. du moteur
6	DE	411657	Décalcomanie d'aile avertissement
7	DE	427481	Décalcomanie de l'insert du volant de direction (anglais/français)
9	DE	190429	Décalcomanie du l'aile
10	DE	160396	Décalcomanie de schéma de courroie trapézoïdale

NO.	DE	RÉF.	DESCRIPTION
11	DE	402209	Décalcomanie tableau de bord
12	DE	195413	Décalcomanie de capot C.D.
14	DE	195414	Décalcomanie de capot C.G.
15	DE	145005	Décalcomanie de danger/poison de la batterie
--	DE	193226X428	Décalcomanie du repose-pied C.G.
--	DE	193227X428	Décalcomanie du repose-pied C.D.
--	DE	427473	Manuel de l'opérateur (anglais/français)
--	DE	427474	Manuel du pièces (anglais/français)

ROUES & PNEUS

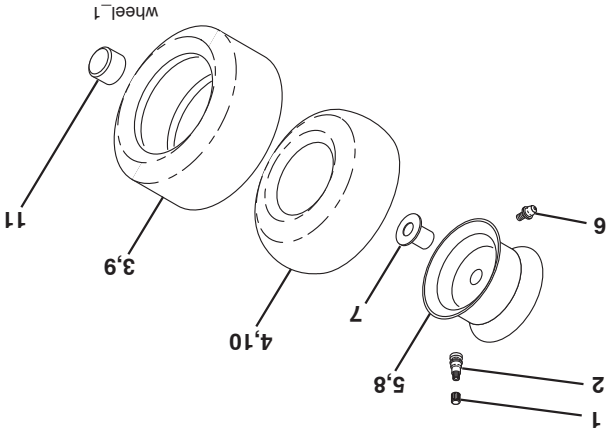

NO.	DE	RÉF.	DESCRIPTION
1	DE	59192	Capuchon de valve de pneu
2	DE	65139	Tubulure de valve
3	DE	106222X	Pneu antérieur
4	DE	59904	Chambre à air antérieure (Entretien seulement)
5	DE	106732X624	Ensemble de la jante antérieure 6 po.
6	DE	278H	Graisseur (roue antérieure seulement)
7	DE	9040H	Palier à bride (roue antérieure seulement)
8	DE	106108X624	Ensemble de la jante arrière 8 po.
9	DE	420531	Pneu arrière
10	DE	7152J	Chambre à air arrière (Entretien seulement)
11	DE	104757X428	Capuchon de l'essieu
--	DE	144334	Joint d'étanchéité de pneu (tube de .30L [10 oz.])

REMARQUE: Toutes les dimensions de composant sont données en pouces E.-U. -- 1 pouce = 25,4 mm.

TRACTEUR - - NO. DE MODÈLE SO18542LT (96012009200),NO. DE PRODUIT 960 12 00-92

CARTER DE TONDEUSE


NO. DE PIÈCE	DESCRIPTION	NO. DE PIÈCE	DESCRIPTION
1	Boîtier de tondeuse	55	Bras du galet-tendeur
6	Bras de suspension	56	Entretoise
7	Vis #10 x .750	57	Vis 3/8-16 x 1
8	Ensemble du Boulon/Rondelle 7/16-20	59	Protecteur
--	La lame, 42" Paillet la Prime (Pour	60	Levier de frein
11	mieux l'usure quand paille) (Pour	62	Boulon 3/8-16 unc x 2
138971	La lame, 42" Salut-Soulève (Pour retient	63	Levier de frein
--	ou décharge)	64	Raccord
134149	La lame, 42" Paillet Standard (Pour	67	Guidon du câble d'embrayage
--	paille des tondeuses à gazon seule-	68	Courroie trapézoïdale
13	Ensemble de l'arbe	69	Boulon 5/16-18 x 5/8
14	Carter du mandrin	70	Ensemble du embrayage
15	Roulement à billes du Mandrin	113	Vis 5/16-18
16	110485X	122	Guide-courroie du Moteur C.G.
19	196539	123	Guide-courroie du Moteur C.D.
20	159770	144	Guide-courroie
21	73680500	145	Pouille de tension principal
23	192557	147	Ressort de rappel
24	105304X	152	Câbler le Manuel d'Embrayage
25	197026	152	Attache
26	110452X	188	Ecroû frein
27	193108X428	189	Ecroû frein
29	131491	192	Support C.G.
30	173984	195	Vis 3/8-16 x 3/4
31	187690	197	Vis 3/8-16 x 1/2
32	197473	208	Vis 3/8-16 x 1/2
33	400234	192870	Ensemble du mandrin (inclut boîtier,
34	72110612		ensemble arbe, et palier seulement -
36	197379	--	pouille/écrou/rondelle et lame, boulon/
37	19131316	--	rondelle ne pas inclut)
38	199189	415241	La Tondeuse à gazon de remplacement,
40	73900600		Compléter
42	198410		
43	197256		
46	137729		
47	197250		


REMARQUE: Toutes les dimensions de composant sont données en pouces E.-U. -- 1 pouce = 25,4 mm.

TRACTEUR - - NO. DE MODÈLE SO18542LT (96012009200), NO. DE PRODUIT 960 12 00-92

CARTER DE TONDEUSE

42_D_man-Tex_LT_31

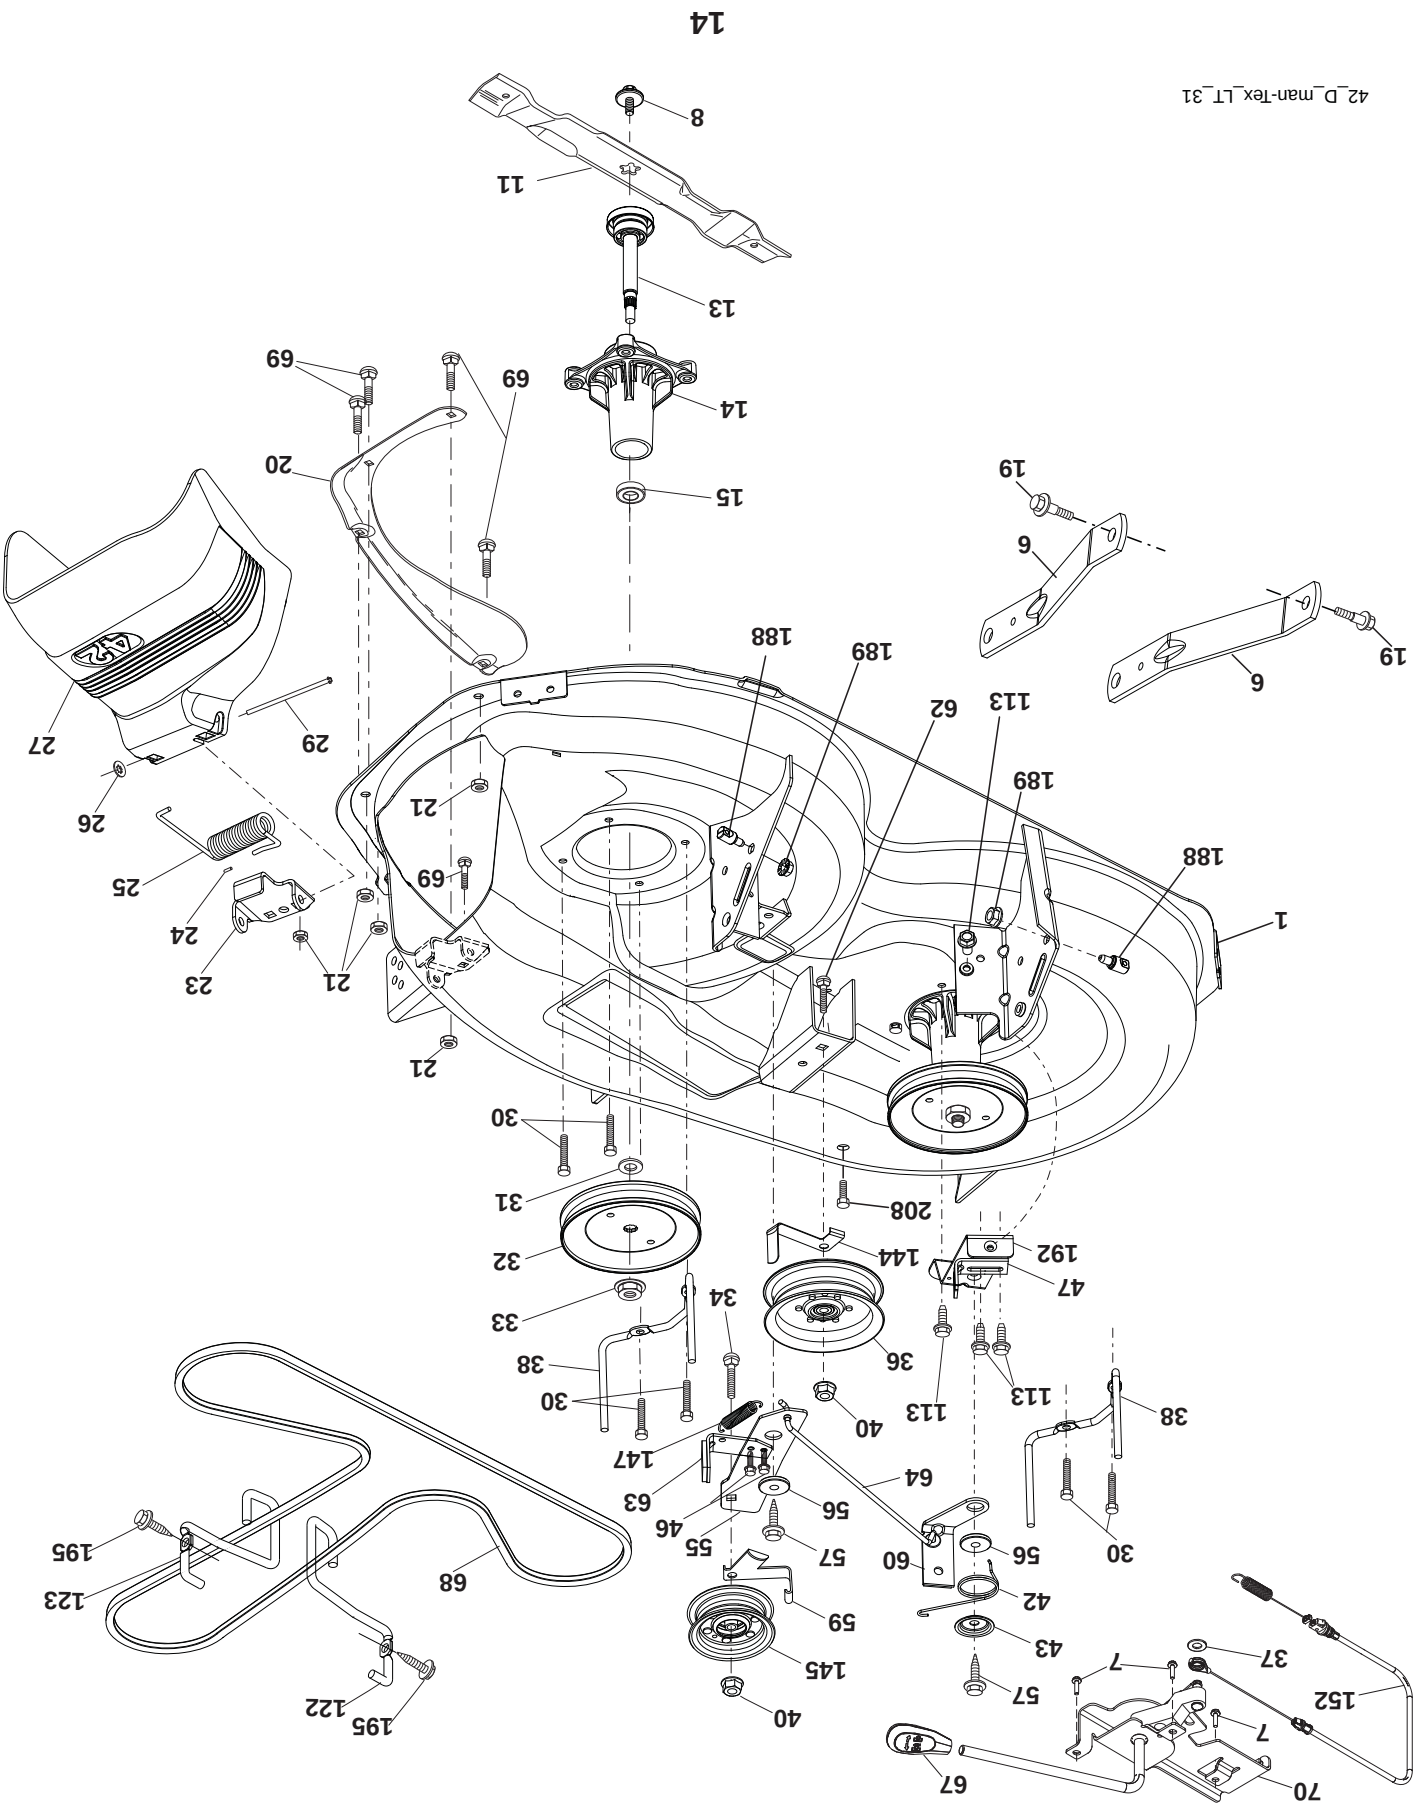

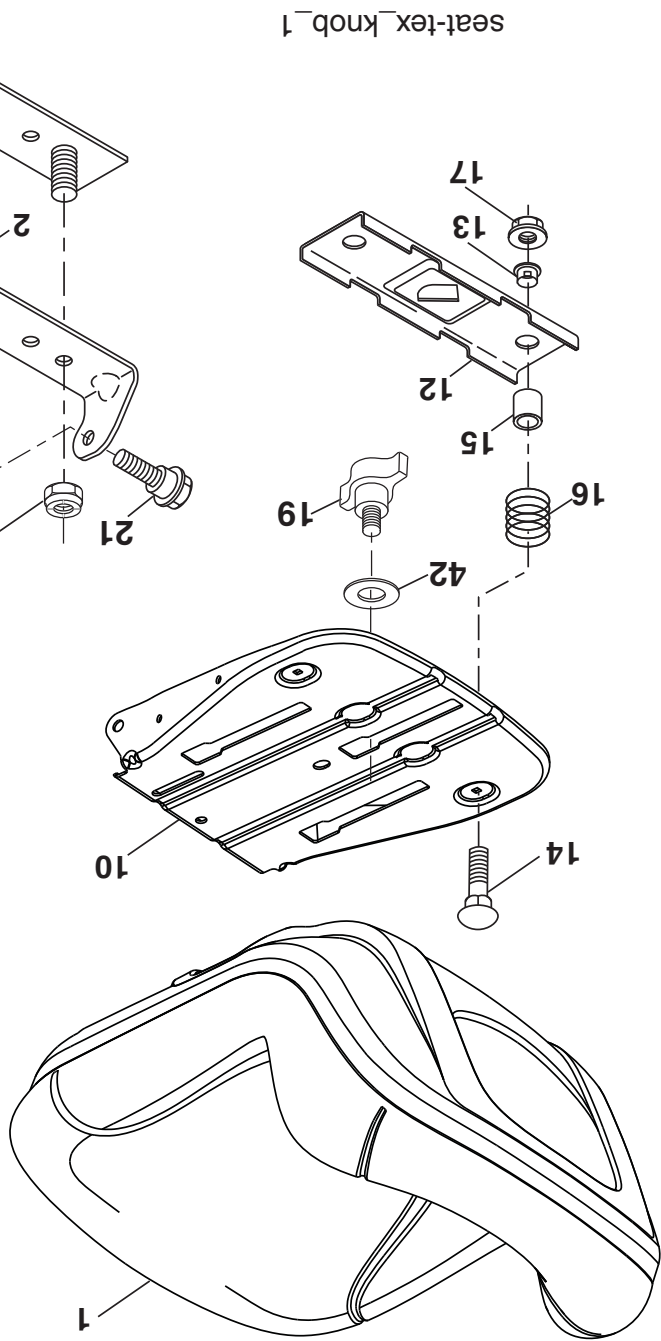


seat-tex_knob_1

NO. DE PIÈCE	DESCRIPTION
1	Chaise
2	Support le Pare-chocs de Pivot
3	Sangler, le Pare-chocs ensemble
5	Collier
6	Ecrrou frein 3/8-16 unc
7	124181X
8	171877
10	Bac du siège
12	199370
13	121248X
14	Douille de bouton-pression
15	Boulon 1/4-20 x 1-1/2
16	Entretouille

NO. DE PIÈCE	DESCRIPTION
16	123740X
17	123976X
19	199372
21	171852
37	73800500
42	199371
	Rondelle godet
	Ecrrou frein 5/16-18 unc
	Boulon à épaulement 5/16-18
	Bouton
	Ecrrou frein 1/4
	Ressort

REMARQUE: Toutes les dimensions de composant sont données en pouces E.-U. -- 1 pouce = 25,4 mm.

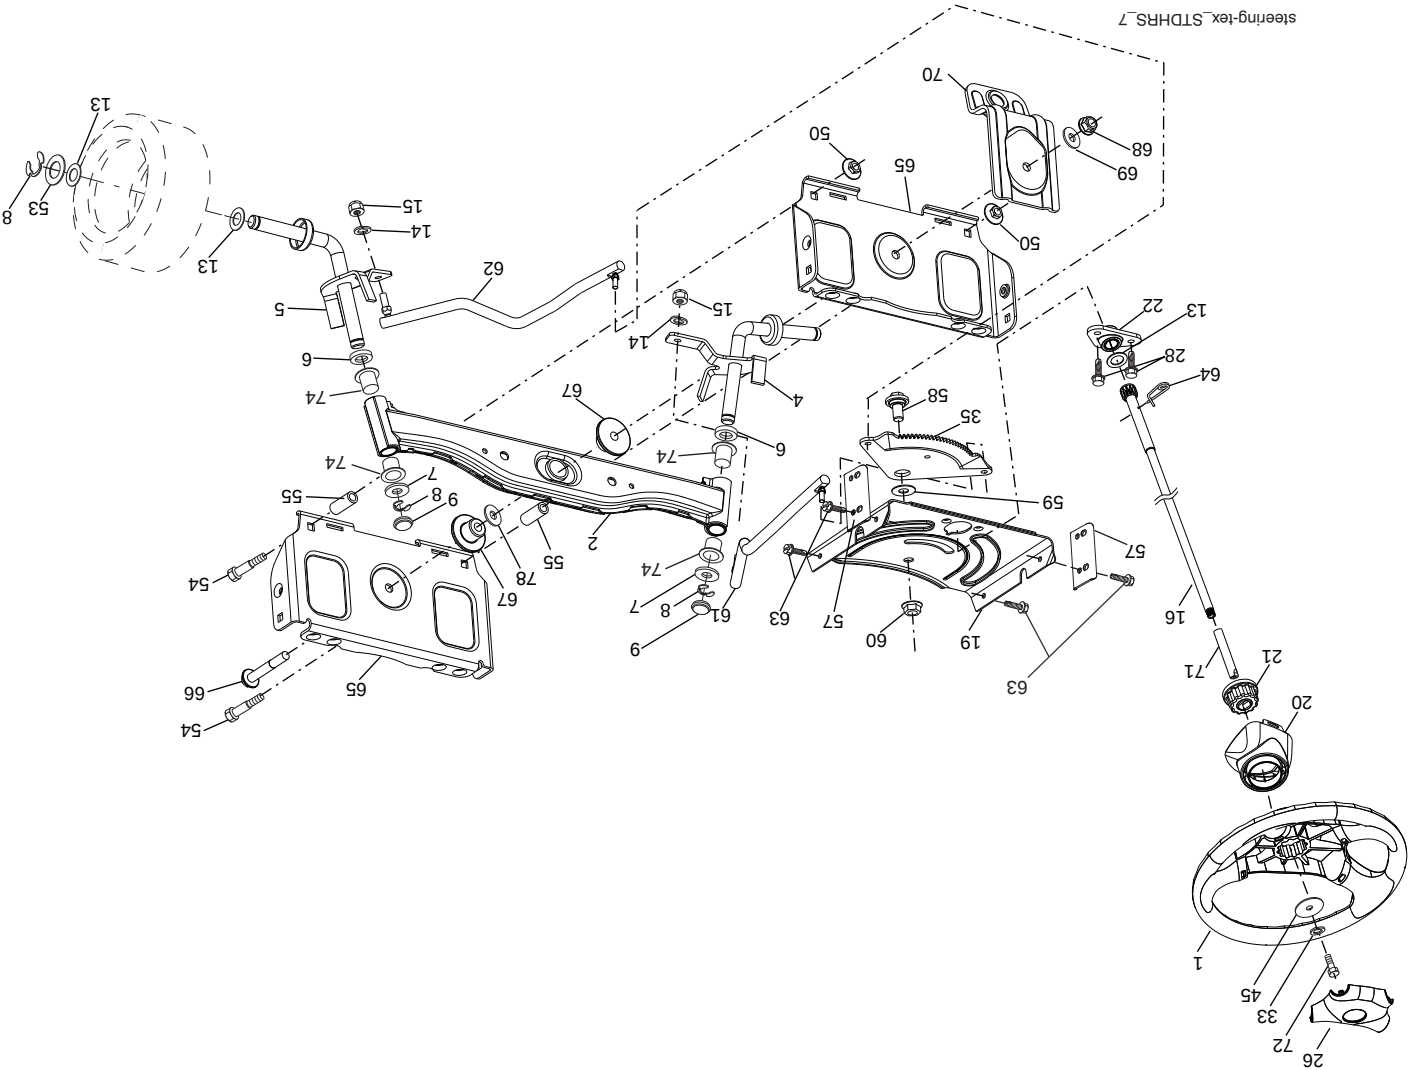

NO. DE RÉF.	PIÈCE	DESCRIPTION	NO. DE RÉF.	PIÈCE	DESCRIPTION
1	414803X428	Volant de direction	54	74760636	Boulon H 3/8-16 unc x 2-1/4
2	418168	Ensemble de essieu, antérieur	55	414736	Essieu d'entretoise
4	403087	Ensemble de broche, (C.G.)	57	407465	Support d'arrêt supérieur
5	403088	Ensemble de broche, (C.D.)	58	194747	Boulon à épaulement
6	6266H	Rondelle 0.75 x 1.230	59	194748	Rondelle butée
7	121748X	Rondelle 25/32 x 1-5/8 x 16 Ja.	60	73971000	Écrou à collet 5/8-11
8	12000029	Bague #T5304-75	61	194740	Barre de direction (C.G.)
9	121232X	Capuchon de broche	62	194741	Barre de direction (C.D.)
13	121749X	Rondelle 25/32 x 1-1/4 x 16 Ja.	63	17000512	Vis 5/16-18 x 3/4
14	10040600	Rondelle frein 3/8	64	199849	Pince d'arrêt
15	73540600	Écrou auto-serrant 3/8-24 unt	65	194734	Moïse
16	408220	Arbre de direction	66	71020748	Boulon H 7/16-14 x 3
19	194729	Plaque de direction	67	194737	Douille
20	198375X428	Soufflet de direction	68	73900700	Écrou frein 7/16-14 Gr. 5
21	186737	Adaptateur	69	199162	Rondelle 1.5 x .505 x .118
22	194845	Douille (noir)	70	196197	Support
26	414854X428	Insert	71	196075	Arbre de rallonge de direction
28	17000612	Vis 3/8-16 x 3/4	72	74780572	Boulon 5/16-18 x 4.5 Gr. 5
33	10040500	Rondelle frein 5/16	74	3366R	Palier
35	194732	Secteur denté	78	57079	Rondelle butée
45	19113812	Rondelle 11/32 x 2-3/8 x 12 Ja.			
50	73900600	Écrou frein 3/8-16 unc			
53	188967	Rondelle .793 x 1.637 x .060			

REMARQUE: Toutes les dimensions de composant sont données en pouces E.-U. -- 1 pouce = 25,4 mm.

NO. DE RÉF. PIÈCE DESCRIPTION

1	----	Moteur B&S Model No. 31N707
2	137352	Silencieux
9	194319	Guide-courroie du moteur
12	401985	Pouille du moteur
15	407545	Réservoir d'essence 1.50
18	425162	Ensemble de chapeau
20	176636X428	Commande des gaz/du starter
21	416358	Vis #10 x 0.750
28	401137	conduite d'essence/conduite du carburant
29	137180	Pare-étincelles
37	123487X	Bride de serrage du tuyau
42	10040700	Rondelle frein 7/16
45	73510400	Écrou H 1/4-20 unc
69	165291	Joint
79	192334	Voyez vis à six pans creux 5/16-18 x .75
81	148456	Tuyau
82	181654	Bouchon
84	17060620	Vis 3/8-16 x 1-1/4
85	173937	Boulon H 7/16-20 x 4 x Gr. 5-1.5
90	17000616	Vis 3/8-16 x 1.0
96	19091416	Rondelle 9/32 x 7/8 x 16 Ja.
97	17670412	Vis 1/4-20 x 3/4


REMARQUE: Toutes les dimensions de composant sont données en pouces E.-U. — 1 pouce = 25,4 mm.

Pour des pièces de service et de rechange de moteur, réclamez le numéro de téléphone libre pour votre fabricant de moteur énuméré ci-dessous:

Briggs & Stratton 1-800-233-3723

L'INFORMATION DE CLASSEMENT DE POUVOIR DE MOTEUR

Le pouvoir brut évaluant pour les modèles de moteur de gaz individuels est conformément étiqueté à SAE (la Société d'ingénieurs Automoteurs) le code J11940 (le Petit Pouvoir de Moteur & le Moment de torsion Evaluant la Procédure), et l'exécution de classement a été obtenue et a été corrigée conformément à SAE J11995 (la Révision 2002-5). Le véritable pouvoir de moteur brut sera plus bas et est affecté par, entre autres choses, les conditions d'opération ambiantes et le moteur-à-la variabilité de moteur. Donné les deux le tab-leau large de produits sur lesquels moteurs est placé et la variété de problèmes écologiques applicables à l'opération de l'équipement, le moteur de gaz ne développera pas le pouvoir de grosse évalué quand utilisé dans un morceau donné d'équipement de pouvoir (la puissance véritable, « sur place » ou nette). Cette différence est en raison d'une assortiment de facteurs inclut, mais pas limité à, les accessoires (le nettoyeur d'air, l'échappement, charger, le refroidissement, le carburateur, la pompe de carburant, etc.), les limitations d'application, les conditions d'opération ambiantes (la température, l'humidité, l'altitude), et le moteur-à-la variabilité de moteur. En raison des limitations de fabrication et capacité, Briggs & Stratton peut substituer un moteur de plus haut pouvoir évalué pour ce moteur de Feuilleton.

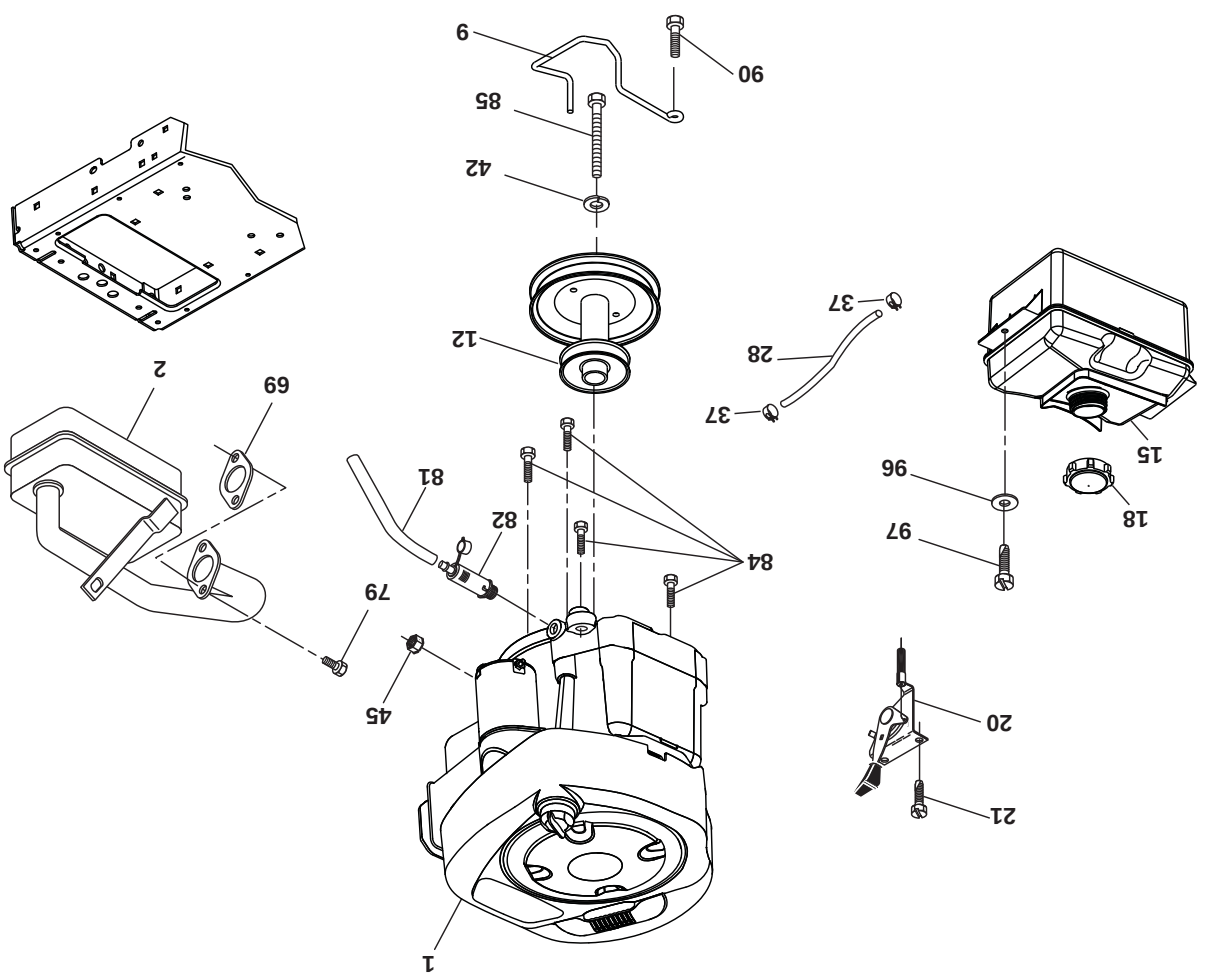

ÉQUIPEMENT FACULTATIF
PARE-ÉTINCELLES

engine-tex_BS_12

29

TRACTEUR - - NO. DE MODÈLE SO18542LT (96012009200),NO. DE PRODUIT 960 12 00-92

ENTRAÎNEMENT

NO. DE
REF. PIÈCE

DESCRIPTION


1	-----	Transaxle, Peerless 206-565
2	123583X	Clé carrée
15	19131316	Rondelle 13/32 x 13/16 x 16 Ja.
17	197297	Ressort du Frein
22	197660	Tige du changement de vitesse
23	106933X	Bouton
26	197455	Ressort du Frein RTN
29	197267	Tige du frein
33	12000001	Bague en E
35	197722	Tige du frein de stationnement
37	121749X	Rondelle 25/32 x 1-1/4 x 16 Ja.
42	8883R	Couverture de pédale
49	72110614	Bouton
50	194327	Pouille du galet-tendeur
51	73900600	Ecroû frein 3/8-16
52	194326	Galet-tendeur, V-cannelée
56	194346	Courroie trapézoïdale
61	123666X	Pouille de la transmission
64	196200	Ensemble de l'arbre
70	193225X428	Panneau
73	74490544	Boulon 5/16-18 Gr. 5
74	142432	Vis 1/4 x 1/2
116	73900500	Ecroû frein à collet 5/16-18
125	17000512	Vis 5/16-18 x 3/4
134	197857	Bras d'embrayage
139	7450412	Boulon 1/4-20 unf Gr. 8
140	10040400	Rondelle 1/4
141	19091210	Rondelle 9/32 x 3/4 x 10 Ja.
155	12000028	Bague de fermeture
157	105701X	Plaque de rondelle
158	194352	Guide T/A
159	76020412	Goupille fendue 1/8 x 3/4
160	169484	Pince d'arrêt

NO. DE
REF. PIÈCE

DESCRIPTION

161	105709X	Ressort de rappel d'embrayage
165	196212	Douille
166	197290	Frein ecron .625
167	405257	Loquet de frein de stationnement
172	197657	Attache de torsion C.G.
174	197289	Frein ecron
175	197858	Ensemble de l'arbre
176	196214	Bras de chape
178	197456	Ressort
138	137057	Essieu d'entretoise
184	198403X505	Guidon de frein de stationnement
185	72110622	Boulon
186	194321	Ressort de retenue
187	19133210	Rondelle
188	194323	Raccord d'embrayage
189	194317	Levier coudé
190	194318	Guide de levier coudé
192	150360	Ecroû frein central 1/4-28
193	17060512	Vis 5/16-18 x 3/4
195	197332	Support
202	197859	Raccord de commande de vitesse
203	19111116	Rondelle 11/32 x 11/16 x 16 Ja.
205	121748X	Rondelle 25/32 x 1-5/8 x 16 Ja.
221	403187	Guidon à pince de ressort de retenue
232	74780716	Boulon 7/16-14 x 1 Gr. 5
233	405296	Rondelle à éventail


REMARQUE: Toutes les dimensions de composant sont données en pouces E.-U. -- 1 pouce = 25,4 mm.

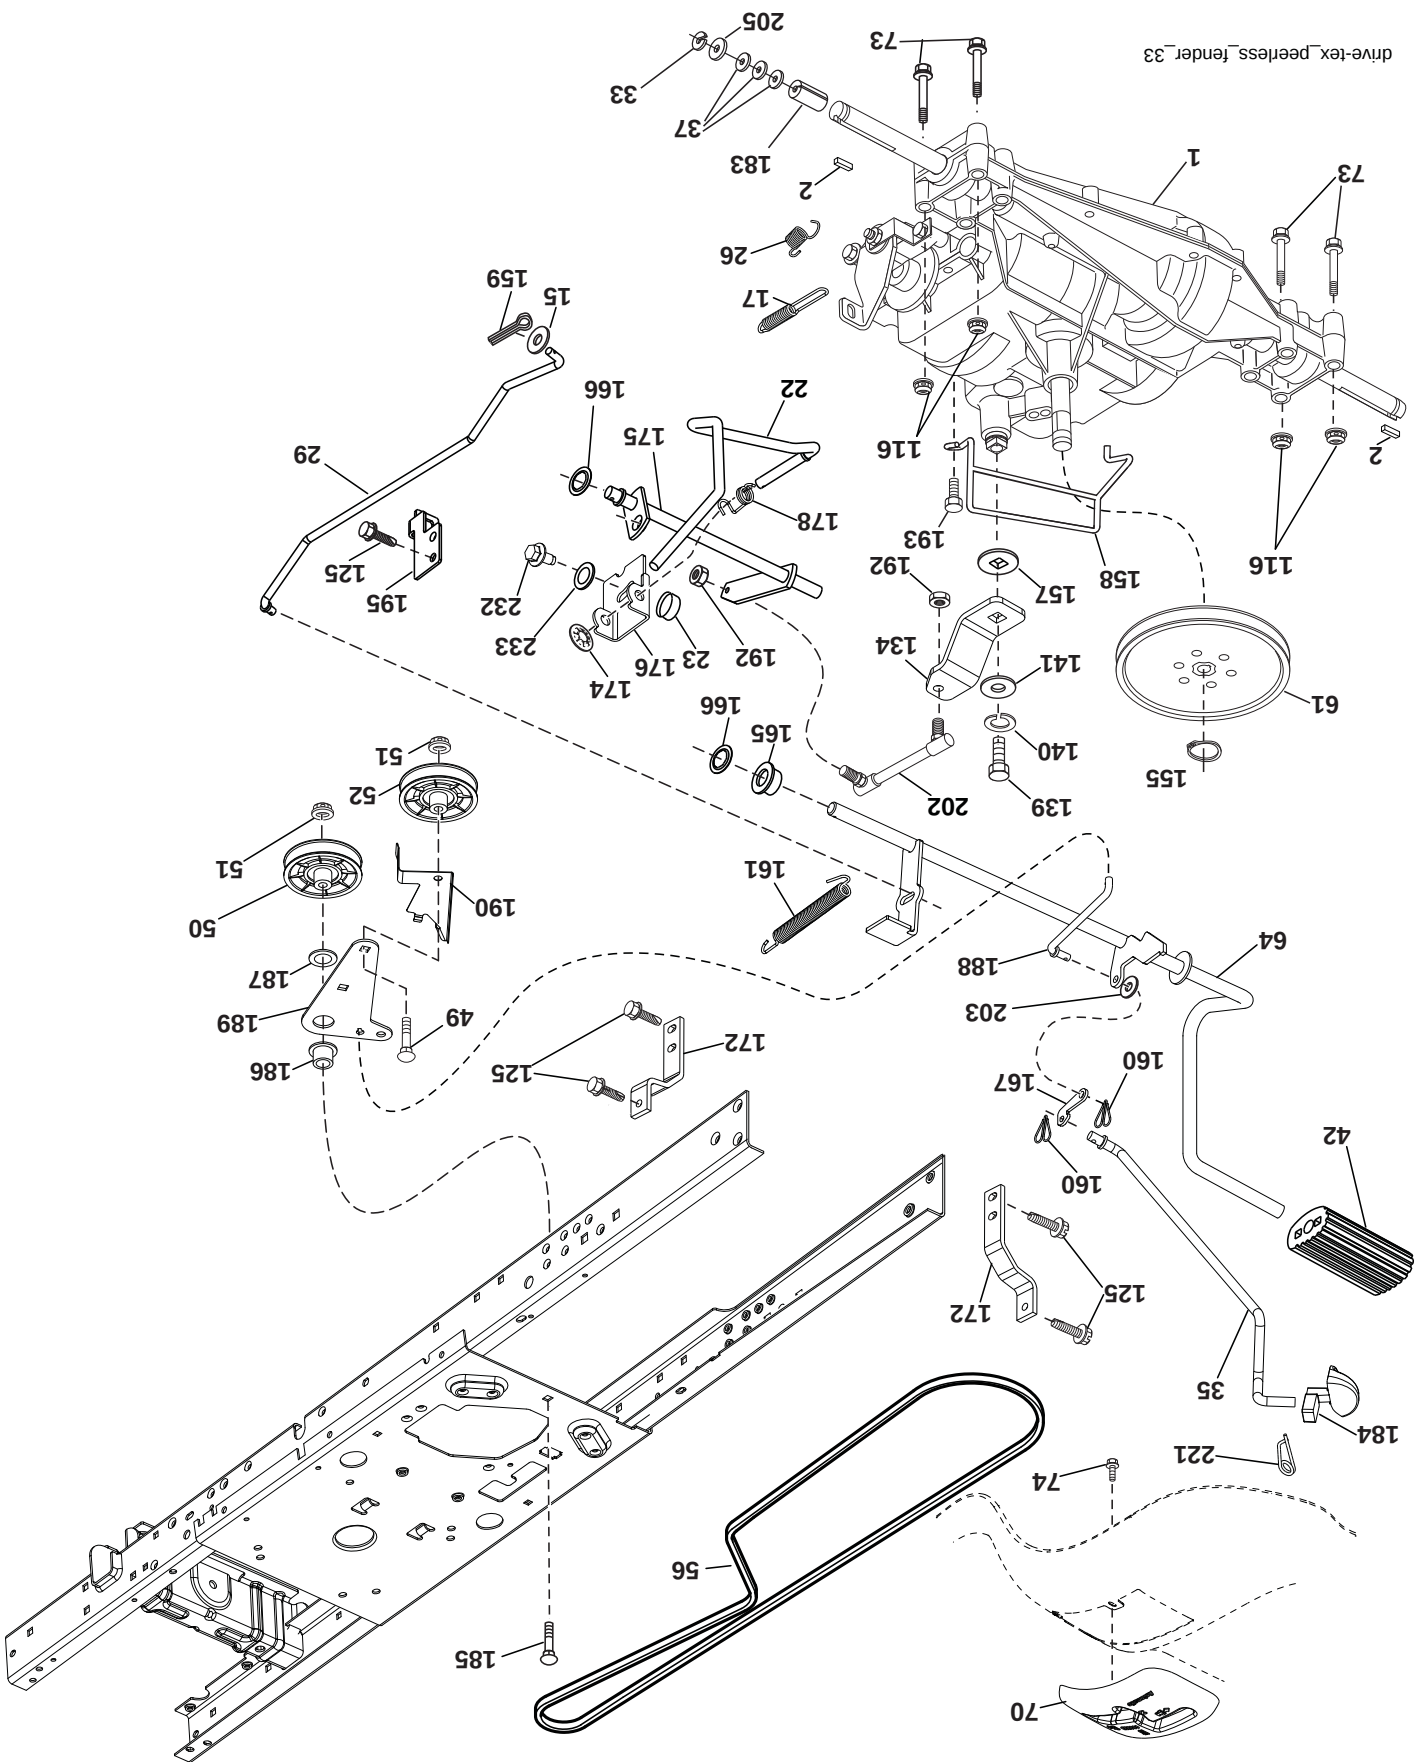

NO. DE
PIÈCE
DESCRIPTION


2	412282	Barre d'attelage inférieur
5	197783X428	Tableau de bord
14	183393X505	Capot
15	183834X599	Calandre de lentille C.G.
18	188223X505	Calandre
25	183835X599	Calandre de lentille C.D.
36	17060512	Vis 5/16-18 x 3/4
37	414872X505	Alle
58	412280	Barre d'attelage supérieur
68	17490508	Vis 5/16-18 x 1/2
130	416358	Vis #10 x 0.750
137	184921	Pare-chocs de capot
138	193224X428	Porte-gobelet
150	184322	Canalisation de chaleur
151	407807	Support de la pivot
152	194329	Deflecteur
159	17000612	Vis 3/8-16 x 3/4
162	142432	Vis 1/4 x 1/2
175	193243	Pièce d'entretoisement
176	400776	Vis 10-24 x 5/8
177	195228	Douille de direction
180	194260	Châssis
181	193102X428	Douille
182	193057	Tableau de bord baisser
183	74780520	Boulon H 5/16-18 x 1-1/4
186	183829X428	Insert de calandre
189	17000512	Vis 5/16-18 x 3/4
194	73900500	Ecroû frein H 5/16-18
196	414579	Ensemble de panneau
207	183833	Biseau de calindre C.D.
208	183832	Biseau de calindre C.G.
217	409167	Tige de capot
228	195161	Tenon
235	406129	Entretoise de l'alle
236	73930500	Ecroû frein central 5/16-18
287	17600406	Vis 1/4-20 x 3/8


REMARQUE: Toutes les dimensions de composant sont données en pouces E.-U. -- 1 pouce = 25,4 mm.




NO.	DE	NO	PIECE	DESCRIPTION
1		163465	Batterie	Batterie
2		74760412	Boulon H 1/4-20 unc x 3/4	Boulon H 1/4-20 unc x 3/4
8		193228	Bac de batterie	Bac de batterie
16		176138	Interrupteur de verrouillage	Interrupteur de verrouillage
21		183759	Harnais des prises de courant des phares avec 4152J	Harnais des prises de courant des phares avec 4152J
22		4152J	Ampoule N°1156	Ampoule N°1156
25		412894	Câble Starter	Câble Starter
26		175158	Fusible de 20 AMP	Fusible de 20 AMP
27		73510400	Écrou à taquets 1/4-20 unc	Écrou à taquets 1/4-20 unc
28		198885	Câble de masse 22"	Câble de masse 22"
29		192749	Interrupteur	Interrupteur
30		193350	Contacteur d'allumage	Contacteur d'allumage
33		411933	Cle / chaîne	Cle / chaîne
34		110712X	Interrupteur	Interrupteur
40		401098	Harnais des câbles d'allumage	Harnais des câbles d'allumage
41		17720408	Boulon 1/4-20 x 1/2	Boulon 1/4-20 x 1/2
42		131563	Couverture de borne	Couverture de borne
43		192507	Solénoïde	Solénoïde
55		17060512	Vis 5/16-18 x 3/4	Vis 5/16-18 x 3/4
71		400449	Harnais des châssis	Harnais des châssis
79		175242	Prise de courant du phare	Prise de courant du phare
87		197802	Interrupteur de verrouillage	Interrupteur de verrouillage
90		400725	Couverture	Couverture
92		196615	Harnais	Harnais
93		192540	Vis 10-14 x 2.0	Vis 10-14 x 2.0
94		191834	Inverse du module ROS	Inverse du module ROS

REMARQUE: Toutes les dimensions de composant sont données en pouces E.-U. --1 pouce = 25,4 mm.

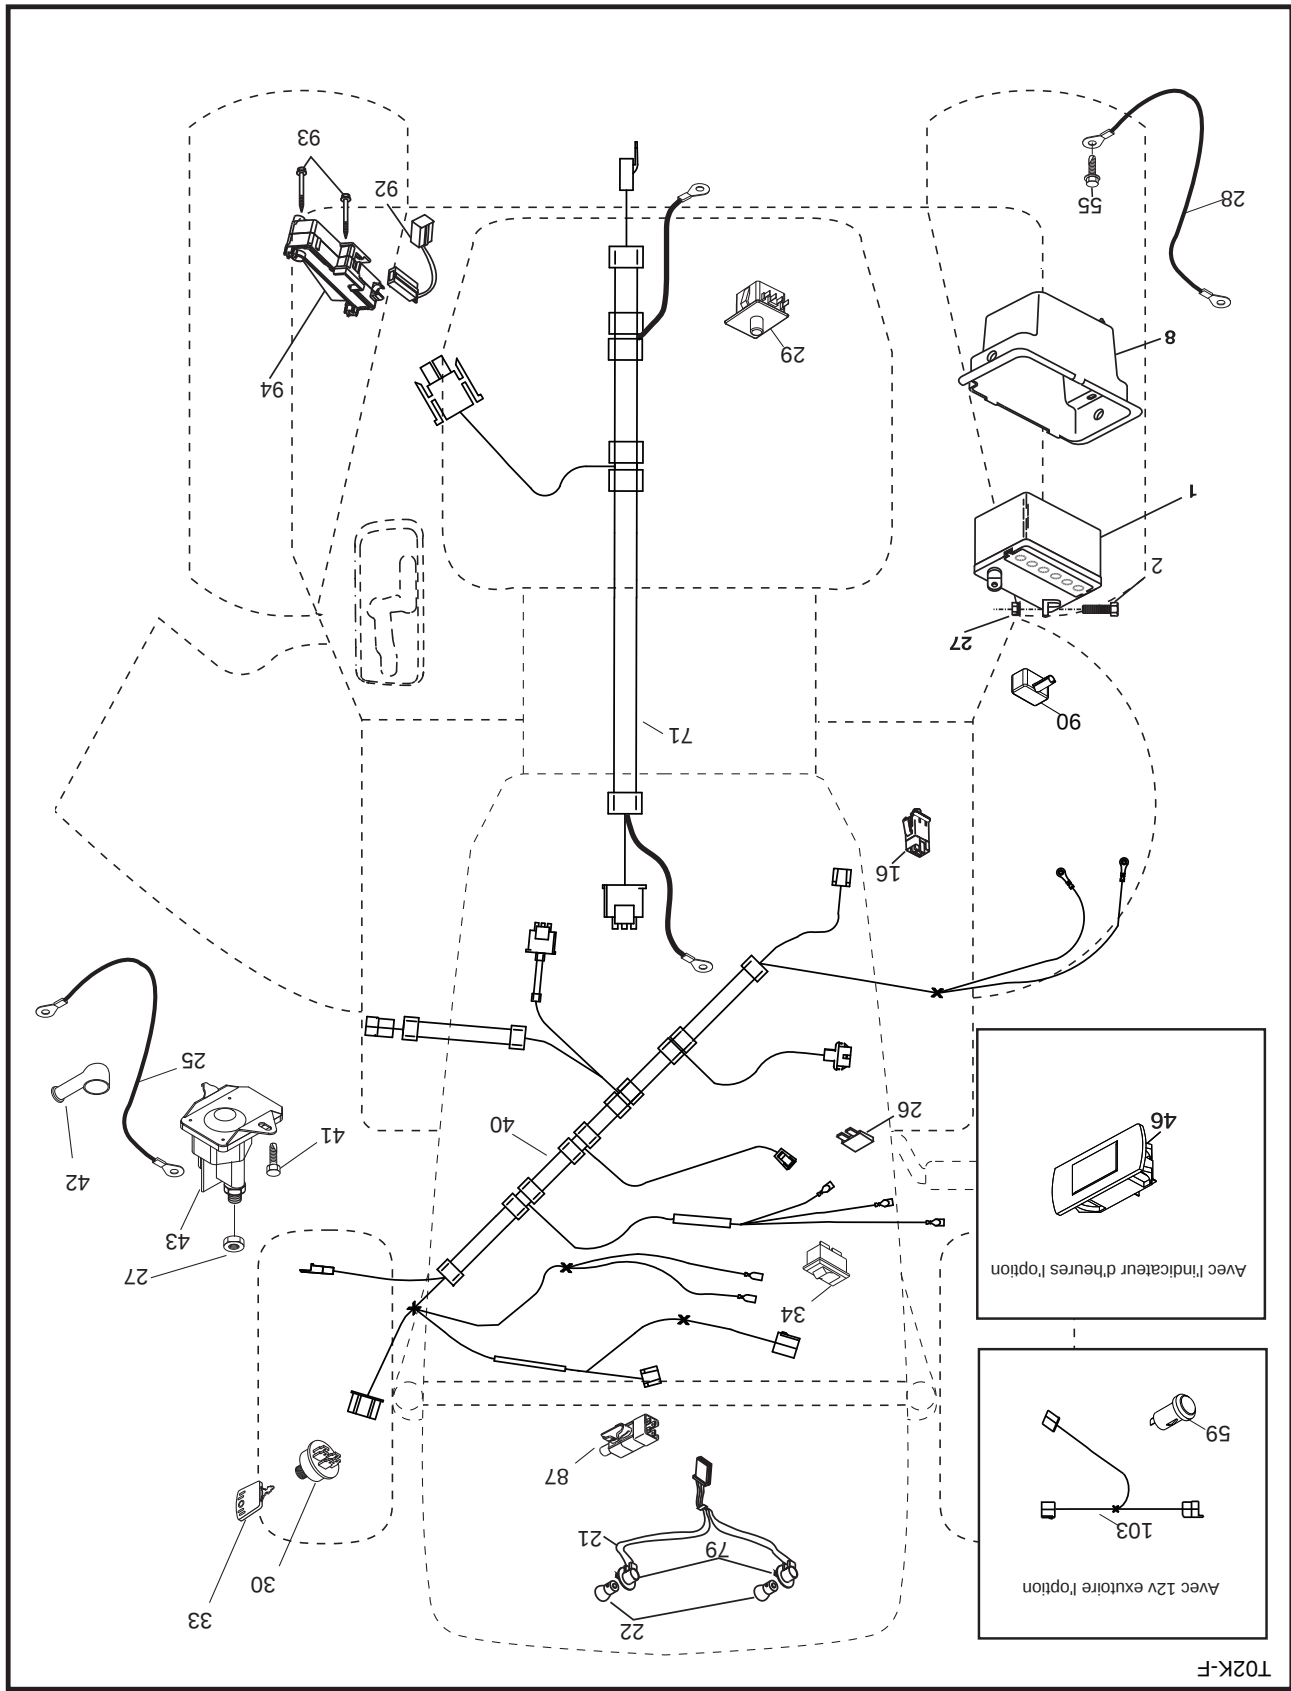

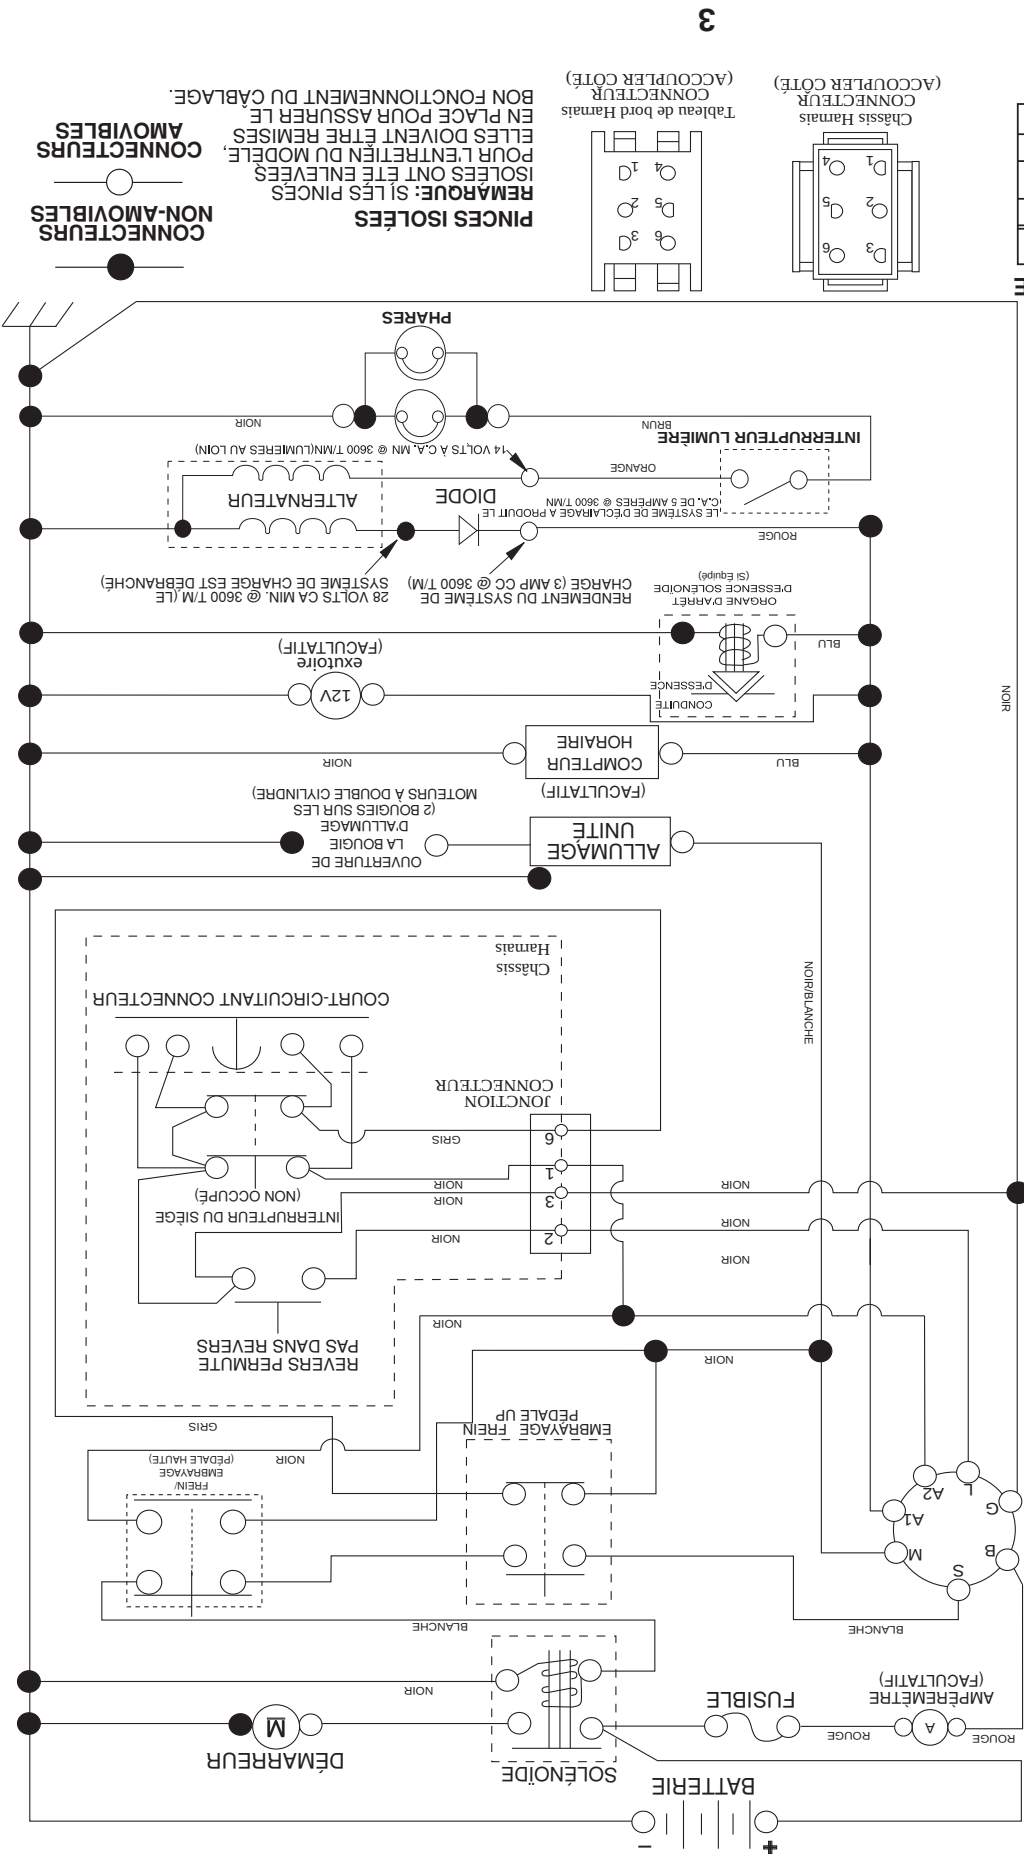



CONTACTEUR D'ALLUMAGE

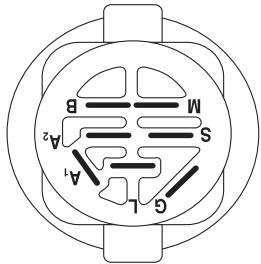

VOTRE TRACTEUR EST ÉQUIPÉ D'UN SYSTÈME D'ALTERNATEUR SPÉCIAL AU LIEU D'ÊTRE BRANCHÉ SUR LA BATTERIE. LES PHARES DISPOSENT DE LEUR PROPRE SOURCE D'ÉNERGIE ÉLECTRIQUE, DONC LA BRILLANCE DES PHARES CHANGERA EN FONCTION DE LA VITESSE DU MOTEUR. AU RALENTI, LA BRILLANCE DES PHARES BAISSERA: QUAND LE MOTEUR EST ACCÉLÉRÉ, LA BRILLANCE ATTEINDRA SON MAXIMUM.

REMARQUE

NOIR

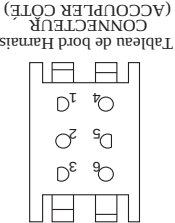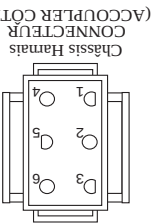

COMMENT UTILISER CE MANUEL

Ce manuel a été dessiné pour fournir le client avec les moyens d'identification des pièces de détails du tracteur quand il/elle a besoin de commander les pièces de rechange. Les illustrations ne peuvent pas représenter exactement le modèle que vous avez acheté. N'utilisez pas ce manuel comme un guide dans le montage et/ou démontage de votre tracteur. La visserie montrée est plus grande pour faciliter l'identification.

Chaque tracteur a un numéro de modèle particulier.

Le numéro de modèle du produit se trouvera sur l'aile, dessous le siège.

Lorsque vous commandez des pièces de rechange, donnez toujours les renseignements suivants:

- Produit - "TRACTEUR"
- NUMÉRO DU MODÈLE - "SO18542LT (96012009200)"
- Numéro de la Pièce
- Description de la Pièce

TABLE DE MATIERES

SCHEMA.....	3
ELECTRIQUE	4-5
CHÂSSIS/ENCEINTES.....	6-7
ENTRAÎNEMENT	8-9
MOTEUR.....	10-11
ENSEMBLE DE LA DIRECTION.....	12
ENSEMBLE DU SIÈGE	13
CARTER DE TONDEUSE.....	14-15
DECALCOMANIES.....	16
LEVAGE DE LA TONDEUSE.....	17
GARANTIE.....	18



Pour pièces de rechange, contactez le site principal pour distribution:
Téléphonez 1-800-849-1297 Pour assistance technique: Téléphonez 1-800-829-5886

MANUEL DE PIÈCES DE RECHANGE MODÈLE NO. SO18542LT (96012009200) 18.5 C.V. 107 CM (42 PO.) TRACTEUR DE PELOUSE

