Model 56M

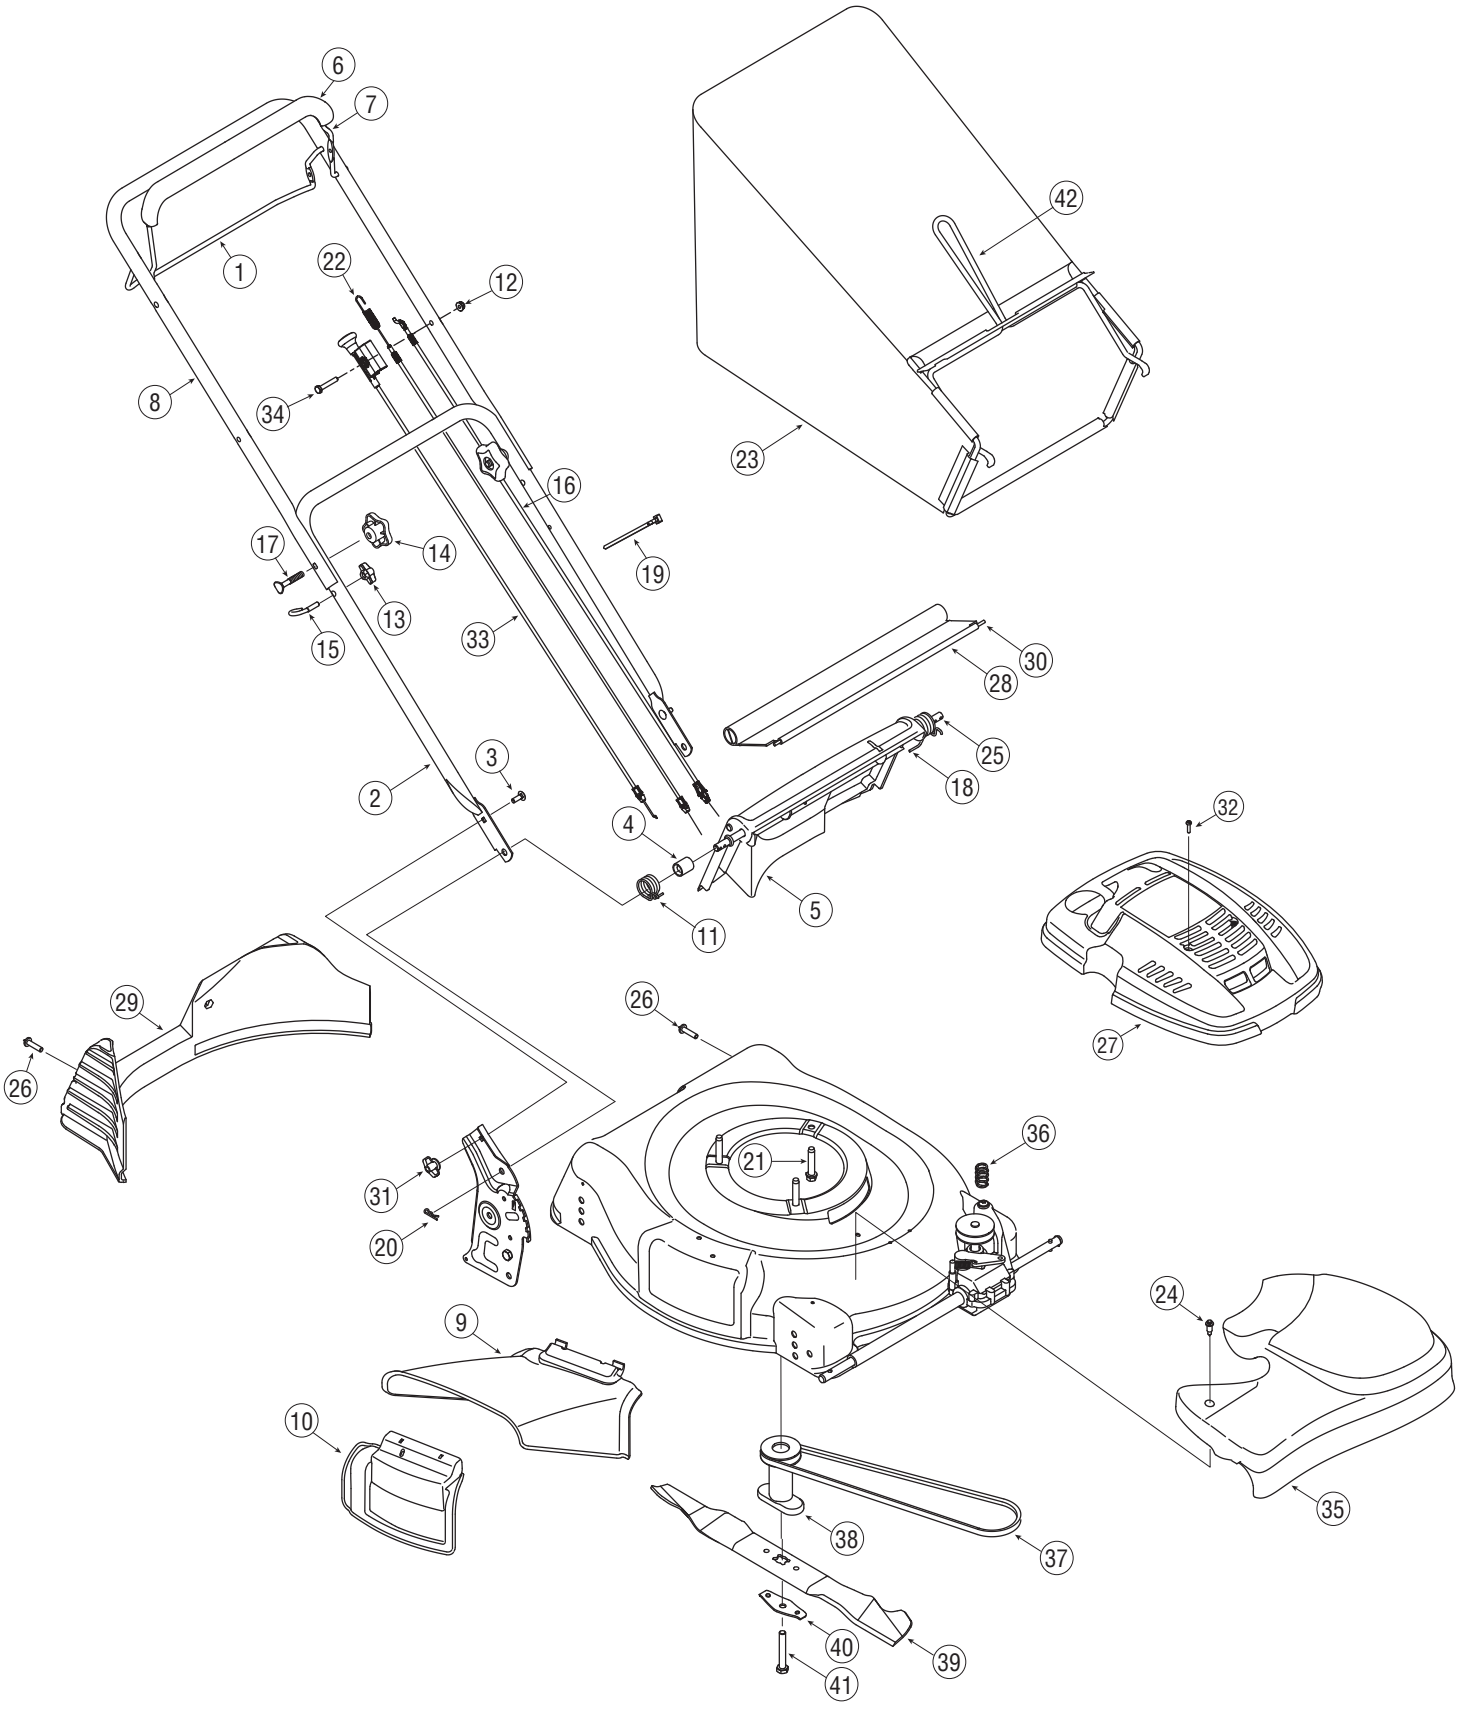
6
7
1
22
12
8
34
16
17
14
19
13
15
33
42
23
30
28
25
18
3
2
4
5
11
32
29
26
27
26
36
21
31
20
9
10
24
35
38
37
40
39
41

1	747-1214	Drive Control
2	749-0928A	Lower Handle
3	710-0703	Carriage Bolt 1/4-20
4	750-04162	Spacer.375 x.50 x 1.02” Lg.
5	731-04134A	Rear Discharge Door
6	731-04859	Deluxe Bail Cover
7	747-1161A	Blade Control
8	749-1092A	Upper Handle
9	731-04177	Chute Deflector
10	687-02055	Mulch Plug Complete
11	732-04090A	Torsion Spring - RH
12	712-04064	Flange Lock Nut, 1/4-20
13	720-0279	Handle Knob
14	720-04072	Handle Knob
15	710-1205	Eye Bolt
16	746-04299	Control Cable
17	710-1174	Carriage Bolt 5/16-18 x 2.0
18	732-04089A	Torsion Spring - LH
19	726-0240	Cable Tie
20	714-0104	Cotter Pin
21	710-0654A	Self-Tapping Sems Screw
22	746-04303	Drive Cable
23	664-04034	Grassbag Assembly
24	710-1650	Shoulder Screw # 12 -24
25	747-0996	Pivot Rod
26	710-04371	Screw, 1/4-15 x 1.25
27	731-05572	Engine Shroud
28	731-04998	Rear Trailing Shield
29	731-04150C	Rear Baffle
30	732-0700	Wire
31	712-0397	Wing Nut
32	710-04577	Screw, M4-7
33	746-04239	Choke Cable
34	710-0606	Screw, 1/4-20 x 1.50
35	731-05250	Transmission Cover
36	732-1043	Belt Tension Spring
37	754-04101	V-Belt
38	748-04015A	Blade Adapter w/ Pulley
39	742-0741	21” Mulching Blade
40	736-0524B	Blade Bell Support
41	710-1257	Hex Screw 3/8-24 x 2.50
42	747-04080	Grass Bag Frame

Model 56M

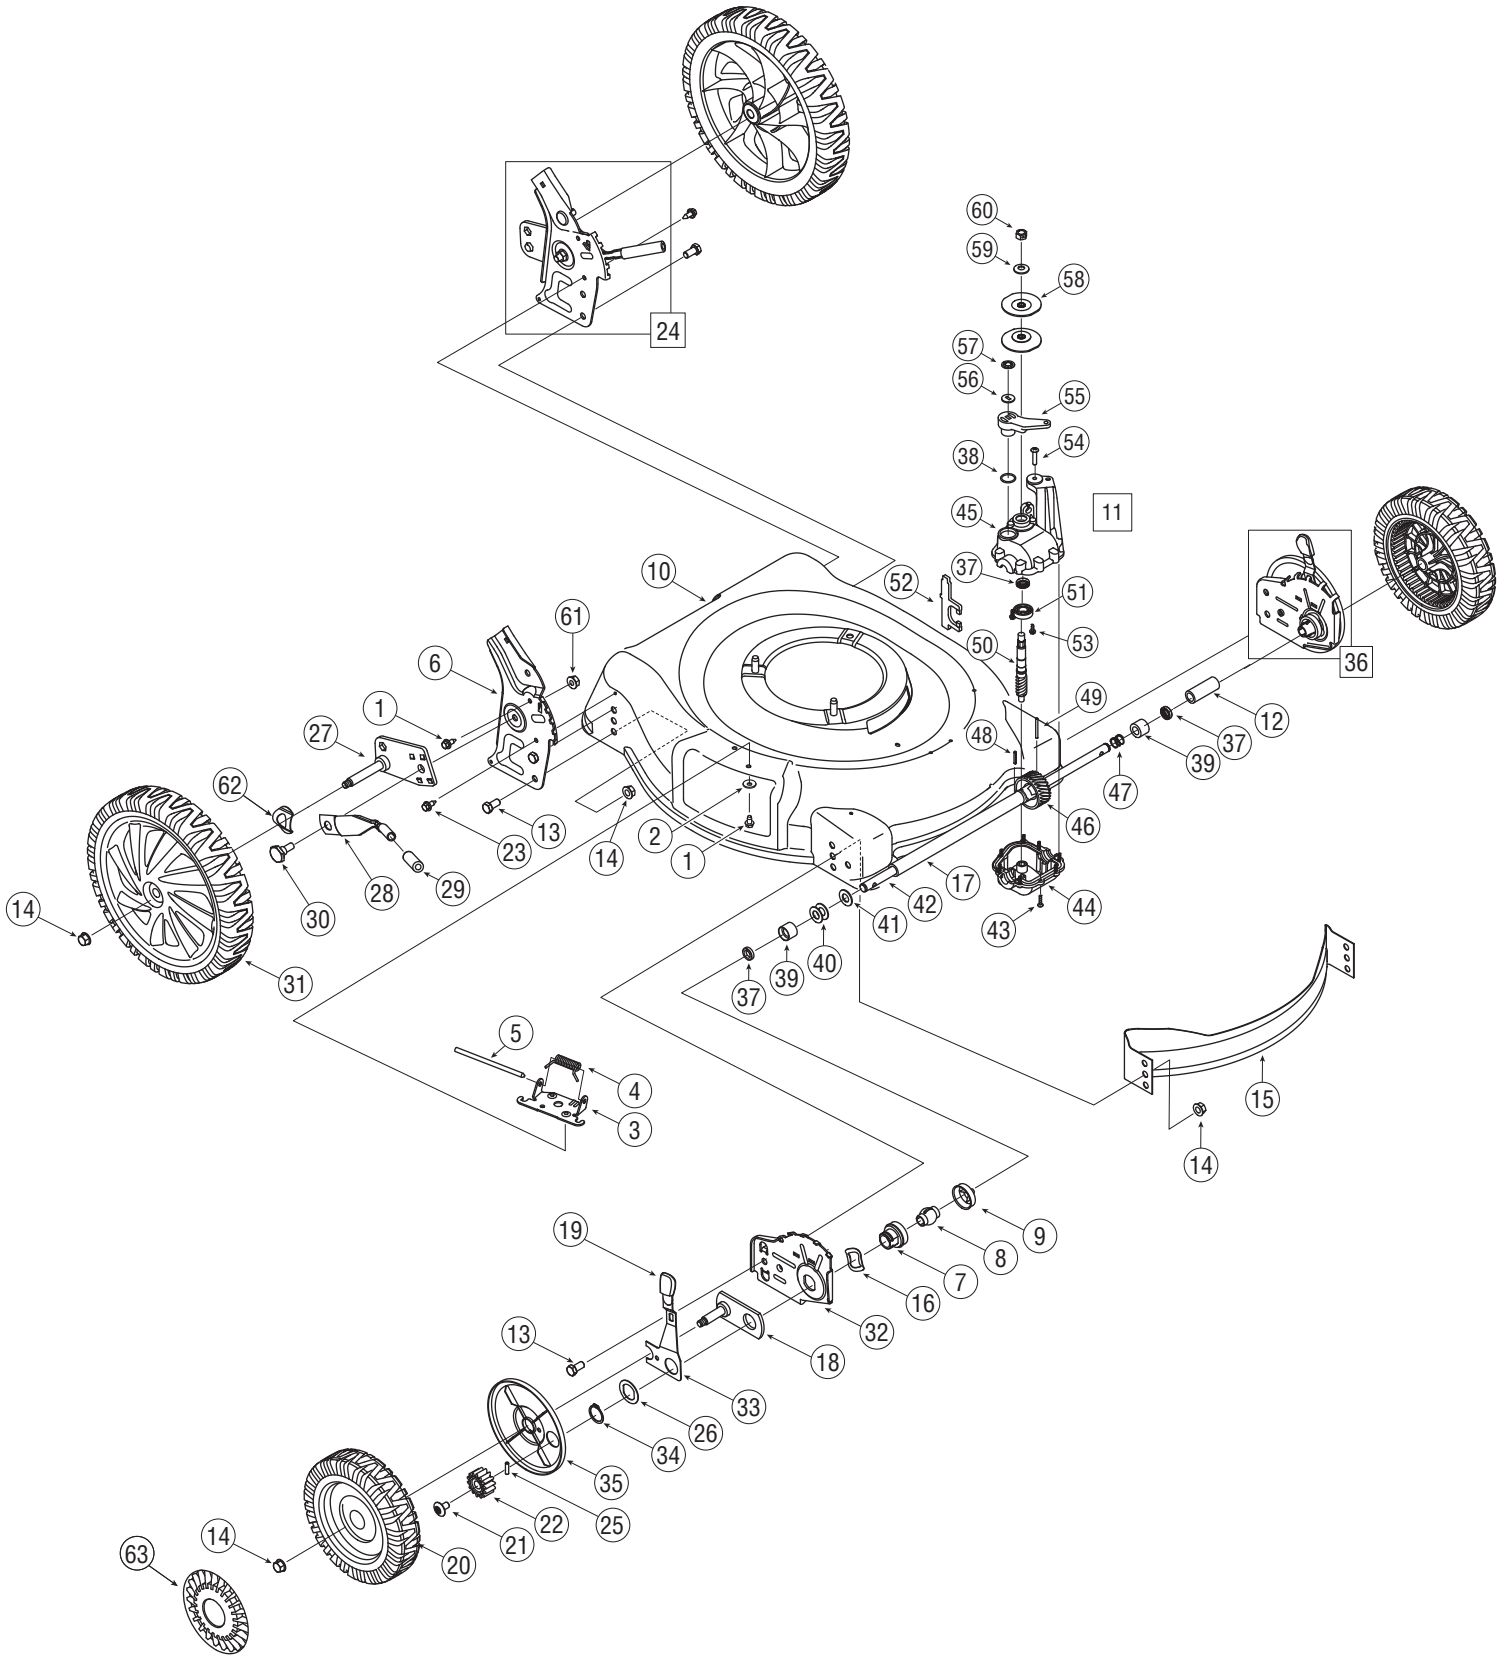
24
60
59
58
57
56
55
54
38
45
11
37
51
53
50
49
48
47
39
37
12
36
10
52
61
6
1
27
62
30
28
29
23
13
14
2
1
46
17
42
41
44
43
37
39
40
14
31
5
4
3
15
14
19
9
8
7
16
32
18
13
33
26
34
35
22
25
21
14
20
63

1	710-0599	TT Screw 1/4-20 x 0.5
2	736-0270	Bell Washer.265 x 0.75
3	17032A	Deflector Chute Adapter
4	732-1014	Torsion Spring
5	747-0710	Hinge Pin
6	687-02192	Handle Bracket - RH
	687-02191	Handle Bracket - LH
7	748-0355	Bearing Support
8	741-0604A	Bearing Sleeve
9	732-0708	Bearing Retainer
10	787-01278	21" Deck
11	618-04376	Transmission Assembly
12	750-04595	Slev. Spacer 1.4" Lg.
13	710-0216	Hex Screw, 3/8-16 x.75
14	712-04065	Flange Lock Nut, 3/8-16
15	782-5002B	Front Baffle
16	736-0447	Wave Washer
17	750-04594	Sleeve Spacer 8.985" Lg.
18	687-02044	Pivot Plate Assembly
19	720-0426	Adjustment Knob
20	734-2042	Front Wheel 8 x 2.125
21	710-04531	Screw, 1/4-20 x .390
22	717-1762	Gear 14T RH FWD
	717-1761	Gear 14T LH FWD
23	710-1652	TT Scr. w/Washer 1/4-20 x.625
24	687-02057	Handle Bracket Assembly - LH
	687-02056	Handle Bracket Assembly - RH
25	715-0221	Dowel Pin
26	736-0474	Washer
27	687-02039A	Pivot Arm Assembly - RH
	687-02040A	Pivot Arm Assembly - LH
28	732-0866	Rear Spring Lever
29	720-0312	Foam Grip
30	738-0507B	Shoulder Scr.500 Dia. x.434
31	734-04093	Rear Wheel, 12 x 2.125

32	787-01298	Height Adjuster Plate - RH
	787-01299	Height Adjuster Plate - LH
33	732-0706	Front Lever - RH
	732-0707	Front Lever - LH
34	716-0102	Snap Ring
35	782-7551A	Wheel Dust Cap
36	687-02194	Height Adjustment Assembly - RH
	687-02193	Height Adjustment Assembly - LH
37	721-04107	Oil Seal
38	721-04110	O-ring
39	741-04106	Plastic Bushing
40	736-04224	Flat Washer
41	736-0572	Flat Washer
42	711-04429	Output Shaft
43	710-04329	Torx Screw
44	731-04883	Lower Housing
45	731-04931A	Upper Housing
46	717-04156	28 Tooth Gear
47	732-04290	Compression Spring
48	715-0129	Spirol Pin
49	715-04030	Dowel Pin
50	711-04317	Pinion Shaft
51	741-04116	Ball Bearing
52	707-04409A	Shifter Fork
53	710-04374	Hex Screw
54	710-0969	Screw, #12-16 x 1.00
55	731-04932	Clutch Lever
56	736-04178A	Slotted Washer
57	726-04043	Push Nut
58	756-04132	Pulley, 3.82 x.313 x.68
59	736-0105	Bell Washer.325 x.930 x.45
60	712-0214	Hex Lock Nut, 3/8-24
61	712-3005	Hex Flange Lock Nut, 3/8-16
62	736-0182	Spring Washer, .500 x 1.00 x .022
63	731-0981A	Hub Cap

Engine 1P70

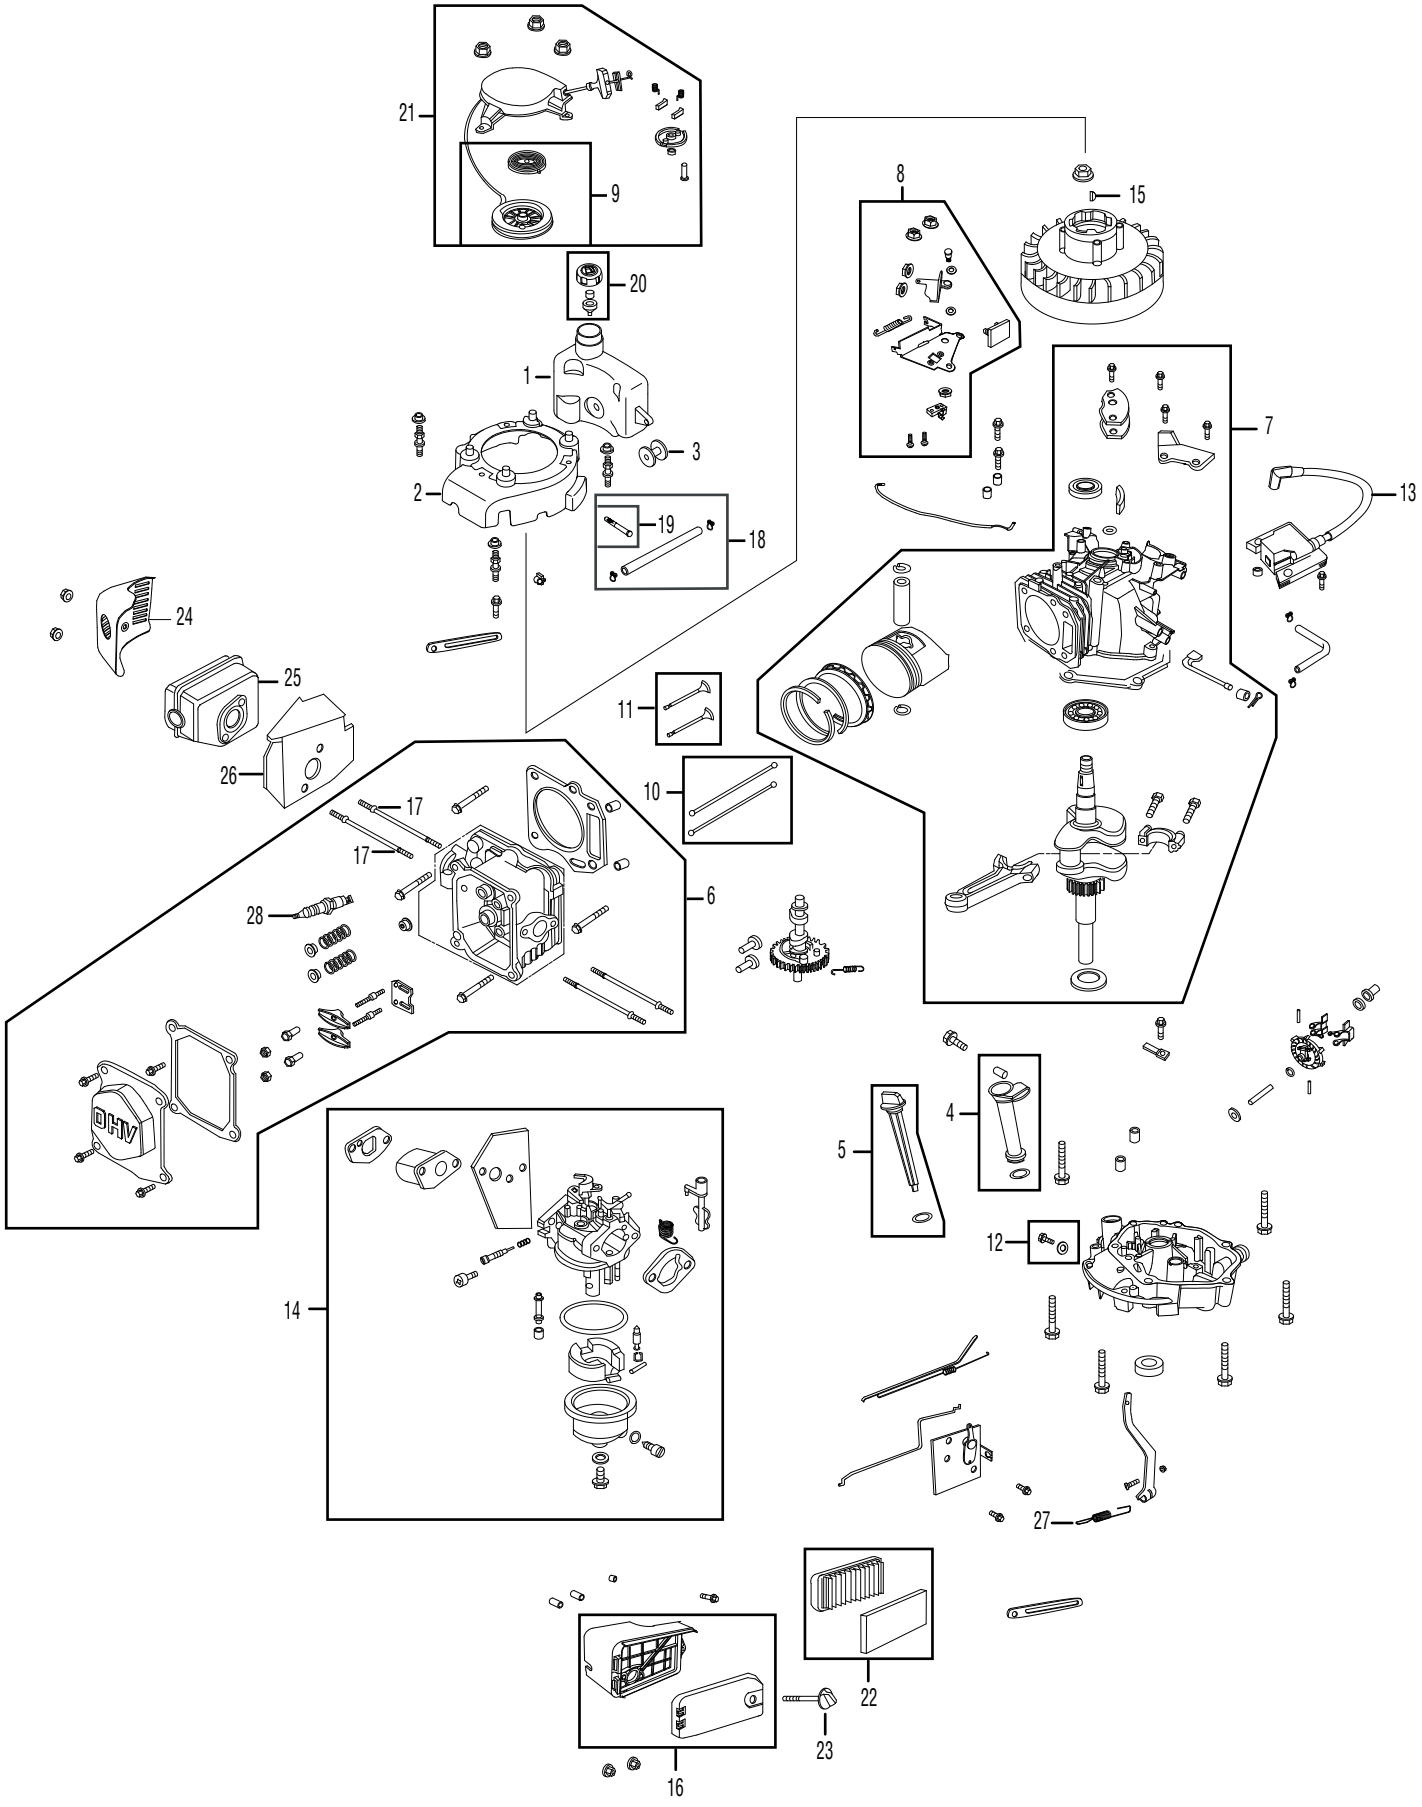
21
9
20
1
2
3
19
18
8
15
7
13
24
25
26
11
10
17
17
28
6
DHV
14
5
4
12
27
22
23
16

1.	951-10368	Fuel Tank
2.	951-10369	Flywheel Shroud
3.	951-10335	Rubber Fuel Tank Mounting Washer
4.	951-10334	Oil Filler Tube Assembly
5.	951-10333	Dipstick Assembly
6.	951-10332	Cylinder Head Complete
7.	951-10329	Short Block Assembly
8.	951-10321	Stop Switch and Brake Assembly
9.	951-10319	Recoil Spring and Pulley Assembly
10.	951-10344	Push Rod Kit
11.	951-10345	Valve Kit
12.	951-10370	Oil Drain Plug and Washer Assembly
13.	951-10366	Ignition Coil
14.	951-10310	Carburetor Assembly
15.	951-10307	Flywheel Key
16.	951-10306	Air Cleaner Housing Assembly Complete
17.	951-10342	Muffler Stud Assembly
18.	951-10364	Fuel Line Kit – Inc. hoses, clamps & filter
19.	951-10358	Fuel Filter
20.	951-10300	Fuel Cap Assembly
21.	951-10299	Recoil Starter Assembly
22.	951-10298	Air Cleaner Kit
23.	951-10297	Air Cleaner Thumb Screw
24.	951-10386	Muffler Guard
25.	951-10295	Muffler
26.	951-10294	Muffler Gasket /Heat Shield
27.	951-10387	Governor Return Spring
28.	951-10292	Spark Plug
–	952Z1P70FU	Engine – Complete
–	951-10326	Carburetor Kit – Major
–	951-10323	Carburetor Kit – Minor
–	951-10318	Gasket Kit – Complete
–	951-10343	Gasket Kit – External
–	951-10351	Spark Arrestor

NOTE: Illustrated parts without a numeric call-out are *not* servicable components.