PARTS LIST FOR MODELS LTX-1842 (P609G) & LTX-2146 (T609H)

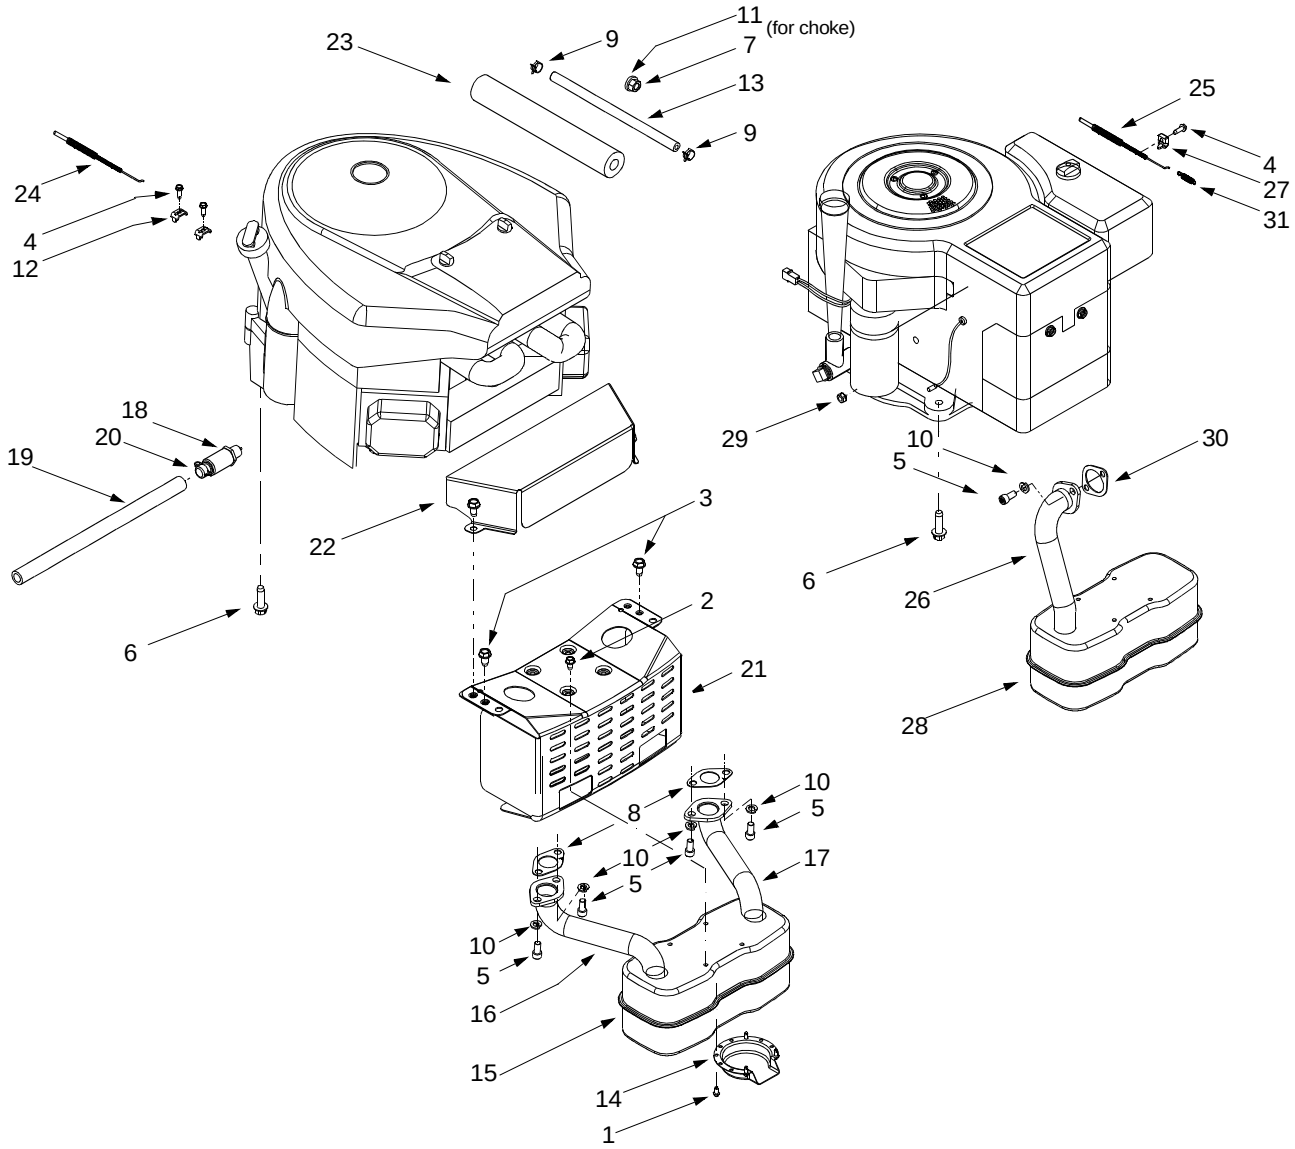

NOTE: *Engine accessory parts are applicable to all models except where otherwise noted.*

REF. NO.	PART NO.	DESCRIPTION
1	710-0227	Self-tapping Screw, #8-18 x .5
2	710-0599	Self-tapping Screw, 1/4-20 x .5
3	710-0604A	Self-tapping Screw, 5/16-18 x .625
4	710-1237	Screw, #10-32 x .625
5	710-1314A	Socket Cap Screw, 5/16-18 x .625
6	710-1315	Self-tapping Screw, 3/8-16 x 1.25
7	712-3017	Hex Nut, 3/8-16 (Model LTX-2146)
8	721-0460	Exhaust Gasket (Model LTX-2146)
9	726-0205	Hose Clamp
10	736-0119	Lock Washer, 5/16
11	736-0300	Flat Washer (Model LTX-2146)
12	751B221535	Casing Clamp (Model LTX-2146)
13	751-0535	Fuel Line Hose
14	751-0564	Muffler Deflector
15	751-0616	Muffler, Twin Inlet (Model LTX-2146)

REF. NO.	PART NO.	DESCRIPTION
16	751-0650	RH Exhaust Pipe (Model LTX-2146)
17	751-0651	LH Exhaust Pipe (Model LTX-2146)
18	751-3140	Oil Drain Valve
19	751-3141	Oil Drain Hose
20	751-3142	Oil Drain Cap
21	783-0615B	Muffler Heat Shield
22	783-0625C	Engine Heat Shield (Model LTX-2146)
23	722-0263	Foam (over fuel line) (Model LTX-2146)
24	746-1086	Throttle Cable (Model LTX-2146)
25	746-1084	Throttle Cable (Model LTX-1842)
26	751-0619	Exhaust Pipe (Model LTX-1842)
27	751B213146	Casing Clamp (Model LTX-1842)
28	751-0617	Muffler, Single Inlet (Model LTX-1842)
29	712-0271	Hex Sems Nut, 1/4-20 (for starter cable)
30	721-0208	Exhaust Gasket (Model LTX-1842)

Models LTX-1842 & LTX-2146

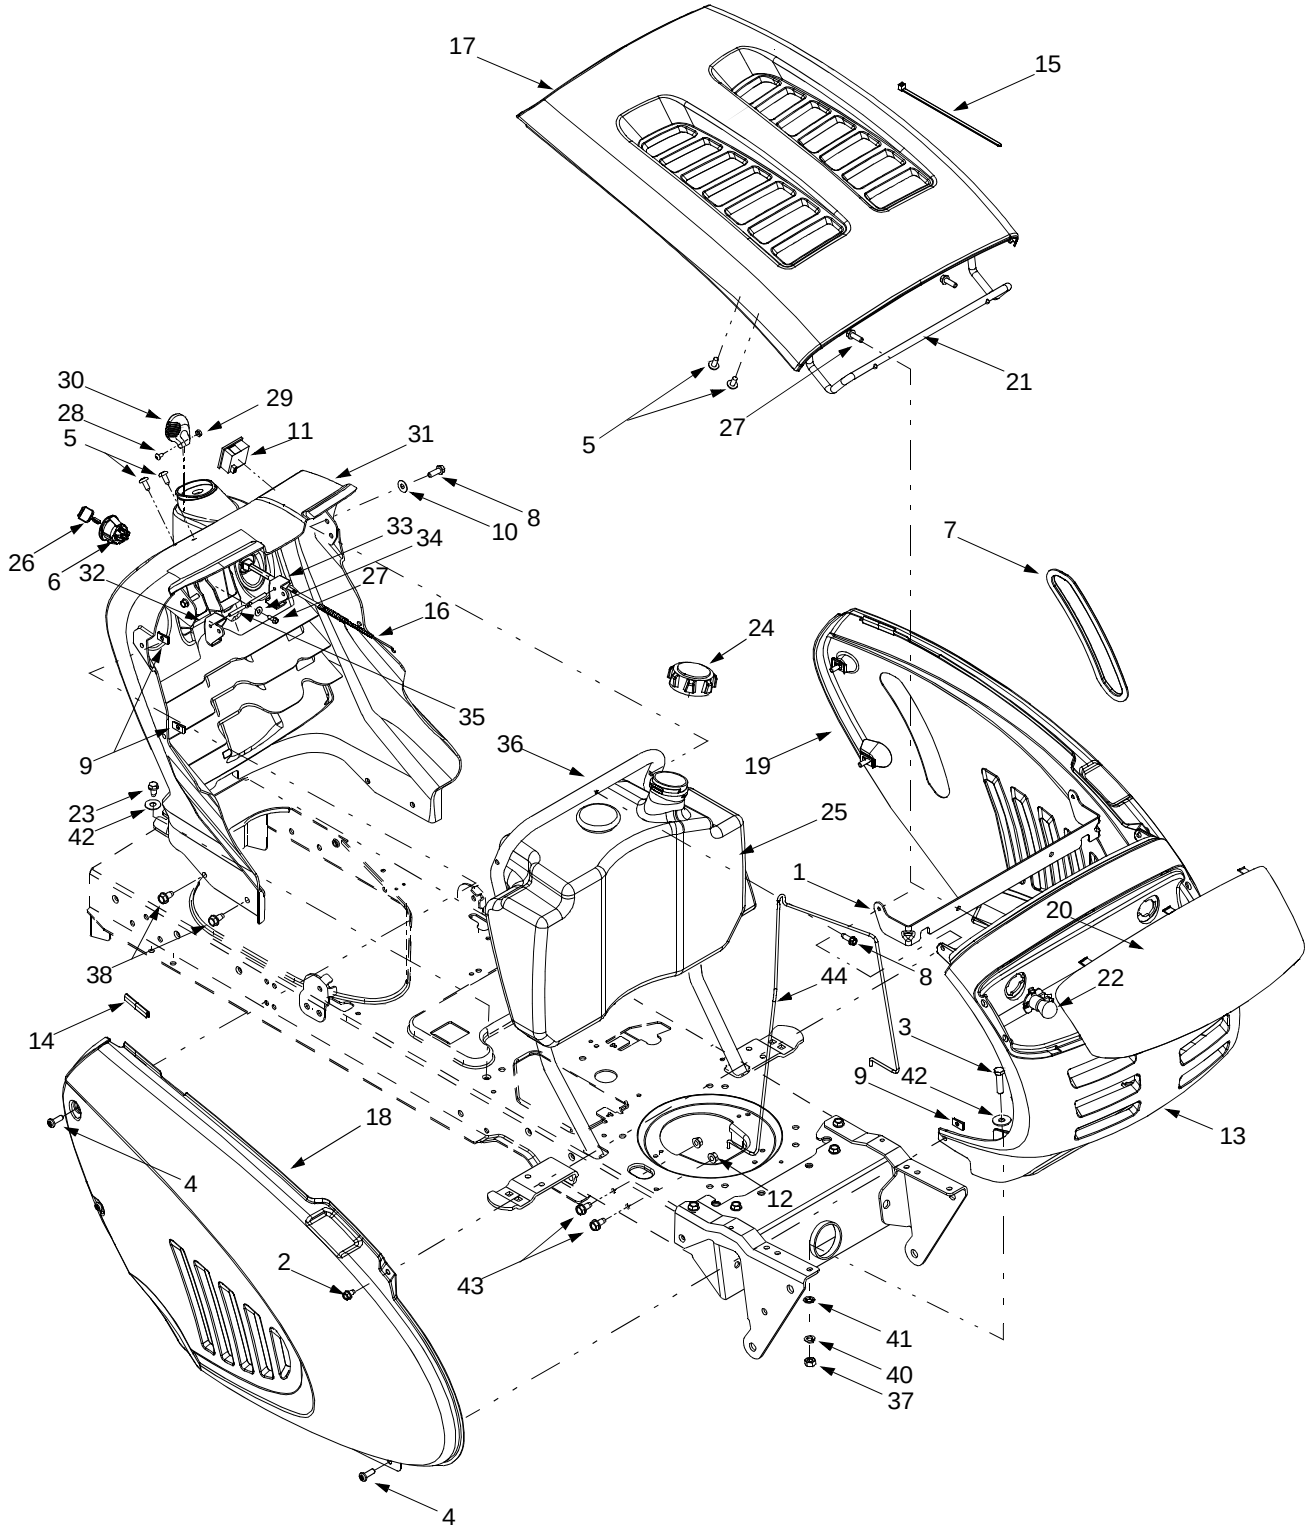

REF. NO.	PART NO.	DESCRIPTION
1	783-1346	Grill Support Bracket (9-style)
2	710-0599	Self-tapping Screw, 1/4-20 x .5
3	710-0528	Hex Cap Screw, 5/16-18 x 1.25
4	710-0924	Phillips Pan Screw, 1/4-20 x .75
5	710-1017	Truss Phillips Screw, 1/4-20 x .625
6	725-1741	Ignition Switch
7	735-04019	Side Panel Seal
8	710-0642	Self-tapping Screw, 1/4-20 x .75
9	712-0292	U-type Speed Nut, 1/4-20
10	736-0270	Bell Washer, .265 x .75 x .062
11	725-04036	Systems Indicator Monitor
12	712-3004A	Hex Nut, 5/16-18
13	731-2119A	Grille (9-style)
14	731-0511	Trim Strip, 4
15	725-0157	Cable Tie, 3/16 x .05 x 7.4
16	746-1085	Choke Knob/Cable (Model LTX-2146)
17	783-0783	Hood (9-style)
18	783-0784	RH Side Panel (9-style)
19	783-04200	LH Side Panel (9-style)
20	731-2637	Headlight Lens (9-style)
21	747-2138	Hood Hinge Rod
22	625-0051	Headlight Assembly
23	710-0726	Self-tapping Screw, 5/16-12 x .75
24	751-0603	Fuel Cap
25	751-3213	Fuel Tank, Three-gallon
26	725-1745	Ignition Key w/ plastic cover
	725-1744	Ignition Key w/o plastic cover
27	710-0895	Self-tapping Screw, 1/4-15 x .75
28	710-3217	Truss Phillips Screw, #8-32 x .375
29	712-0142	Hex Nut, #8-32
30	731-1857	Throttle Control Knob
31	631-04037	Dash Panel Assembly w/ Cargo Net
32	731-04217	Cruise Control Button
33	731-04215	Parking Brake Button
34	736-0142	Flat Washer, 9/32 x 1/2 x 1/16
35	747-1196	Brake/Cruise Pivot Rod
36	749-1087C	Dash Support Tube
37	712-3010	Hex Nut, 5/16-18
38	710-1611B	Self-tapping Screw, 5/16-18 x .75
39	726-3046	Ratchet Clip
40	736-0119	Lock Washer, 5/16
41	726-0201	Speed Nut, .3125
42	736-3078	Flat Washer, .349 x 1.0 x .063
43	710-1238	Screw, 5/16-18 x .875 (Grade 5)
44	747-04132	Fule Tank Support Rod
—	629-0469A	Headlight Wire Harness (Not Shown)
—	629-04050	Tractor Wire Harness (Not Shown)

Models LTX-1842 & LTX-2146

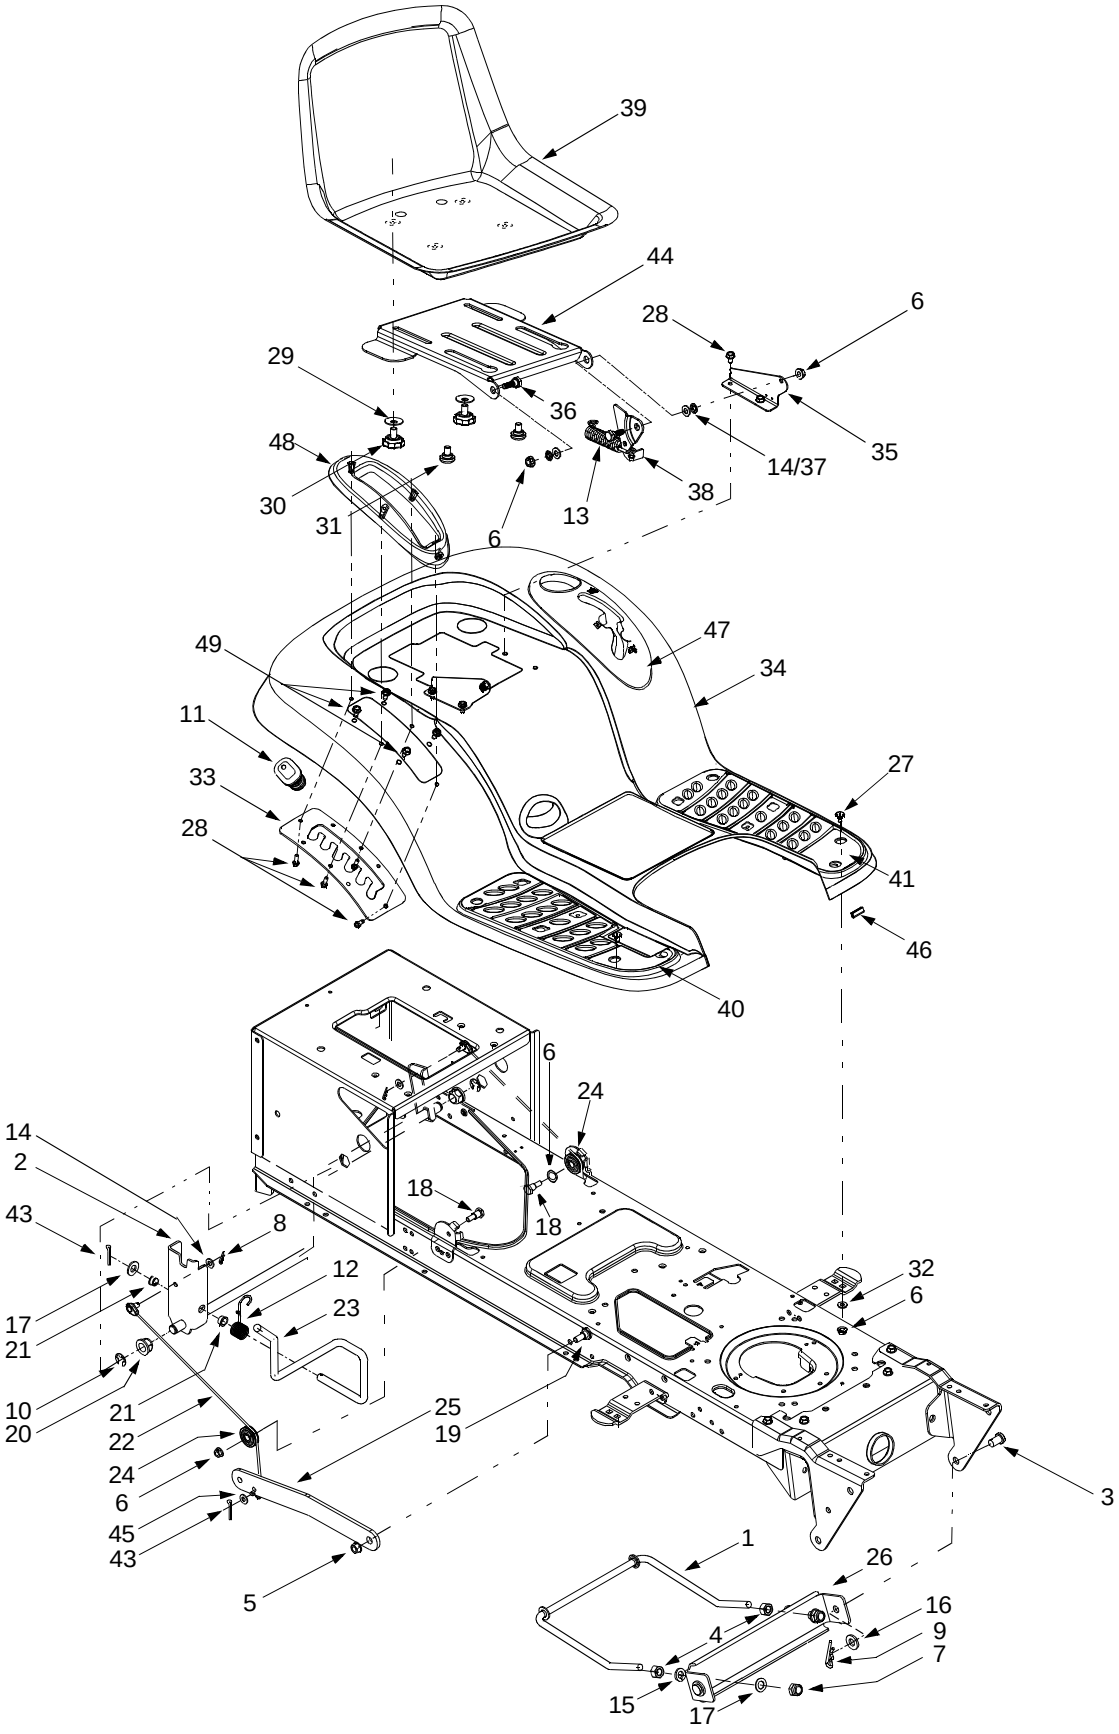

REF. NO.	PART NO.	DESCRIPTION
1	747-1130B	Deck Stabilizer Rod
2	683-0197B	Lift Shaft Assembly
3	711-0332	Clevis Pin, .5 x .78
4	712-0206	Hex Nut, 1/2-13
5	712-0431	Flange Lock Nut, 3/8-16
6	712-3004A	Flange Lock Nut, 5/16-18
7	712-3083	Hex Nut, 1/2-13
8	714-0104	Internal Cotter Pin
9	714-0145	Internal Cotter Pin
10	716-0106	E-ring
11	720-0311	Handle Grip
12	732-0874	Torsion Spring
13	732-1184	Extension Spring, .84 x 4.6
14	736-0275	Flat Washer, 5/16
15	736-0921	Lock Washer, 1/2
16	736-3019	Flat Washer, .531 x 1.062 x .134
17	736-3084	Flat Washer, .51 x 1.12 x .06
18	738-0138A	Hex Cap Screw, 5/16-18 x .62
19	738-0143	Shoulder Screw, 3/8-16
20	741-0225	Hex Flange Bearing
21	741-0715	Snap Flange Bearing
22	746-0968	Lift Cable, 16.16 (LTX-1842)
	746-1144	Lift Cable, 15.62 (LTX-2146)
23	747-1111A	Lift Handle
24	756-1154	Roller Pulley
25	783-0678A	Arm Lift
26	783-0720A	Deck Stabilizer Bracket
27	710-0260A	Carriage Bolt, 5/16 x .62
28	710-0604A	Self-tapping Screw, 5/16-18 x .625
29	736-0331	Bell Washer, .390 x 1.13 x .062
30	720-04009	Knob, 3/8-16
31	738-04012	Shoulder Screw
32	736-3078	Flat Washer, .349 x 1.0 x .063
33	783-1010	Lift Adjustment Bracket
34	783-0840A	Fender
35	783-1489	Seat Mounting Bracket
36	738-0296	Shoulder Screw
37	726-0201	Speed Clip
38	783-0209A	Seat Lift Bracket
39	757-04011	Medium Back Seat, Yellow
40	735-0672	RH Foot Pad, Rubber
41	735-0673	LH Foot Pad, Rubber
42	726-3046	Foot Pad Clips
43	714-0111	Cotter Pin
44	783-04081	Seat Pivot Bracket
45	736-0204	Flat Washer, .344 x .62
46	731-0511	Trim Strip
47	731-1990	Lift Lever Cover
48	731-2104B	Shift Lever Cover w/ Cup Holder
49	710-0895	Self-tapping Screw, 1/4-15 x .75

Models LTX-1842 & LTX-2146

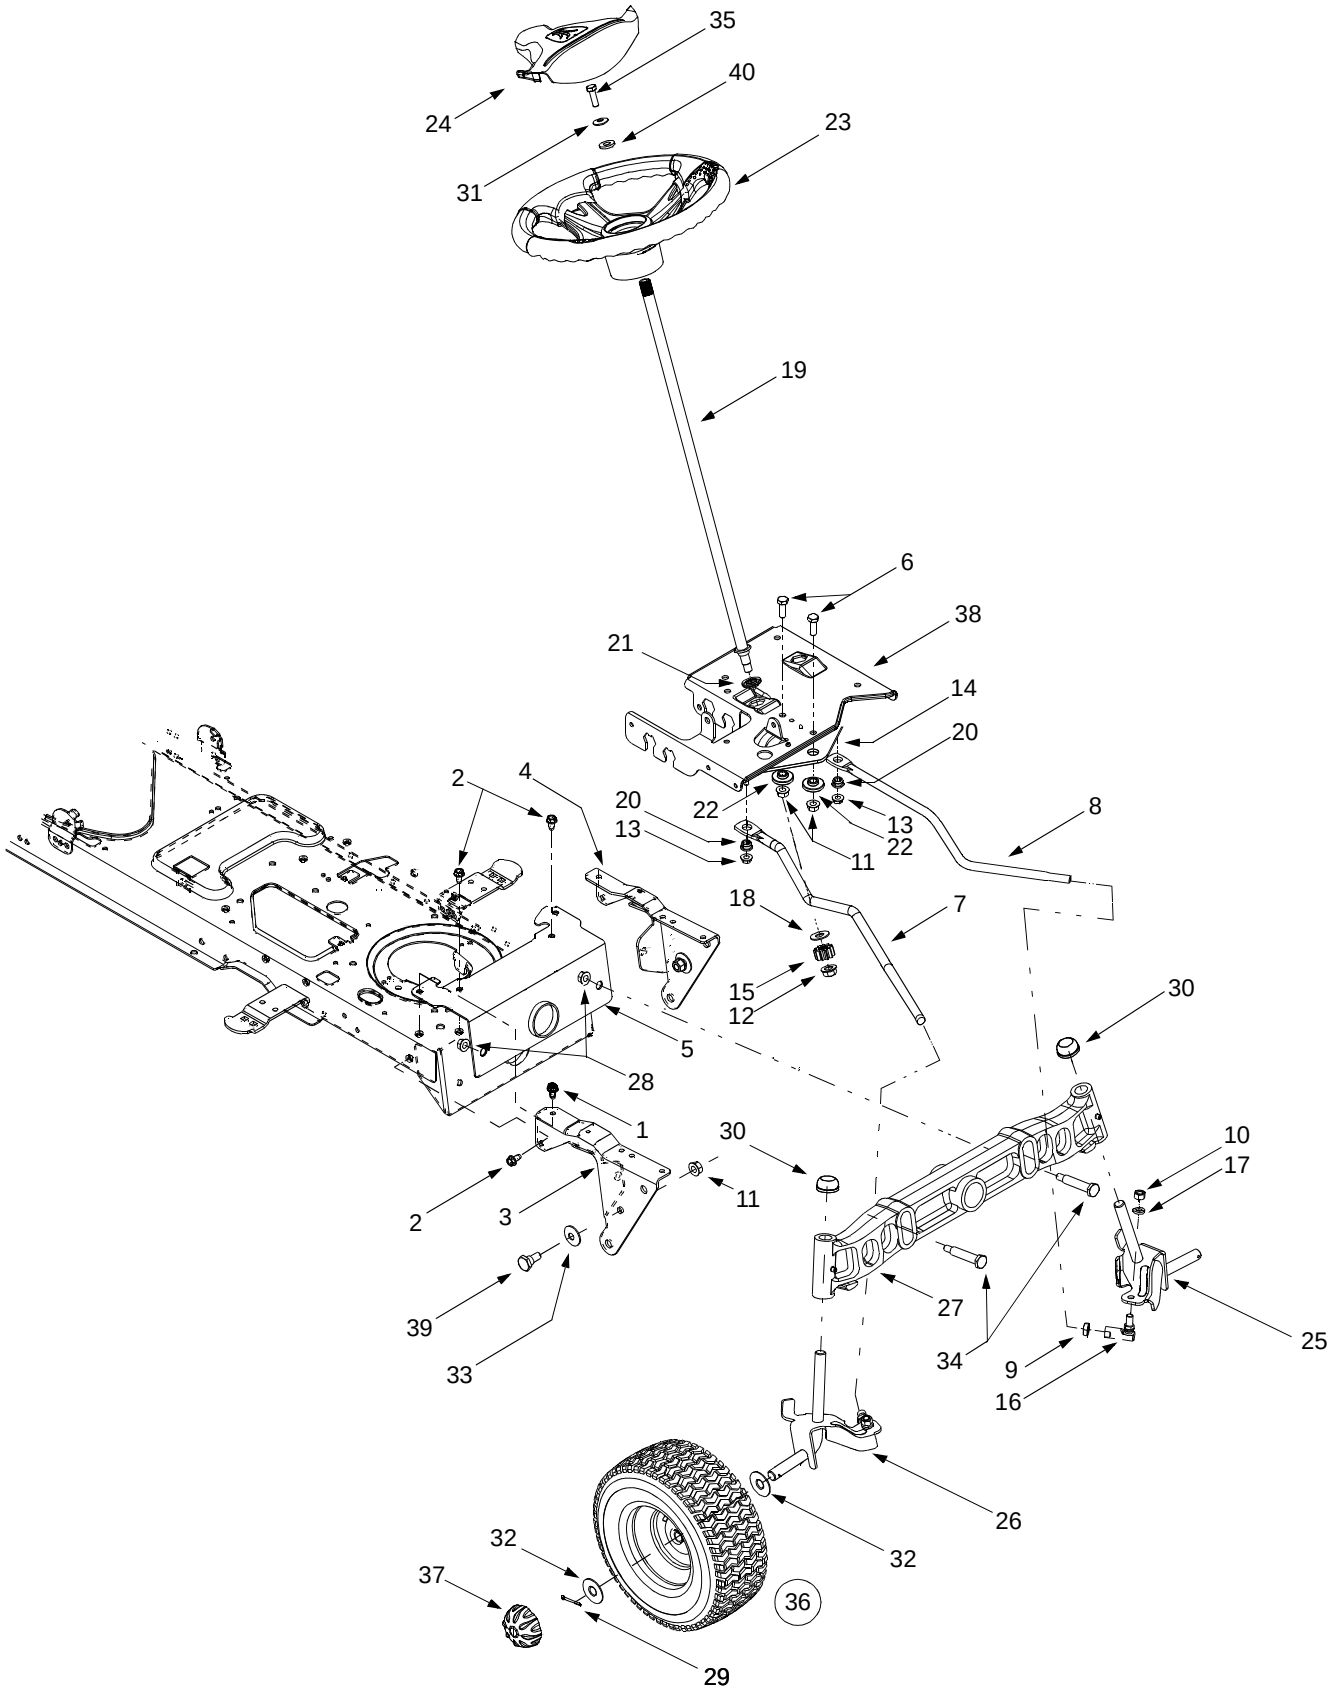

REF. NO.	PART NO.	DESCRIPTION
1	710-1260A	Self-tapping Screw, 5/16-18 x .75
2	710-0604A	Self-tapping Screw, 16-18 x .625
3	783-0726B	RH Pivot Support Bracket
4	783-0727A	LH Pivot Support Bracket
5	783-0728	Pivot Bar Bracket
6	710-0514	Hex Cap Screw, 3/8-16 x 1 (Grade 5)
7	711-1408	RH Drag Link
8	711-1409A	LH Drag Link
9	712-0240	Jam Nut, 7/16-20 (Grade 2)
10	712-0241	Hex Nut, 3/8-24 (Grade 2)
11	712-0431	Flange Lock Nut, 3/8-16
12	712-0459	Flange Lock Nut, 7/16-20
13	712-3004A	Flange Lock Nut, 5/16-18
14	717-1550D	Steering Gear, 11/90 Ratio
15	717-1554	Steering Pinion Gear
16	723-0448A	Ball Joint, 7/16-20
17	736-0169	Lock Washer, 3/8
18	736-3084	Flat Washer, .51 x 1.12 x .06
19	738-1001A	Steering Shaft, .625 OD x 24.4
20	741-0475	Plastic Bushing, .38 ID
21	741-0656	Hex Flange Bearing, 5/8
22	738-0372B	Shoulder Spacer, .38 ID
23	631-04008	Steering Wheel, Soft Grip, Three Spoke
24	731-04066	Steering Wheel Cover
25	638-0019A	LH Axle Assembly, .625 Dia.(Model LTX-1842)
	638-0021	LH Axle Assembly .625 / .750 Dia.(Model LTX-2146)
26	638-0020A	RH Axle Assembly, .625 Dia.(Model LTX-1842)
	638-0022	RH Axle Assembly .625 / .750 Dia. (Model LTX-2146)
27	719-0399B	Cast Iron Pivot Bar w/ Fittings, .625 (Model LTX-1842)
	719-0525B	Cast Iron Pivot Bar w/ Fittings, .75 (Model LTX-2146)
28	712-0431	Flange Lock Nut, 3/8-16
29	714-0162	Cotter Pin
30	726-0214	Push Cap, .625 (Model LTX-1842)
	726-0341	Push Cap, .750 (Model LTX-2146)
31	736-0242	Bell Washer, .34 x .872
32	736-0285	Flat Washer, .635 x 1.589 x .06
33	736-0331	Bell Washer, .39 x 1.13 x .062
34	738-1011	Shoulder Screw, .5 x 2.2, 3/8-16
35	710-0643	Hex Bolt, 5/16-18 X 1
36	634-0105A	Wheel Assembly Complete, 15 x 6 x 6
—	634-0172	Rim Only
—	734-0255	Air Valve (Not Shown)
—	734-1731	Tire Only, Square Shoulder
—	741-0487A	Flange Bearing (Not Shown)
—	741-0706	Flange Bearing w/ Fitting (Not Shown)
37	734-2290A	Hub Cap
38	783-0653F	Steering Support Bracket
39	738-0143	Shoulder Screw, 3/8-16
40	736-3004	Flat Washer, .406 x .875 x .105

Models LTX-1842 & LTX-2146

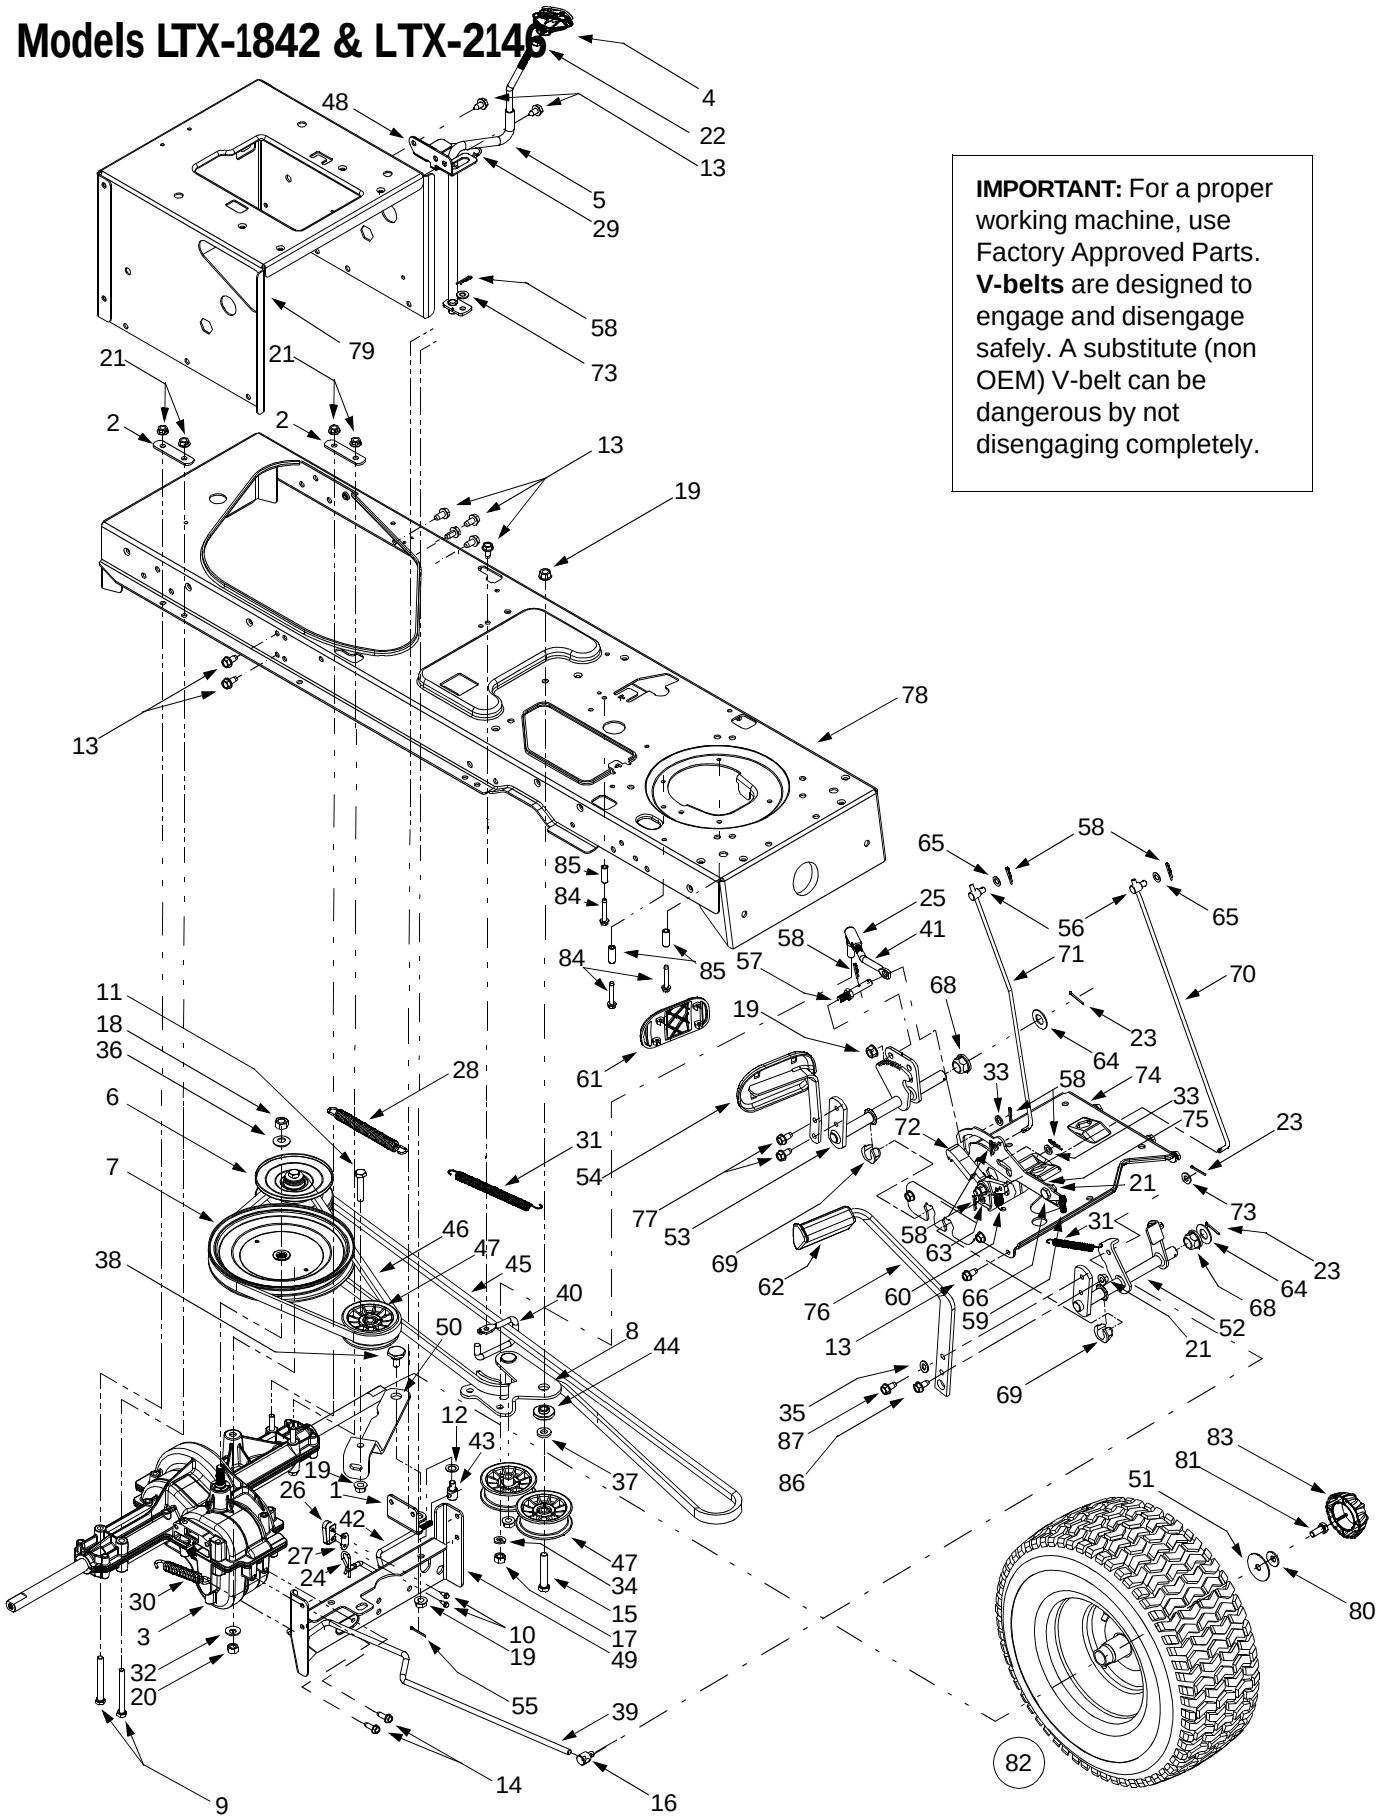

IMPORTANT: For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

REF. NO.	PART NO.	DESCRIPTION
1	783-1015	Shift Lever Support
2	17840	Transaxle Mounting Bracket
3	618-0551A	Single-speed Transmission Assembly
4	631-0009A	Shifter Knob
5	647-0045	Shift Lever
6	656-0048	Variable-speed Pulley Assembly
7	656-0051A	Transmission Pulley, 8.5 x .5-36
8	683-0251	Double-idler Bracket
9	710-0176	Hex Cap Screw, 5/16-18 x 2.75
10	710-0227	Self-tapping Screw, #8-18 x .5
11	710-0347	Hex Cap Screw, 3/8-16 x 1.75
12	736-0272	Flat Washer, .51 x 1.0 x .060
13	710-0604A	Self-tapping Screw, 5/16-18 x .625
14	710-0642	Self-tapping Screw, 1/4-20 x .75
15	710-3011	Hex Cap Screw, 3/8-16 x 2.25
16	711-0677	Ferrule, 5/16-18
17	712-0241	Hex Nut, 3/8-24
18	712-0378	Hex Nut, 7/16-20
19	712-0431	Flange Lock Nut, 3/8-16
20	712-3017	Hex Nut, 3/8-16
21	712-3004A	Flange Lock Nut, 5/16-18
22	712-3008	Jam Nut, 3/8-16
23	714-0111	Cotter Pin
24	714-0209	Internal Cotter Pin
25	723-3018	Ball Joint
26	725-1644	Short Spring Switch
27	726-0320	Insulator Nut Plate
28	732-0384	Extension Spring, .62 Dia. x 6.12
29	732-0525	Compression Spring Clip
30	732-0716	Extension Spring, .59 OD x 4
31	732-0963	Extension Spring, .50 Dia. x 6.37 (hooks to flange, 783-0650, in frame)
32	736-0105	Bell Washer, .401 x .87 x .063
33	736-0140	Flat Washer, .385 x .62 x .063
34	736-0169	Lock Washer, 3/8
35	736-3008	Flat Washer, .344 x .750 x .120
36	736-0407	Bell Washer, .45 x 1.0 x .602
37	736-3010	Flat Washer, .407 x .812 x .135
38	738-0322	Shoulder Screw, .625 x .217
39	747-1122	Brake Rod
40	747-1123A	Belt Guard
41	747-1127	Idler Adjustment Rod, 3/8
42	747-0047A	Shift Rod
43	711-0736	Adjustment Ferrule, 1/4-20 x 1.0
44	738-0372A	Shoulder Spacer, .38 ID
45	754-0467	Lower Drive Belt
46	754-0468	Upper Drive Belt
47	756-0981A	Flat Idler, 2.75 OD
48	783-1016B	Speed Control Rod Bracket
49	783-0667B	Transmission Torque Bracket
50	783-0669	Idler Bracket
51	736-0430	Flat Washer, .350 x 1.59 x .062
52	647-0031	Brake Control Assembly
53	647-0032	Speed Control Assembly
54	683-0266	Drive Pedal Assembly
55	714-0470	Cotter Pin, 1/8 x 1.25
56	711-0736	Ferrule, 1/4-20
57	711-1363	Pin, 3/8-16 x 2.43
58	714-0104	Cotter Pin
59	732-0437	Compression Spring, .34 OD x 1.0
60	732-0955	Extension Spring, .50 OD x 1.41
61	735-0662	Drive Pedal Pad
62	735-3049	Brake Pedal Pad
63	736-0142	Flat Washer, .281 x .5 x .063
64	736-0187	Flat Washer, .64 x 1.24 x .06
65	736-0204	Flat Washer, .344 x .062 x .03
66	738-0155	Shoulder Screw, .437 x 1.62
67	738-0507B	Shoulder Screw, .5 x .434
68	741-0225	Hex Flange Bearing
69	741-3065A	Split Hex Flange Bearing
70	747-1137	Cruise Control Rod
71	747-1138	Brake Lock Control Rod
72	748-0413	Cruise Latch
73	736-0275	Flat Washer, .344 x .688 x .065
74	783-0653F	Steering Support Bracket
75	783-0732	Drive Lockout Bracket
76	783-0773	Brake Pedal
77	710-1260A	Self-tapping Screw, 5/16-18 x .75
78	683-0304C	Lower Frame Assembly
79	783-1031A	Hitch Plate
80	736-0242	Bell Washer, .34 x .872
81	710-0627	Hex Cap Screw, 5/16-24 x .75
82	634-0104	Wheel Assembly Complete 20 x 8 x 8 Square Shoulder
	634-0070	Rim Assembly Only
	734-0255	Air Valve (Not Shown)
	734-1730	Tire Only, 20 x 8 x 8, Square Shoulder
83	734-2290A	Deluxe Hub Cap (Ref. 51 Required)
84	710-0809	Self-tapping Screw, 1/4-20 x 1.25
85	750-0566A	Spacer
86	710-0650	Self-tapping Screw, 5/16-18 x .875
87	710-1611B	Self-tapping Screw, 5/16-18 x .75

Models LTX-1842 & LTX-2146

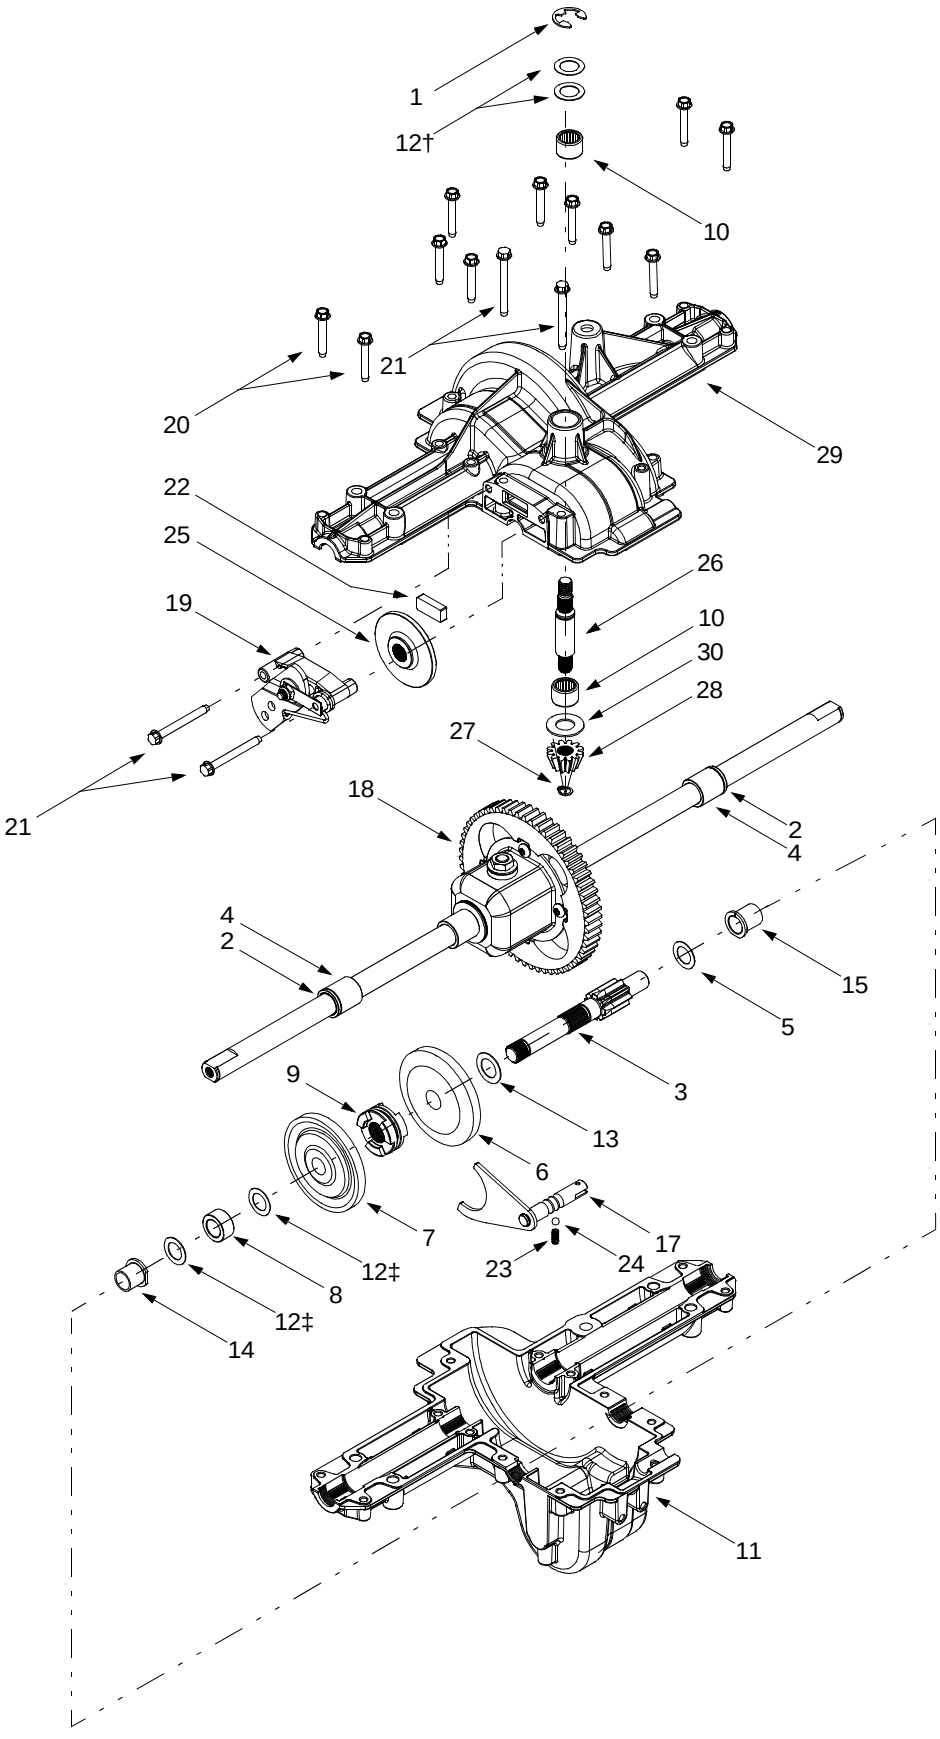

REF. NO.	PART NO.	DESCRIPTION
1	716-0231	E-ring, .75
2	721-0338	Seal, .75 x 1.0 x .125
3	711-1431	Drive Shaft
4	741-0340	Sleeve Bearing, .75 x .1.0 x 1.0
5	736-0495	Thrust Washer, 1.0 x .632 x .0
6	717-1362	42-tooth Bevel Gear
7	717-1363	42-tooth Bevel Gear
8	750-1234	Spacer, .633 x 1.0 x .513
9	718-0228	Clutch Collar
10	741-0335	Needle Bearing, .625 x .813 x .495
11	719-0394	Lower Housing
12	736-0336	Flat Washer, 5/8 x 1.0 x .030
	736-0337	Flat Washer, 5/8 x 1.0 x .040
	736-0349	Flat Washer, 5/8 x 1.0 x .020
13	736-0519	Flat Washer, .70 x 1.125 x .031
14	741-0336	Flange Bearing, 5/8 x 3/4 x 3/4
15	741-0337	Flange Bearing, 5/8 x 3/4 x 15/16
16	750-1238	Spacer, .635 x 1.0 x .27
17	611-0133	Detent Shaft Assembly
18	618-0424	Differential Assembly
19	661-0006	Brake Assembly
20	710-1325	Self-tapping Screw, 1/4-20 x 1.625
21	710-1206	Self-tapping Screw, 1/4-20 x 2.375
22	717-0678	Brake Pad
23	732-0863	Compression Spring
24	741-0862	Detent Ball
25	761-0202	Brake Disc
26	711-1430	Input Shaft
27	716-0108	Retaining Ring, .437
28	717-1464	14-tooth Bevel Pinion
29	719-0580	Upper Housing
30	736-0335	Thrust Washer, .635 x 1.25 x .042

†Use applicable flat washer in this application allowing .036/.018 in. end-play.
‡Use applicable flat washer in this application allowing .010/.005 in. end-play.

Models LTX-1842 & LTX-2146

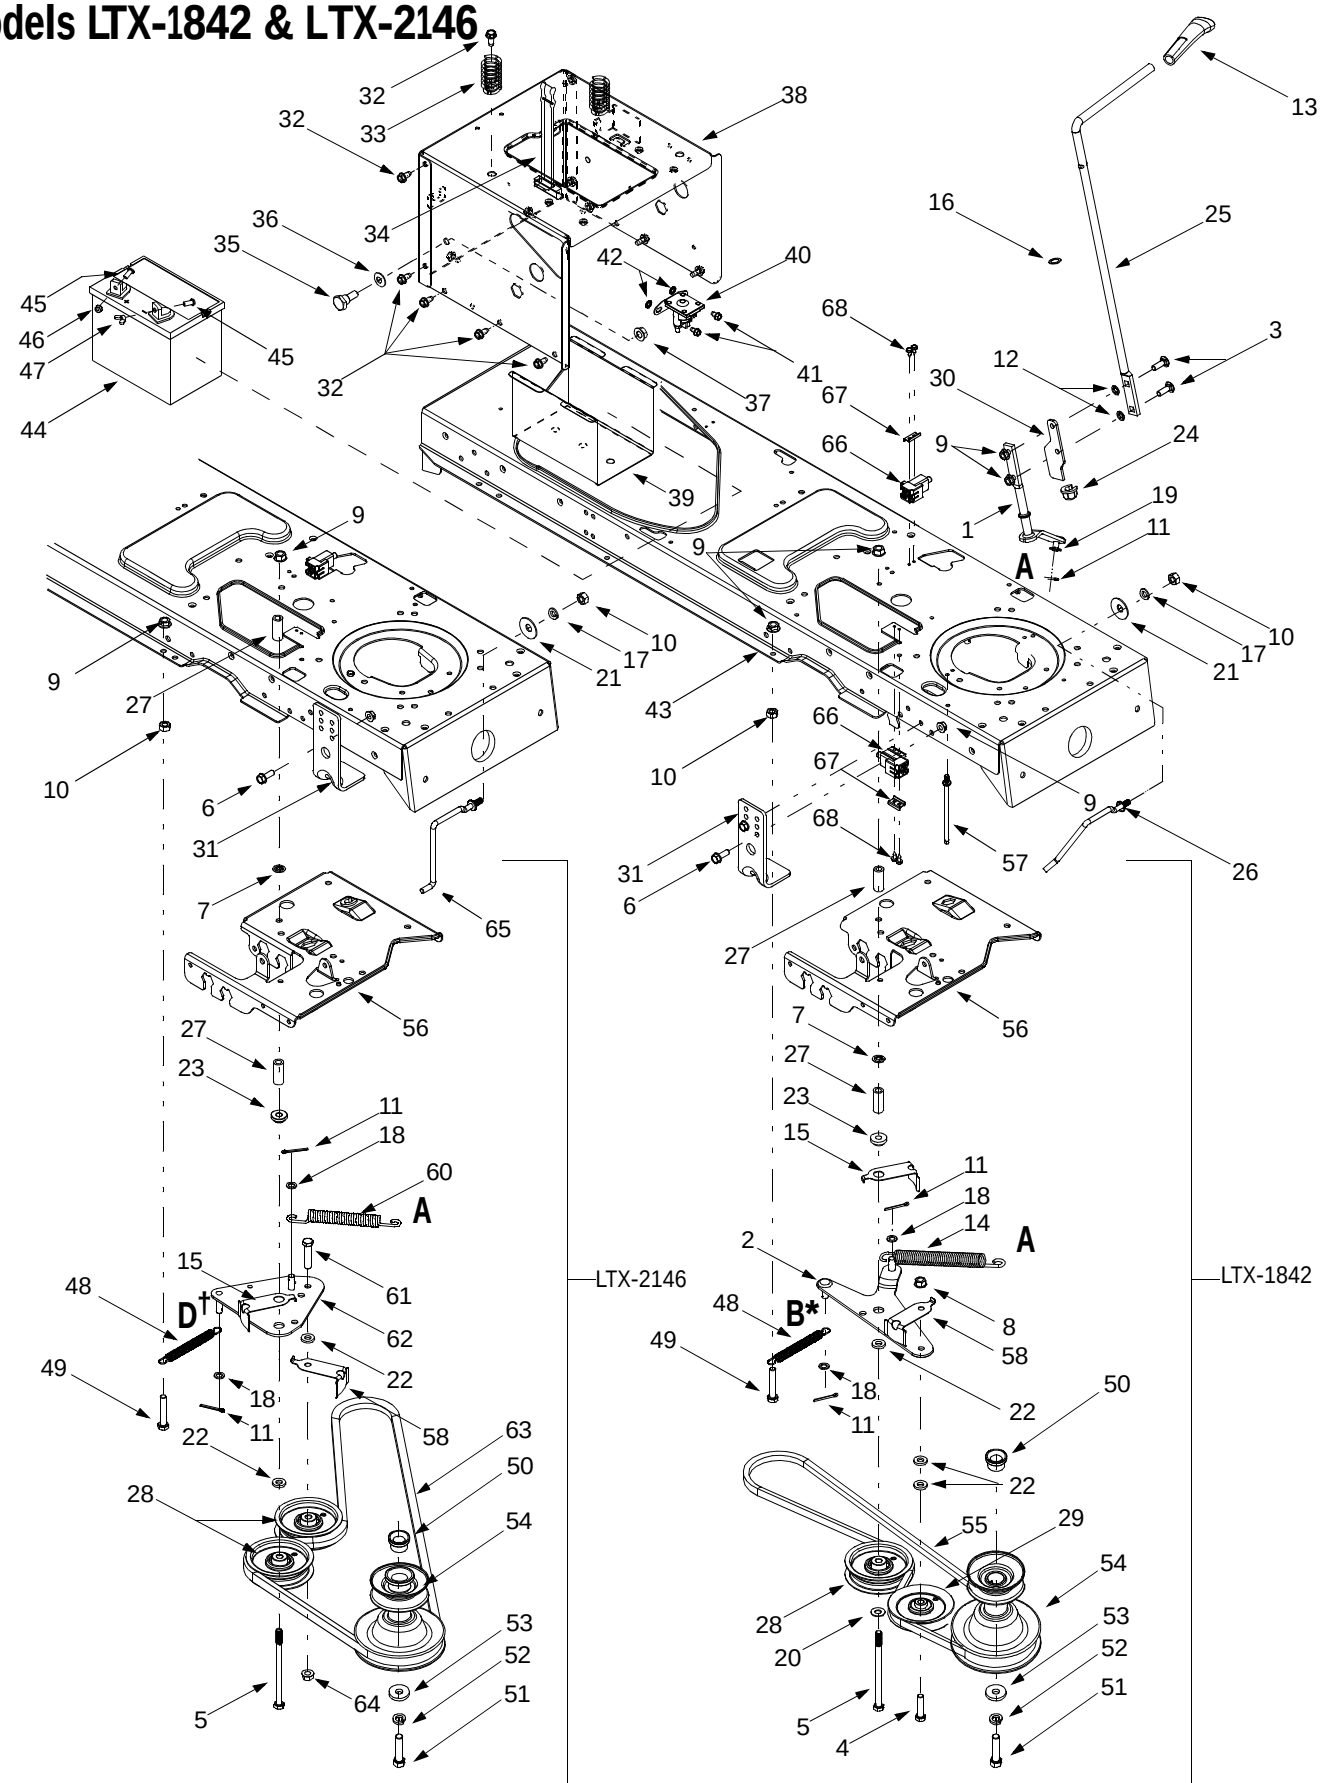

† Refer to **D** on page 40.

* Refer to **B** on page 38.

REF. NO.	PART NO.	DESCRIPTION
1	647-0064	PTO Engage Lever Assembly
2	683-0450	PTO Engage Plate Assembly
3	710-0276	Carriage Screw, 5/16-18 x 1.00
4	710-0520	Hex Cap Screw, 3/8-16 x 1.5
5	710-0831	Hex Cap Screw, 3/8-16 x 5.5
6	710-1238	Hex Head Washer Screw, 5/16-18 x .875
7	712-0229	Push Nut, 3/8
8	712-0431	Flange Lock Nut, 3/8-16
9	712-3004A	Flange Lock Nut, 5/16-18
10	712-3010	Hex Nut, 5/16-18
11	714-0470	Cotter Pin, 1/8 x 1.25
12	726-0201	Speed Nut, .3125
13	731-2111A	PTO Knob
14	732-1170	Extension Spring, .75 x 6.75
15	732-0991A	Belt Guard
16	736-0108	Flat Washer, .510 x .750 x .033
17	736-0119	Lock Washer, 5/16
18	736-0140	Flat Washer, .385 x .62 x .063
19	736-0275	Flat Washer, 5/16
20	736-0300	Flat Washer, .406 x .875 x .059
21	736-0331	Bell Washer, .39 x 1.13 x .062
22	736-3010	Flat Washer, .407 x .812 x .135
23	738-0372B	Shoulder Spacer, .380
24	741-0708	Hex Split Flange Bearing, .5
25	747-1112D	PTO Engagement Handle
26	747-1286A	Belt Keeper Rod
27	748-0415B	Spacer, 3/8 x 1.54
28	756-0627B	Idler Pulley, 3.5
29	756-1208	Idler Pulley, 4.0
30	783-0744A	Engagement Stop
31	783-0891B	Deck Stop
32	710-0604A	Self Tapping Screw, 5/16-18 x .625
33	732-04035	Compression Spring, 1.28 x 3.125
34	723-0444	Battery Strap
35	738-1020	Shoulder Screw, .625 x .5, 7/16-20
36	736-0407	Bell Washer, .45 x 1.0 x .062
37	712-0459	Flange Lock Nut, 7/16-20
38	783-1031A	Hitch Plate
39	783-0349	Battery Tray
40	725-1426	Solenoid, 12-Volt, 100 Amp
41	710-0599	Self Tapping Screw, 1/4-20 x .5
42	736-0222	Lock Washer, 1/4
43	683-0304C	Lower Frame Assembly
44	725-1706	12-volt Battery, 270 CCA
45	710-0751	Hex Cap Screw, 1/4-20 x .62
46	712-0271	Hex Sems Nut, 1/4-20
47	712-3044	Wing Nut, 1/4-20
48	732-1165	Extension Spring, .50 x 5.0
49	710-3180	Hex Cap Screw, 5/16-18 x 1.75
50	750-0956	Spacer Cup
51	710-3029	Hex Head Cap Screw, 7/16-20 x 1.25
52	736-0171	Lock Washer, 7/16
53	736-0322	Flat Washer, .450 x 1.25
54	756-0982B	Engine Pulley, 3.56 OD x 5.56
55	754-0497	PTO Belt (Model LTX-1842)
56	783-0653F	Steering Support Bracket
57	711-1044	Keeper Pin, 5/16 x 4.75
58	732-1013	Belt Guard
59	710-3025	Hex Cap Screw, 5/16-18 x .625
60	732-0944	Extension Spring, .75 x 6.75
61	710-0347	Hex Cap Screw, 3/8-16 x 1.75
62	683-0302	PTO Engagement Plate Assembly
63	754-0486A	PTO Belt (Model LTX-2146)
64	712-0431	Flange Lock Nut, 3/8-16
65	747-1243	Belt Keeper Rod
66	725-1657A	Switch
67	17962	Switch Plate
68	710-0224	Screw, #10-16 x .5

Model LTX-1842

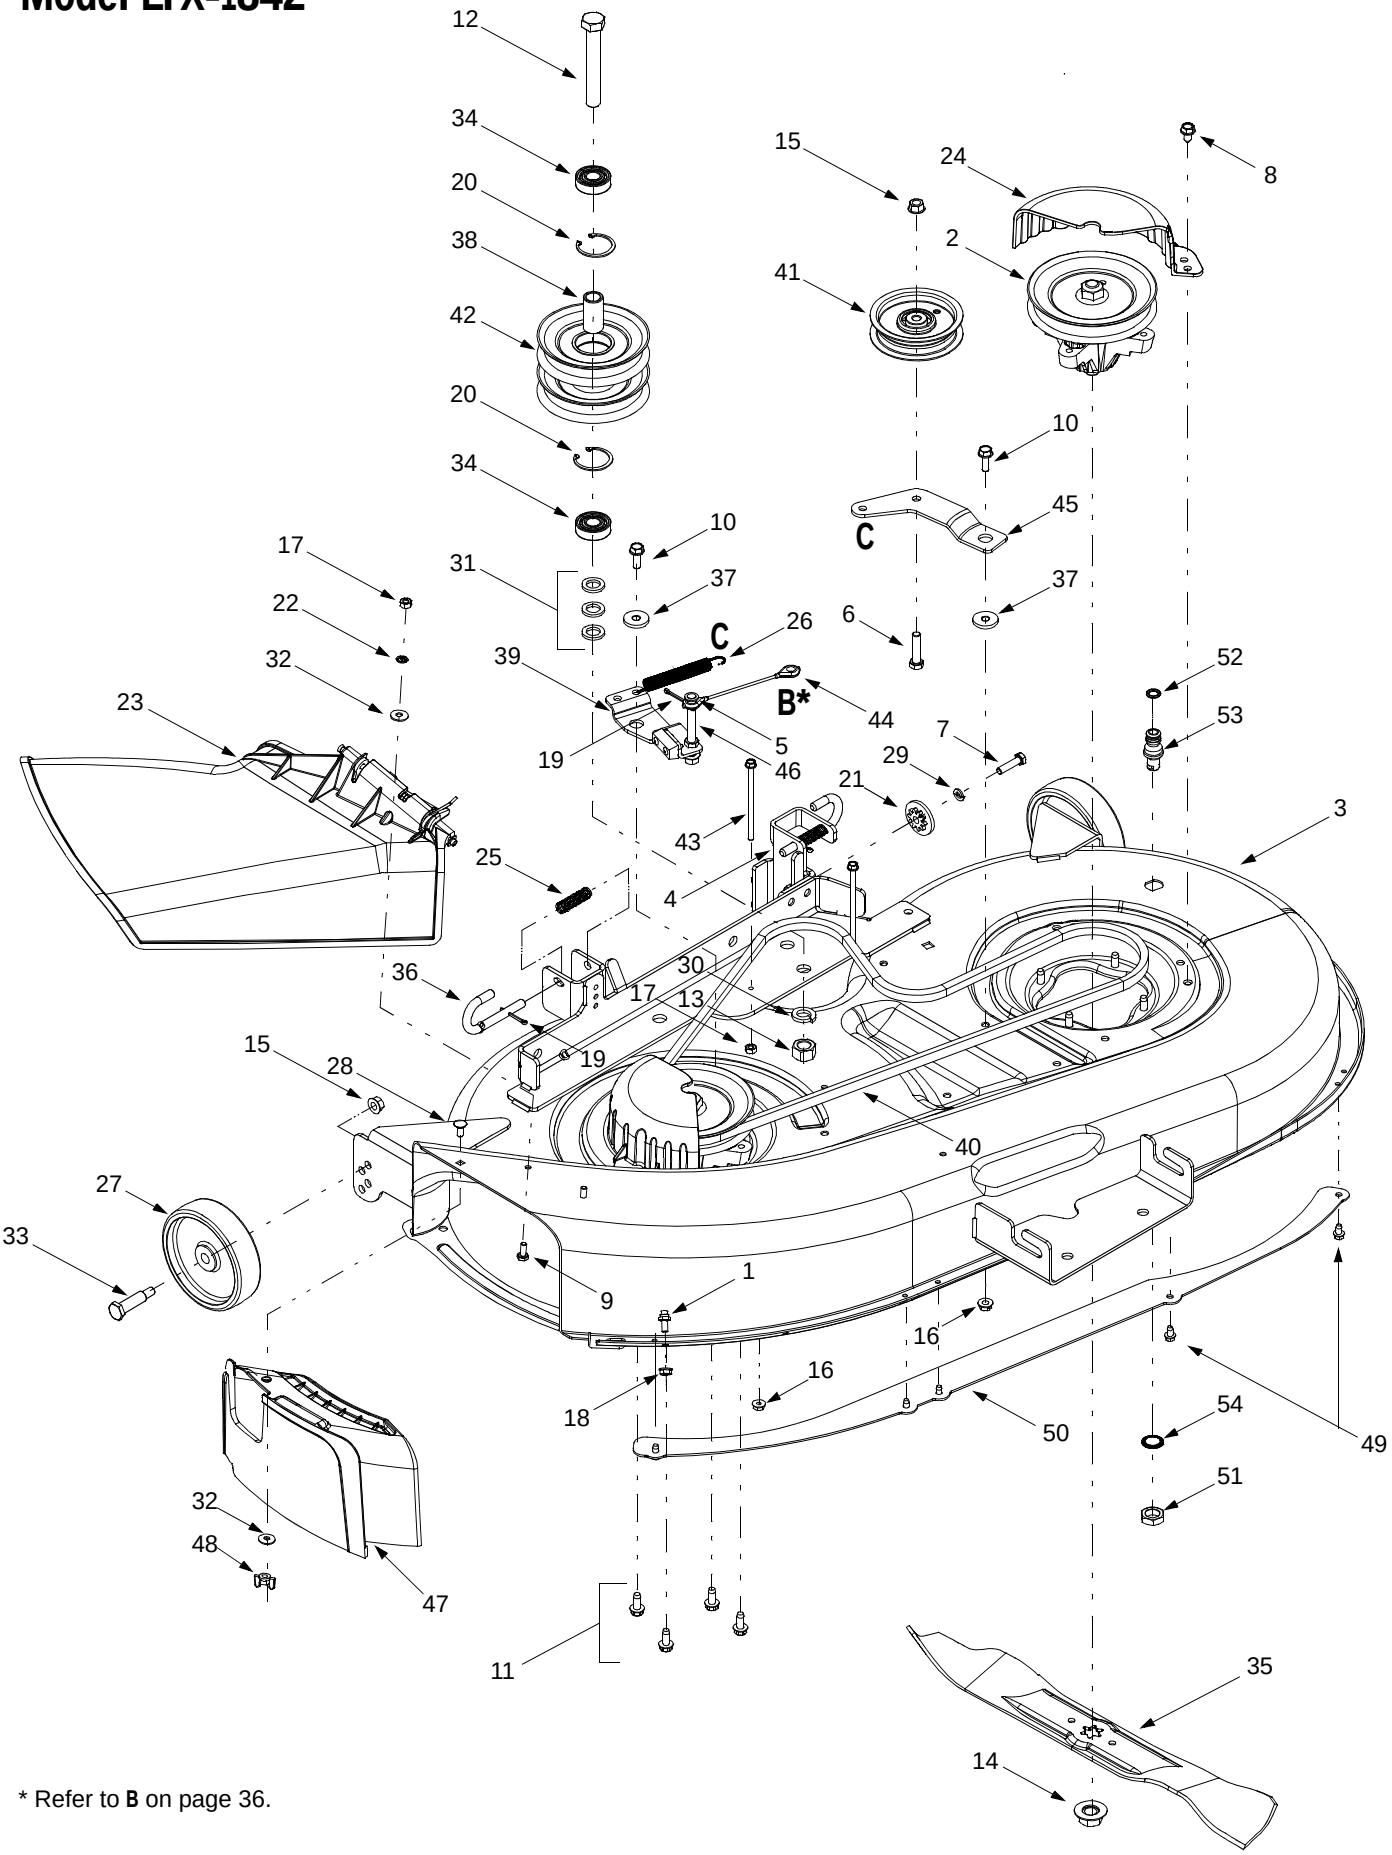

* Refer to **B** on page 36.

REF. NO.	PART NO.	DESCRIPTION
1	711-04069	Grass Catcher Pin, 1/4-20
2	618-0574	Spindle Assembly, 5.75 Dia. w/ Fitting
	756-0980	Pulley Only
3	683-04051	42-inch Deck Shell
4	683-0254	Deck Adjustment Bracket w/ Weld Nut
5	736-0140	Flat Washer, .385 x .62 x .063
6	710-0520	Hex Cap Screw, 1/4-20 x 1.5
7	710-0528	Hex Cap Screw, 5/16-18 x 1.25
8	710-0726	Self-tapping Screw, 5/16-12 x .75
9	710-0751	Hex Cap Screw, 1/4-20 x .62
10	710-1238	Hex Head Washer Screw, 5/16-18 x .875
11	710-0650	Self-tapping Screw, 5/16-18 x .875
12	710-3151	Hex Cap Screw, 5/8-18 x .875
13	712-0337	Hex Nut, 5/8-18
14	712-0417A	Hex Flange Nut, 5/8-18
15	712-0431	Flange Lock Nut, 3/8-16
16	712-3004A	Flange Lock Nut, 5/16-18
17	712-3006	Hex Nut, 1/4-20
18	712-3027	Hex Flange Lock Nut, 1/4-20
19	714-0470	Cotter Pin, 1/8 x 1.25
20	716-3020	Internal Snap Ring
21	717-1553B	Deck Adjustment Gear
22	726-0233	Push Nut. .25 x .5
23	731-1032B	Side Discharge Chute Assembly
24	731-2486	Belt Cover
25	732-0306	Compression Spring, .406 x .531 x 1.75
26	732-0470A	Extension Spring, .50 x 4.74
27	734-0973	Deck Wheel, 5 x 1.38
28	710-0134	Carriage Screw, 1/4-20 x .5
29	736-0119	Lock Washer, 5/16
30	736-0158	Lock Washer, 5/8
31	736-0162	Flat Washer, .64 x 1.0 x .12
32	736-0270	Bell Washer, .265 x .75 x .062
33	738-0373	Shoulder Screw, .498 x 1.53
34	741-0524	Bearing, .625 x 1.574 x .470
35	742-0616A	Three-in-one Blade, Star Center, 21.23"
36	747-1116	Deck Release Pin
37	748-0331	Shoulder Spacer, .625 x .324
38	750-0932A	Spacer, .635 x .88 x 1.72
39	683-0440	Deck Brake Assembly
40	754-0498	Deck Belt
41	756-0627B	Idler Pulley, 3.5
42	756-1202	Double Pulley, 5.0
43	710-1830	Self-tapping Screw, 1/4-20 x 4.0
44	746-0970	Brake Cable, 5.05
45	783-1291	Idler Bracket
46	711-1534	Pin, 3/8-16, 3/8 x 3.27
47	731-2363	Mulch Plug
48	712-3087	Wing Nut
49	710-0599	Self-tapping Screw, 1/4-20 x .5
50	783-1146A	Deck Skirt
51	712-0641	Hex Nut, M-16 x 1.5
52	721-0417	O-Ring
53	737-04003	Water Nozzle
54	736-0760	Lock Washer, 17 x 23.8 x 1.95

Model LTX-2146

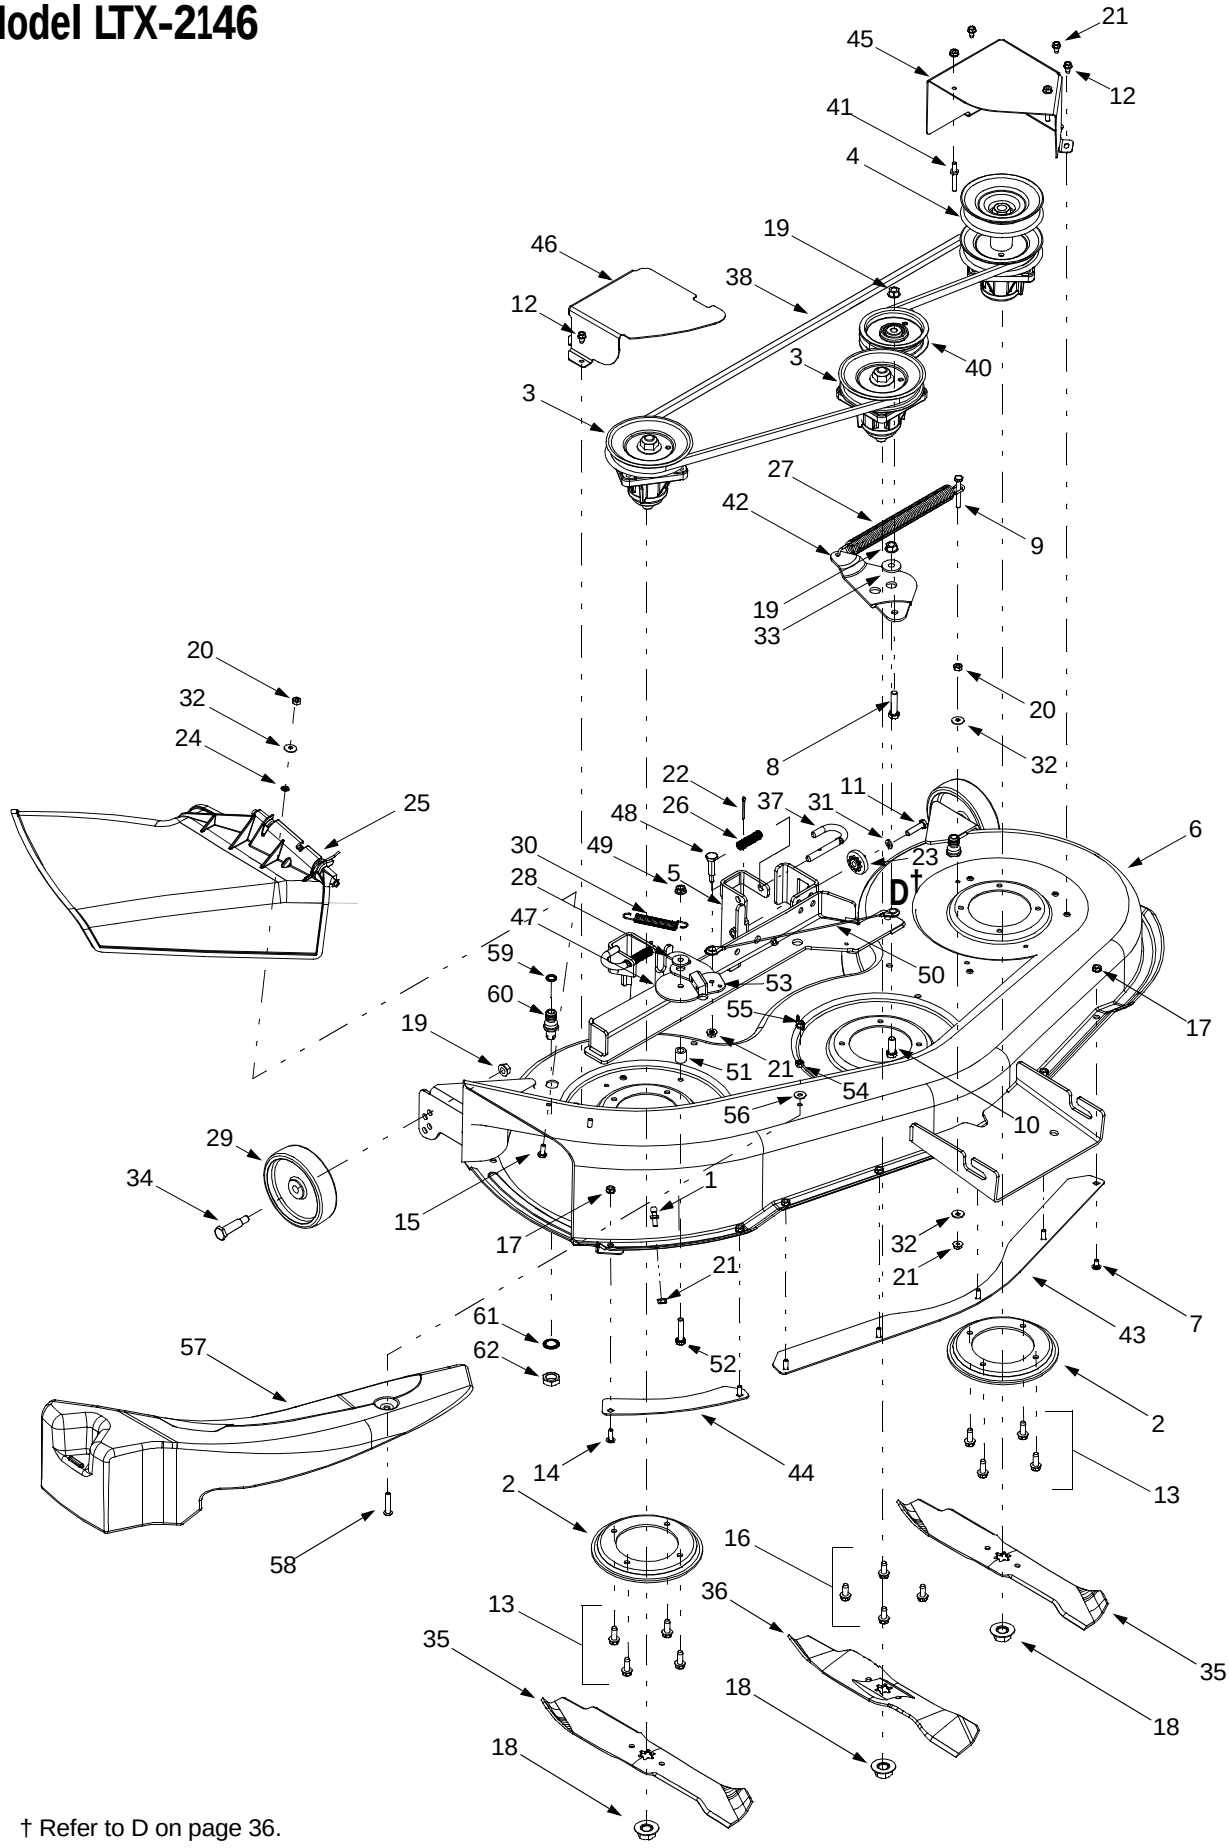

† Refer to D on page 36.

REF. NO.	PART NO.	DESCRIPTION
1	711-04069	Retainer Hook
2	17982	Spindle Reinforcement Plate
3	618-0430A	Spindle Assembly, 5.0 Dia.
	756-1187	Pulley Only
4	618-0595	Double Pulley Spindle Assembly
	756-1214	Double Pulley Only
5	683-0254	Deck Adjustment Bracket Assembly
6	683-04052	46-inch Deck Shell
7	710-0167	Carriage Screw, 1/4-20 x .50
8	710-0344	Hex Cap Screw, 3/8-16 x 1.5
9	710-0501	Hex Cap Screw, 1/4-20 x 2.0
10	710-0514	Hex Cap Screw, 3/8-16 x 1.0
11	710-0528	Hex Cap Screw, 5/8-18 x 1.25
12	710-0599	Self-tapping Screw,1/4-20 x .5
13	710-0650	Self-tapping Screw,15/16-18 x .875
14	710-0703	Hex Screw, 1/4-20 x .75
15	710-0751	Hex Cap Screw, 1/4-20 x .62
16	710-1260A	Self-tapping Screw, 5/16-18 x .75
17	712-0271	Hex Sems Nut, 1/4-20
18	712-0417A	Hex Flange Nut, 5/8-18
19	712-0431	Flange Lock Nut, 3/8-16
20	712-3006	Hex Nut, 1/4-20
21	712-3027	Hex Flange Lock Nut, 1/4-20
22	714-0470	Cotter Pin, 1/8 x 1.25
23	717-1553A	Deck Adjustment Gear
24	726-0233	Push Nut. .25 x .5
25	731-1032B	Side Discharge Chute Assembly
26	732-0306	Compression Spring, .406 x .531 x 1.75
27	732-0594A	Extension Spring, .91 x 7.3
28	748-0324	Shoulder Spacer
29	734-0973	Deck Wheel, 5 x 1.38
30	732-0429A	Extension Spring, .5 x 3.97

REF. NO.	PART NO.	DESCRIPTION
31	736-0119	Lock Washer, 5/16
32	736-0270	Bell Washer, .265 x .75 x .062
33	738-0347	Shoulder Spacer, .625 x 1.16
34	738-0373	Shoulder Screw
35	742-0611	Three-in-one Blade, Star Center, 16.28"
36	742-0612	Three-in-one Blade, Star Center, 14.88"
37	747-1116	Deck Release Pin
38	754-0349	Deck Belt, Poly
39	738-3056	Shoulder Screw, 1/2-2.5
40	756-0627B	Idler Pulley, 3.5
41	711-0993	Belt Guard Pin
42	783-0139A	Idler Bracket
43	783-0141	Center Deck Skirt
44	783-0142	RH Deck Skirt
45	783-1348	LH Belt Cover
46	17258C	RH Belt Cover
47	736-0416	Flat Washer, .320 x 3.0 x .125
48	738-0572	Shoulder Screw, .374 x 1.16
49	712-3004A	Hex Nut, 5/16-18
50	746-1107	Bracket Cable, 12"
51	750-0807	Spacer, .385 x .625 x .70
52	710-0805	Hex Cap Screw, 5/16-18 x 1.5
53	17116	Deck Brake Assembly
54	712-3006	Hex Nut, 1/4-20
55	712-3087	Wing Nut, 1/4-20
56	736-0173	Flat Washer, .28 x .74 x .063
57	731-1636	Mulch Plug
58	710-0578	Screw, 1/4-20 x 1.5
59	721-0417	O-Ring
60	737-04003	Water Nozzle
61	736-0760	Lock Washer, 17 x 23.8 x 1.95
62	712-0641	Hex Nut, M-16 x 1.5

IMPORTANT: For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

Models LTX-1842 & LTX-2146

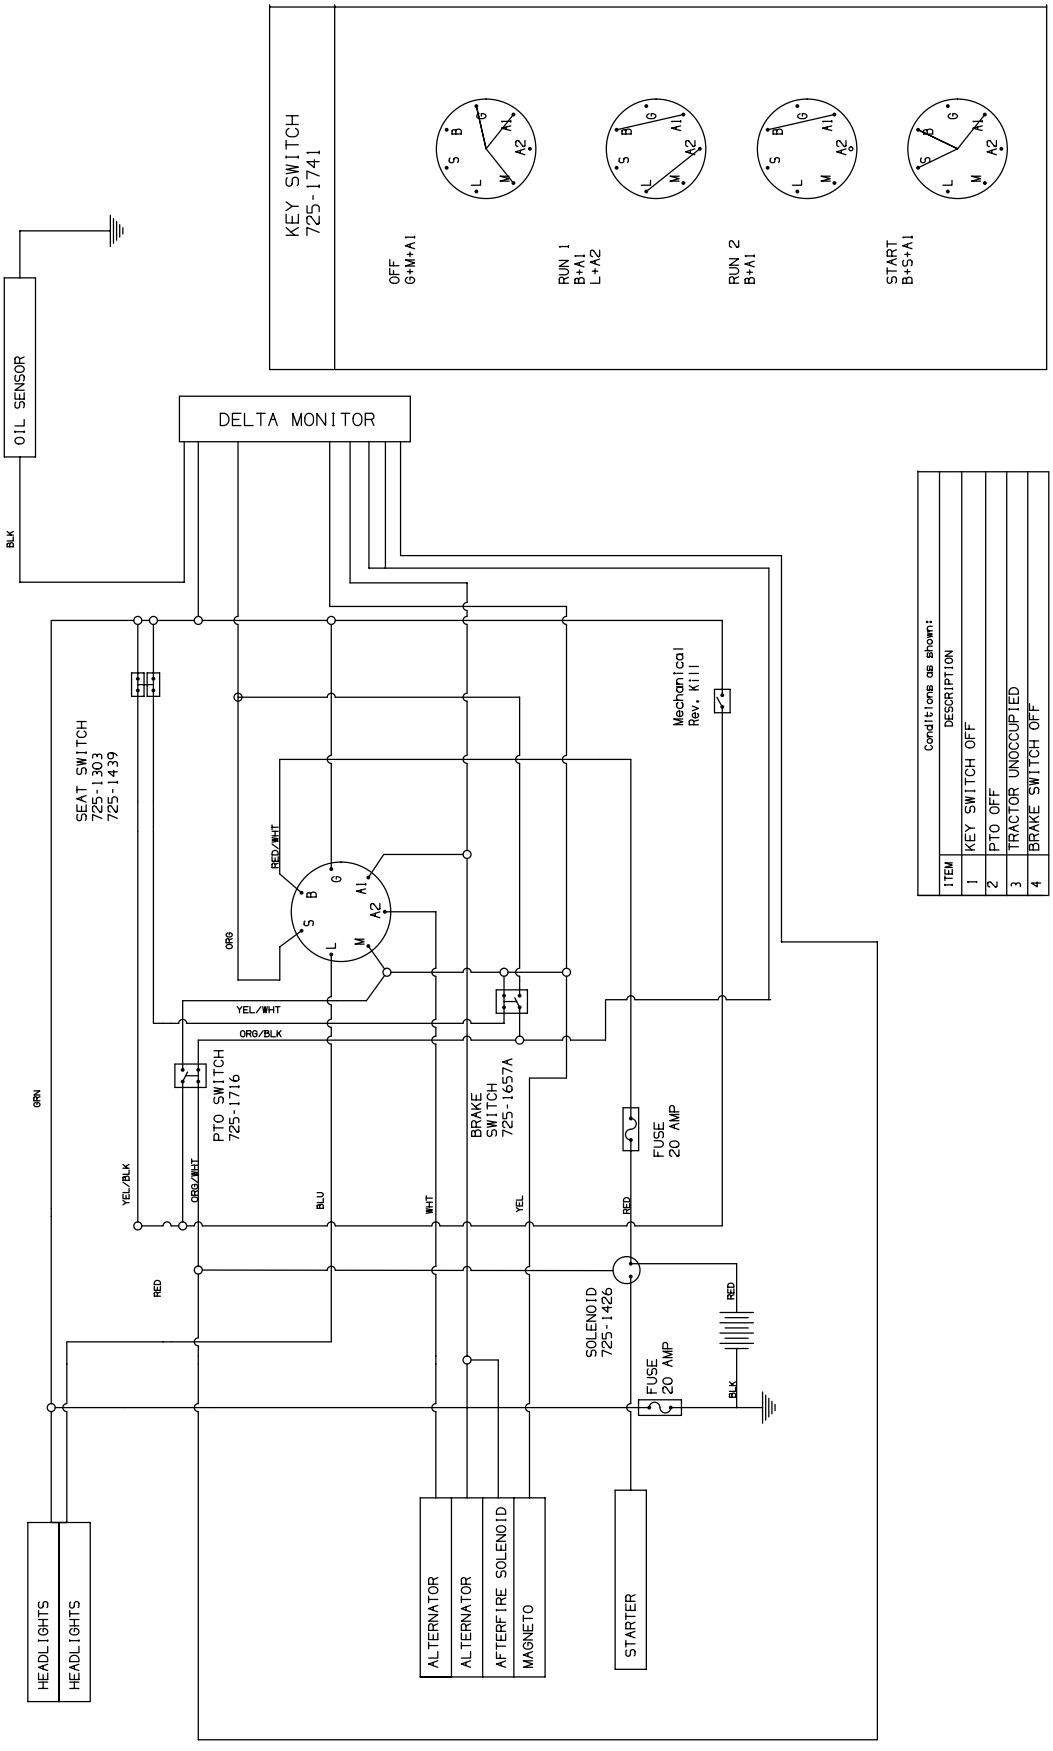

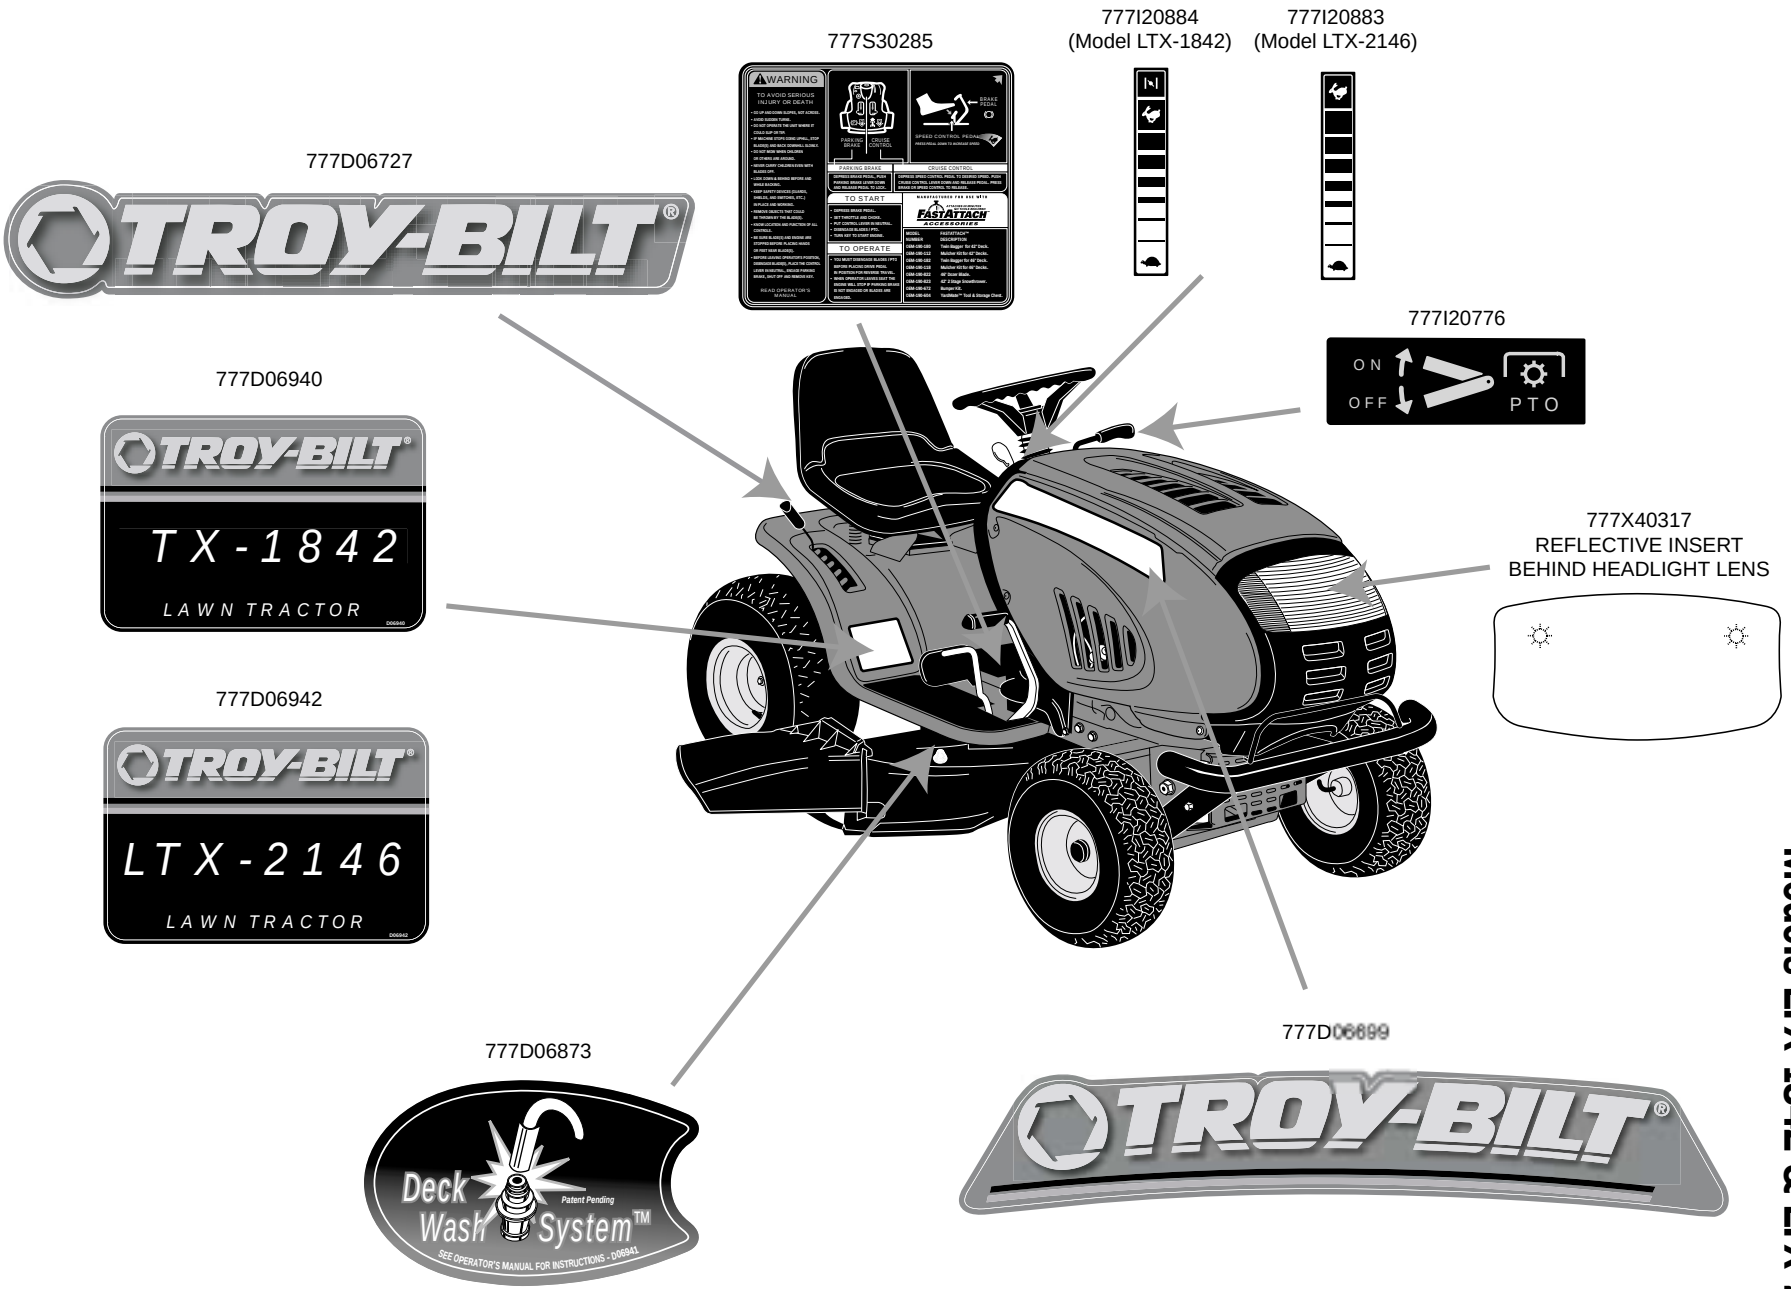
777S30285
777I20884
(Model LTX-1842)
777I20883
(Model LTX-2146)
777D06727
777I20776
ON
OFF
PTO
777D06940
TX-1842
LAWN TRACTOR
777X40317
REFLECTIVE INSERT
BEHIND HEADLIGHT LENS
777D06942
LTX-2146
LAWN TRACTOR
777D06873
Deck Wash System™
Patent Pending
SEE OPERATOR'S MANUAL FOR INSTRUCTIONS - D06941
777D06899