


ILLUSTRATED PARTS MANUAL

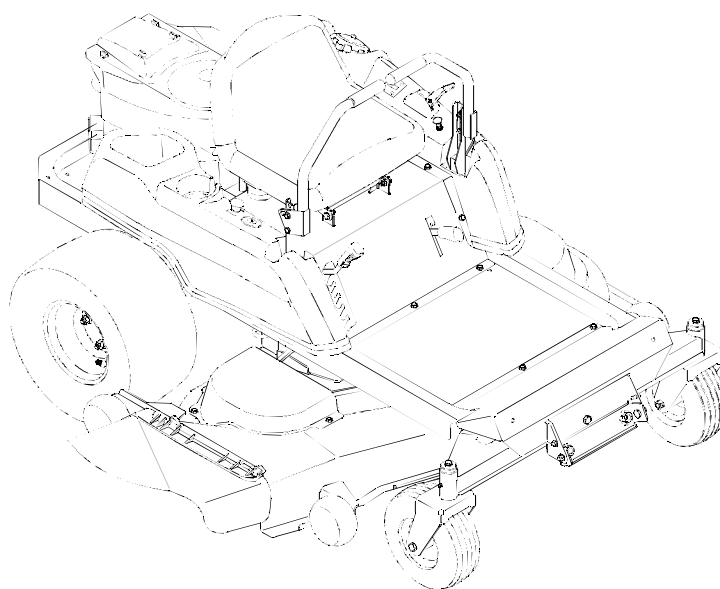

Zero Turn Tractors


MTD LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019

Seat Adjustment, All Models

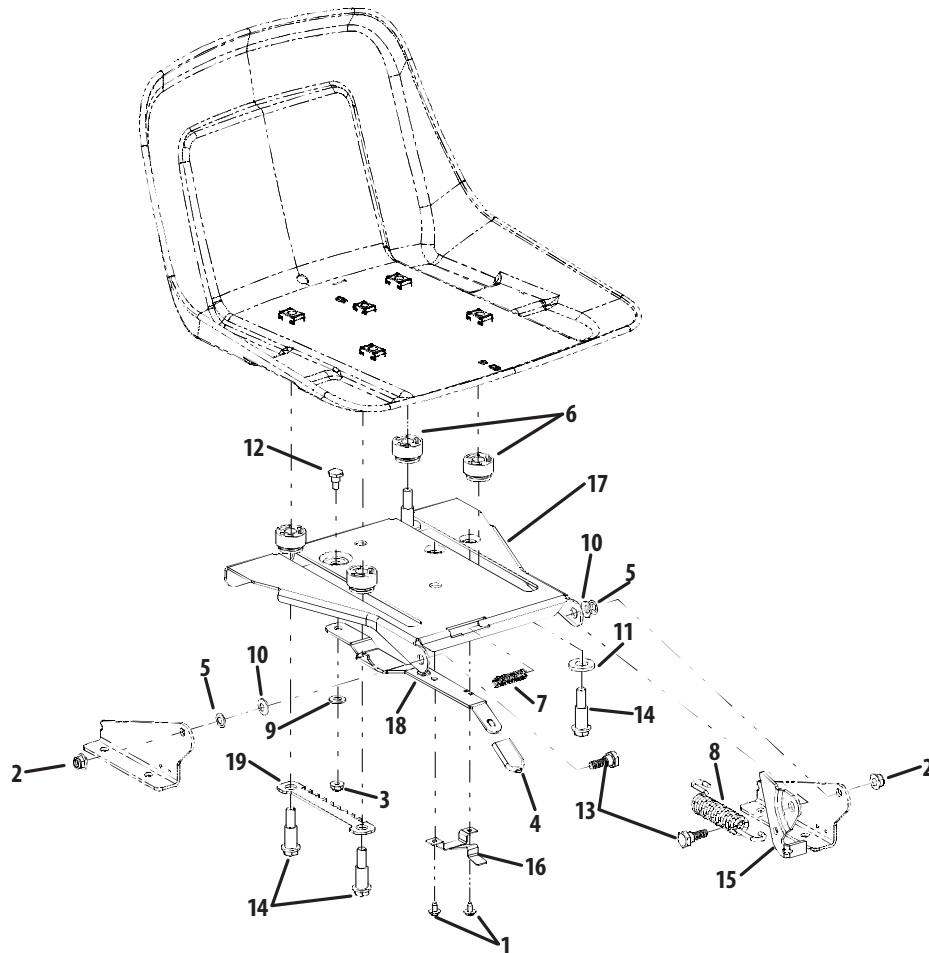

Ref.	Part Number	Description
1.	710-1268	Hex Hd. Wshr Screw, #10-16 x .375
2.	712-04063	Flangelock Nut, $\frac{1}{16}$ -18
3.	712-04064	Flangelock Nut, $\frac{1}{4}$ -20
4.	720-0309A	Seat Adjustment Grip
5.	726-0201	Speed Nut, .3125
6.	731-04074	Seat Adjustment Spacer
7.	732-0499	Compression Spring, .41 x 1.50
8.	732-1184	Extension Spring, .84 x 4.6
9.	736-0204	Flat Washer, .344 x .62 x .033
10.	736-0242	Bell Washer, .340 x .872 x .060


Ref.	Part Number	Description
11.	736-3019	Flat Washer, .531 x 1.062 x .134
12.	738-0137A	Shoulder Screw, .340 x .285 x $\frac{1}{4}$ -20
13.	738-0296	Shoulder Screw, .437 x .268 x $\frac{1}{16}$ -18
14.	738-0966A	Shoulder Bolt, .50 x .925 x $\frac{3}{8}$ -16
15.	783-0209D	Seat Lift Bracket
16.	783-0611	Seat Adjustment Stop
17.	783-0738D	Seat Pivot Bracket
18.	783-0739A	Seat Adjustment Lever
19.	783-0753	Seat Adjustment Selector

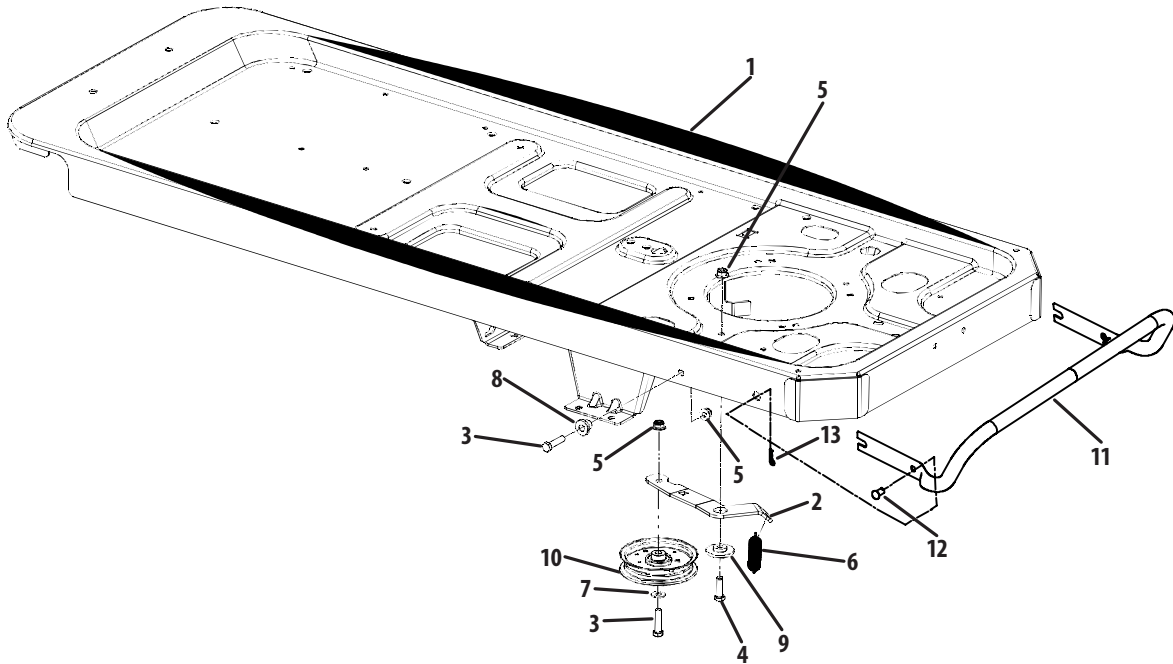


Ref.	Part Number	Description
1.	603-04303E	Frame Assembly
2.	703-05829	Drive Idler Arm
3.	710-0520	Hex Cap Screw, $\frac{3}{8}$ -16 x 1.5
4.	710-3005	Hex Cap Screw, $\frac{5}{8}$ -16 x 1.25
5.	712-04065	Hex Insert Flangelock Nut, $\frac{3}{8}$ -16
6.	732-0626	Extension Spring, .75 x 5.06
7.	736-0300	Flat Washer, .408 x .875 x .059
8.	738-04058	Shoulder Spacer, .39 x 1.0 x .7
9.	738-04162A	Shoulder Spacer, .884 x .19
10.	756-04129	Idler Pulley, 4.25 Dia.
11.	749-04358	Bumper Tube (54")
12.	711-0332	Clevis Pin, .50 x .78 (54")
13.	714-04023	Cotter Pin, .080 x 1.5625 (54")

Front Axle & Wheels

42"

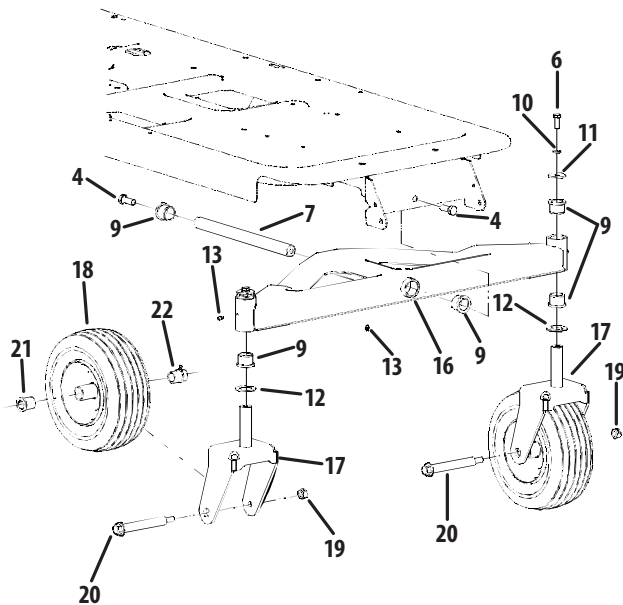


50" & 54"

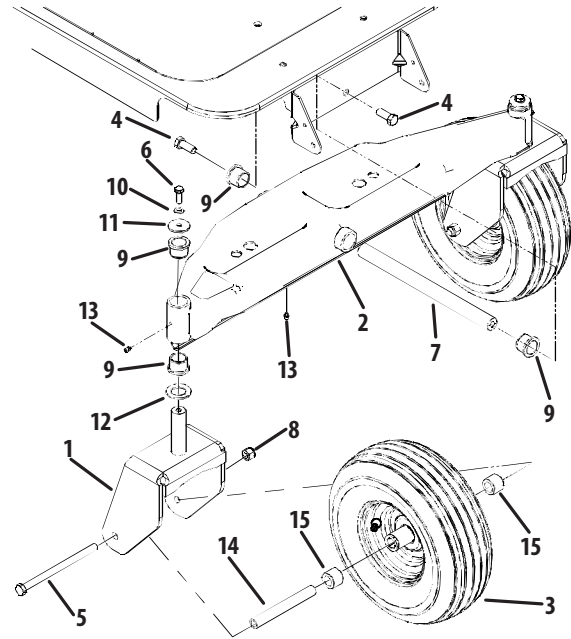

Ref.	Part Number	Description
1.	603-04370	Castor Wheel Bracket
2.	603-04385	Front Pivot Axle
3.	634-04323A	Wheel Assembly, 13 x 5-6
—	734-04255A	Tire, 13 x 5-6
4.	710-04186	Hex Lock Screw, 1/2-13 x 1.25
5.	710-04652	Hex Cap Screw, 1/2-20 x 7.25
6.	710-0514	Hex Cap Screw, 3/8-16 x 1.0
7.	711-04228	Axle Shaft
8.	712-3058	Hex Insert Lock Nut, 1/2-13
9.	731-05500	Flange Bearing, 1.0 x 1.246
10.	736-0169	Lock Washer, 3/8
11.	736-0227	Flat Washer, .39 x 1.5 x .134


Ref.	Part Number	Description
12.	736-0250	Flat Washer, 1.0 x 1.75 x .10
13.	737-3000	Lube Fitting, 3/16 Drive
14.	750-04775A	Spacer, .51 x .75 x 5.825
15.	750-04792	Hub, .76 x 1.23 x .92
16.	603-04148C	Front Pivot Axle
17.	603-04308	Castor Wheel Bracket
18.	634-04237A	Wheel Assembly, 11.0 x 4.0 x 5.0
19.	712-3022	Hex Lock Nut, 1/2-13 GRB
20.	738-04182A	Shoulder Screw, .75 x 4.75 x 7/16-14
21.	741-0516B	Flange Bearing, .76 x 1.0 x 1.2
22.	741-0990B	Flange Bearing, .76 ID w/Lube Ftg.

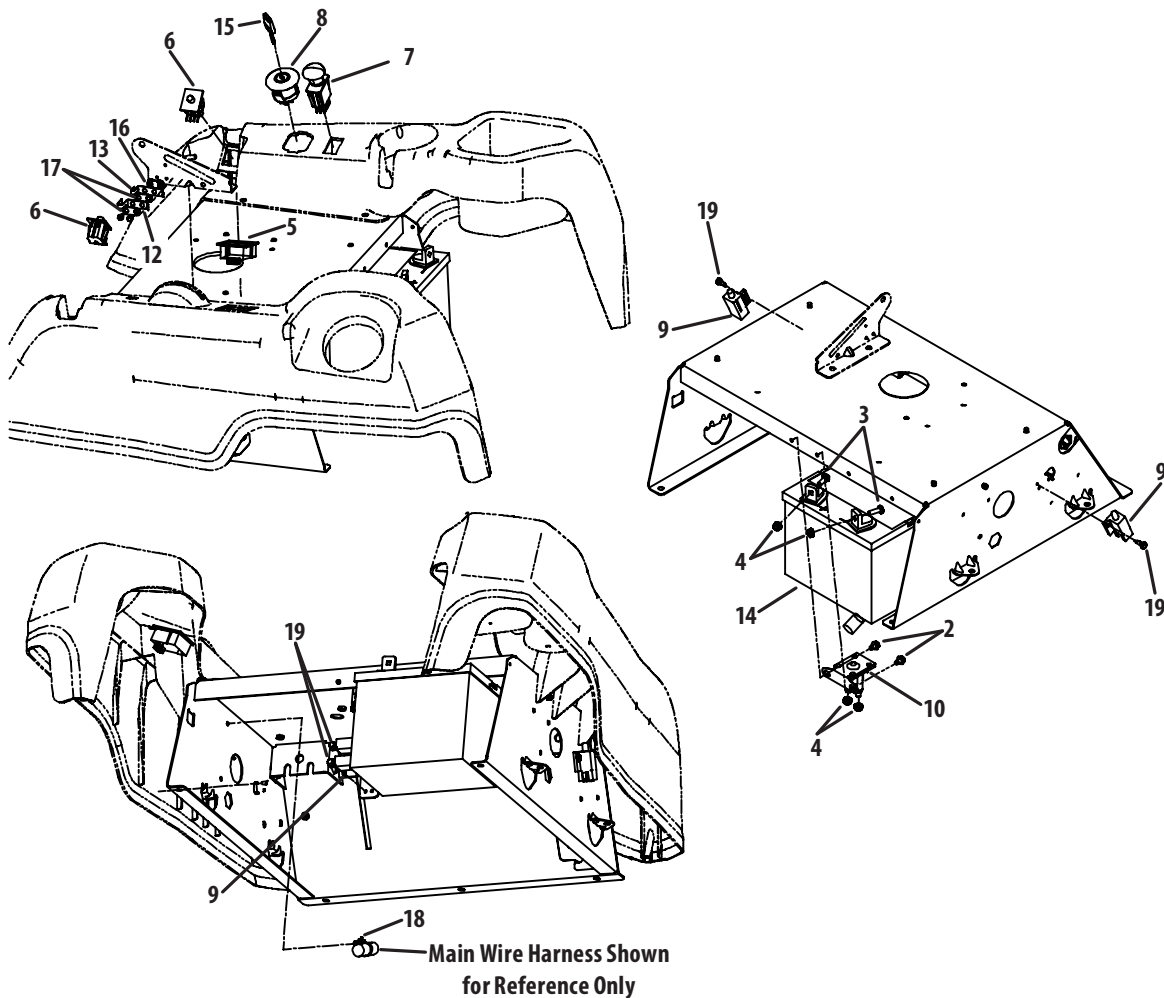

Ref.	Part Number	Description
1.	710-0227	Hex Washer Screw, #8-18 x .500
2.	710-0653	Hex Washer Screw, 1/4-20 x .375
3.	710-3015	Hex Screw, 1/4-20 x .75
4.	712-0271	Sems Nut, 1/4-20
5.	725-04022B	Hour Meter
6.	725-04165	Double Pole — Neutral Switch
7.	725-04174	Electric PTO Switch
8.	725-04228	Key Switch
9.	725-04363	Interlock Switch
10.	725-04439	Solenoid

Ref.	Part Number	Description
11.	725-04621A	Wire Harness
12.	725-1303	Outer Seat Spring Switch
13.	725-1439	Inner Seat Spring Switch
14.	725-1737A	Battery, 195 CC Wet
15.	725-1745	Key
16.	726-0278	Insulator Boss Plate
17.	726-0279	Insulator Plate
18.	726-0470	Cable Tie, 19 x 8.39"
19.	738-04237A	Shoulder Screw, #10-32 x .500


Operator's Platform, Small Console

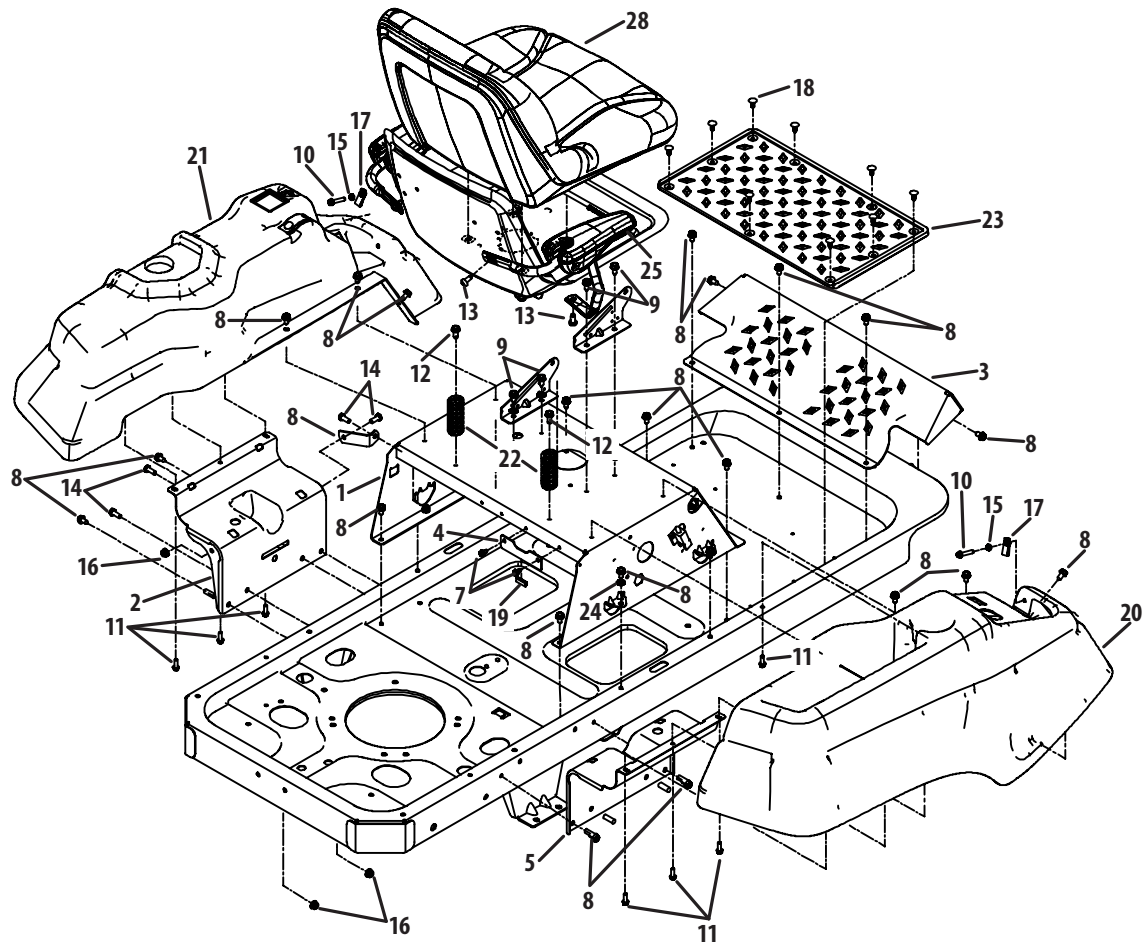

Ref.	Part Number	Description
1.	603-04447A	Seat Frame
2.	603-04564	Console Bracket Assembly
3.	703-05373B	Foot Rest Bracket
4.	703-05894	Battery Hold Down Bracket
5.	703-06451	Console Mounting Bracket
6.	703-06623	Fuel Tank Bracket Support
7.	710-0599	Hex Washer Hd. Screw, 1/4-20 x .500
8.	710-0604A	Hex Washer Hd. Screw, 5/16-18 x .625
9.	710-0726	Hex Washer Hd. Screw, 5/16-12 x .750
10.	710-0778	Hex Wshr. Hd. Screw, 1/4-20 x 1.500
11.	710-0895	Hex Wshr. Hd. Screw, 1/4-15 x .750
12.	710-1260A	Hex Washer Hd. Screw, 5/16-18 x .750
13.	710-1611B	Screw, 5/16-18 x .750 (54")
14.	710-3008	Hex Screw, 5/16-18 x .75

Ref.	Part Number	Description
15.	710-0298	Jam Nut, 1/4-20
16.	712-04063	Flangelock Nut, 5/16-18
17.	712-04092	Speed Nut, 1/4-20
18.	726-3046	Ratchet Clip, .250
19.	731-0511	Trim Strip
20.	731-06478	Console (RH)
21.	731-06479	Console (LH)
22.	732-04035	Compression Spring, 1.28 x 3.125
23.	73504082	Foot Pad
24.	736-0148	External Tooth Lock Washer, 5/8
25.	757-04048	High Back Seat Arms (54")
26.	757-04077	High Back Seat (54")
26.	757-04075	High Back Seat (50")
27.	783-1489C	Seat Mounting Bracket

Operator's Platform, Large Console

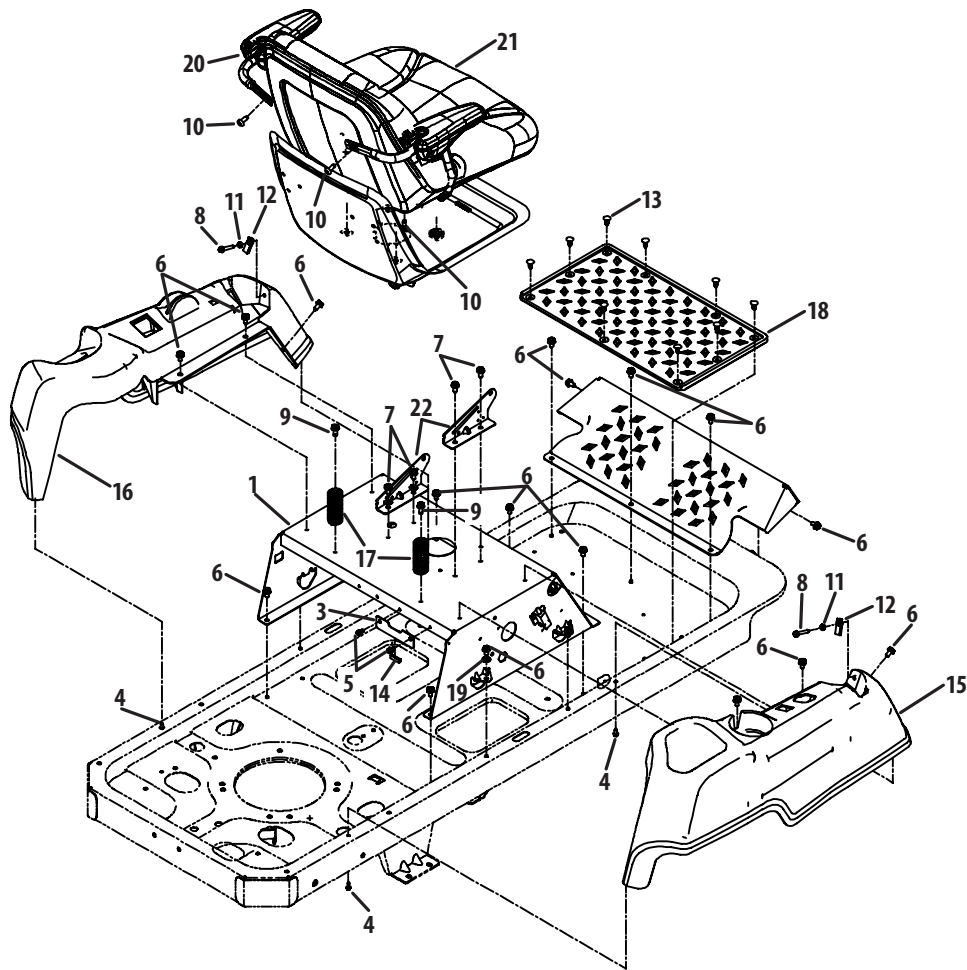

Ref.	Part Number	Description
1.	603-04447A	Seat Frame Assembly
2.	703-05373B	Foot Rest Bracket
3.	703-05894	Battery Hold Down Bracket
4.	710-04261	Hex Washer Hd. Screw, #12-16 x .50
5.	710-0599	Hex Washer Hd. Screw, 1/4-20 x .500
6.	710-0604A	Hex Washer Hd. Screw, 5/16-18 x .625
7.	710-0726	Hex Washer Hd. Screw, 5/16-12 x .750
8.	710-0778	Hex Wshr. Hd. Screw, 1/4-20 x 1.500
9.	710-1260A	Hex Wshr. Hd. Screw, 5/16-18 x .750
10.	710-1611B	Hex Screw, 5/16-18 x .750 (A)
11.	712-0298	Jam Nut, 1/4-20
12.	712-04092	Speed Nut, 1/4-20
13.	728-3046	Ratchet Clip, .250


Ref.	Part Number	Description
14.	731-0511	Trim Strip
15.	731-06309	Console (RH) Oyster Gray (A,C)
—	731-04662D	Console (RH) Black (B)
16.	731-06310	Console (LH) Oyster Gray (A,C)
—	731-04663C	Console (LH) Black (B)
17.	732-04035	Compression Spring, 1.28 x 3.125
18.	735-04082	Foot Pad
19.	736-0148	External Tooth Lock Washer, 3/8
20.	757-04046	High Back Seat Arm (A)
21.	757-04077	High Back Seat, Gray (A)
—	757-04075	High Back Seat, Gray (C)
—	757-04041	High Back Seat, Black (B)
22.	783-1489C	Seat Bracket

A — 54" Deck

B — 42" & 50" Deck with Black Console & Seat

C — 42" & 50" Deck with Gray Console & Seat


Mower Deck, 42"

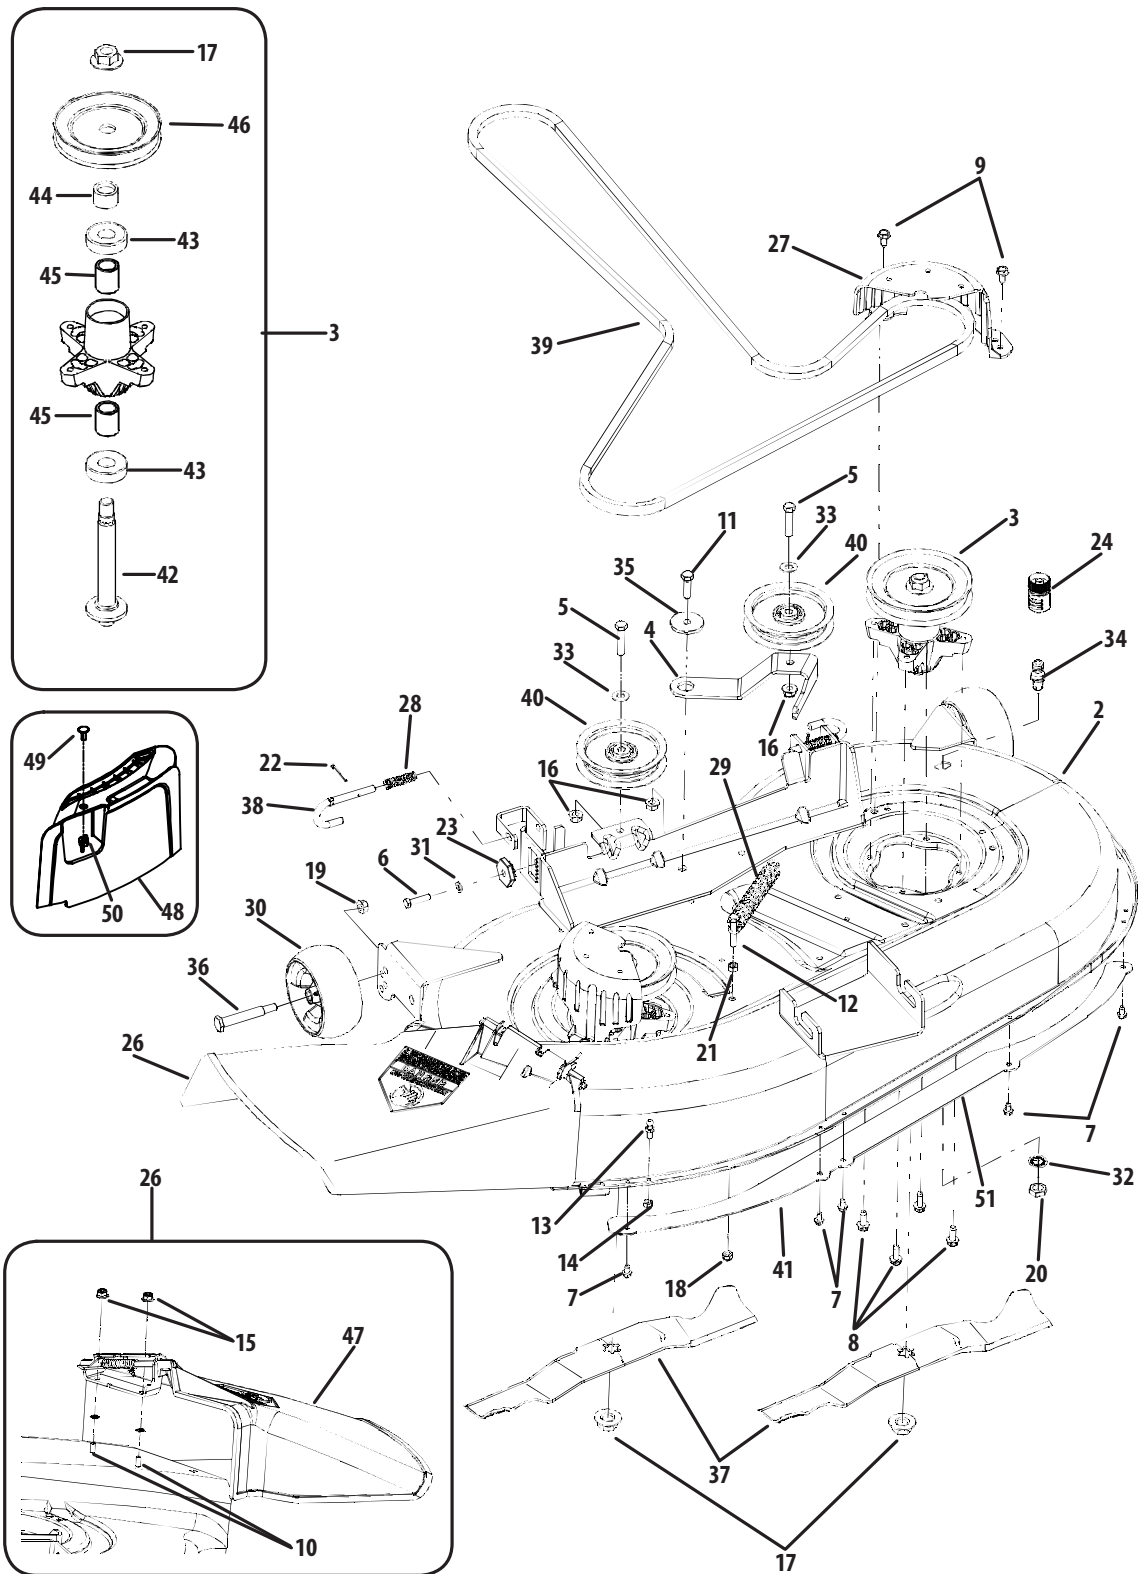

Ref.	Part Number	Description
1.	603-04156	Deck Lift Bracket
2.	603-04335C	Deck Housing
3.	618-0624	Spindle Assembly
4.	703-05824B	Idler Arm
5.	710-0347	Hex Cap Screw, $\frac{3}{8}$ -16 x 1.75
6.	710-0528	Hex Cap Screw, $\frac{5}{16}$ -18 x 1.25
7.	710-0599	Hex Washer Head Screw, $\frac{1}{4}$ -20 x .5
8.	710-1260A	Hex Washer Head Screw, $\frac{5}{16}$ -18 x .75
9.	710-0726	Hex Washer Head Screw, $\frac{5}{16}$ -12 x .75
10.	710-0751	Hex Cap Screw, $\frac{1}{4}$ -20 x .62
11.	710-3005	Hex Cap Screw, $\frac{3}{8}$ -16 x 1.25
12.	710-3180	Hex Cap Screw, $\frac{5}{16}$ -18 x 1.75
13.	711-04069	Grass Catcher Pin, $\frac{1}{4}$ -20
14.	712-0324	Hex Insert Lock Nut, $\frac{1}{4}$ -20
15.	712-04064	Hex Insert Flange Lock Nut, $\frac{1}{4}$ -20
16.	712-04065	Hex Insert Flange Lock Nut, $\frac{3}{8}$ -16
17.	712-0417A	Hex Flange Nut, $\frac{5}{8}$ -18
18.	712-0429	Hex Insert Lock, $\frac{1}{4}$ -18
19.	712-0431	Hex Flange Lock Nut, $\frac{5}{8}$ -16
20.	712-0641	Hex Nut, M16-1.5
21.	712-3010	Hex Nut, $\frac{5}{16}$ -18
22.	714-0470	Cotter Pin, $\frac{1}{8}$ x 1.25
23.	717-04074	Deck Adjustment Gear
24.	721-04041	Water Nozzle Adapter
25.	726-0233	Push Nut, .25 x .5
26.	731-1032B	Discharge Chute Assembly

Ref.	Part Number	Description
27.	731-2231B	Belt Cover
28.	732-0306	Compression Spring
29.	732-0459	Extension Spring, .94 Dia. x 6.74
30.	734-04155	Deck Ball Wheel, 5.0
31.	736-0119	Lock Washer, $\frac{5}{16}$
32.	736-0225	Lock Washer
33.	736-3072	Flat Washer, .38 x .93 x .11
34.	737-04003C	Deck Water Nozzle
35.	738-04162A	Shoulder Spacer, .884 x .19
36.	738-3056	Shoulder Screw, .5 x 2.5 x $\frac{5}{8}$ -16
37.	942-0616A	Blade, 3 in 1, 21.23
38.	747-1116	Deck Hanger Rod
39.	754-04137	V-Belt Type A Sec x 114.1
40.	756-04129	Idler Pulley, 4.25 Dia
41.	783-1146A	Deck Skirt
42.	738-01010A	Spindle Shaft, 5.75
43.	741-0919	Ball Bearing
44.	748-0433	Spacer, .820 x 1.15 x .73
45.	750-1000	Spacer, .8 x 1.10 x 1.322
46.	756-1227	Deck Pulley, 6.3 Dia
47.	731-1031C	Chute Deflector
48.	731-2363	Mulch Plug
49.	710-0134	Carriage Screw, $\frac{1}{4}$ -20 x .62
50.	712-3087	Wing Nut, $\frac{1}{4}$ -20
51.	783-1146A	Deck Skirt


Mower Deck, 50"

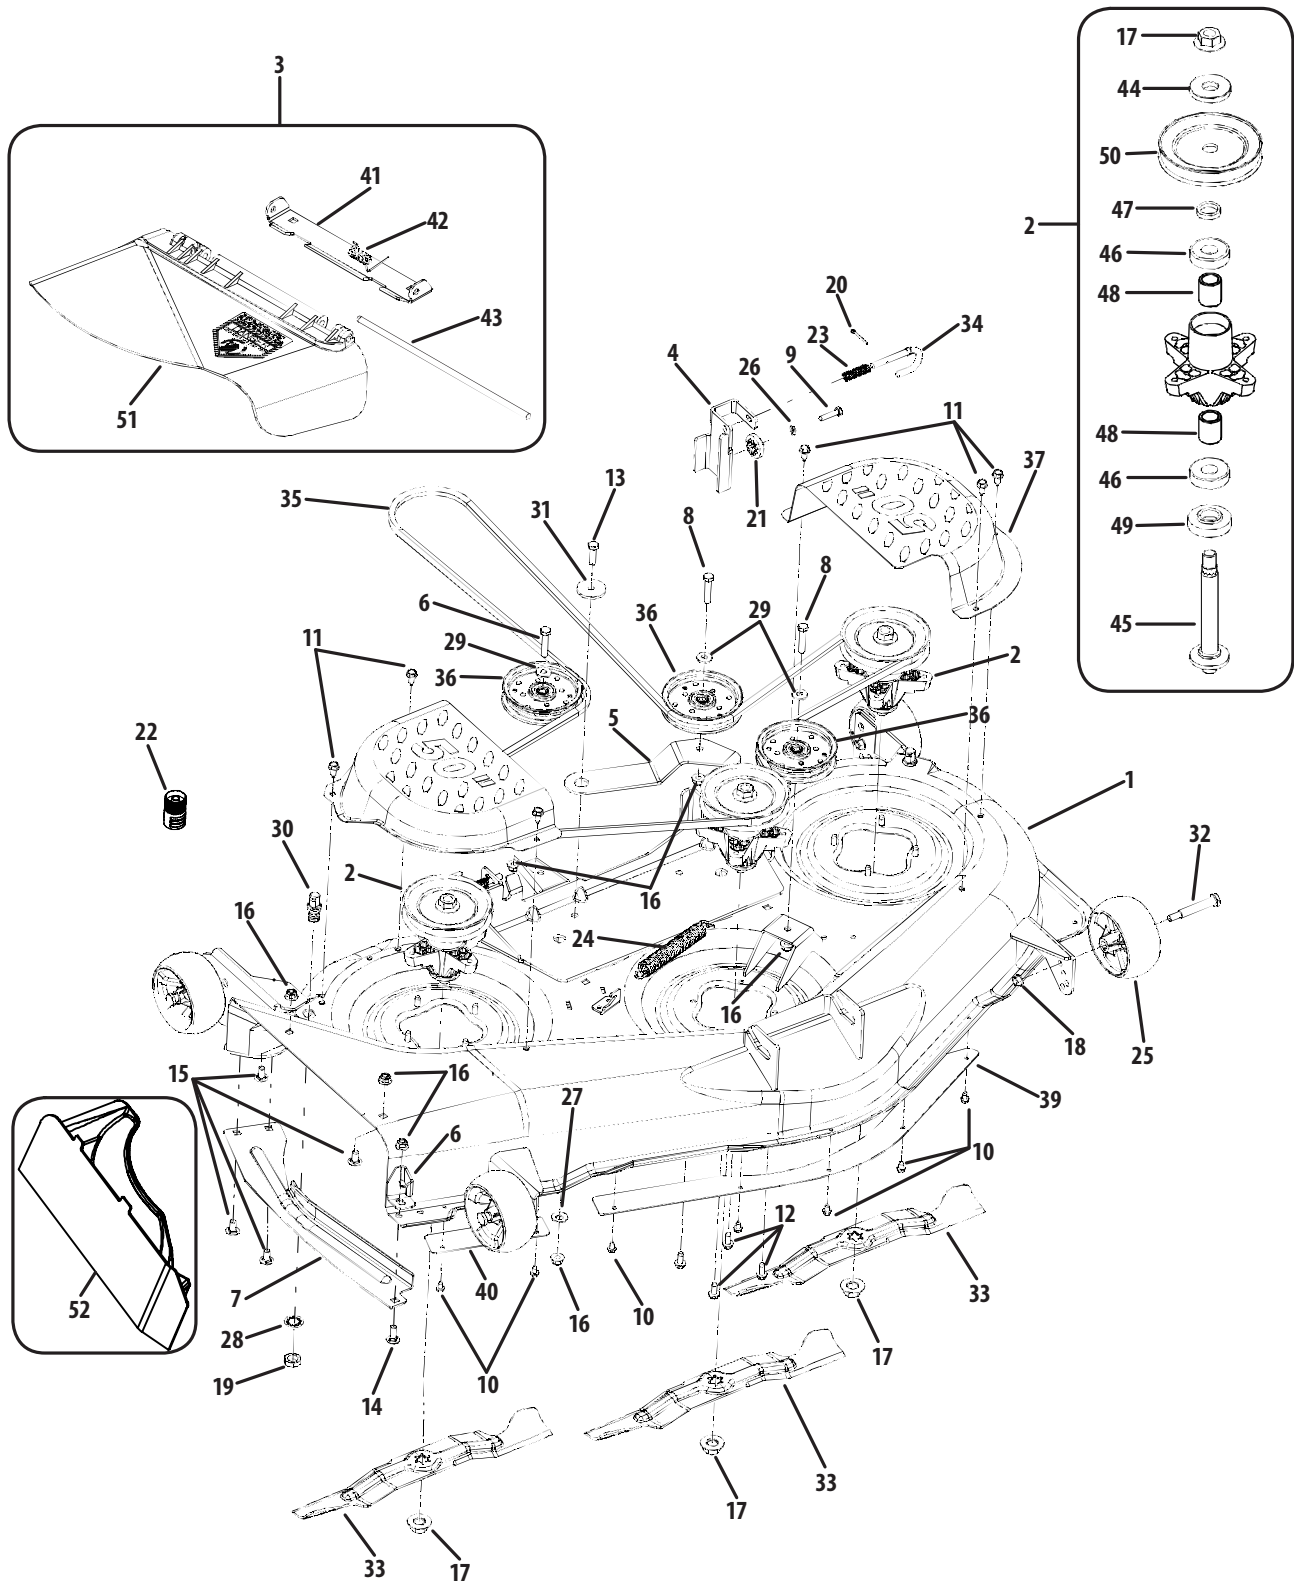

Ref.	Part Number	Description
1.	603-04328A	Deck Housing
2.	618-04125A	Spindle Assembly
3.	631-04070A	Discharge Chute Assembly
4.	683-0254	Deck Hanger Bracket
5.	703-05825B	Idler Arm
6.	703-3279	Stop Bracket
7.	703-3511A	Finger Guard
8.	710-0347	Hex Cap Screw, $\frac{3}{8}$ -16 x 1.75
9.	710-0528	Hex Cap Screw, $\frac{1}{16}$ -18 x 1.25
10.	710-0599	Hex Washer Head Screw, $\frac{1}{4}$ -20 x .5
11.	710-0726	Hex Washer Head Screw, $\frac{5}{16}$ -12 x .75
12.	710-1260A	Hex Washer Head Screw, $\frac{5}{16}$ -18 x .75
13.	710-3005	Hex Cap Screw, $\frac{3}{8}$ -16 x 1.25
14.	710-3168	Carriage Screw, $\frac{3}{8}$ -16 x 1.0
15.	710-3178	Carriage Screw, $\frac{3}{8}$ -16 x .75
16.	712-04065	Hex Insert Flange Lock Nut, $\frac{3}{8}$ -16
17.	712-0417A	Hex Flange Nut, $\frac{1}{8}$ -18
18.	712-0431	Hex Flange Lock Nut, $\frac{3}{8}$ -16
19.	712-0641	Hex Nut, M16-1.5
20.	714-0470	Cotter Pin, $\frac{1}{8}$ x 1.25
21.	717-04074	Deck Adjustment Gear
22.	721-04041	Water Nozzle Adapter
23.	732-0306A	Compression Spring
24.	732-0459C	Extension Spring, .94 Dia. x 6.74
25.	734-04155	Deck Ball Wheel, 5.0
26.	736-0119	Lock Washer, $\frac{5}{16}$

Ref.	Part Number	Description
27.	736-0407	Bell Washer, .45 x 1.0 x .062
28.	736-0225	Internal Tooth Lock Washer, $\frac{5}{8}$
29.	736-3072	Flat Washer, .38 x .93 x .110
30.	737-04003C	Deck Wash Nozzle
31.	738-04162A	Shoulder Spacer, .884 x .190
32.	738-3056	Shoulder Screw, .5 x 2.5 x $\frac{3}{8}$ -16
33.	742-04053C	Blade, 2 in 1, 17.9
34.	747-1116	Deck Hanger Rod
35.	754-04044A	V-Belt Type A Sec x 134
36.	756-04129	Idler Pulley, 4.25 Dia
37.	783-04399	Belt Cover, LH
38.	783-04400	Belt Cover, RH
39.	783-04414	Center Skirt
40.	783-04415	Skirt RH
41.	783-05030	Chute Mounting Bracket
42.	732-04372	Torsion Spring
43.	711-04565	Hinge Pin
44.	736-0315	Flat Washer, .76 x 1.50 x .12
45.	738-1010A	Spindle Shaft, 5.75
46.	741-0919	Ball Bearing
47.	748-0160A	Spacer, .79 x 1.25 x .175
48.	750-1000	Spacer, .80 x 1.10 x 1.32
49.	750-1349A	Spacer, .79 x 1.82 x .55
50.	756-04216	V-Type Pulley, 5.39
51.	731-05559B	Chute Deflector
52.	731-04651	Mulch Plug


Mower Deck, 54"

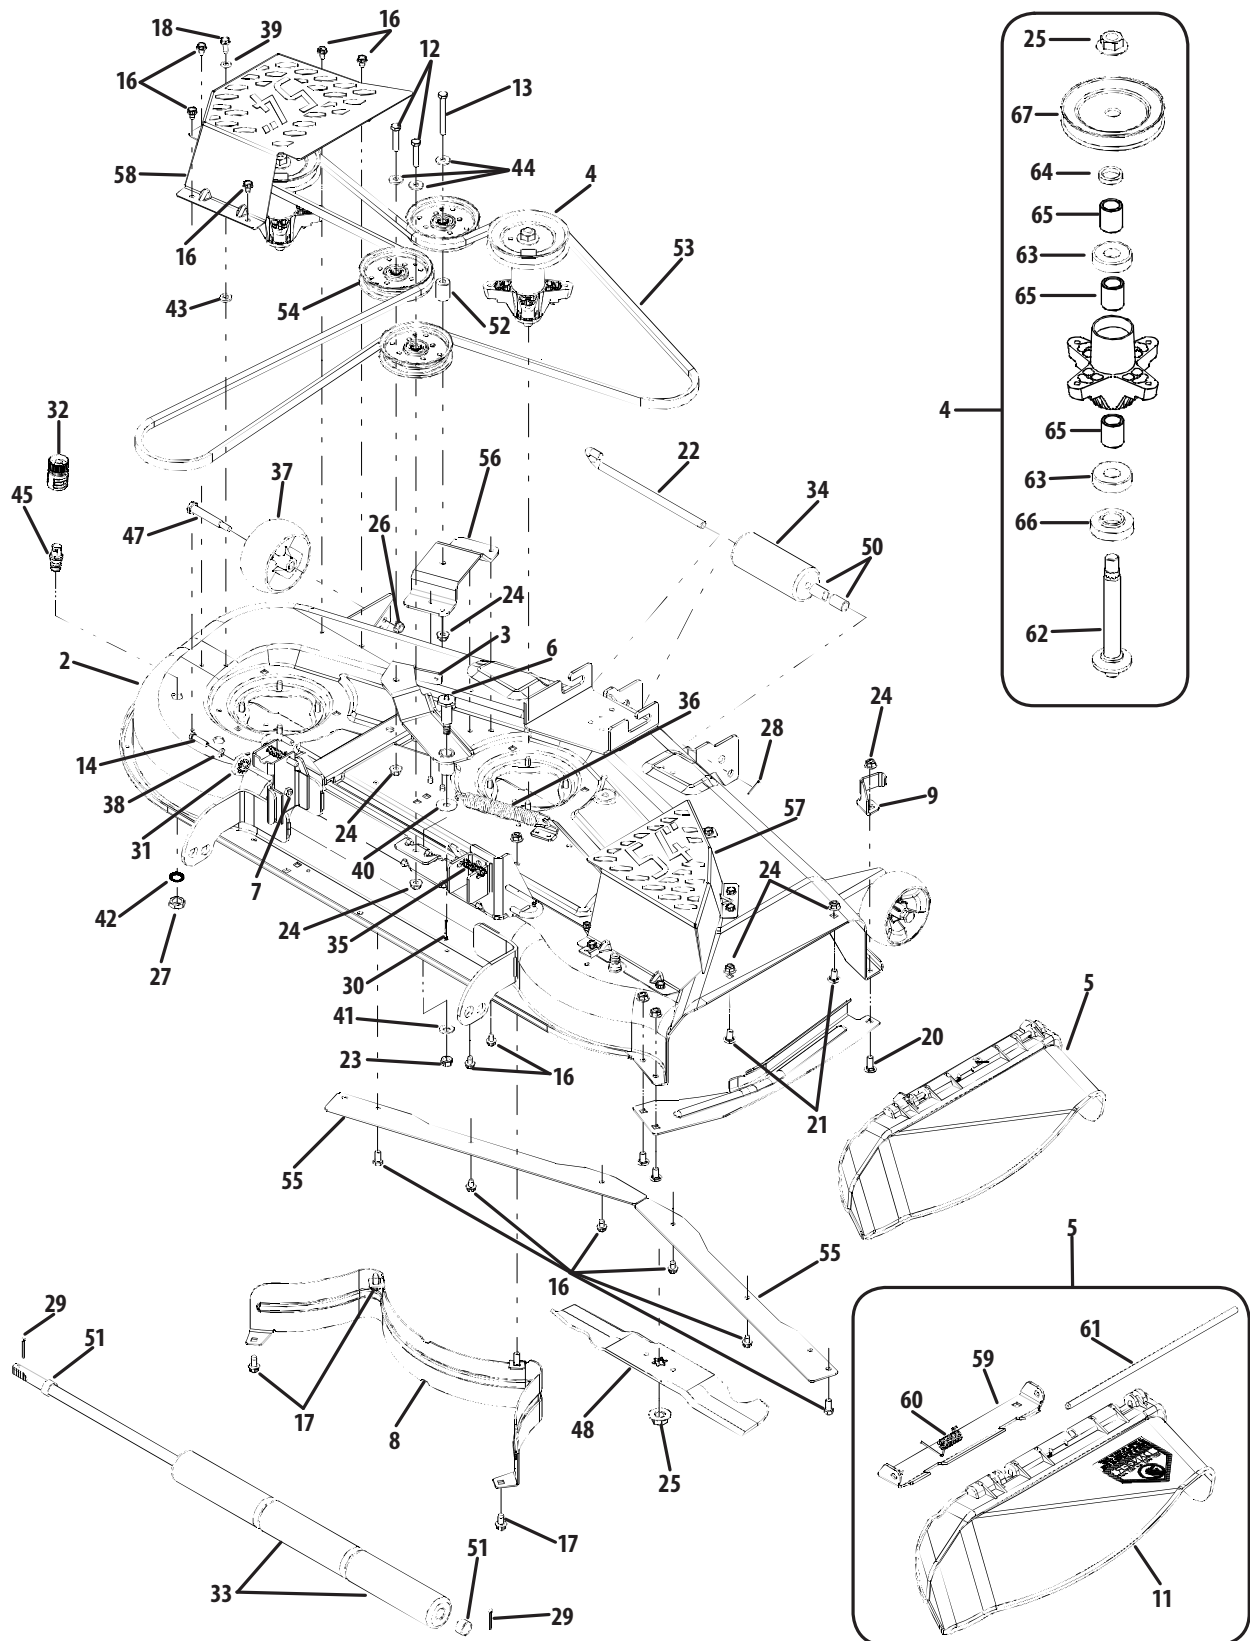

Ref.	Part Number	Description
1.	16606	Retainer Bracket
2.	603-04367A	Deck Housing
3.	603-04386A	Idler Assembly
4.	618-04608	Spindle Assembly
5.	631-04070A	Discharge Chute Assembly
6.	638-04012A	Shoulder Bolt Assembly
7.	683-0254B	Deck Hanger Bracket
8.	703-2093	Rear Inner Baffle
9.	703-3279	Stop Bracket
10.	703-3511	Finger Guard
11.	731-05559B	Chute Deflector
12.	710-0347	Hex Cap Screw, $\frac{5}{8}$ -16 x 1.75
13.	710-0521	Hex Cap Screw, $\frac{5}{8}$ -16 x 3.0
14.	710-0528	Hex Cap Screw, $\frac{5}{16}$ -18 x 1.25
15.	710-0599	Hex Washer Head Screw, $\frac{1}{4}$ -20 x .5
16.	710-0607	Hex Washer Head Screw, $\frac{5}{16}$ -18 x .5
17.	710-0623	Hex Washer Head Screw, $\frac{5}{8}$ -16 x .75
18.	710-0650	Hex Washer Head Screw, $\frac{5}{16}$ -18 x .875
19.	710-1260A	Hex Washer Head Screw, $\frac{5}{16}$ -18 x .75
20.	710-3168	Carriage Screw, $\frac{3}{8}$ -16 x 1.0
21.	710-3178	Carriage Screw, $\frac{3}{8}$ -16 x .75
22.	711-1737	Roller Pin, .5 x 10.06
23.	712-0290	Hex Lock Nut, $\frac{7}{16}$ -14
24.	712-04065	Hex Insert Flange Lock Nut, $\frac{5}{8}$ -16
25.	712-0417A	Hex Flange Nut, $\frac{5}{8}$ -18
26.	712-0431	Hex Flange Lock Nut, $\frac{5}{8}$ -16
27.	712-0641	Hex Nut, M16-1.5
28.	714-0111	Cotter Pin, $\frac{3}{32}$ x 1.0
29.	714-0162	Cotter Pin, $\frac{5}{32}$ x 1.25
30.	714-0470	Cotter Pin, $\frac{1}{8}$ x 1.25
31.	717-1553B	Deck Adjustment Gear
32.	721-04041	Water Nozzle Adapter
33.	731-05825	Deck Roller, 7.895
34.	731-05679	Front Roller

Ref.	Part Number	Description
35.	732-0306A	Compression Spring
36.	732-0850	Extension Spring, 1.0 x 6.140
37.	734-04155	Deck Ball Wheel, 5.0
38.	736-0119	Lock Washer, $\frac{5}{16}$
39.	736-0275	Flat Washer, .344 x .688 x .065
40.	736-0406	Flat Washer, .442 x 1.39 x .06
41.	736-0407	Bell Washer, .45 x 1.0 x .062
42.	736-0760	Lock Washer
43.	736-3010	Flat Washer, .407 x .812 x .135
44.	736-3072	Flat Washer, .38 x .93 x .110
45.	737-04003C	Deck Wash Nozzle
46.	738-04260	Shaft, .75 x 26.893
47.	738-3056	Shoulder Screw, .5 x 2.5 x $\frac{5}{8}$ -16
48.	742-0677B	Blade, 18.5
49.	747-1116	Deck Hanger Rod
50.	750-0151	Spacer, .55 x .75 x 1.125
51.	750-0212	Spacer, .82 x 1.0 x .53
52.	750-04597	Spacer, .38 x .9 x 1.313
53.	754-04138A	V-Belt Type B Sec x 143
54.	756-04129	Idler Pulley, 4.25 Dia
55.	783-04690B	Deck Skirt
56.	783-04726	Stationary Idler Bracket
57.	783-1470A	Belt Cover
58.	783-1471	Belt Cover
59.	783-05030	CHute Mounting Bracket
60.	732-04372	Torsion Spring
61.	711-04565	Hinge Pin
62.	738-1197	Spindle Shaft, 6.95
63.	741-0919	Ball Bearing
64.	748-0160A	Spacer, .79 x 1.25 x .175
65.	750-1000	Spacer, .80 x 1.10 x 1.32
65.	750-1349A	Spacer, .79 x 1.82 x .55
67.	756-04216	V-Type Pulley, 5.39


Engine Connections, 3 Gallon Tank 42"

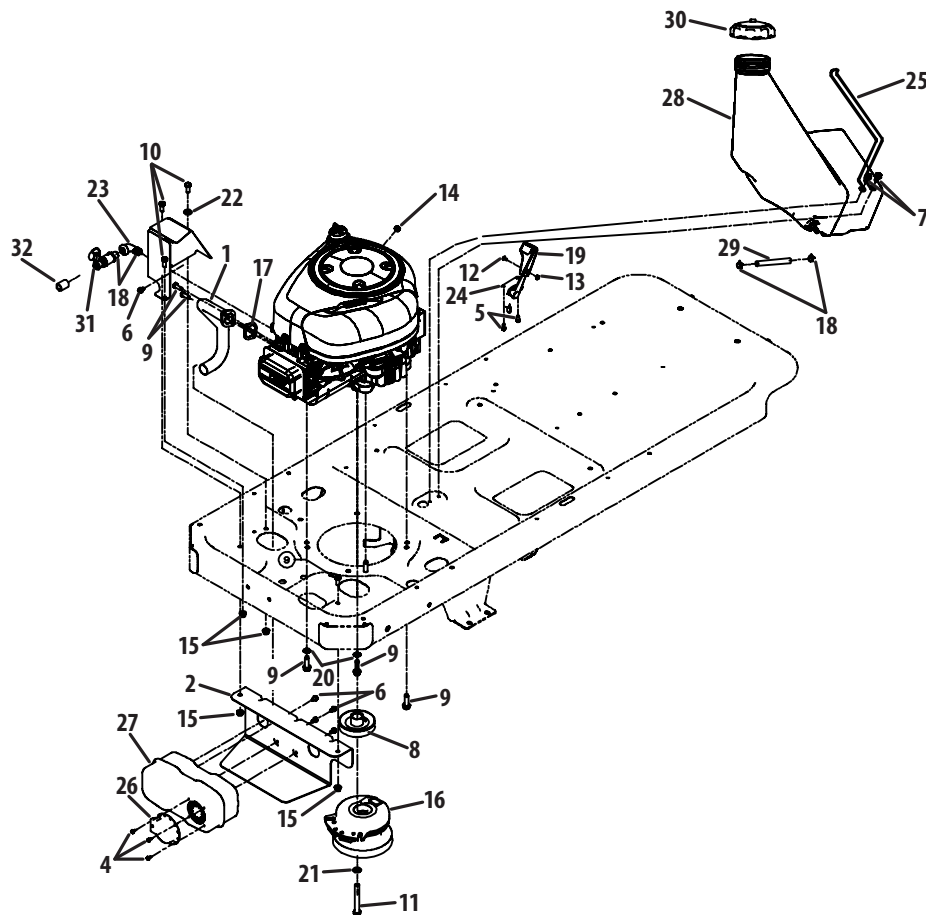

Ref.	Part Number	Description
1.	603-04176A	Exhaust Tube
2.	703-05441A	Muffler Mounting Bracket
3.	703-05870	Muffler Tube Heat Shield
4.	710-0227	Hex Wsh. Hd. Screw, #8-18 x .5
5.	710-04261	Hx. Wsh. Hd. Screw, #12-16 x .5
6.	710-0599	Hx. Wsh. Hd. Screw, 1/4-20 x .5
7.	710-0726	Hx. Wsh. Hd. Screw, 5/16-12 x .75
8.	756-0978B	Drive Pulley
9.	710-1315	Hx. Wsh. Hd. Screw, 3/8-16 x 1.25
10.	710-3008	Hex Cap Screw, 5/16-18 x .75
11.	710-3157A	Hx Cap Lk. Screw, 7/16-20 x 3.25
12.	710-3217	Truss Hd. Mach. Screw, #8-32 x .375
13.	712-0142	Hex Nut, #8-32
14.	712-0271	Hex Sems Nut, 1/4-20
15.	712-04063	Hx. Insert Flange Lck Nut, 5/16-18
16.	717-04376	Electric PTO Clutch Assembly

Ref.	Part Number	Description
17.	721-0208	Exhaust Gasket (B&S- 272293)
18.	726-0205	Hose Clamp
19.	731-04914	Throttle Control Knob
20.	736-0148	Ext. Tooth Lock Washer, 3/8
21.	736-0171	Lock Washer, 7/16
22.	736-3008	Flat Washer, .344 x .75 x .12
23.	737-0125	Elbow Fitting
24.	746-04161	Throttle Cable, 39.0 Lg
25.	747-04228A	Tank Mounting Wire
26.	751-0564B	Muffler Deflector
27.	751-0617B	Muffler
28.	751-10057D	Fuel Tank, 3.0 Gal.
29.	751-10349	Fuel Line Hose
30.	751-3124D	Fuel Cap
31.	751-10517	Oil Drain Valve
32.	751-3141	Oil Drain Extension Hose


Engine Connections, 3 Gallon Tank 50" & 54"

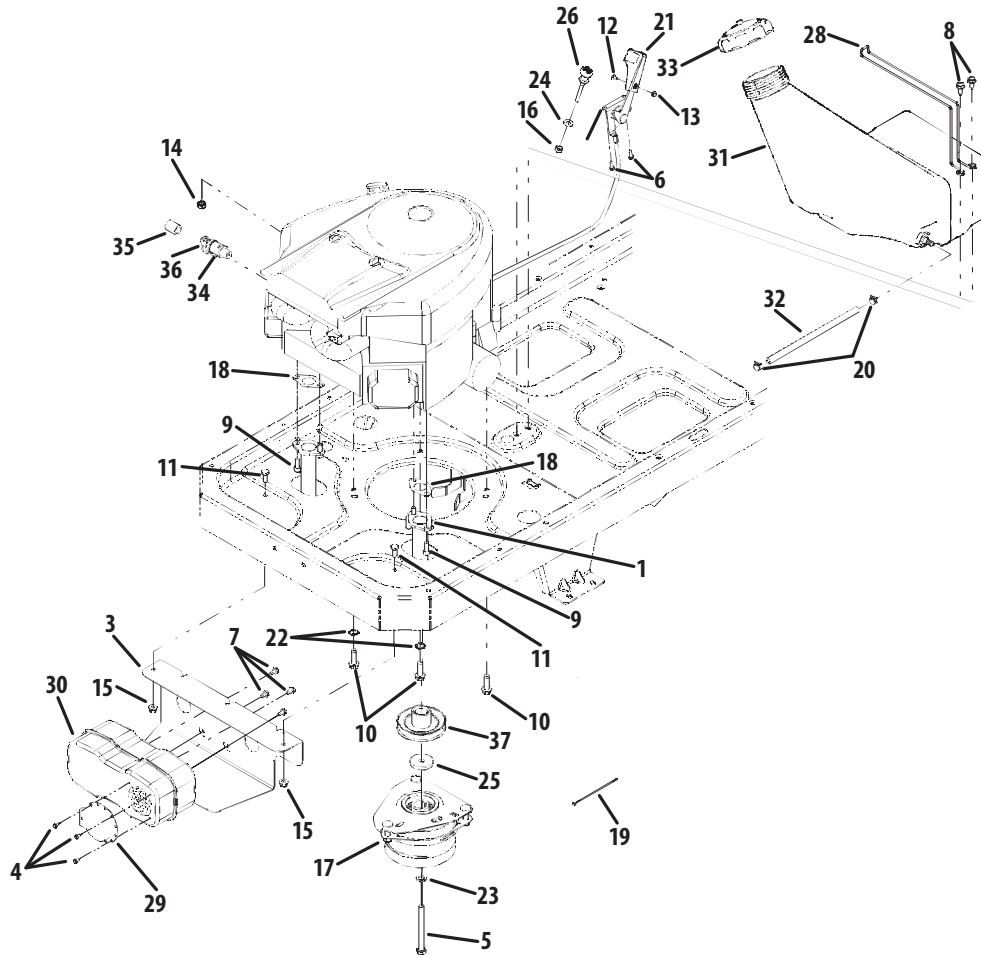

Ref.	Part Number	Description
1.	603-04162	Exhaust Tube (RH)
2.	603-04163	Exhaust Tube (RH)
3.	703-05441A	Muffler Mounting Bracket
4.	710-0227	Hex Wash. Hd. Screw #8-18 x .5
5.	710-04248	Hex Cap Screw, 7/16-20 x 4.0
6.	710-04261	Hex Wash. Hd. Screw, #12-16 x .5
7.	710-0599	Hex Wash. Hd. Screw, 1/4-20 x .5
8.	710-0726	Hex Wash. Hd. Screw, 5/16-12 x .75
9.	710-1314A	Socket Hd. Screw, 5/16-18 x .75
10.	710-1315	Hex Wash. Hd. Screw, 3/8-16 x 1.25
11.	710-3008	Hex Cap Screw, 5/16-18 x .75
12.	710-3217	Truss Hd. Mach. Screw, #8-32 x .375
13.	712-0142	Hex Nut, #8-32
14.	712-0271	Sems Nut, 1/4-20
15.	712-04063	Hx Insert Flng. Lck. Nut, 5/16-18
16.	712-3005	Hex Jam Nut, 3/8-16
17.	717-04552	Elec. PTO Clutch Ass. (50" Deck)
—	717-1774C	Elec. PTO Clutch Ass. (54" Deck)
18.	721-0460	Exhaust Gasket


Ref.	Part Number	Description
19.	726-0197	Cable Tie
20.	726-0205	Hose Clamp
21.	731-04914	Throttle Control Knob
22.	736-0148	Ext. Tooth Lock Washer, 5/8
23.	736-0171	Lock Washer, 7/16
24.	736-0300	Flat Washer, .406 x .875 x .059
25.	736-04131	Flat Washer, .438 x 1.75 x .25
26.	746-04214	Choke Cable, 61Lg
27.	746-1086	Throttle Cable, 39.0 Lg
28.	747-04228A	Tank Mounting Wire
29.	751-0564B	Muffler Deflector
30.	751-0616B	Muffler
31.	751-10057C	Fuel Tank, 3.0 Gal.
32.	751-10349	Fuel Line Hose
33.	751-3124B	Fuel Cap
34.	751-10517	Oil Drain Valve
35.	751-3141-14	Oil Drain Extension Hose
36.	751-3142	Oil Drain Valve Cap
37.	756-0978B	Drive Pulley

Engine Connections, 3.5 Gallon Tank

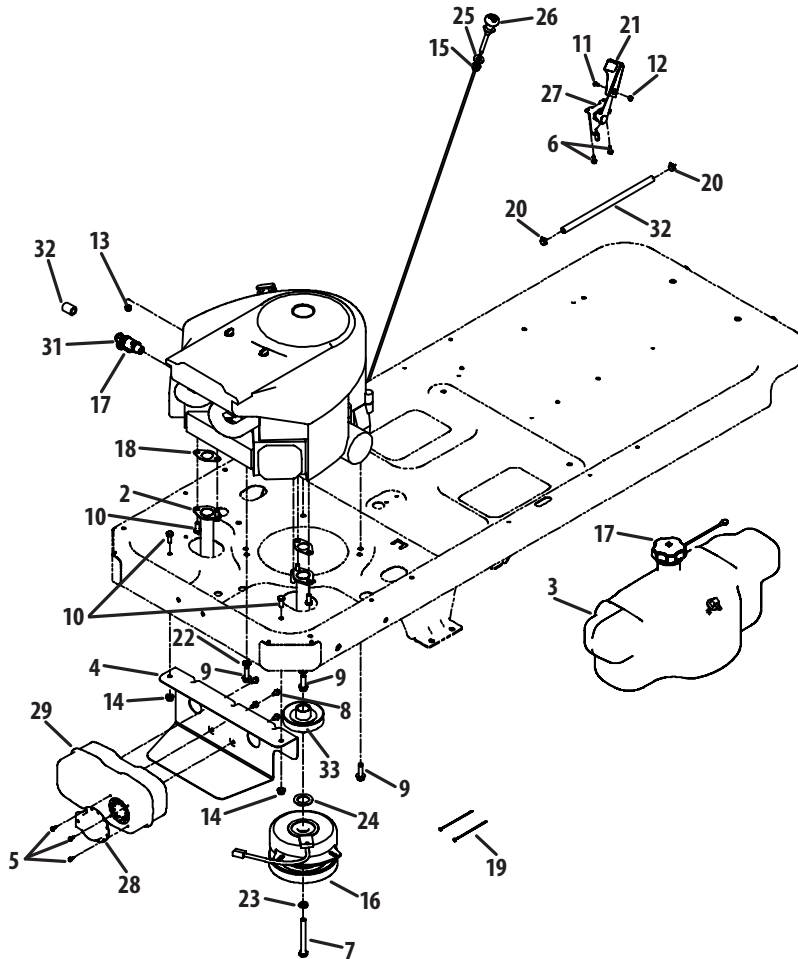

Ref.	Part Number	Description
1.	603-04162	Exhaust Tube (RH)
2.	603-04163	Exhaust tube (LH)
3.	651-04209	Fuel Tank, 3.5 Gallon
4.	703-05441A	Muffler Bracket
5.	710-0227	Hex Washer Hd. Screw, #8-18 x .500
6.	710-04261	Hex Washer Hd. Screw #12-16 x .50
7.	710-04379A	Hex Screw, 7/16-20 x 3.50
8.	710-0599	Hex Washer Hd. Screw, 1/4-20 x .500
9.	710-1315	Hex Wshr. Hd. Screw, 3/8-16 x 1.250
10.	710-3008	Hex Screw, 5/16-18 x .75
11.	710-3217	Machine Screw, #8-32 x .375
12.	712-0142	Hex Nut, #8-32
13.	712-0271	Sems Nut, 1/4-20
14.	712-04063	Flange Lock Nut, 5/16-18
15.	712-3005	Flange Lock Nut, 3/8-16
16.	717-04552	Electric PTO Clutch Ass. (50" Deck)
—	717-1774C	Electric PTO Clutch Ass. (54" Deck)


Ref.	Part Number	Description
17.	751-10703	Fuel Cap
18.	721-0460	Exhaust Gasket
19.	726-0197	Cable Tie
20.	726-0205	Hose Clamp, .490
21.	731-04914	Throttle Control Knob
22.	736-0148	External Tooth Lock Washer, 3/8
23.	736-0171	Lock Washer, 7/16
24.	736-0277	Flat Washer, 1.031 x 1.620 x .095
25.	736-0300	Flat Washer, .406 x .875 x .059
26.	746-04214	Choke Cable, 61.0 Lg
27.	746-1086	Throttle Cable, .39 Lg x .62
28.	751-0564B	Muffler Deflector
29.	751-0616B	Dual Inlet Muffler
30.	751-10349	Low Permeation Fuel Hose, 1/4
31.	751-10517	Oil Drain
32.	751-3141	Oil Drain Extension Hose
33.	756-0978B	Engine Pulley

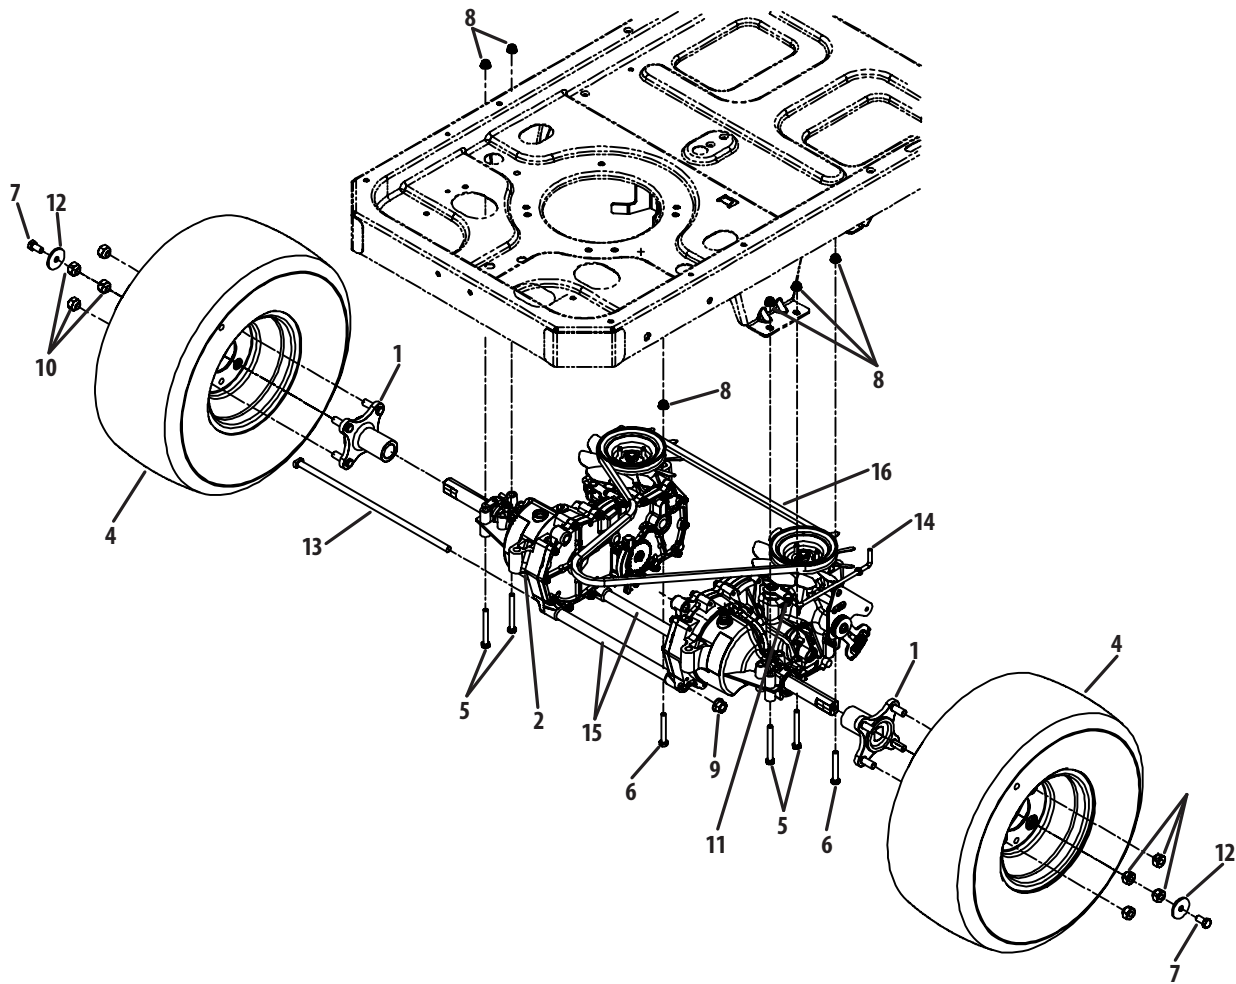

Ref.	Part Number	Description
1.	618-04317	Wheel Hub
2.	618-04431A	Transmission Assembly (LH)
3.	618-04432A	Transmission Assembly (RH)
4A.	634-04294	Wheel Assembly (42"), 18 x 6.5 x 8
—	734-04246	Tire (42"), 18 x 6.5 x 8
—	734-0255	Valve Assembly, (42")
4B.	634-04171	Wheel Assembly (50"), 18 x 9.5 x 8
—	734-1729	Tire (50"), 18 x 9.5 x 8
—	603-04175	Rim Assembly (50")
—	734-0255	Valve Assembly (50")
5.	710-0176	Hex Cap Screw, 5/16-18 x 2.75

Ref.	Part Number	Description
6.	710-0395	Hex Cap Screw, 1/16-18 x 2.25
7.	710-3119	Hex Cap Screw Lock, 3/8-16 x .75
8.	712-04063	Hx Flange Insert Lck Nut, 1/16-18
9.	712-0459	Hex Flange Lock Nut, 7/16-20
10.	712-3050	Lug Nut, 7/16-14
11.	714-0507	Cotter Pin, 3/32 x .75
12.	736-0227	Flat Washer, .39 x 1.5 .134
13.	738-04192	Rod, .405 x 14.0
14.	747-04217C	Bypass Rod
15.	750-04561	Tube, .45 x .69 x 10.2
16.	754-04043	Type A Sec V-Belt x 57.7

Rear Drive & Wheels, 54"

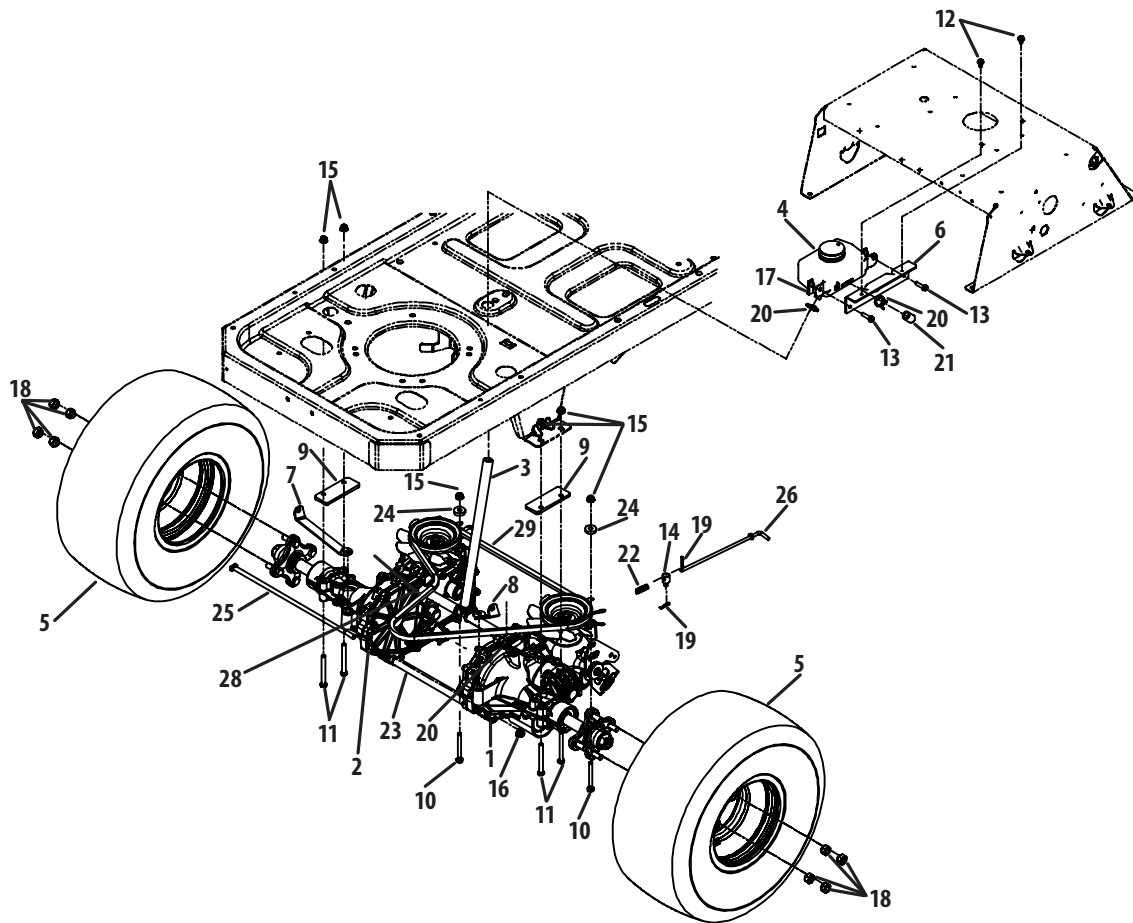


Ref.	Part Number	Description
1.	618-04464	Transmission Assembly (RH)
2.	618-04465	Transmission Assembly (LH)
3.	618-04466	Breather
4.	631-04223	Expansion Tank Assembly
5.	634-04295	Wheel Assembly, 20 x 10 x 8
—	634-0246A	Rim Assembly, 8.0 x 6.19 x 4
—	734-1873	Tire, 20 x 10 x 8
—	734-0255	Air Valve
6.	703-05938	Expansion Tank Bracket
7.	703-05940	Transmission Brace (LH)
8.	703-05941	Transmission Brace (RH)
9.	703-05989	Transmission Spacer
10.	710-0176	Hex Screw, $\frac{5}{16}$ -18 x 2.75
11.	710-0189	Hex Screw, $\frac{5}{16}$ -18 x 3.00
12.	710-0599	Screw, $\frac{1}{4}$ -20 x .500
13.	710-0788	Screw, $\frac{1}{4}$ -20 x 1.000

Ref.	Part Number	Description
14.	711-1530	Ferrule, .325 x .312
15.	712-04063	Flangelock Nut, $\frac{5}{16}$ -18
16.	712-04065	Flangelock Nut, $\frac{5}{8}$ -16
17.	712-04092	Speed Nut, $\frac{1}{4}$ -20
18.	712-3050	Lug Nut, $\frac{7}{16}$ -14
19.	714-0104	Cotter Pin, .072 x 1.13
20.	726-04059	Hose Clamp, .750
21.	731-05785	Cap, $\frac{1}{2}$ x .870
22.	732-0335	Compression Spring, .405 x 1.17
23.	732-04434	Extension Spring, .545 x 4.555
24.	736-04267	Flat Washer, .35 x 1.0 x .2
25.	738-04251	Rod, .337 x 14.75
26.	747-04636	Bypass Rod
27.	750-04759A	Tube, $\frac{7}{16}$ x $\frac{3}{4}$ x 11.3
28.	751-10511	Straight Fitting, $\frac{9}{16}$ x $\frac{1}{2}$
29.	754-04043A	V-Type Belt, 57.7

Notes

[illegible]

Operator's Control, All Models

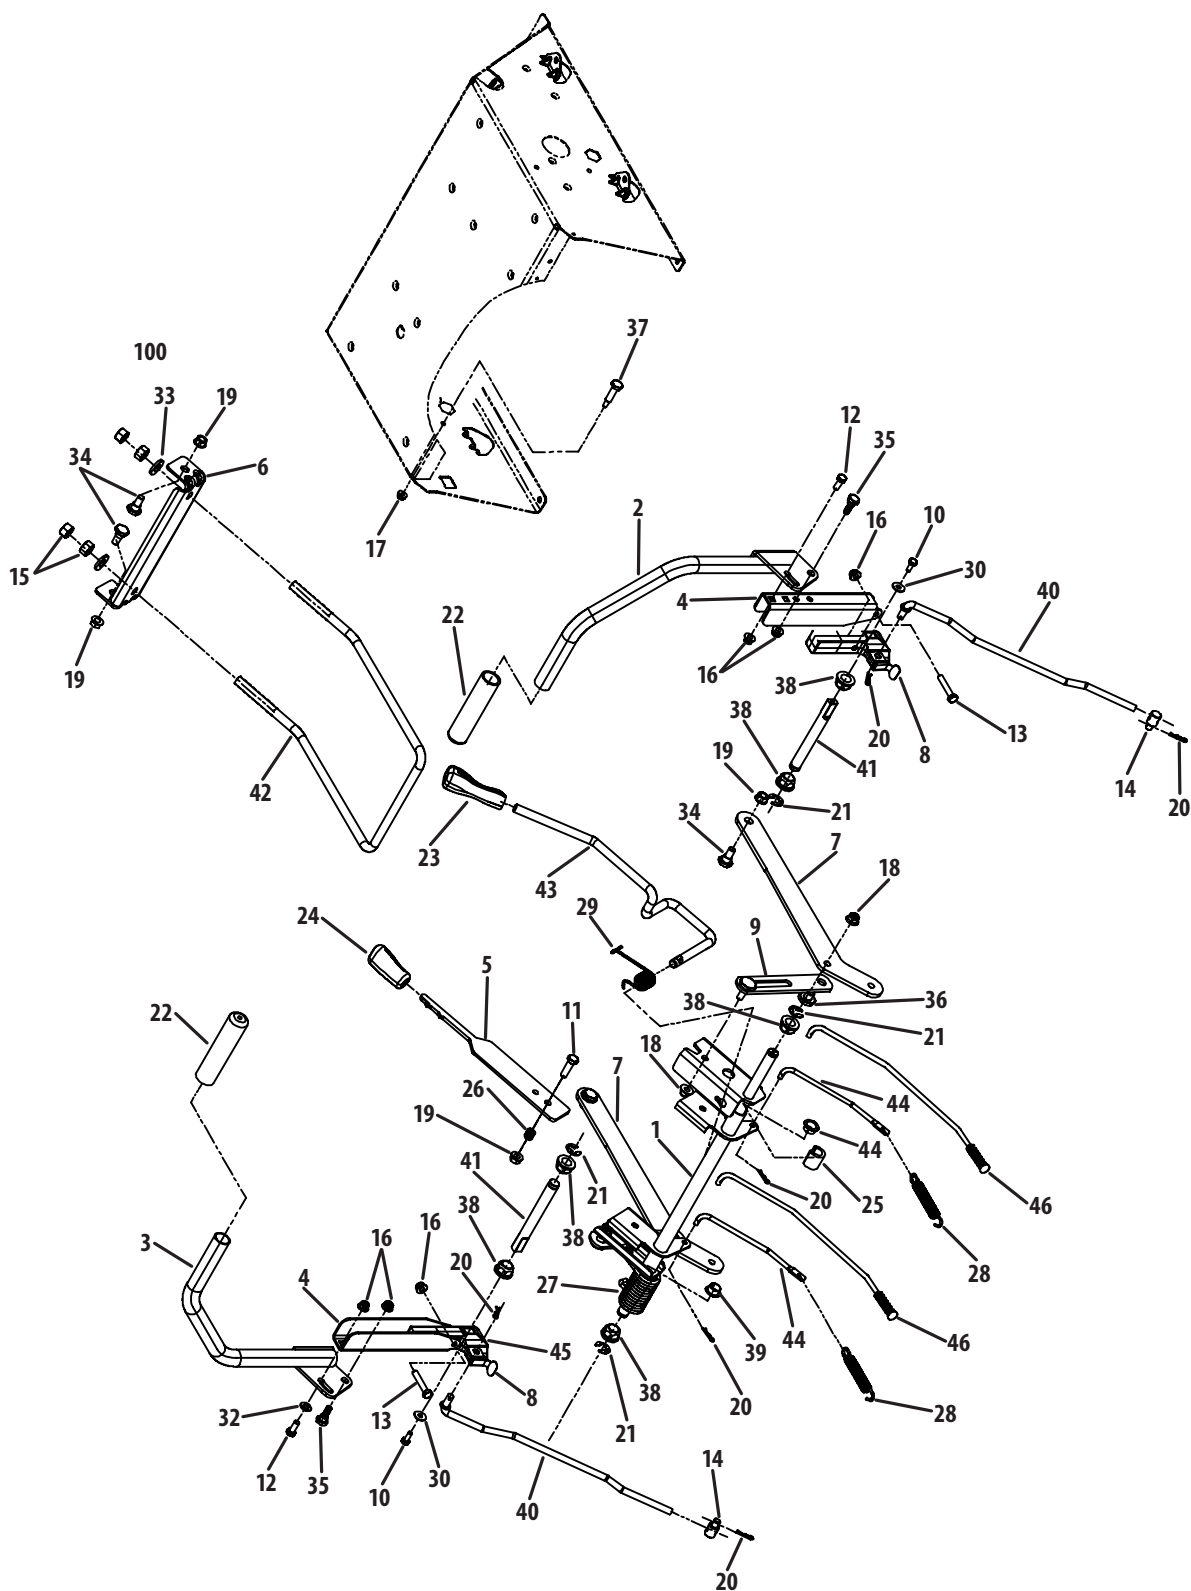

Ref.	Part Number	Description
1.	603-04160B	Deck Lift Shift Assembly
2.	603-04322	Lapbar Lever Assembly (RH)
3.	603-04324	Lapbar Lever Assembly (LH)
4.	703-05387B	Lapbar Pivot Bracket
5.	703-05396A	Brake Handle
6.	703-05414A	Front Deck Hanger Bracket
7.	703-05793A	Deck Lift Arm Plate
8.	703-06096	Switch Actuator Bracket
9.	703-06169	Lift Link Plate, 5.50 Lg
10.	710-0433	Hex Lock Screw, ¼-20 x .625
11.	710-3005	Hex Screw, ⅜-16 x 1.25
12.	710-3008	Hex Screw, ⅝-18 x .75
13.	710-3180	Hex Screw, ⅝-18 x 1.75
14.	711-0832	Ferrule, ⅜-24 x .375
15.	712-0206	Hex Nut, ½-13
16.	712-04063	Flange Lock Nut, ⅝-18
17.	712-04064	Flange Lock Nut, ¼-20
18.	712-04065	Flange Lock Nut, ⅝-16
19.	712-0431	Flange Lock Nut, ⅝-16
20.	714-0104	Cotter Pin, .072 x 1.13
21.	716-0106	E-Ring, .625
22.	720-0274	Grip, 1.0 x 5.0
23.	720-0311	Handle Grip, ½

Ref.	Part Number	Description
24.	731-04735	Selector Handle
25.	731-05732	Spacer, .62 x 1.00
26.	732-0334	Compression Spring, .50 x .50
27.	732-04420	Torsion Spring, 1.194 (50" & 54")
28.	732-04432	Extension Spring, .59 x 4.00 (54")
29.	732-0874	Torsion Spring
30.	736-0270	Bell Washer, .265 x .75 x .062
31.	736-0272	Flat Washer, .510 x 1.00 x .060
32.	736-0275	Flat Washer, .344 x .688 x .065
33.	736-3019	Flat Washer, .531 x 1.062 x .134
34.	738-0143	Shoulder Screw, .496 x .336 x ⅜-16
35.	738-0296	Shoulder Screw, .437 x .268 x ⅝-18
36.	738-0507B	Shoulder Screw, .500 x .434
37.	738-0572	Shoulder Screw, .374 x 1.16
38.	741-0225	Hex Flange Bearing
39.	741-3074	Flange Bearing, .626 x .938 x .344
40.	747-04225A	Lapbar Control Rod
41.	747-04226	Shaft Control
42.	747-04401A	Deck Lift Front Hanger Rod
43.	747-04637	Deck Lift Handle Rod
44.	747-04651	Brake Rod (54")
45.	748-04169	Control Hub
46.	748-04169	Brake Rod Assembly (42" & 50")

[illegible]

This image shows a full-page view of a blank sheet of white paper designed for writing notes. A thin, dark vertical line runs down the left side of the page, creating a narrow margin. The rest of the page is filled with evenly spaced, horizontal grey lines that extend from the right edge of the margin line to the far right edge of the page. These lines are intended to guide the placement of text while leaving space in the margin for additional information or a summary.

To order parts, call a Customer Support Representative at (800) 965-4CUB.
Locate your nearest Cub Cadet dealer at (877) 282-8684
or visit www.cubcadet.com to find the nearest Cub Cadet dealer in your area.

CUB CADET LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019
