

MODEL RZT 42

TABLE OF CONTENTS


DESCRIPTION	PAGE
Frame and Drive Idler Assembly	3
Electrical	4
Operator's Platform	6
Controls and Deck Lift	8
Front Axle	10
Rear Drive and Wheels	11
RH Transmission	12
LH Transmission	14
42" Mower Deck	16
Engine Connections	18
Engine	
Crankcase, Crankshaft and Piston	20
Carburetor, Air Cleaner and Manifold	22
Cylinder Head	24
Flywheel and Electrical	25
Fuel System and Controls	26
Starter Motor	27
Service Kits	28

NOTE: For **painted parts**, please refer to the list of color codes below. Please add the applicable color code, wherever needed, to the part number to order a replacement part.

For instance, if a part, numbered 700-xxxx, is painted Cub Yellow, the part number to order would be 700-xxxx-0716.


Cub Yellow: 0716
Cub Beige: 0499
Powder Black: 0637

FRAME AND DRIVE IDLER ASSEMBLY

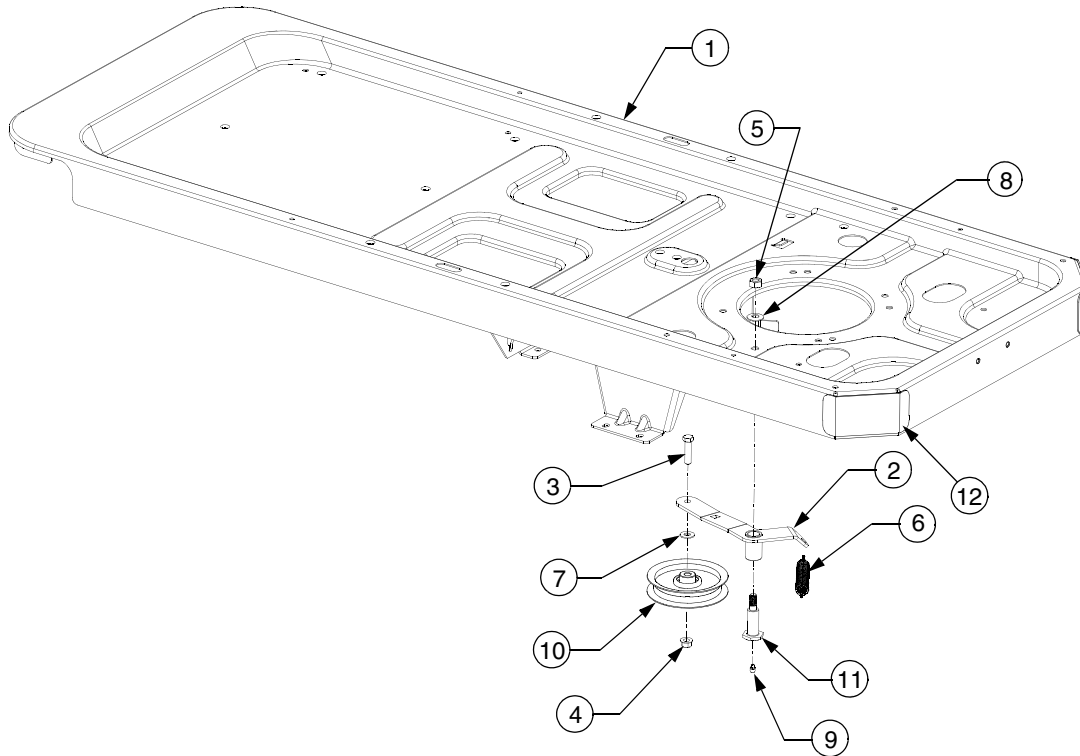

REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	603-04303	Frame Assembly	1
	777D03479	Graphic, Cub Cadet	1
2	603-04147A	Idler Arm, Drive	1
3	710-0520	Screw, Hex Cap, 3/8-16 x 1.5 GR5	1
4	712-0431	Nut, Hex Flange Lock, 3/16 GRF	1
5	712-0290	Nut, Hex Lock, 7/16-14 GRA	1
6	732-0626	Spring, Extension, .75 x 5.06	1
7	736-0300	Washer, Flat, .406 x .875 x .059	1
8	736-0322	Washer, Flat, .45 x 1.25 x .164 HT ...	1
9	737-3000	Fitting, Lube, 3/16 Drive	1
10	738-3005A	Screw, Shoulder, .68 x 1.59	1
11	756-1229	Pulley, Idler, 4.08 Dia.	1

ELECTRICAL

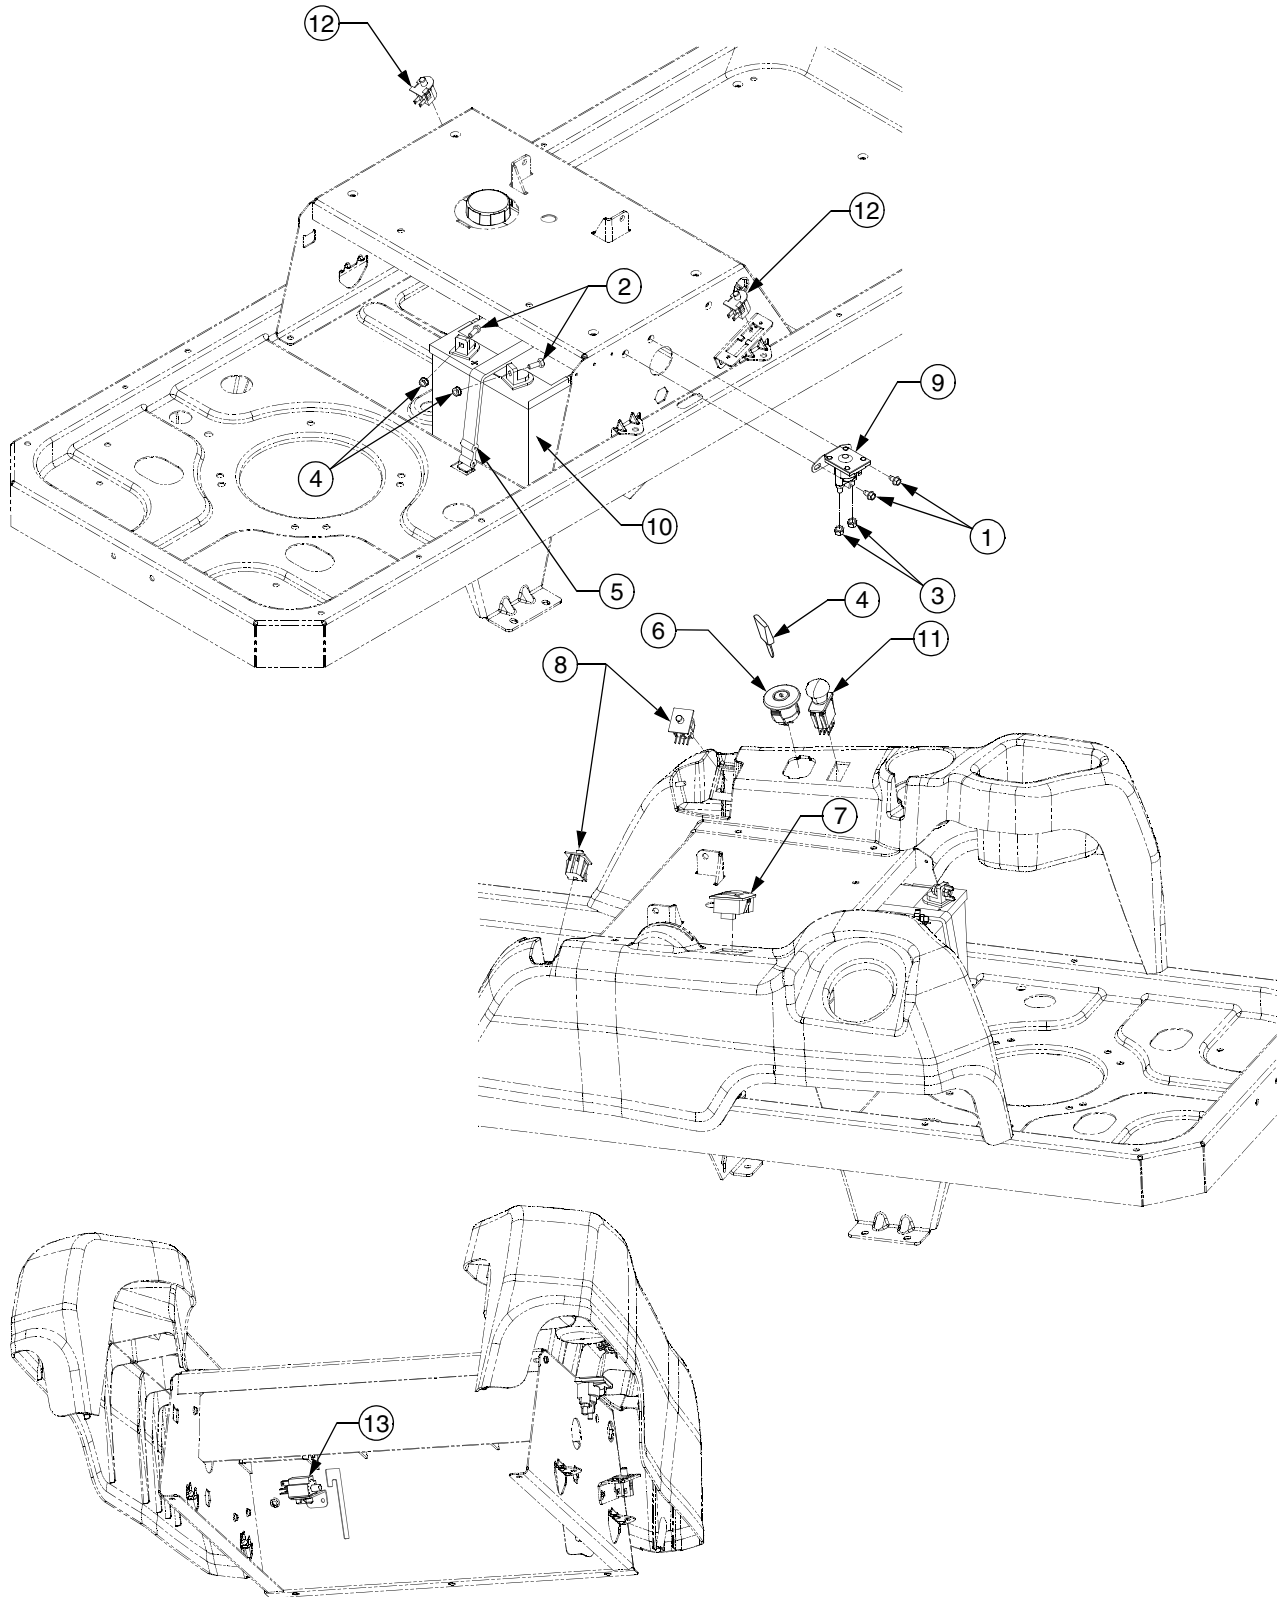


ELECTRICAL

REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	710-0599	Screw, Hex Wash. Hd. Tapp, 1/4-20 x .5	2
2	710-3015	Screw, Hex Cap, 1/4-20 x .75 GR5 ..	2
3	712-0271	Nut, Hex Sems, 1/4-20	4
4	925-1745	Key	1
5	723-0467	Strap, Battery	1
	732-0696	Hook, Wire Rectangular	2
6	725-04228	Switch, Ignition	1
7	725-04036A	Meter, Hour	1
8	725-04165	Switch, Dbl. Pole - Neutral	2
9	725-1426	Solenoid	1
10	725-1707D	Battery, 245 CCA	1
11	725-04174	Switch, PTO	1
12	725-3166	Switch, Snap Mount (N.C.) - Reverse	2
13	725-04232	Switch, 3-Pole, (NC-NO-NO) - Brake	1
†	725-04244	Harness Assembly, Wire	1
†	725-04245	Jumper Harness, Neutral	2
†	725-04187	Cable Wire, Red - Starter	1
†	725-04188	Cable Wire, Black - to Ground	1
†	625-04023A	Cable Wire, Red - Solenoid	1

† NOT SHOWN


OPERATOR'S PLATFORM

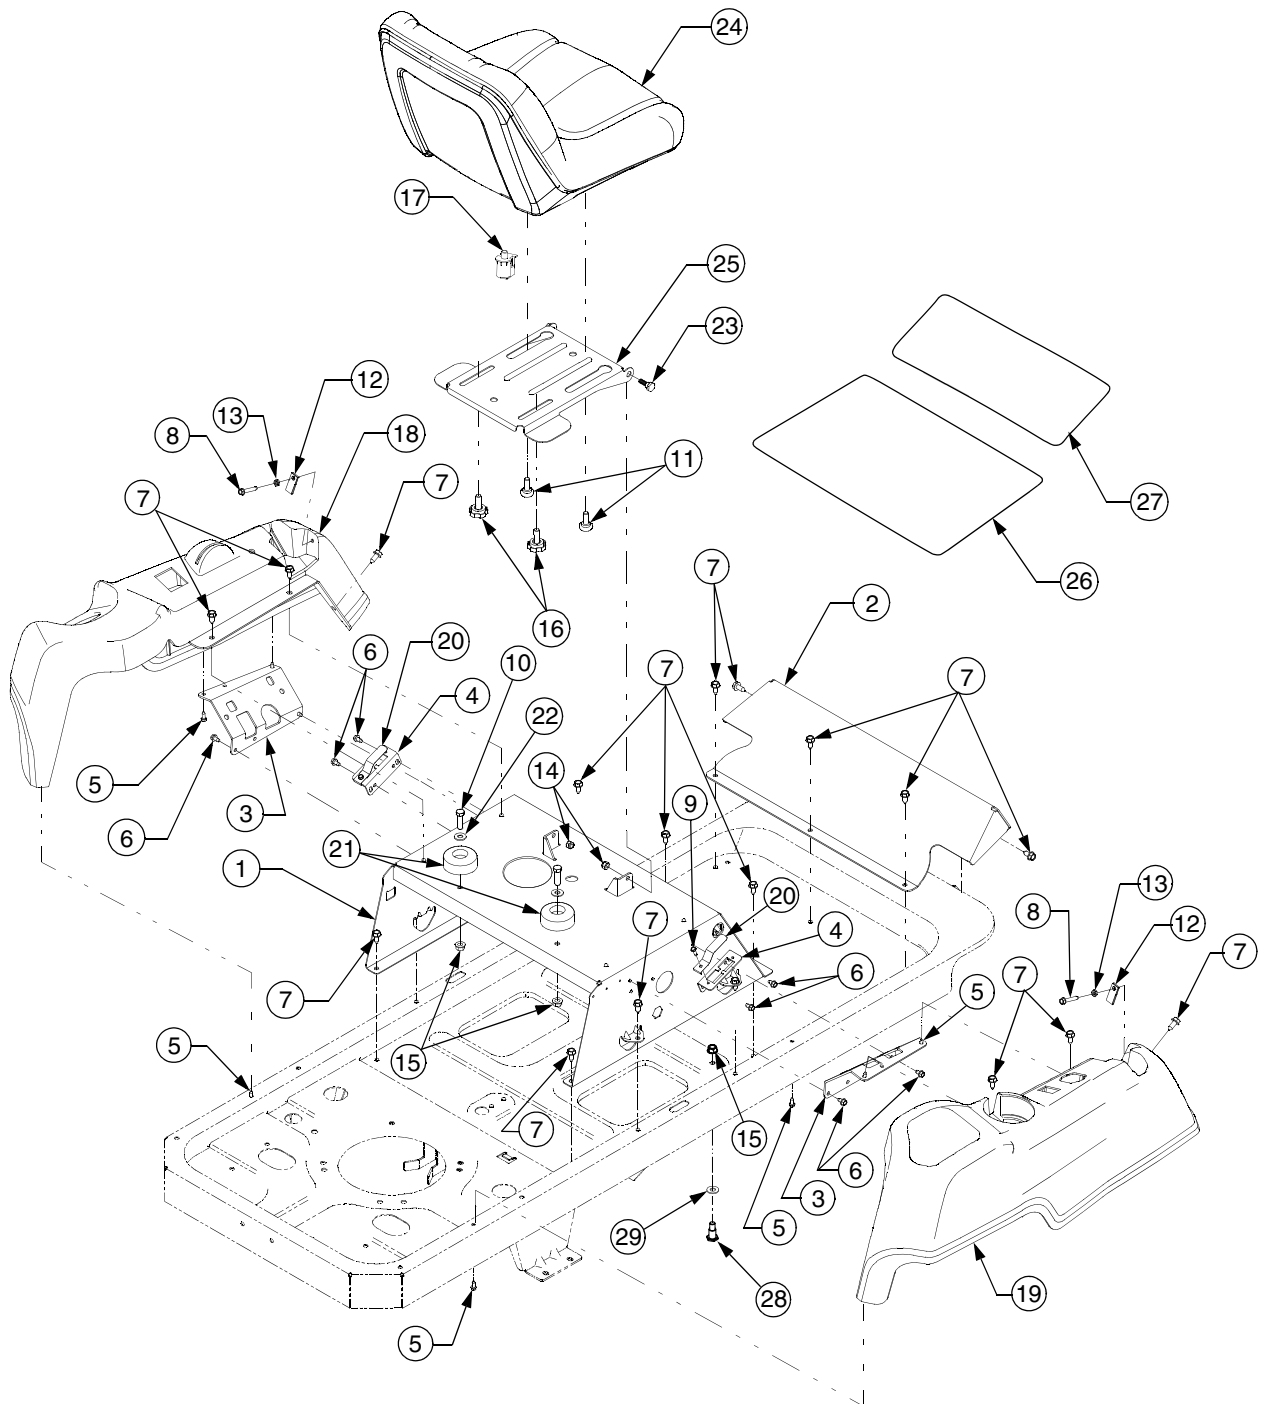

OPERATOR'S PLATFORM

REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	603-04304	Frame, Seat Box	1
	777I22278	Graphic, Park Brake	1
	777S32354	Graphic, Warning	1
	777I22275	Graphic, Deck Height	1
2	703-05373	Bracket, Foot Rest	1
	777D03479	Graphic, Cub Cadet	1
3	703-05460A	Bracket, Console Mounting	2
4	703-05467	Bracket, Switch Mounting	2
5	710-04261	Screw, Hex Wash. Hd Tapp	8
		#12-16 x .50	
6	710-0599	Screw, Hex Wash. Hd. Tapp.	8
		1/4-20 x .5	
7	710-0604A	Screw, Hex Wash. Hd. Tapp	20
		5/16-18 x .625	
8	710-0778	Screw, Hex Wash. Hd. Tapp.	2
		1/4-20 x 1.5	
9	710-1268	Screw, Hex Wash. Hd Tapp	2
		#10-16 x .375	
10	710-3005	Screw, Hex Cap, 3/8-16 x 1.25 GR5	2
11	738-04012A	Screw, Shoulder, .625 x .175:3/8-16	2
12	712-04092	Nut, U Type Speed, 1/4-20	2
13	712-0298	Nut, Hex Jam, 1/4-20 GR2	2
14	712-0429	Nut, Hex Insert Lock, 5/16-18 GR5 ...	2
15	712-0431	Nut, Hex Flange Lock, 3/8-16 GRF	4
16	720-04009A	Knob, 3/8-16: .625	2
17	725-3166	Switch, Seat, Snap Mount, N.C.	1
18	731-04662A	Console, LH	1
	777I22277	Graphic, Instruction	1
	777D08285	Graphic, Cub Cadet	1
	777I22279	Graphic, Throttle Control	1
19	731-04663	Console, RH	1
	777I22276	Graphic, Instruction	1
	777D08284	Graphic, Cub Cadet	1
20	732-04200	Spring, Switch Actuator	2
21	735-04041	Pad, Seat	2
22	736-0267	Washer, Flat HT, .395 x .87 x .06	2
23	738-0296	Screw, Shoulder, .437 x .268: 5/16-18	2
24	757-04023	Seat	1
	777D06883	Graphic, Cub Cadet	1
	777D01782	Graphic, USA	1
25	783-04628	Bracket, Seat Pivot	1
26	723-04020	Pad, Abrasive Foot Plate	1
27	723-04021	Pad, Abrasive Toe Plate	1
28	738-0430	Screw, Shoulder, .50 x .685:3/8-16 ...	2
29	736-0300	Washer, Flat, .406 x .875 x .059	2


CONTROLS AND DECK LIFT

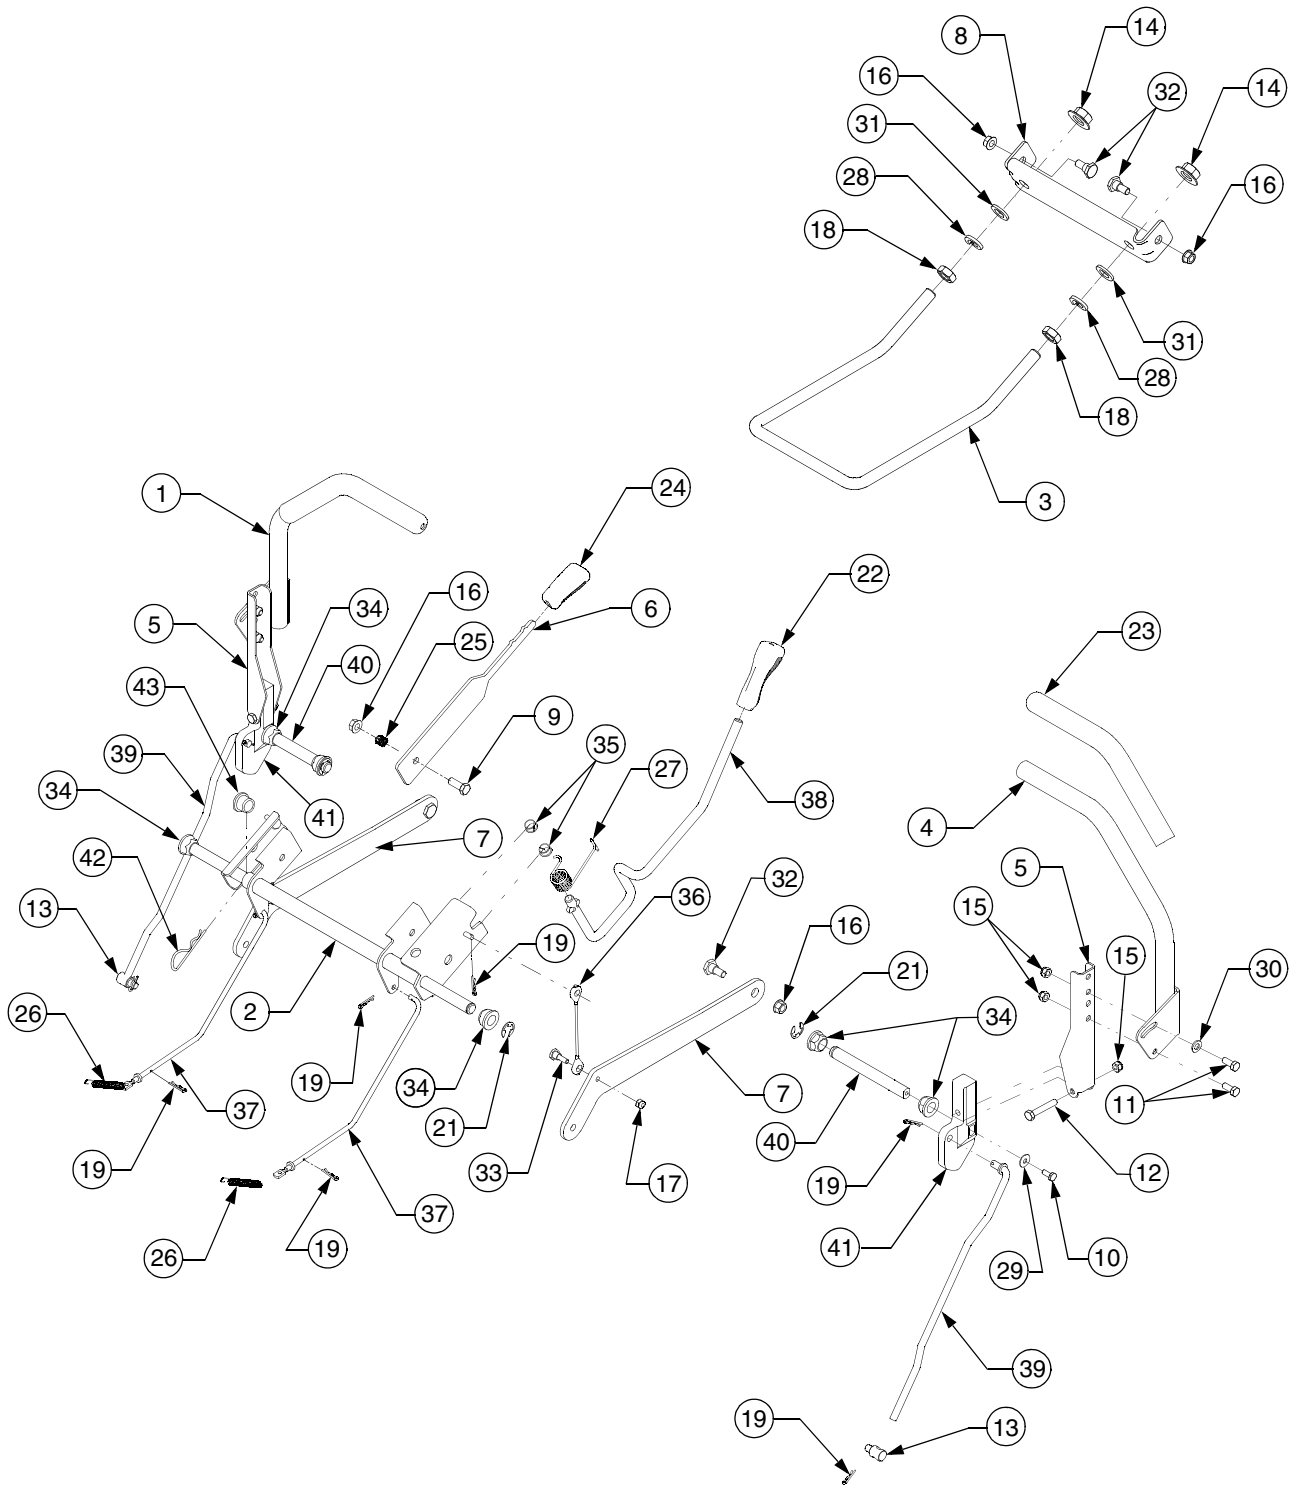

CONTROLS AND DECK LIFT


REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	603-04150	Lever, Lapbar, LH	1
2	603-04160	Shaft Assembly, Deck Lift	1
3	747-04123A	Rod, Deck Front Hanger	1
4	603-04181A	Lever, Lapbar, RH	1
5	703-05387	Bracket, Lapbar Pivot	2
6	703-05396	Handle, Brake	1
7	703-05401	Arm, Deck Lift	2
8	703-05414	Bracket, Front Deck Hanger	1
9	710-0514	Screw, Hex Cap, 3/8-16 x 1.0 GR5 ..	1
10	710-0433	Screw, Hex Lock, 1/4-20 x .62 GR5 ..	2
11	710-3008	Screw, Hex Cap, 5/16-18 x .75 GR5	4
12	710-3180	Screw, Hex Cap, 5/16-18 x 1.75 GR5	2
13	711-0832	Ferrule, 3/8-24 x .375	2
14	712-0417A	Nut, Hex Flange, 5/8-18	2
15	712-0429	Nut, Hex Insert Lock, 5/16-18 GR5 ..	6
16	712-0431	Nut, Hex Flange Lock, 3/8-16 GRF	5
17	712-0380	Nut, Hex Flange Lock, 1/4-28 GR2 ..	2
18	712-3056	Nut, Hex Jam, 5/8-18 GR5	2
19	714-0104	Pin, Internal Cotter	10
21	716-0106	E-Ring , .625 Dia. Shaft	4
22	720-0311	Grip, Handle	1
23	731-04719A	Grip, Lapbar	2
24	731-04735	Grip, Handle	1
25	732-0334	Spring, Compression	1
26	732-0611	Spring, Extension	2
27	732-0874	Spring, Torsion	1
28	736-0158	Washer, Lock, 5/8	2
29	736-0270	Washer, Bell, .265 x .75 x .062	2
30	736-0275	Washer, Flat, .344 x .688 x .065	2
31	736-0366	Washer, Flat, .64 x 1.12 x .125	2
32	738-0143	Screw, Shoulder, .498 x .340:3/8-16	4
33	738-04100	Screw, Shoulder, 1/4-28 x .375	2
34	741-0225	Bearing, Hex Flange	6
35	741-0715	Bearing, Flange Snap, .50 ID	2
36	746-0970	Cable, Deck Lift, 5.05 Long	2
37	747-04218	Rod, Brake	2
38	747-04224	Rod, Deck Lift Handle	1
39	747-04225	Rod, Lapbar Control	2
40	747-04226	Shaft, Control	2
41	748-04052	Hub, Control	2
42	714-3020	Pin, Internal Cotter	1
43	741-3074	Bearing, Flange, .626 x .938 x .344 ..	2

FRONT AXLE

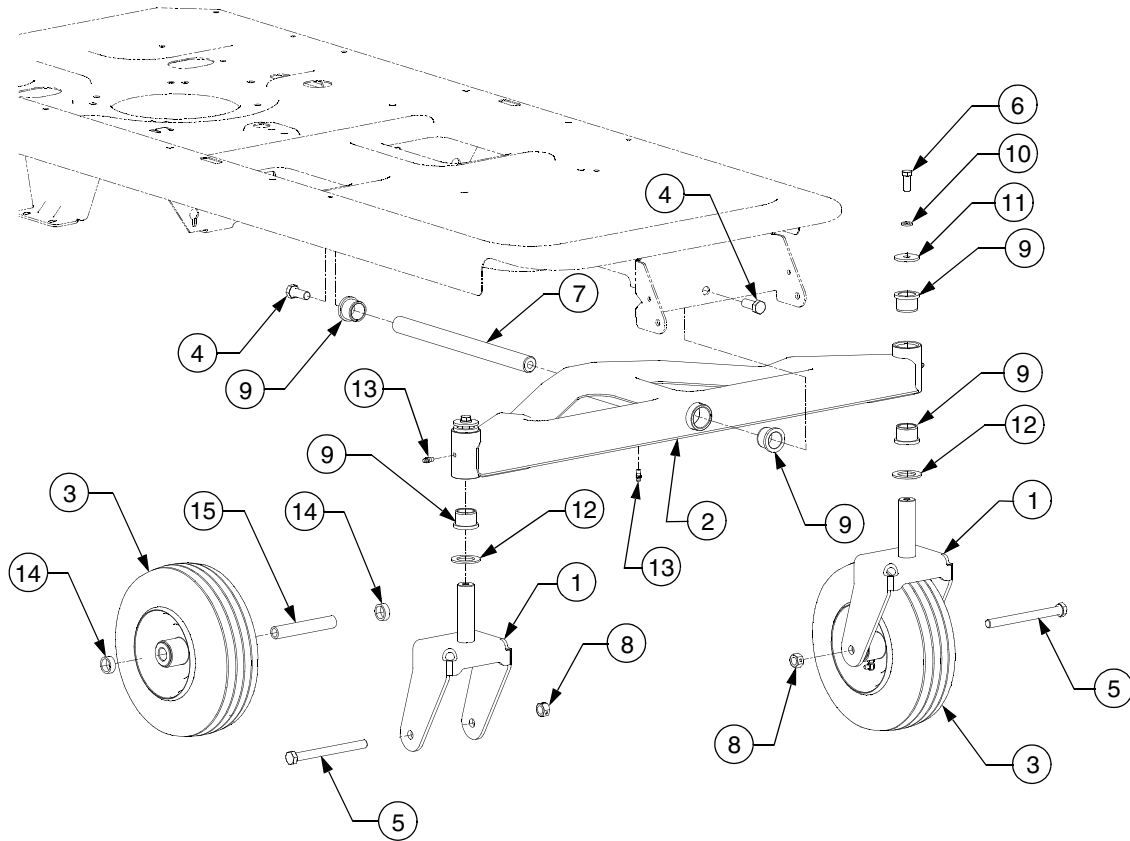


REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	603-0363A	Bracket, Castor Wheel	2
2	603-04148	Axle, Front Pivot	1
3	634-3163	Wheel Assembly, 11.0 x 4.0 x 5.0	2
4	710-04186	Screw, Hex Lock, 1/2-13 x 1.25 GR5	2
5	710-0506	Screw, Hex Cap, 1/2-20 x 5.5 GR5	2
6	710-0514	Screw, Hex Cap, 3/8-16 x 1.0 GR5 ..	2
7	711-04228	Shaft, Axle	1
8	712-0239	Nut, Hex Lock, 1/2-20 GRA	2
9	731-0374	Bearing, Flange, 1.0 x 1.254	6
10	736-0169	Washer, Lock, 3/8	2
11	736-0227	Washer, Flat, .39 x 1.5 x .134	2
12	736-0250	Washer, Flat, 1.0 x 1.75 x .107	2
13	737-3000	Fitting, Lube, 3/16 Drive	3
14	750-0456	Spacer, .79 x .347	4
15	750-3197A	Spacer, Wheel	2

REAR DRIVE AND WHEELS

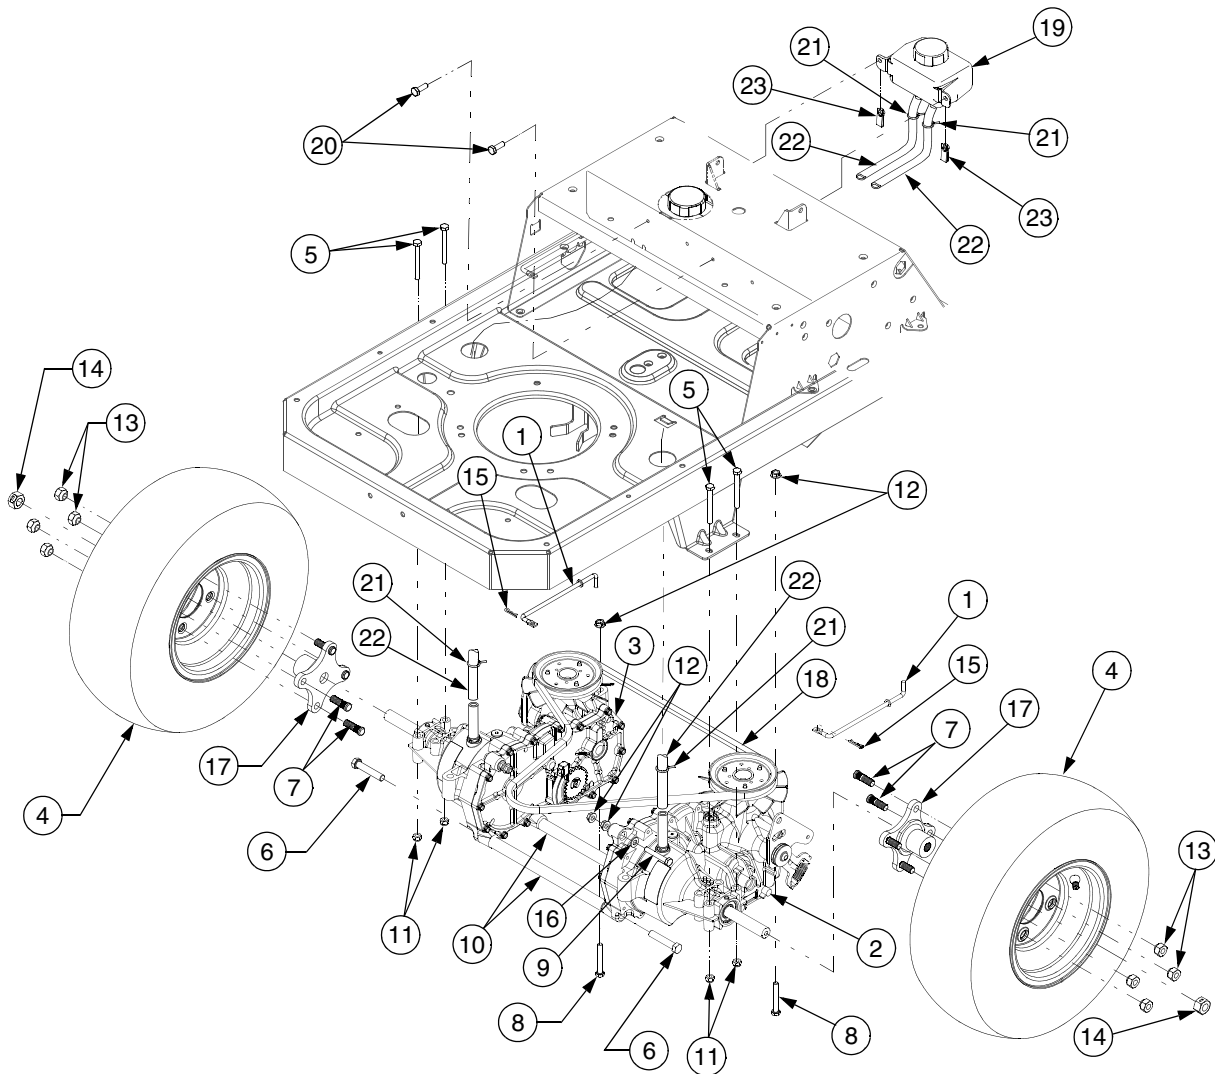

REF. NO.	PART NUMBER	DESCRIPTION	QTY.	REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	747-04217A	Rod, Bypass	2	12	712-3004A	Nut, Hex Flange Lock, 5/16-18 GR5	6
2	618-04163A	Transmission Assembly, RH	1	13	712-3050	Nut, Lug, 7/16-14	8
3	618-04164A	Transmission Assembly, LH	1	14	712-04088	Nut, Hex Lock, 9/16-18 GRC	2
4	634-04127	Wheel Assembly, 18 x 6.5 x 8	2	15	714-0104	Pin, Internal Cotter	2
	734-0294	Tire, 18 x 6.5 x 8	2	16	736-0275	Washer, Flat, .344 x .688 x .065	2
	734-0255	Valve Assembly	2	17	748-04054	Hub, Wheel	2
5	710-0176	Screw, Hex Cap, 5/16-18 x 2.75 GR5	4	18	754-04043	V-Belt, Type A Sec x 57.7	1
6	710-04308	Screw, Hex Lock, 7/16-14 x 2.25 GR5	4	19	631-04168	Reservoir, Expansion.....	1
7	710-0852	Stud, Rib Neck, 7/16-14 x 1.6	8	20	710-3015	Screw, Hex Cap, 1/4-20 x .75 GR5 ...	2
8	710-0395	Screw, Hex Cap, 5/16-18 x 2.25 GR5	2	21	726-04045	Clamp, Hose	4
9	710-3103	Screw, Hex Cap, 5/16-18 x 2.0 GR5	2	22	751-10190	Hose, Hydraulic	54in
10	711-04232	Brace, Transmission	2	23	712-04092	Nut, U-Type Speed, 1/4-20	2
11	712-0429	Nut, Hex Insert Lock, 5/16-18 GR5 ...	4				


RH TRANSMISSION

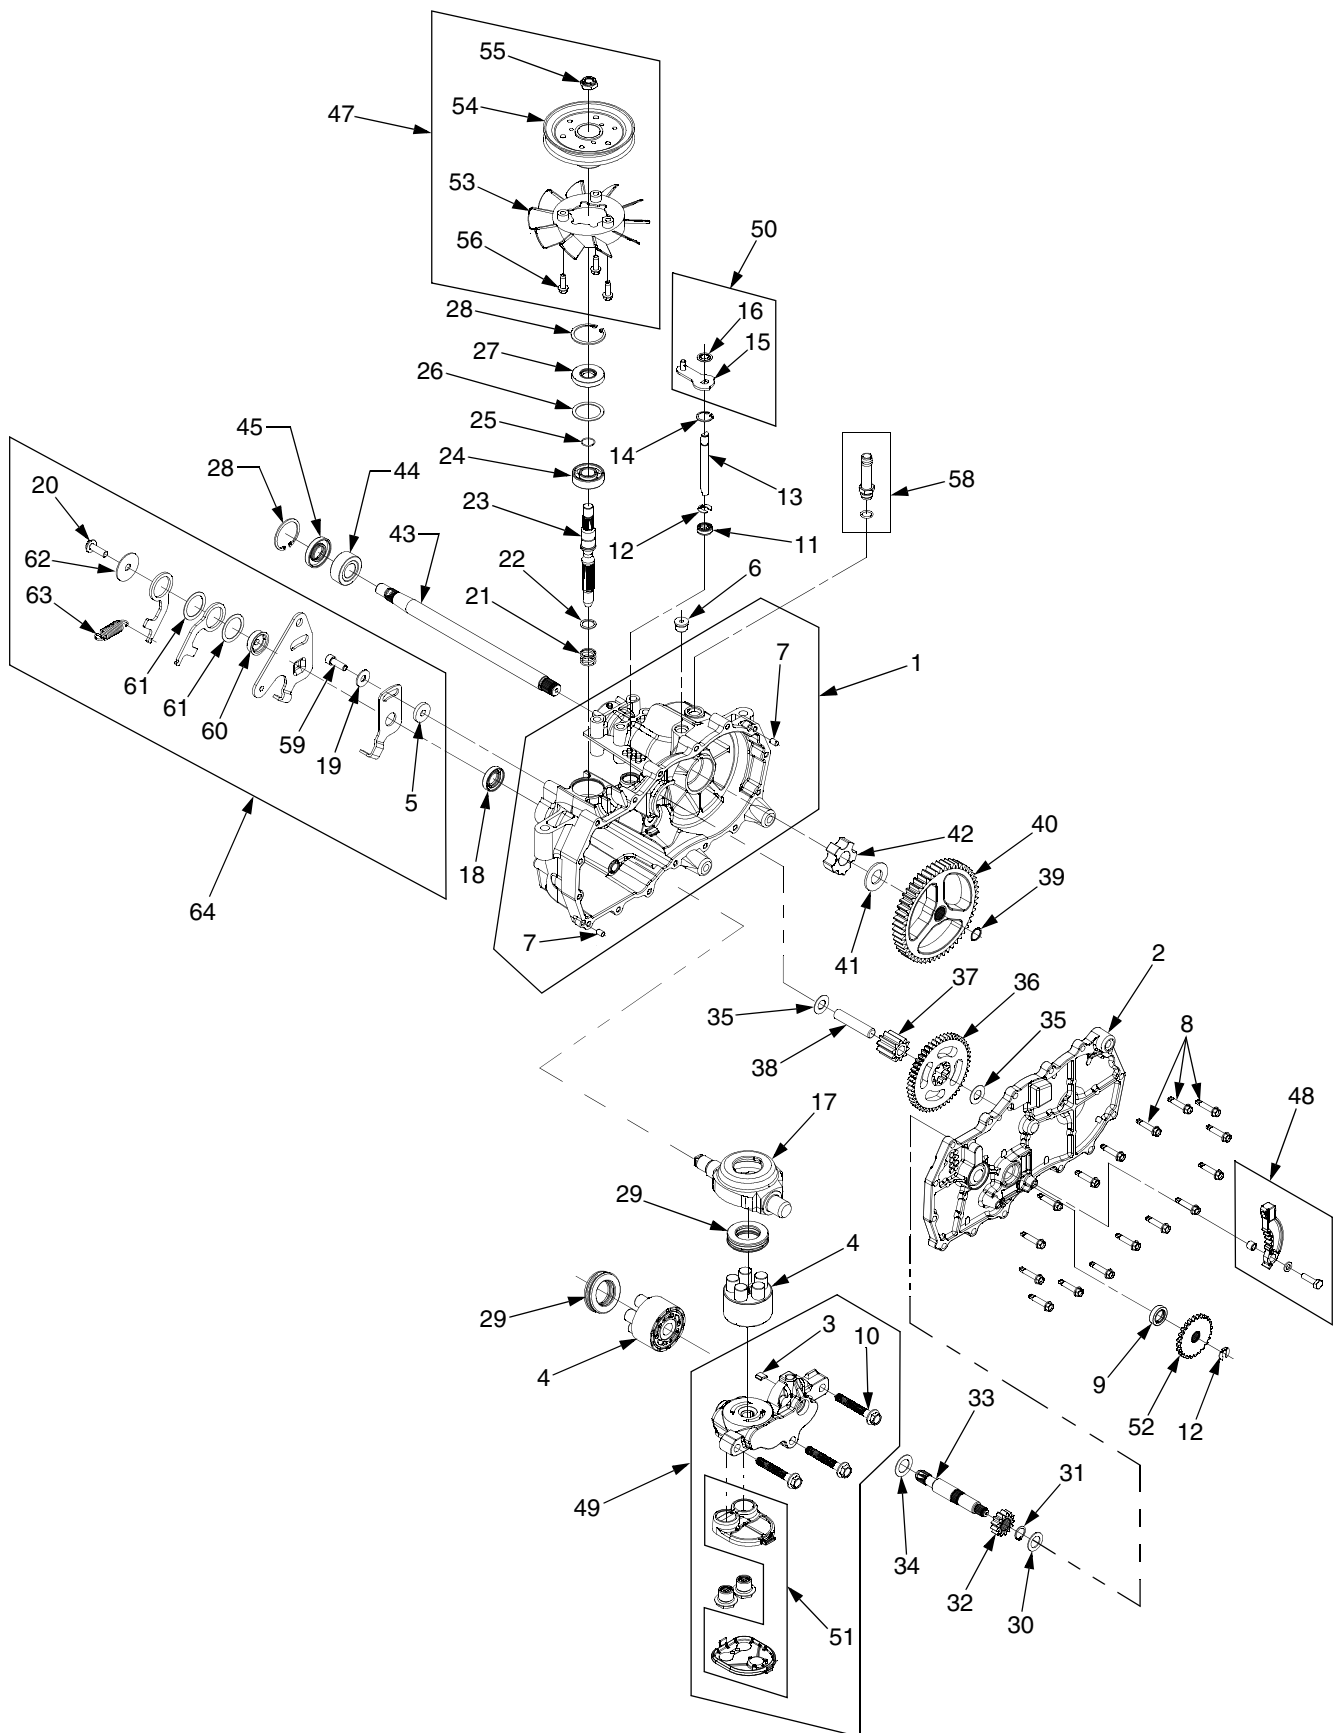

RH TRANSMISSION

REF. NO.	PART NUMBER	DESCRIPTION	QTY.	REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	HG-70862R	Housing Assembly, Main RH	1	33	HG-51632	Shaft, Motor	1
2	HG-70863R	Side Assembly, RH	1	34	HG-51069	Washer, .71 x 1.16 x .04	1
3	HG-51448	Plate, Bypass	1	35	HG-50132	Washer, HT, .5 x 1.0 x .032 ..	2
4	HG-70331	Block Assembly	2	36	HG-51129	Gear, 10T/48T	1
5	HG-51949	Spacer, .32 x 1.005	1	37	HG-51043	Gear, Jackshaft, 10T	1
6	HG-9005110-5600	Plug, SAE #6	1	38	HG-51083	Pin, Jackshaft	1
7	HG-9004800-2506	Pin, Stainless	2	39	HG-44871	Ring, Spiral Retaining	1
8	HG-51190	Screw, Hex Self Tapping, 1/4-20 x 1.25	16	40	HG-51633	Gear, Bull, 52T	1
9	HG-44761	Seal, Lip, .625 x 1.0 x .25	1	41	HG-44875	Washer, 3/4 x 1.5 x .13	1
10	HG-50016	Bolt, Hex Flange, 3/8-24 x 2.5	3	42	HG-51088	Bearing, Sleeve	1
11	HG-51626	Seal, Lip, .375 x .75 x .25	1	43	HG-51954	Axle	1
12	HG-51628	Ring, Retaining, .375 Ext.	2	44	HG-51089	Bushing, .752 x 1.571 x .625	1
13	HG-51625	Rod, Bypass	1	45	HG-51066	Seal, Lip, .75 x 1.577 x .25 ...	1
14	HG-51627	Ring, Retaining, .75 Int.	1	47	HG-70583	Kit, Fan-Pulley	1
15	HG-51910	Arm, Bypass	1	48	HG-70865	Kit, Brake Arm	1
16	HG-51630	Ring, Retaining, .375 Push ...	1	49	HG-70864R	Kit, Center Section-Filter RH	1
17	HG-51048	Swashplate, Trunnion	1	50	HG-71006	Kit, Bypass Arm	1
18	HG-51140	Seal, Lip, 18 x 32 x 7	1	51	HG-70911	Kit, Filter	1
19	HG-44130	Washer, Flat, 11/32 x 7/8 x 1/16	1	52	HG-51635	Disc, Brake Cog	1
20	HG-51812	Screw, 5/16-24 x 1.0	1	53	HG-51362	Fan, 6" 10 Blade	1
21	HG-2003014	Spring, Compression	1	54	HG-51182	Pulley, 4.5	1
22	HG-2003017	Washer, .591 x .787 x .04	1	55	HG-51244	Nut, Hex Insert Lock, 1/2-20	1
23	HG-51062	Shaft, Input	1	56	HG-50752	Screw, Hex Wash. Hd. Tapp 1/4-20	3
24	HG-50315	Bearing, Ball, 17mm x 40 x 12	1	58	HG-52200	Fitting/O-ring Assembly	1
25	HG-2000022	Ring, Wire Retaining, .561	1	59	HG-51616	Screw, Patch, 5/16-24 x 1.0	1
26	HG-50951	Spacer	1	60	HG-51947	Bushing, Pilot, 1.125	1
27	HG-51161	Seal, Lip, 17 x 40 x 7	1	61	HG-51948	Washer, Plastic	2
28	HG-50329	Ring, Retaining	2	62	HG-51950	Washer, 1.5 x .34 x .062	1
29	HG-50551	Bearing, Thrust, 30 x 52 x 13	2	63	HG-51399	Spring, Extension	1
30	HG-44371	Washer, Flat, 5/8 x 1.0 x .05	1	64	HG-71095	Kit, Return Assembly RH	1
31	HG-44145	Ring, Retaining	1		HG-70853	Kit, Seal	1
32	HG-51130	Gear, Pinion, 13T	1				


LH TRANSMISSION

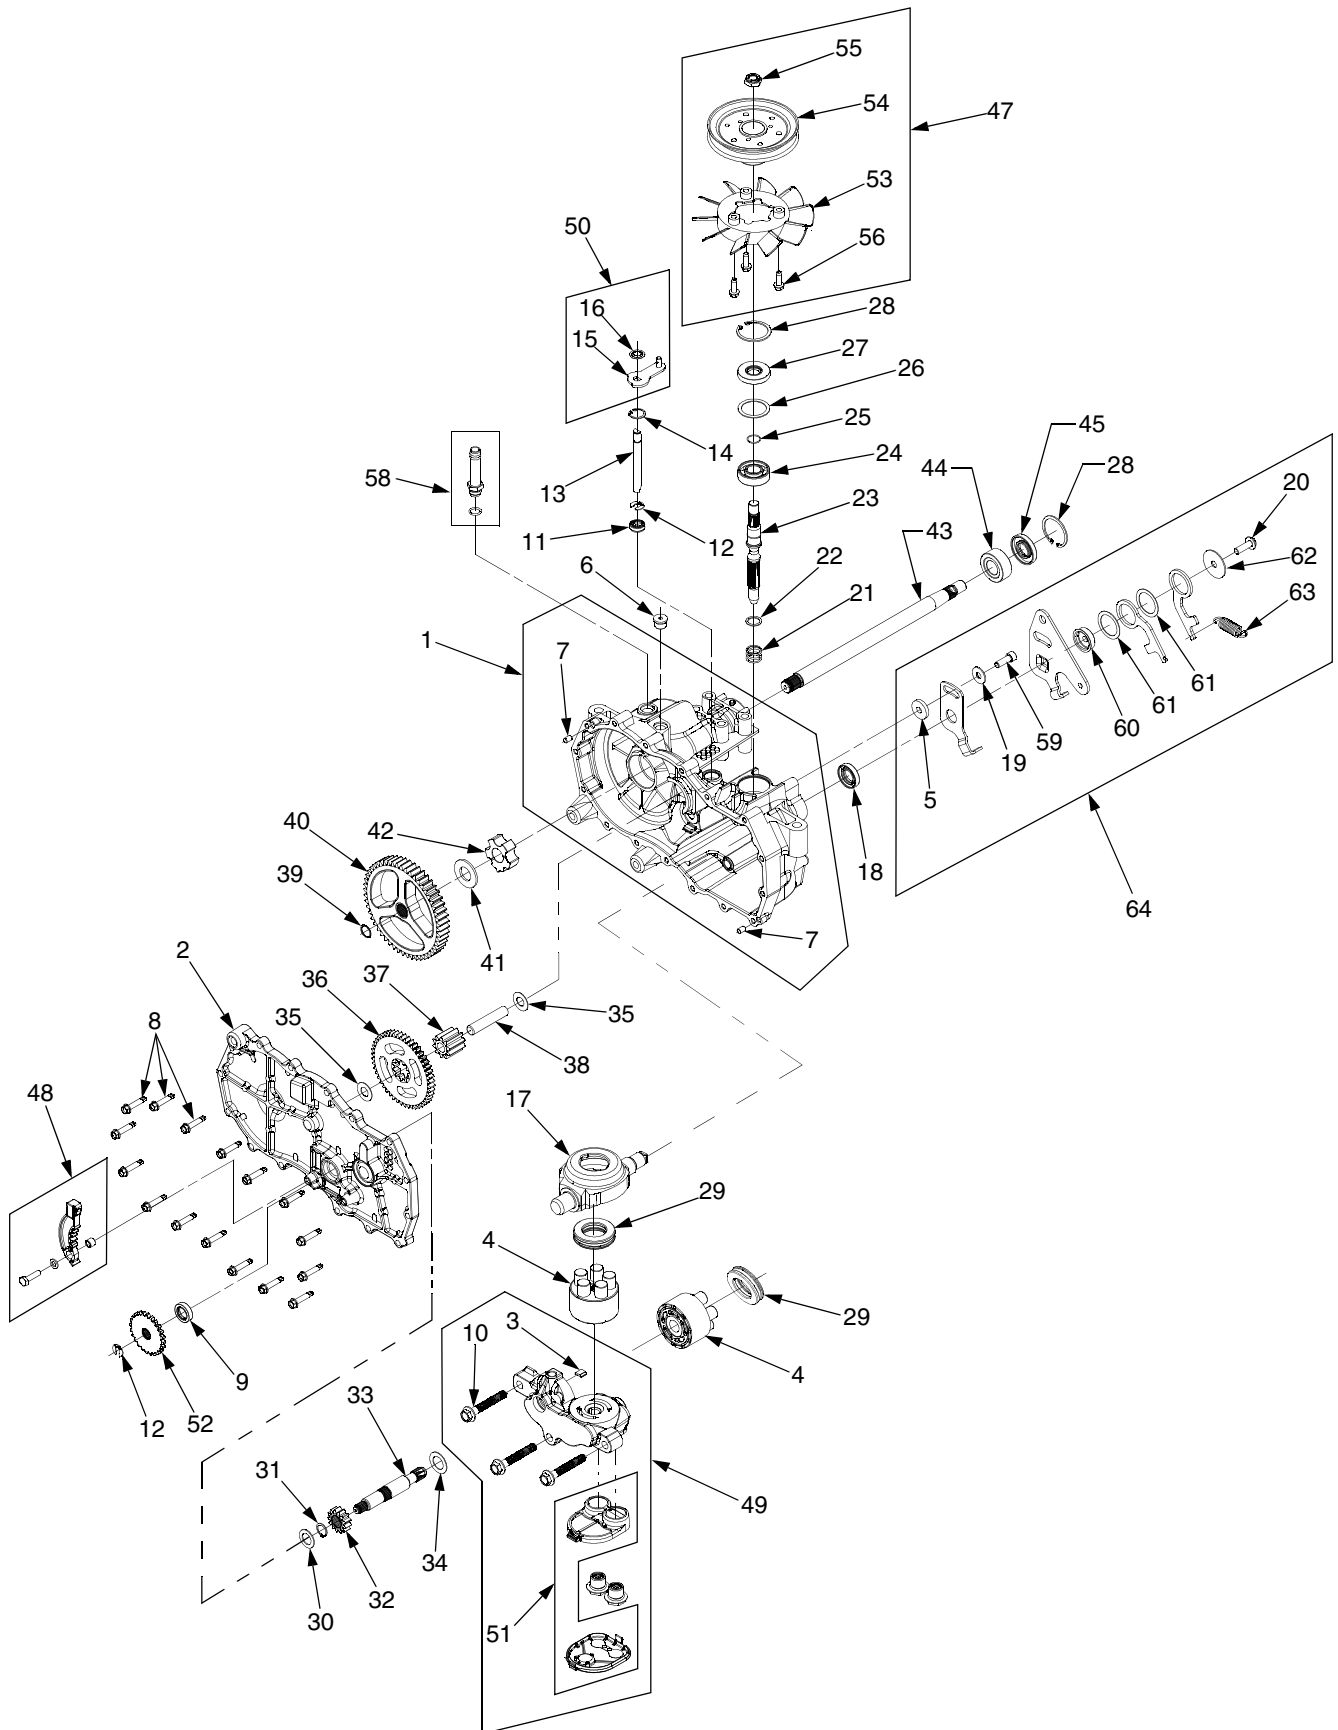

LH TRANSMISSION

REF. NO.	PART NUMBER	DESCRIPTION	QTY.	REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	HG-70862L	Housing Assembly, Main RH	1	33	HG-51632	Shaft, Motor	1
2	HG-70863L	Side Assembly, RH	1	34	HG-51069	Washer, .71 x 1.16 x .04	1
3	HG-51448	Plate, Bypass	1	35	HG-50132	Washer, HT, .5 x 1.0 x .032 ..	2
4	HG-70331	Block Assembly	2	36	HG-51129	Gear, 10T/48T	1
5	HG-51949	Spacer, .32 x 1.005	1	37	HG-51043	Gear, Jackshaft, 10T	1
6	HG-9005110-5600	Plug, SAE #6	1	38	HG-51083	Pin, Jackshaft	1
7	HG-9004800-2506	Pin, Stainless	2	39	HG-44871	Ring, Spiral Retaining	1
8	HG-51190	Screw, Hex Self Tapping, 1/4-20 x 1.25	16	40	HG-51633	Gear, Bull, 52T	1
9	HG-44761	Seal, Lip, .625 x 1.0 x .25	1	41	HG-44875	Washer, 3/4 x 1.5 x .13	1
10	HG-50016	Bolt, Hex Flange, 3/8-24 x 2.5	3	42	HG-51088	Bearing, Sleeve	1
11	HG-51626	Seal, Lip, .375 x .75 x .25	1	43	HG-51954	Axle	1
12	HG-51628	Ring, Retaining, .375 Ext.	2	44	HG-51089	Bushing, .752 x 1.571 x .625	1
13	HG-51625	Rod, Bypass	1	45	HG-51066	Seal, Lip, .75 x 1.577 x .25 ...	1
14	HG-51627	Ring, Retaining, .75 Int.	1	47	HG-70591	Kit, Fan-Pulley	1
15	HG-51910	Arm, Bypass	1	48	HG-70865	Kit, Brake Arm	1
16	HG-51630	Ring, Retaining, .375 Push ...	1	49	HG-70864L	Kit, Center Section-Filter RH	1
17	HG-51048	Swashplate, Trunnion	1	50	HG-71006	Kit, Bypass Arm	1
18	HG-51140	Seal, Lip, 18 x 32 x 7	1	51	HG-70911	Kit, Filter	1
19	HG-44130	Washer, Flat, 11/32 x 7/8 x 1/16	1	52	HG-51635	Disc, Brake Cog	1
20	HG-51812	Screw, 5/16-24 x 1.0	1	53	HG-51365	Fan, 6" 10 Blade	1
21	HG-2003014	Spring, Compression	1	54	HG-50302	Pulley Kit, 4.5	1
22	HG-2003017	Washer, .591 x .787 x .04	1	55	HG-51244	Nut, Hex Insert Lock, 1/2-20	1
23	HG-51062	Shaft, Input	1	56	HG-50752	Screw, Hex Wash. Hd. Tapp 1/4-20	3
24	HG-50315	Bearing, Ball, 17mm x 40 x 12	1	58	HG-52200	Fitting/O-ring Assembly	1
25	HG-2000022	Ring, Wire Retaining, .561	1	59	HG-51616	Screw, Patch, 5/16-24 x 1.0	1
26	HG-50951	Spacer	1	60	HG-51947	Bushing, Pilot, 1.125	1
27	HG-51161	Seal, Lip, 17 x 40 x 7	1	61	HG-51948	Washer, Plastic	2
28	HG-50329	Ring, Retaining	2	62	HG-51950	Washer, 1.5 x .34 x .062	1
29	HG-50551	Bearing, Thrust, 30 x 52 x 13	2	63	HG-51399	Spring, Extension	1
30	HG-44371	Washer, Flat, 5/8 x 1.0 x .05	1	64	HG-71094	Kit, Return Assembly RH	1
31	HG-44145	Ring, Retaining	1		HG-70853	Kit, Seal	1
32	HG-51130	Gear, Pinion, 13T	1				

42" MOWER DECK

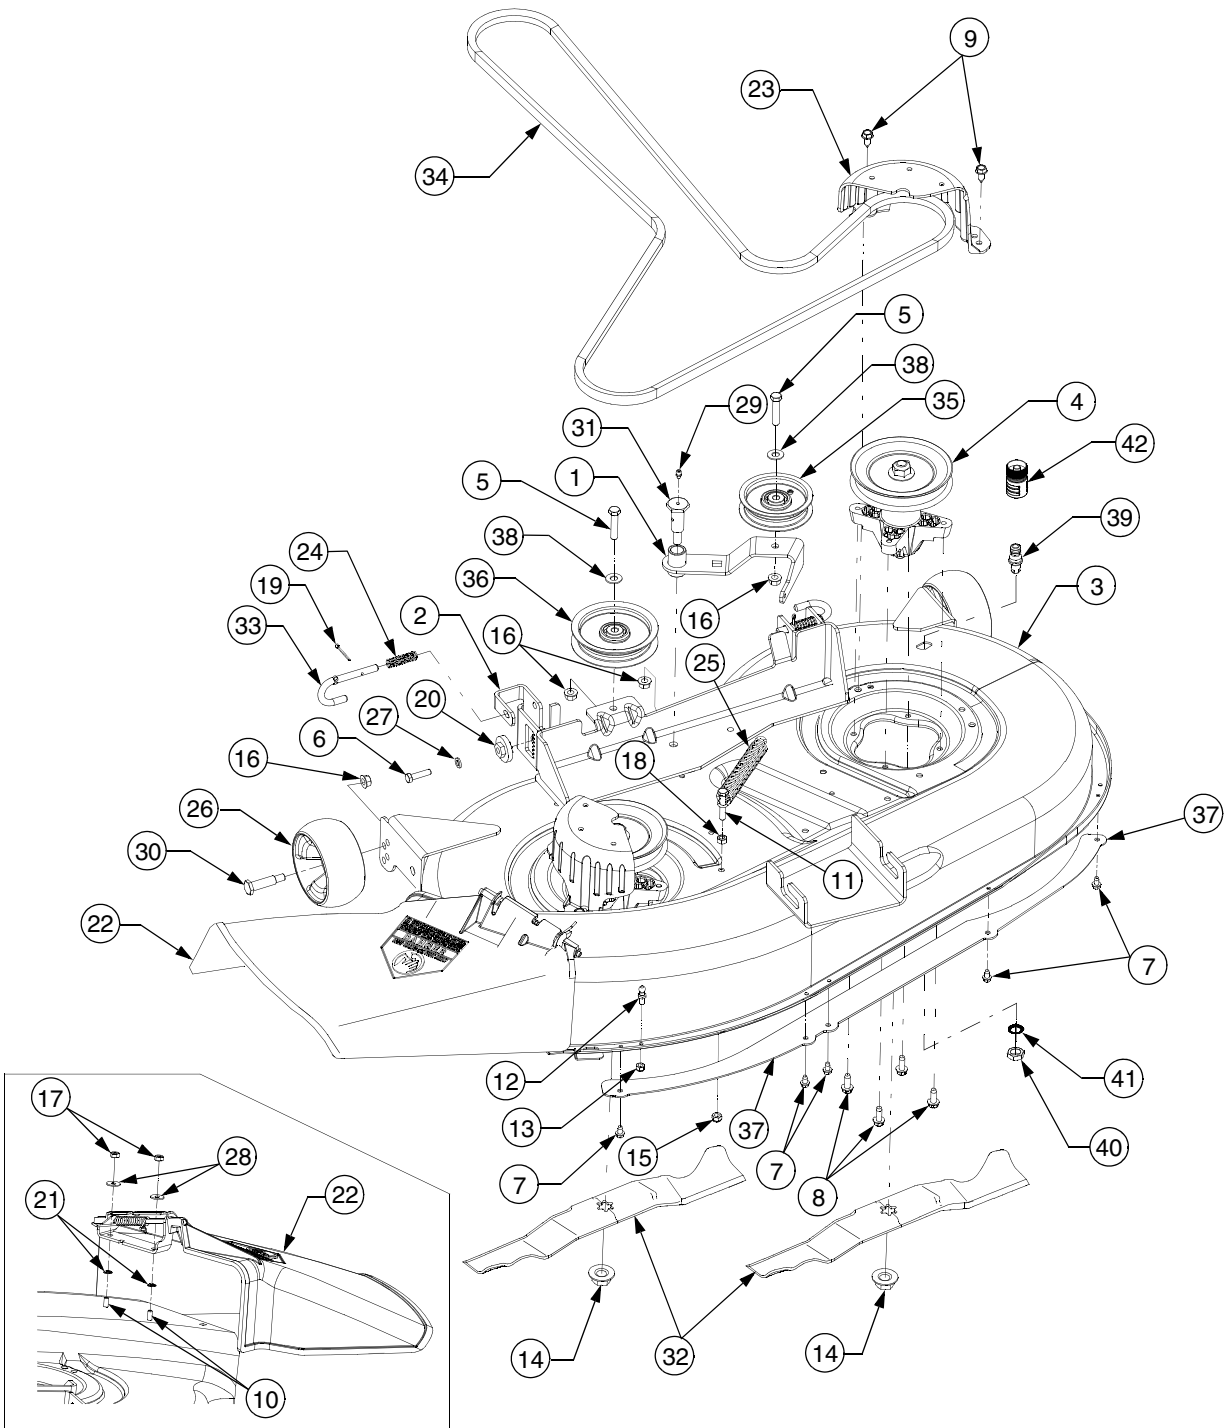


42" MOWER DECK

REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	603-04155	Arm, Idler	1
2	603-04156	Bracket, Deck Lift	1
3	603-04157	Housing, Deck	1
	777S30018	Graphic, Danger	1
	777S30503	Graphic, Danger	1
	777I22281	Graphic, Instruction	1
4	618-0427	Spindle Assembly	1
	756-1188	Pulley	1
5	710-0347	Screw, Hex Cap, 3/8-16 x 1.75 GR5	2
6	710-0528	Screw, Hex Cap, 5/16-18 x 1.25 GR5	1
7	710-0599	Screw, Hex Wash. Hd. Tapp	5
		1/4-20 x .5	
8	710-0650	Screw, Hex Wash. Hd. Tapp	8
		5/16-18 x .875	
9	710-0726	Screw, Hex Wash. Hd. Tapp	4
		5/16-12 x .75	
10	710-0751	Screw, Hex Cap, 1/4-20 x .62 GR5 ..	2
11	710-3180	Screw, Hex Cap, 5/16-18 x 1.75 GR5	1
12	711-04069	Pin, Grass Catcher, 1/4-20	1
13	712-0324	Nut, Hex Insert Lock, 1/4-20 GR8	1
14	712-0417A	Nut, Hex Flange, 5/8-18	2
15	712-0429	Nut, Hex Insert Lock, 5/16-18 GR5 ..	1
16	712-0431	Nut, Hex Flange, 3/8-16 GRF	5
17	712-3006	Nut, Hex, 1/4-20 GR5	2
18	712-3010	Nut, Hex, 5/16-18 GR5	1
19	714-0470	Pin, Cotter, 1/8 x 1.25	2
20	717-1553B	Gear, Deck Adjustment	1
21	726-0233	Nut, Push, .25 x .5	2
22	731-1032B	Chute Assembly, Discharge	1
	777S30284	Graphic, Danger	1
23	731-2231B	Cover, Belt	2
24	732-0306	Spring, Compression	2
25	732-0459	Spring, Extension, .94 Dia. x 6.74	1
26	734-04039	Wheel, Deck Ball, 5.0	2
27	736-0119	Washer, Lock, 5/16	1
28	736-0270	Washer, Bell, .265 x .75 x .062	2
29	737-3000	Fitting, Lube, 3/16 Drive	1
30	738-0373	Screw, Shoulder, .498 x 1.53:3/8-16	2
31	738-3005A	Screw, Shoulder, .68 x 1.59	1
32	942-04087	Blade, Hi-Lift, 21.23	2
33	747-1116	Rod, Deck Hanger	2
34	754-04045	Belt, V, Type A Sec x 109	1
35	756-0627B	Pulley, Idler, 3.5 Dia.	1
36	756-1229	Pulley, Idler, 4.06 Dia.	1
37	783-1146A	Skirt, Deck	1
38	736-3072	Washer, Flat, .38 x .93 x .11 HT	2
39	737-04003B	Nozzle, Deck Water	1
40	712-0641	Nut, Hex, M16-1.5	1
41	736-0760	Washer, Lock,	1
42	721-04041	Adapter, Water Nozzle	1

ENGINE CONNECTIONS

REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	603-04176	Tube, Exhaust	1
2	651-04058A	Tank, Fuel, 3.0 Gal.	1
	751-3124B	Cap, Fuel	1
3	703-05441	Bracket, Muffler Mounting	1
4	703-05497	Shield, Muffler Tube Heat	1
5	710-0227	Screw, Hex Wash. Hd. Tapp	3
		#8-18 x .5	
6	710-04248	Screw, Hex Cap, 7/16-20 x 4.0 GR5	1
7	710-0599	Screw, Hex Wash. Hd. Tapp	5
		1/4-20 x .5	
8	710-0726	Screw, Hex Wash. Hd. Tapp	2
		5/16-12 x .75	
9	710-04261	Screw, Hex Wash. Hd. Tapp	2
		#12-16 x .5	
10	710-1314A	Screw, Socket Hd. 5/16-18 x .75	2
11	710-1315	Screw, Hex Wash. Hd. Tapp	4
		3/8-16 x 1.25	
12	710-3008	Screw, Hex Cap, 5/16-18 x .75 GR5	3
13	710-3217	Screw, Truss Hd. Mach. #8-32 x .375	1
14	712-0142	Nut, Hex, #8-32	1
15	712-0429	Nut, Hex Insert Lock, 5/16-18 GR5 ..	3
16	717-04183	Clutch Assembly, Electric PTO	1
17	721-0208	Gasket, Exhaust (B&S- 272293)	1
18	731-04914	Knob, Throttle Control	1
19	736-0171	Washer, Lock, 7/16	1
20	736-04131	Washer, Flat, .438 x 1.75 x .25	1
21	737-0125	Fitting, Elbow	1
22	746-04161	Cable, Throttle, 39.0 Lg	1
23	747-04228	Wire, Tank Mounting	1
24	751-0535-12	Hose, Fuel Line	6.5in
	726-0205	Clamp, Hose	2
25	751-0564A	Deflector, Muffler	1
26	751-0617A	Muffler	1
27	751-3140	Valve, Oil Drain	1
28	751-3141	Hose, Oil Drain Extension	1
29	751-3142	Cap, Oil Drain Valve	1
30	756-04102A	Pulley, Drive, 4.0 Dia.	1
31	714-0118	Key, Square, 1/4 x 1.5	1
32	712-0271	Nut, Hex Sems, 1/4-20	1
33	726-3055	Clip, Cable Retainer	1


CRANKCASE, CRANKSHAFT AND PISTON

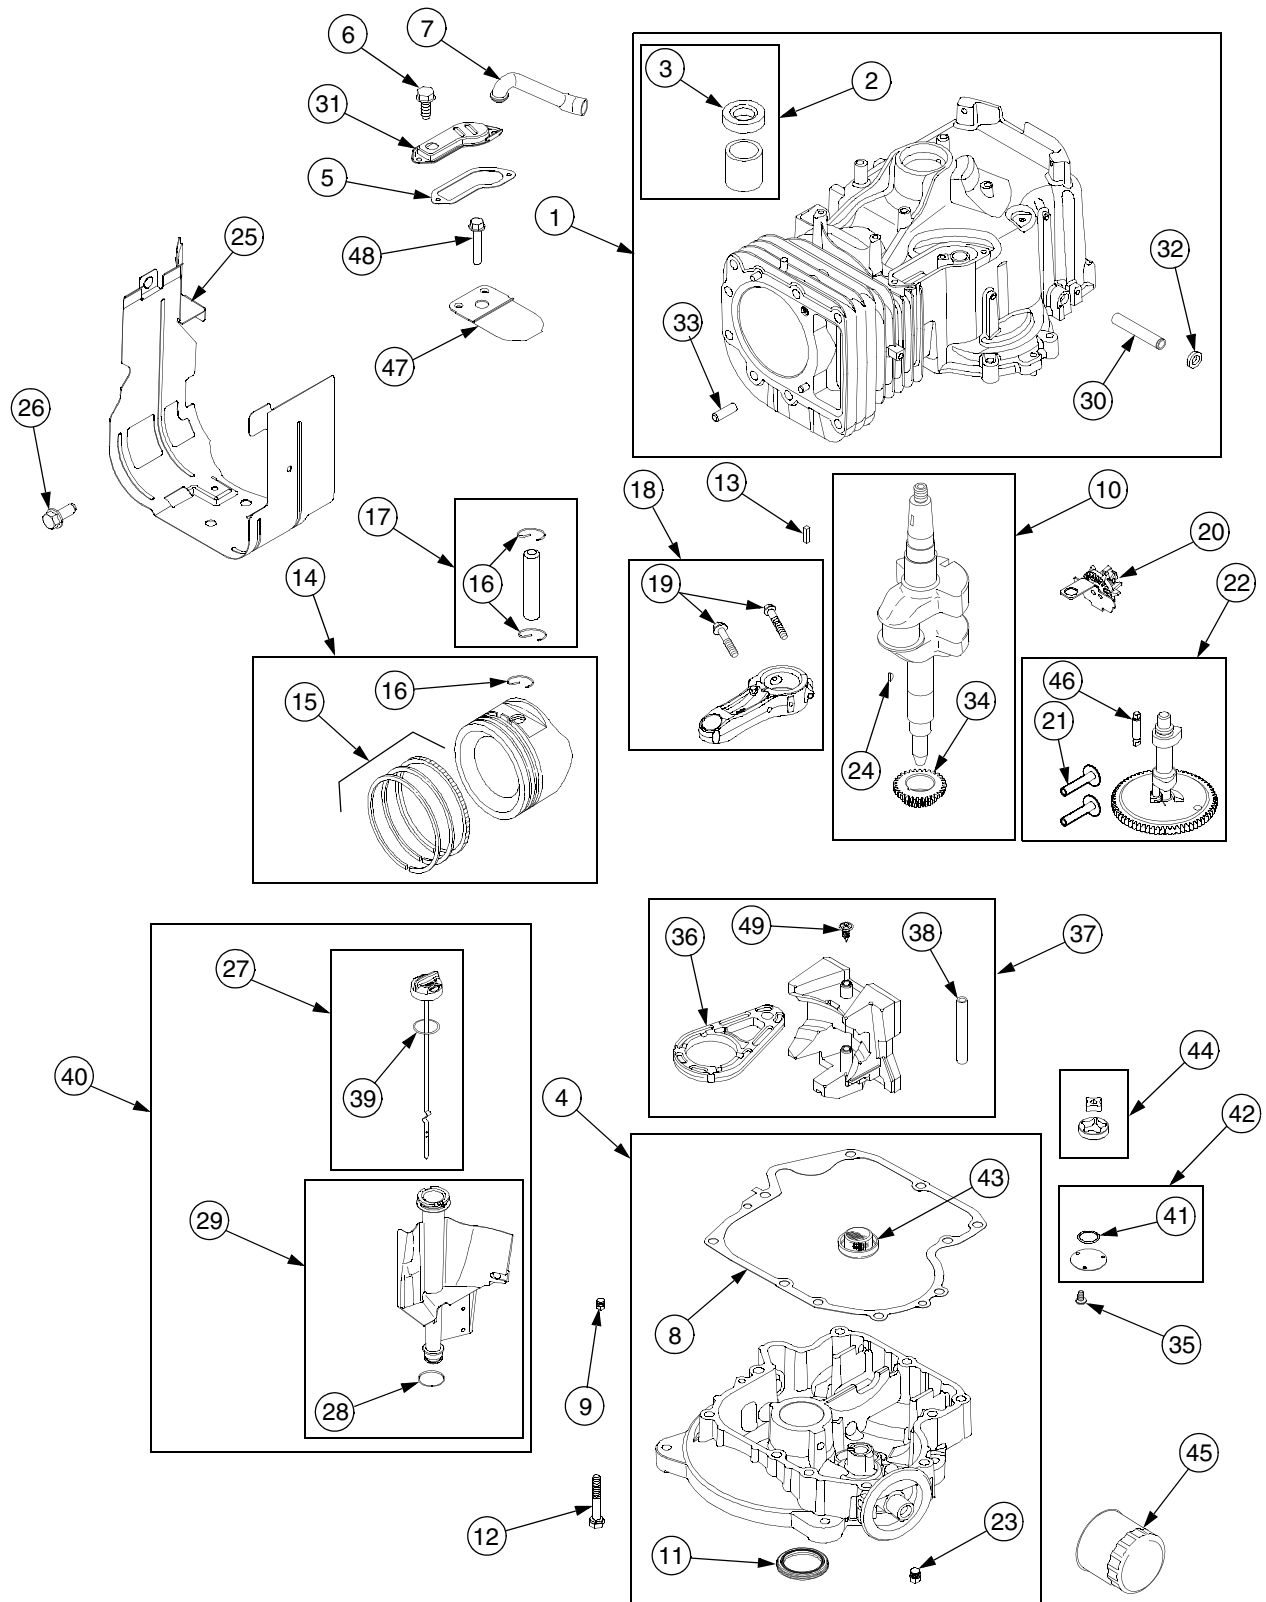

CRANKCASE, CRANKSHAFT AND PISTON

REF. NO.	PART NUMBER	DESCRIPTION	QTY.	REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	BS-697174	Cylinder Assembly	1	26	BS-691003	Screw	2
2	BS-399265	Kit, Bushing/Seal (Magneto Side) .	1	27	BS-697086	Dipstick	1
3	BS-391086	Seal, Oil	1	28	BS-691032	Seal, Dipstick Tube	1
4	BS-697188	Sump, Engine	1	29	BS-697085	Tube, Dipstick	1
5	BS-697109	Gasket, Breather	1	30	BS-697144	Bushing, Governor Lever	1
6	BS-697157	Screw (Breather Assembly)	2	31	BS-697112	Cover, Breather Passage	1
7	BS-697113	Tube, Breather	1	32	BS-692407	Seal, Governor Shaft	1
8	BS-697110	Gasket, Crankcase	1	33	BS-690959	Pin, Locating	2
9	BS-691680	Plug, Oil Drain	1	34	BS-697128	Gear, Timing	1
10	BS-697127	Crankshaft	1	35	BS-691033	Screw (Oil Pump Cover)	3
11	BS-690947	Seal, Oil	1	36	BS-697607	Link, Counterweight	1
12	BS-692125	Screw	10	37	BS-697134	Counterweight	1
13	BS-222698	Key, Flywheel	1	38	BS-697392	Pin, Counterweight	1
14	BS-699025	Piston Assembly (Standard)	1	39	BS-691031	Seal, O-Ring (Dipstick Tube)	1
	BS-699041	Piston Assembly (.020 Oversize) ..	1	40	BS-697087	Dipstick/Tube Assembly	1
15	BS-699026	Ring Set, Piston (Standard)	1	41	BS-690589	O-Ring Seal (Oil Pump Cover)	1
	BS-687171	Ring Set, Piston (.020 Oversize) ...	1	42	BS-499613	Cover, Oil Pump	1
16	BS-698469	Lock Ring, Piston Pin	2	43	BS-690770	Screen, Oil Pump	1
17	BS-697099	Pin, Piston (Standard)	1	44	BS-499054	Pump, Oil	1
18	BS-697126	Rod, Connecting (Standard)	1	45	BS-492932	Filter, Oil	1
	BS-697263	Rod, Connecting (.020 Undersize)	1	46	BS-693784	Shaft, Pump	1
19	BS-692852	Screw (Connecting Rod)	2	47	BS-697124	Reed, Breather	1
20	BS-691968	Slinger, Governor/Oil	1	48	BS-697104	Screw	2
21	BS-690564	Tappet, Valve	2	49	BS-697156	Plug, AVS Counterweight	1
22	BS-698492	Camshaft	1		BS-697762	Shortblock	1
23	BS-690283	Plug, Oil	1		BS-31G777-0036	Engine, Replacement	1
24	BS-691639	Key, Timing	1				
25	BS-697107	Shield, Cylinder	1				


CARBURETOR, AIR CLEANER AND MANIFOLD

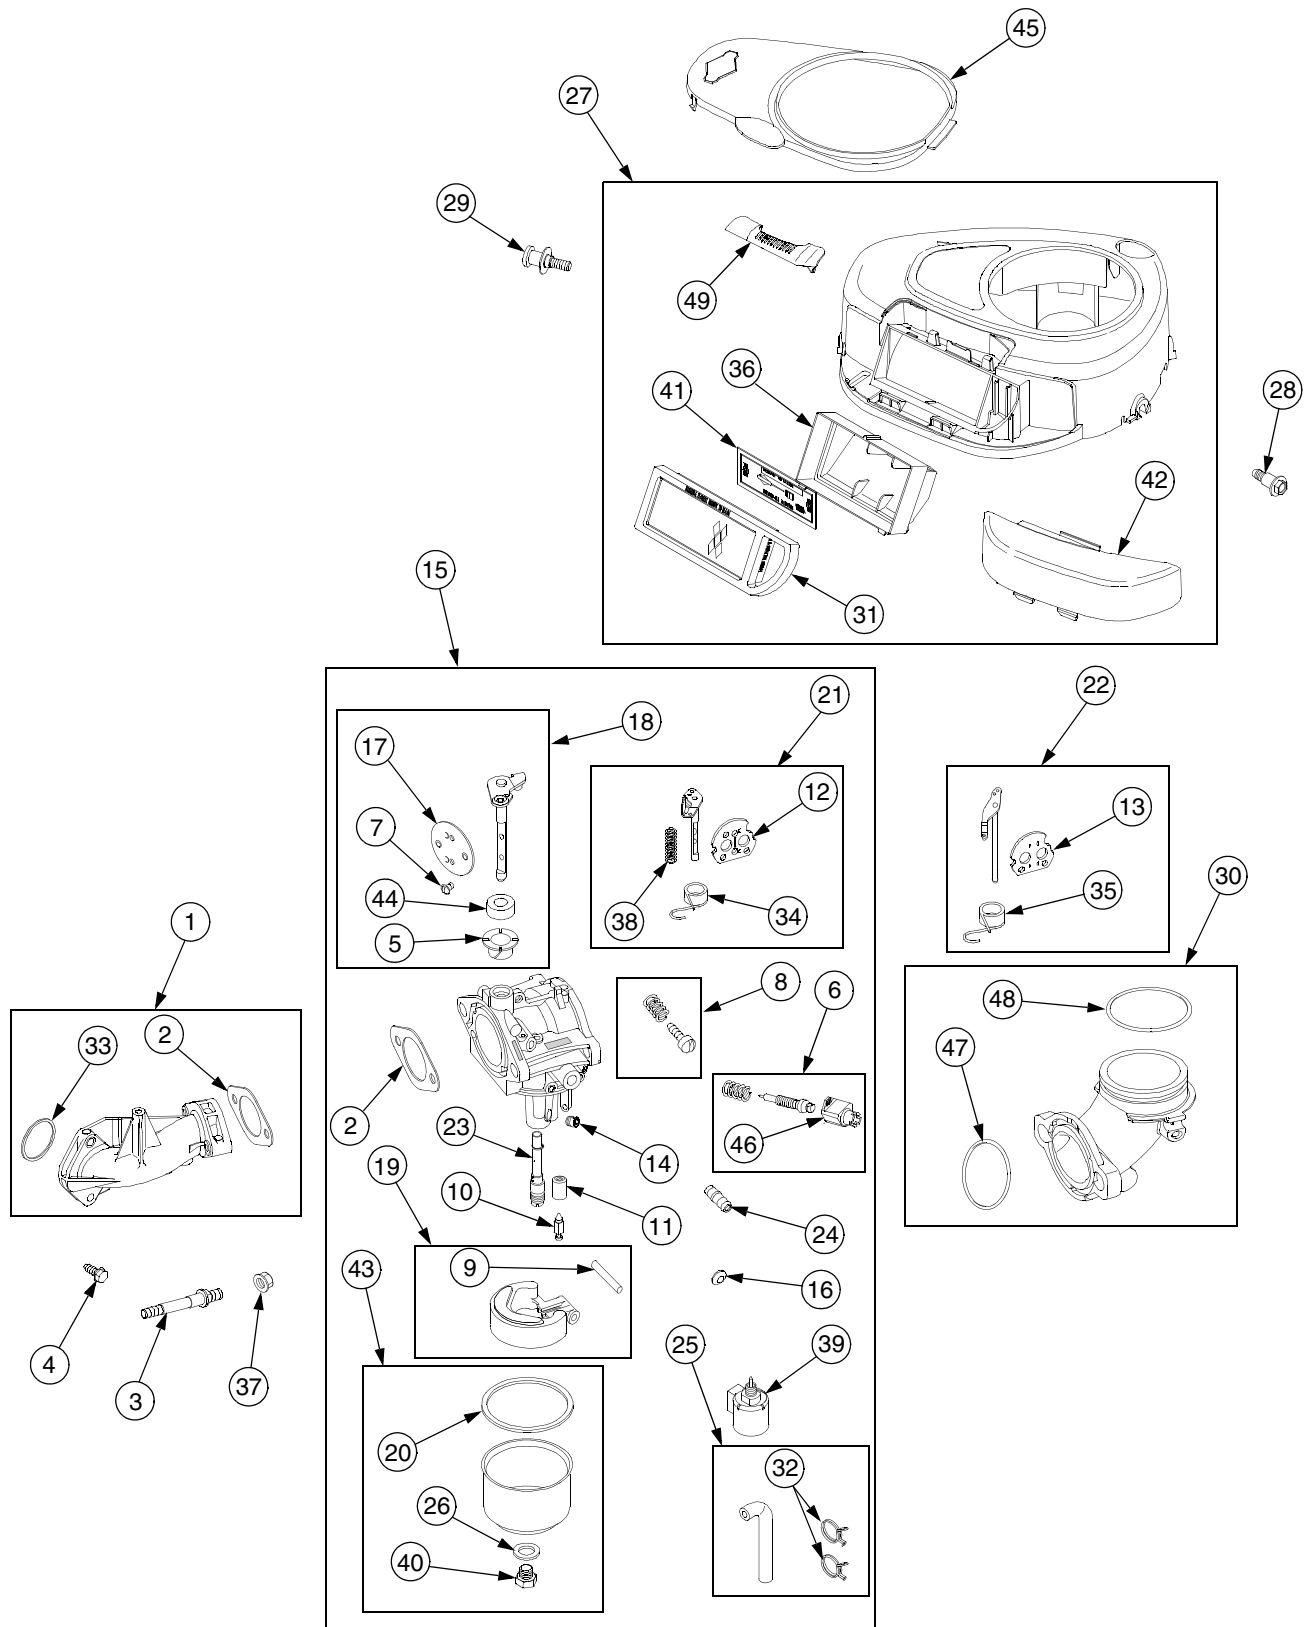

CARBURETOR, AIR CLEANER AND MANIFOLD


REF. NO.	PART NUMBER	DESCRIPTION	QTY.	REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	BS-690193	Manifold, Intake	1	25	BS-697098	Line, Fuel	1
2	BS-692137	Gasket, Intake	1	26	BS-692255	Sealing Washer	1
3	BS-690227	Stud (Carburetor)	1	27	BS-698599	Housing, Blower	1
4	BS-691148	Screw (Intake Manifold)	4	28	BS-697102	Screw (Blower Housing)	3
5	BS-690602	Bushing, Throttle Shaft	1	29	BS-697103	Screw (Blower Housing)	1
6	BS-498030	Kit, Idle Mixture	1	30	BS-697122	Elbow, Intake	1
7	BS-691636	Screw (Throttle Valve)	2	31	BS-698083	Filter, Air Cleaner Cartridge	1
8	BS-495800	Kit, Idle Speed	1	32	BS-95162	Clamp, Hose	2
9	BS-690525	Pin, Flpat Hinge	1	33	BS-692138	O-Ring Seal	1
10	BS-231855	Valve, Float Needle	1	34	BS-690801	Spring/Seal Assembly	1
11	BS-690577	Seal, Inlet (LMT697204)	1	35	BS-690802	Spring/Seal Assembly	1
	BS-691780	Seal, Inlet (LMT697202)	1	36	BS-698401	Retainer, Air Filter	1
12	BS-690464	Valve, Choke	1	37	BS-690958	Nut (Carburetor)	1
13	BS-692344	Valve, Choke	1	38	BS-690572	Spring, Detent	1
14	BS-694352	Jet, Main (Standard)	1	39	BS-694393	Solenoid, Fuel	1
	BS-697228	Jet, Main (High Altitude)	1	40	BS-691657	Screw, Float Bowl	1
15	BS-698445	Carburetor	1	41	BS-697015	Filter, Pre Cleaner	1
16	BS-695005	Plug, Welch	1	42	BS-698403	Cover, Air Cleaner	1
17	BS-691750	Valve, Throttle	1	43	BS-495933	Bowl, Float	1
18	BS-494379	Kit, Throttle Shaft	1	44	BS-691326	Seal, Throttle Shaft	1
19	BS-494381	Float, Carburetor	1	45	BS-699852	Plate, Trim	1
20	BS-281165	Gasket, Float Bowl	1	46	BS-691333	Cap, Limiter	1
21	BS-495097	Kit, Choke Shaft	1	47	BS-691917	O-Ring Seal	1
22	BS-495931	Kit, Choke Shaft	1	48	BS-697123	O-Ring Seal	1
23	BS-697140	Nozzle, Carburetor	1	49	BS-697419	Latch, Blower Housing	1
24	BS-698174	Connector, Hose	1				

CYLINDER HEAD

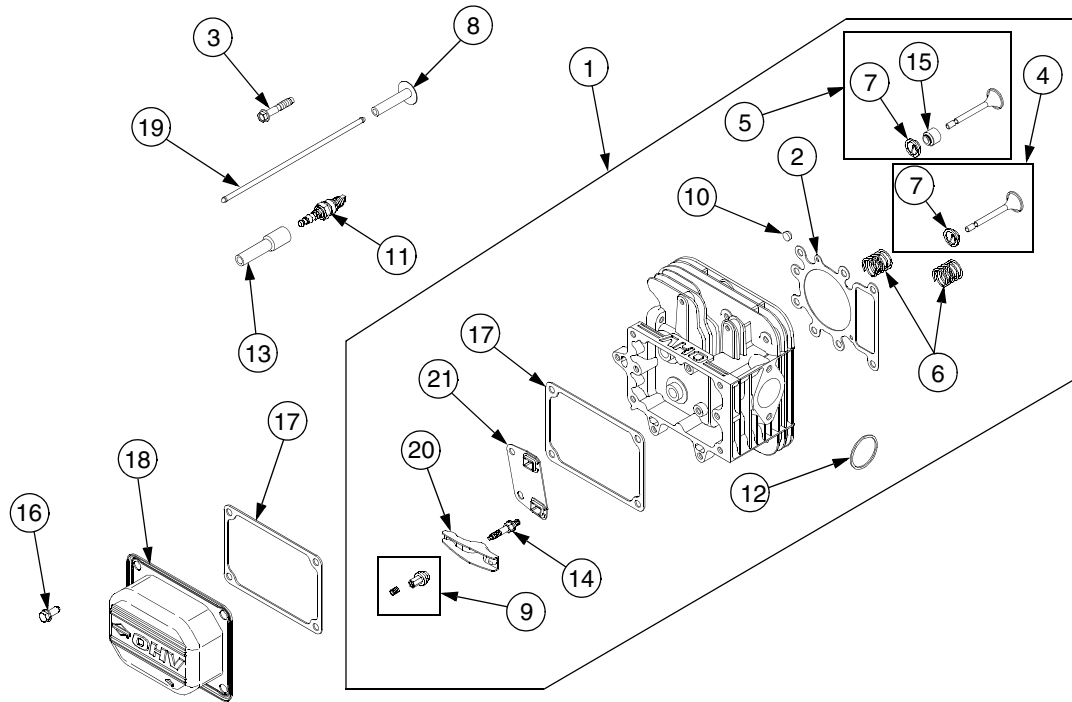


REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	BS-698147	Head, Cylinder	1
2	BS-699168	Gasket, Cylinder Head	1
3	BS-690360	Screw, Cylinder Head	4
4	BS-695760	Valve, Exhaust	1
5	BS-695761	Valve, Intake	1
6	BS-691279	Spring, Valve	2
7	BS-690964	Retainer, Valve	2
8	BS-690564	Tappet, Valve	2
9	BS-691986	Adjuster, Rocker Arm	2
10	BS-691843	Cap, Valve	1
11	759-3336	Spark Plug (RC12YC)	1
12	BS-692138	O-Ring Seal (Intake Manifold)	1
13	BS-691909	Boot, Spark Plug	1
14	BS-691095	Stud, Rocker Arm	2
15	BS-690968	Seal, Valve	1
16	BS-691108	Screw (Rocker Cover)	4
17	BS-272475	Gasket, Rocker Cover	1
18	BS-692492	Cover, Rocker	1
19	BS-692003	Rod, Push (Intake)	1
	BS-692011	Rod, Push (Exhaust)	1
20	BS-691751	Arm, Rocker	2
21	BS-690822	Guide, Push Rod	1

FLYWHEEL AND ELECTRICAL

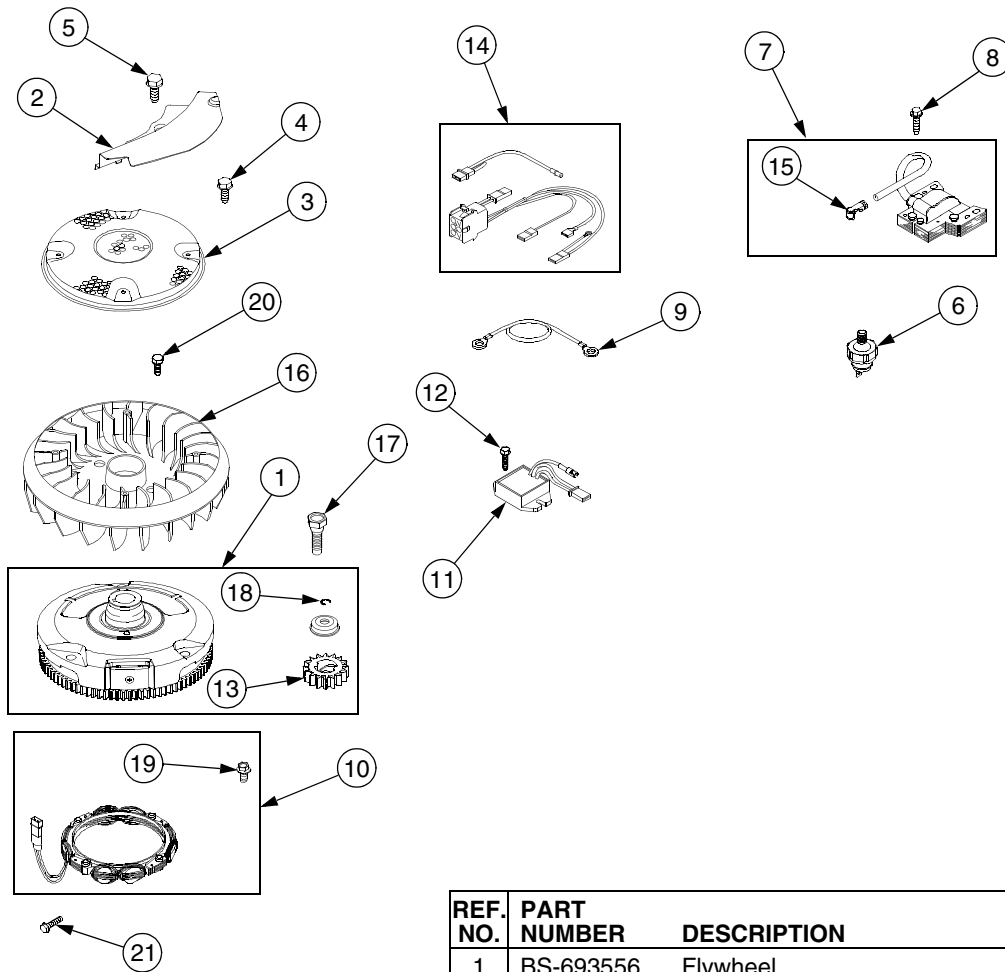


REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	BS-693556	Flywheel	1
2	BS-697352	Guard, Flywheel	1
3	BS-697133	Screen, Rotating	1
4	BS-697897	Screw (Rotating Screen)	4
5	BS-691003	Screw (Flywheel Guard)	2
6	BS-491657	Switch, Oil Pressure	1
7	BS-492341	Armature, Magneto	1
8	BS-691061	Screw (Armature)	2
9	BS-697089	Wire, Stop	1
10	BS-696457	Alternator	1
11	BS-691188	Regulator	1
12	BS-697088	Screw (Regulator)	2
13	BS-693713	Gear, Pinion	1
14	BS-698329	Harness, Wiring	1
15	BS-692424	Terminal, Spark Plug	1
16	BS-699043	Fan, Flywheel	1
17	BS-698139	Screw (Flywheel)	1
18	BS-691265	Ring, Retaining	1
19	BS-698516	Kit, Screw/Washer	1
20	BS-690372	Screw (Flywheel Fan)	1
21	BS-691183	Screw (Alternator)	1

FUEL SYSTEM AND CONTROLS

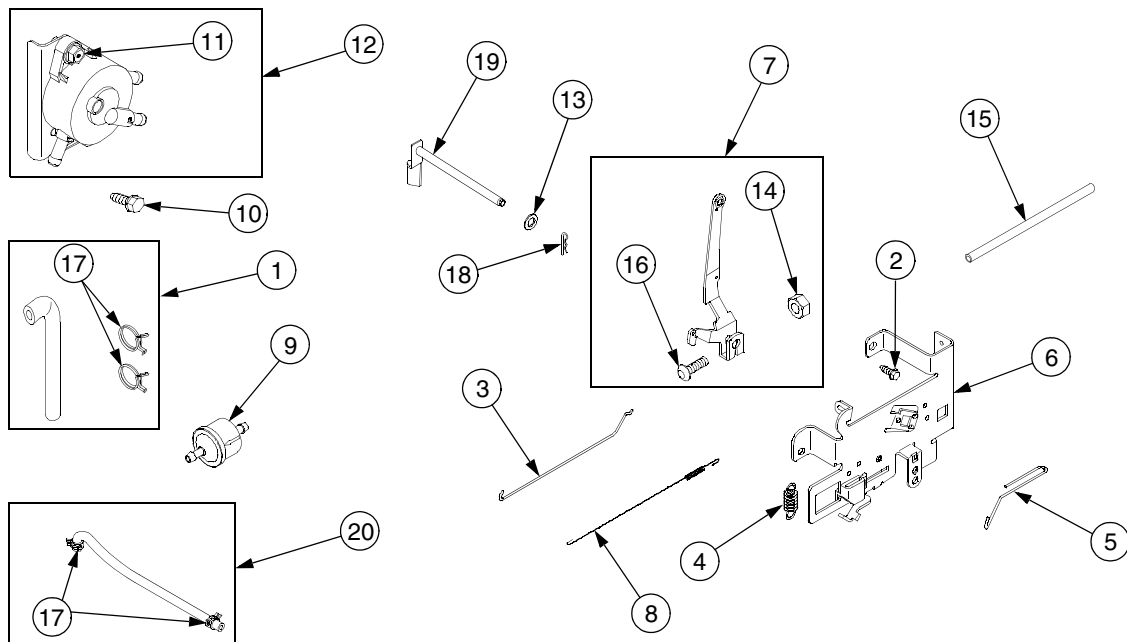


REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	BS-698417	Line, Fuel	1
2	BS-691693	Screw (Control Bracket)	2
3	BS-691841	Link, Mechanical Governor	1
4	BS-692208	Spring, Governor	1
5	BS-691840	Link, Choke	1
6	BS-694042	Bracket, Control	1
7	BS-691374	Control Lever, Governor	1
8	BS-691842	Spring, Governor Link	1
9	BS-691035	Filter, Fuel	1
10	BS-694476	Screw (Fuel Pump)	1
11	BS-690297	Screw (Fuel Pump)	1
12	BS-697090	Pump, Fuel	1
13	BS-691691	Washer	1
14	BS-691251	Nut (Governor Control Lever)	1
15	BS-690581	Shield, Cable	1
16	BS-691119	Bolt (Governor Control Lever)	1
17	BS-95162	Clamp, Hose	4
18	BS-691620	Pin, Cotter	1
19	BS-692012	Crank, Governor	1
20	BS-697091	Hose, Vacuum	1

STARTER MOTOR

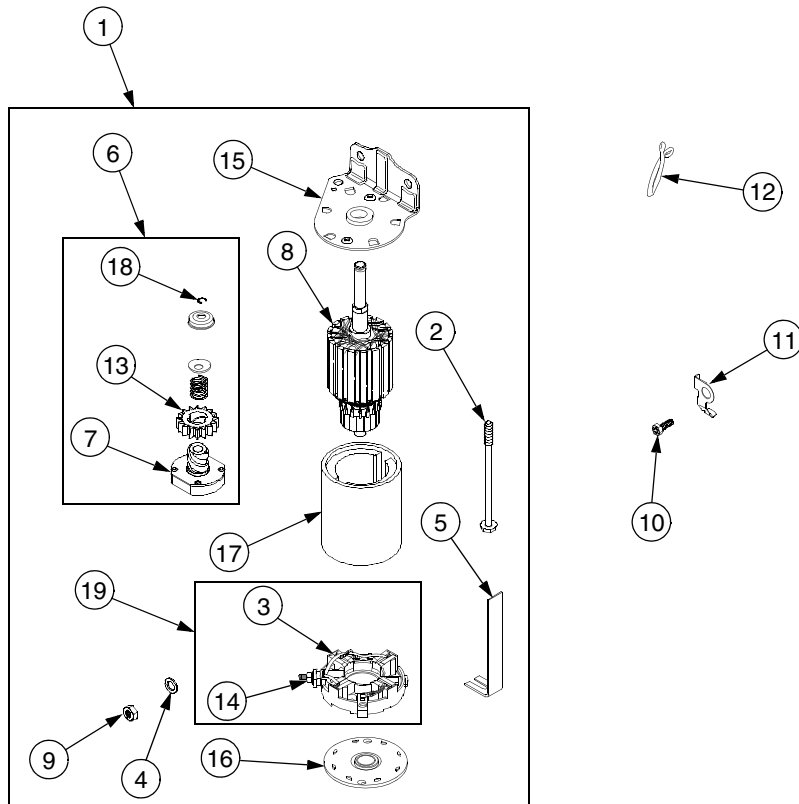

REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	BS-693551	Motor, Starter	1
2	BS-690323	Screw (Starter Motor)	2
3	BS-497608	Brush Set	1
4	BS-691261	Washer (Brush Retainer)	1
5	BS-691532	Strap, Starter	1
6	BS-693699	Drive, Starter	1
7	BS-692024	Clutch, Drive	1
8	BS-692034	Armature, Starter	1
9	BS-691029	Nut (Starter Cable)	1
10	BS-690372	Screw (Drive Cap)	1
11	BS-691224	Clip, Wire	1
12	BS-694123	Clip, Wire	1
13	BS-693713	Gear, Pinion	1
14	BS-693167	Nut (Brush Retainer)	1
15	BS-691283	Cap, Drive	1
16	BS-691286	Cap, End	1
17	BS-693757	Housing, Starter	1
18	BS-691265	Ring, Retaining	1
19	BS-691293	Retainer, Brush	1

SERVICE KITS

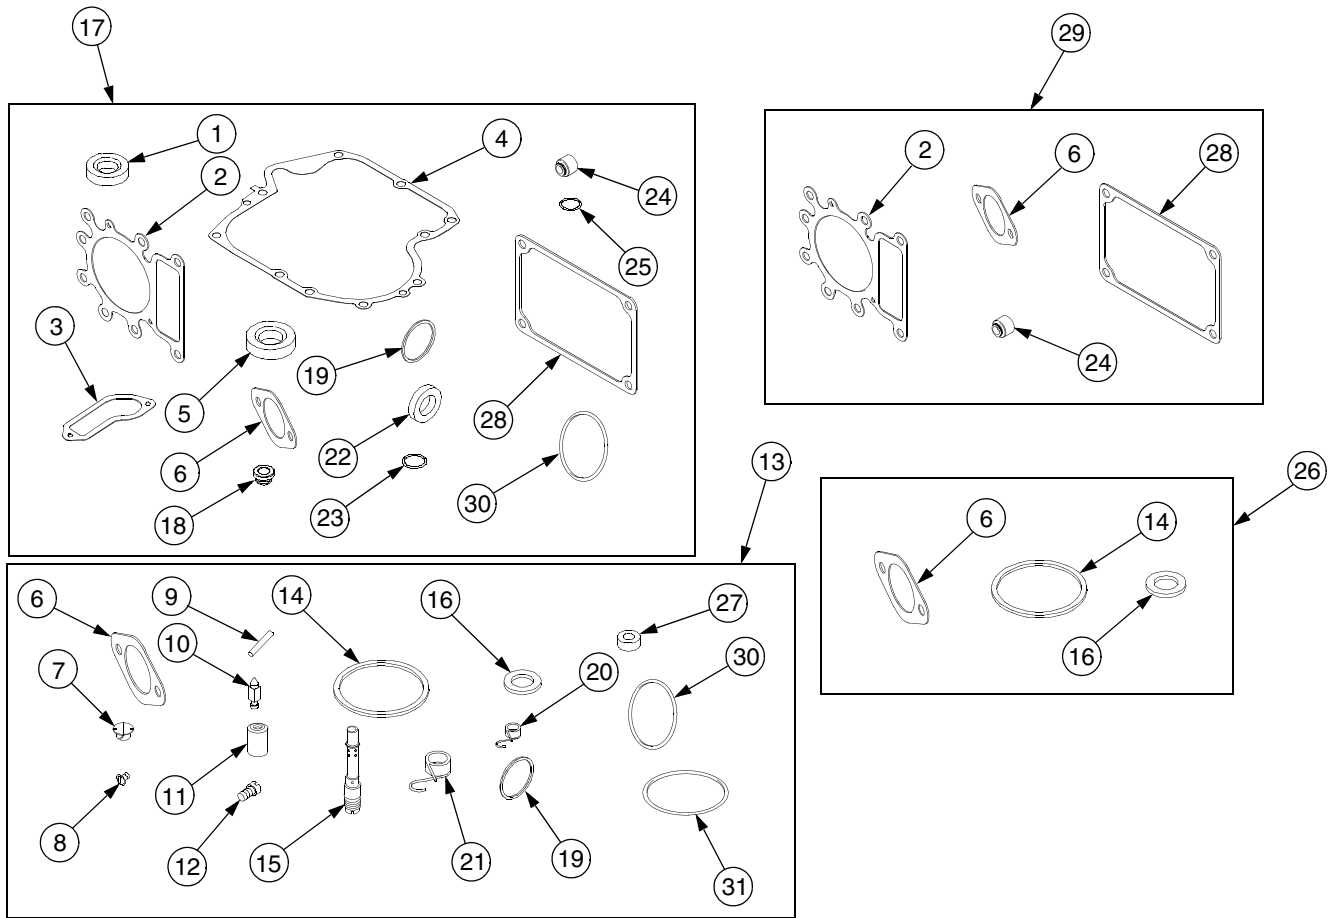

REF. NO.	PART NUMBER	DESCRIPTION	QTY.	REF. NO.	PART NUMBER	DESCRIPTION	QTY.
1	BS-391086	Seal, Oil	1	16	BS-692255	Sealing Washer	1
2	BS-699168	Gasket, Cylinder Head	1	17	BS-697191	Gasket Set, Engine	1
3	BS-697109	Gasket, Breather	1	18	BS-691032	Seal, Dipstick Tube	1
4	BS-697110	Gasket, Crankcase	1	19	BS-692138	O-Ring Seal	1
5	BS-690947	Seal, Oil	1	20	BS-690801	Spring/Seal Assembly	1
6	BS-692137	Gasket, Intake	1	21	BS-690802	Spring/Seal Assembly	1
7	BS-690602	Bushing, Throttle Shaft	1	22	BS-692407	Seal, Governor Shaft	1
8	BS-691636	Screw, Throttle Valve	2	23	BS-691031	Seal, O-Ring	1
9	BS-690525	Pin, Float Hinge	1	24	BS-690968	Seal, Valve	1
10	BS-231855	Valve, Float Needle	1	25	BS-690589	O-Ring Seal	1
11	BS-690577	Seal, Inlet (LMT 697204)	1	26	BS-690192	Set, Carburetor Gasket	1
	BS-691780	Seal, Inlet (LMT 697202)	1	27	BS-691326	Seal, Throttle Shaft	1
12	BS-694352	Jet, Main	1	28	BS-272475	Gasket, Rocker Cover	1
13	BS-697241	Kit, Carburetor Overhaul	1	29	BS-690190	Gasket Set, Valve	1
14	BS-281165	Gasket, Float Bowl	1	30	BS-691917	O-Ring Seal	1
15	BS-697140	Nozzle, Carburetor	1	31	BS-697123	O-Ring Seal	1