




PARTS MANUAL

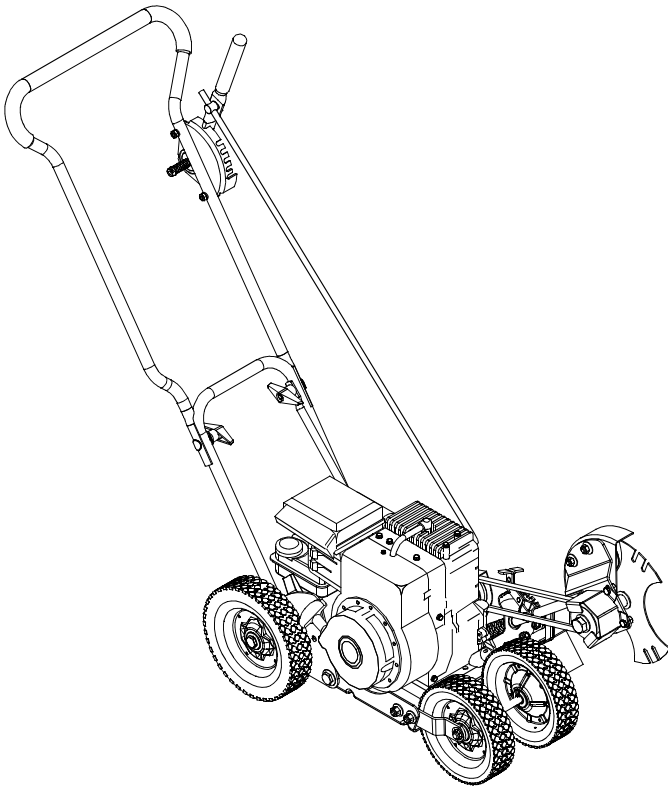

Edger
Model 25A-592A063

IMPORTANT: READ SAFETY RULES AND INSTRUCTIONS CAREFULLY


Warning: This unit is equipped with an internal combustion engine and should not be used on or near any unimproved forest-covered, brush-covered or grass-covered land unless the engine's exhaust system is equipped with a spark arrester meeting applicable local or state laws (if any). If a spark arrester is used, it should be maintained in effective working order by the operator. In the State of California the above is required by law (Section 4442 of the California Public Resources Code). Other states may have similar laws. Federal laws apply on federal lands. A spark arrester for the muffler is available through your nearest engine authorized service dealer or contact the service department, P.O. Box 361131 Cleveland, Ohio 44136-0019.

TROY-BILT LLC P.O. BOX 361131 CLEVELAND, OHIO 44136-0019

PRINTED IN U.S.A.

FORM NO. 769-00044
(12/01)


Model 592

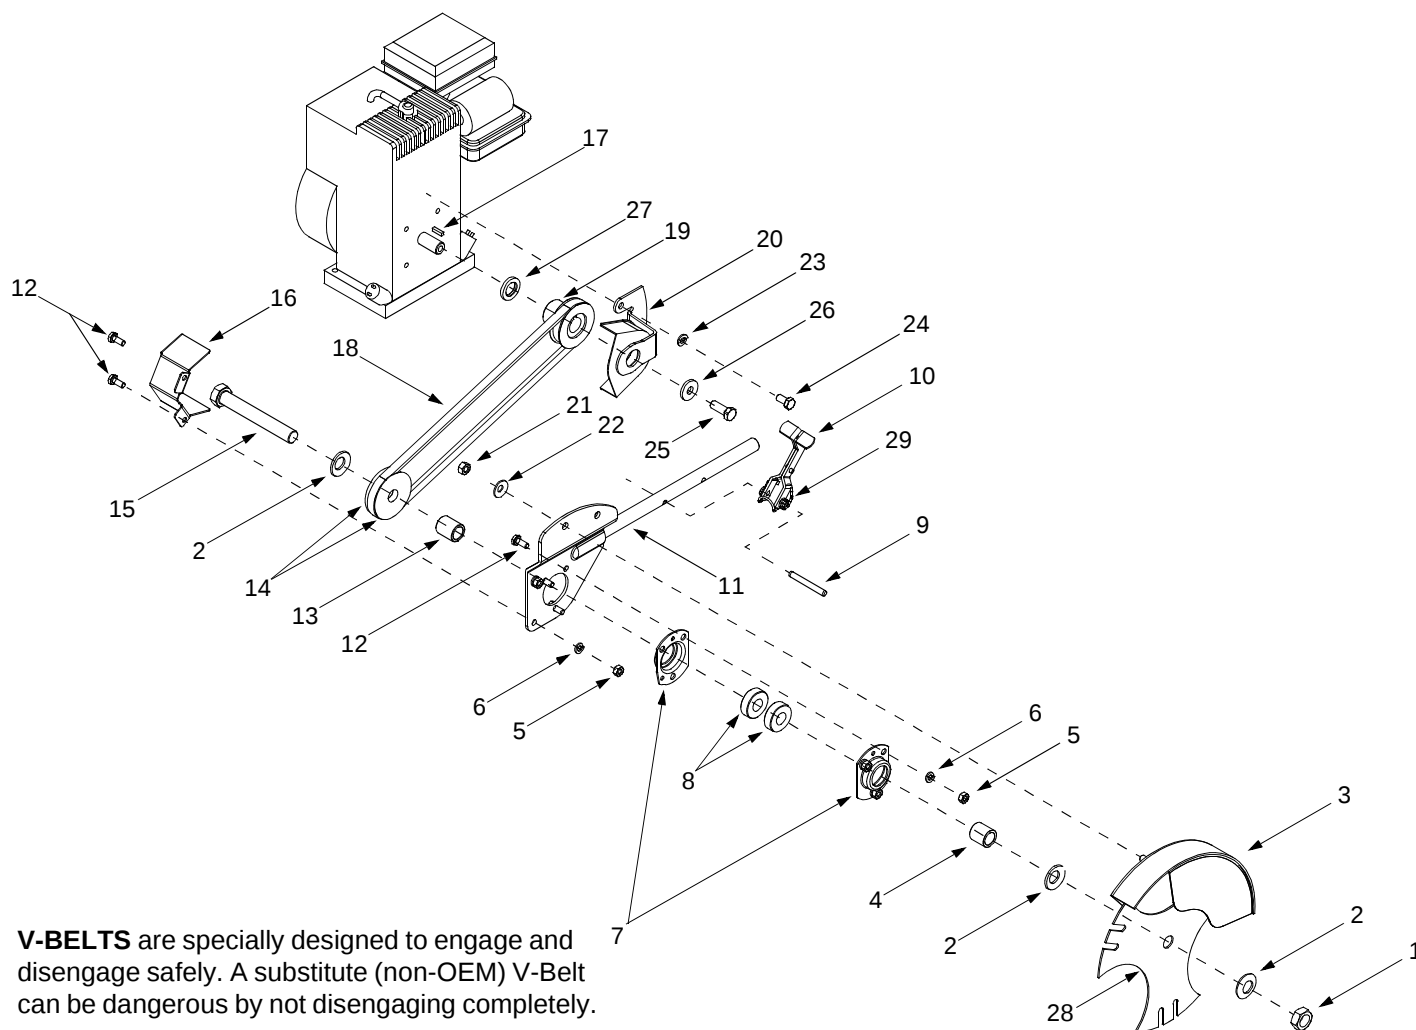

V-BELTS are specially designed to engage and disengage safely. A substitute (non-OEM) V-Belt can be dangerous by not disengaging completely.

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1.	712-0413	Hex Jam Nut, 5/8-18	16.	781-0086	Spindle Belt Guard
2.	736-0317	Bell Washer, .64 x 1.25 x .18	17.	714-0122	Square Key, 3/16 x .75
3.	781-0076	Blade Guard	18.	754-0142	V-belt, 3/8
4.	750-0118	Sleeve, .632 x .875 x .90	19.	756-0327B	Engine Pulley, 3/8 x .75 x 2.38
5.	712-0287	Hex Nut, 1/4-20	20.	687-0100	Engine Pulley Belt Guard
6.	736-0329	Lock Washer, 1/4	21.	712-0267	Hex Nut, 5/16-18
7.	05034A	Bearing Housing	22.	736-0242	Belleville Washer, .340 x .872
8.	741-0155	Ball Bearing, .62 x 1.38 x .44	23.	736-0119	Lock Washer, 5/16
9.	715-0121	Spirol Pin, 1/4 x 2.0	24.	710-0237	Hex Cap Screw, 5/16-24 x .625
10.	781-0093	Adjustment Lever Assembly	25.	710-0152	Hex Cap Screw, 3/8-24 x 1.0
11.	781-0078	Spindle Plate/Shaft Assembly	26.	736-0258	Flat Washer, .385 x 1.0 x .135
12.	710-0751	Hex Cap Screw, 1/4-20 x .62	27.	748-0160	Spacer, .753 x 1.25 x .175
13.	750-0229	Spacer, .635 x .88 x 1.03	28.	781-0748	Triplex Edger Blade, 9.0
14.	756-0449	Sheave, .6255 x .6295	29.	732-0188A	Double-torsion Spring
15.	710-0929	Hex Cap Screw, 5/8-18 x 4.5			

Model 592

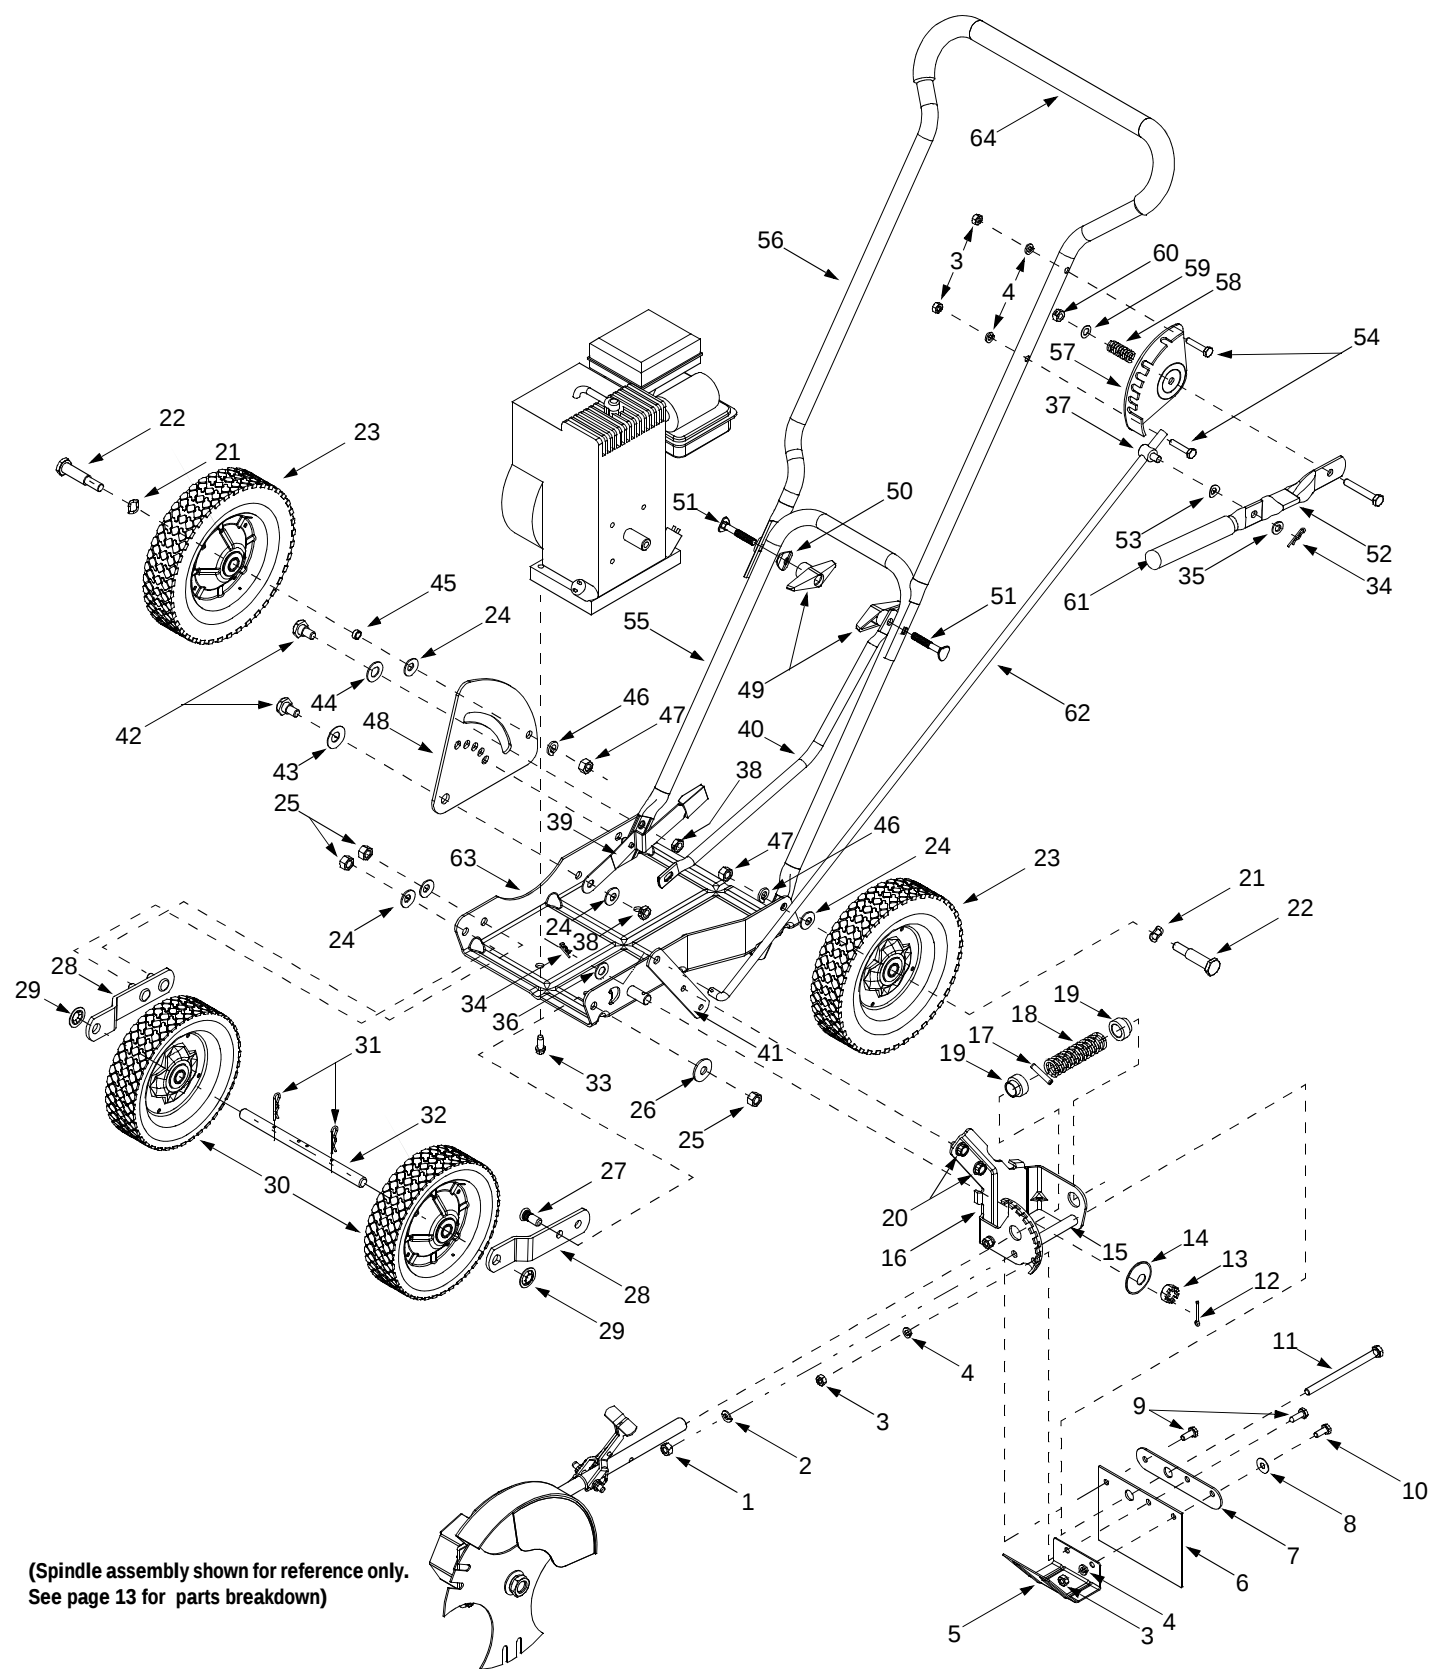

(Spindle assembly shown for reference only.
See page 13 for parts breakdown)

Model 592

Ref. No.	Part No.	Description	Ref. No.	Part No.	Description
1.	712-0267	Hex Nut, 5/16-18	33.	710-0654A	Self-tapping Screw, 3/8-16 x 1.0
2.	736-0119	Lock Washer, 5/16	34.	714-0104	Internal Cotter Pin, .072 x 1.0
3.	712-0287	Hex Nut, 1/4-20	35.	736-0264	Flat Washer, .330 x .630 x .0635
4.	736-0329	Lock Washer, 1/4	36.	736-3050	Flat Washer, .406 x .810 x .051
5.	781-0095	Debris Deflector	37.	711-0392	Adjustment Ferrule
6.	731-0725	Debris Guard	38.	712-0266	Center Lock Nut, 3/8-24
7.	781-0087	Flap Bracket, 1.12 x 5.5	39.	732-0552	Curb Adjustment Lever Assembly
8.	736-0342	Flat Washer, .283 x .75 x .030	40.	749-0941	Support Strut, 15.91
9.	710-0252	Hex Screw w/ Nose, 1/4-20 x .85	41.	781-0075	Spindle Extension Arm
10.	710-0751	Hex Screw, 1/4-20 x .62	42.	738-0258	Shoulder Screw, .498 x .250
11.	710-0402	Hex Screw, 5/16-18 x 4.5	43.	736-0255	Bell Washer, .51 x 1.14 x .040
12.	714-0115	Cotter Pin, 1/8 x 1.0	44.	736-0272	Flat Washer, .51 x 1.0 x .060
13.	712-0114	Slotted Hex Nut, 1/2-20	45.	750-0535	Spacer, .376 x .625 x .22
14.	736-0112	Sphere Washer, .531 x 1.6 x .045	46.	736-0169	Lock Washer, 3/8
15.	711-0386	Spacer, .38 x .50 x 3.75	47.	712-0798	Hex Nut, 3/8-16
16.	781-0090	Spindle Pivot Bracket Assembly	48.	781-0100	Curb Height Adjustment Plate
17.	715-0143	Spirol Pin, 1/4 x 1.25	49.	720-0241	Wing Knob Assembly
18.	732-0187	Compression Spring	50.	736-0451	Saddle Washer, .320 x .93
19.	711-0379	Shoulder Spacer, .635 x .620	51.	710-1174	Carriage Bolt, 5/16-18 x .75
20.	710-0607	Self-tapping Screw, 5/16-18 x .50	52.	749-0666	Blade Clutch/Depth Control Lever
21.	736-0504	Wave Washer, .510 x .75 x .017	53.	736-0271	Spring Washer, .317 x .625 x .099
22.	738-0108	Shoulder Screw, .498 x 1.45	54.	710-3103	Hex Cap Screw, 5/16-18 x 2.0
23.	734-1268	Wheel w/ Ball Bearing, 8 x 1.75	55.	749-0937	Lower Handle
24.	736-0105	Spring Washer, .401 x .871 x .063	56.	749-0936A	Upper Handle (Loop Style)
25.	712-0241	Hex Nut, 3/8-24	57.	781-0081	Depth Adjustment Bracket
26.	736-0452	Bell Washer, .396 x 1.14 x .095	58.	732-0369	Compression Spring, .55 x 1.37
27.	710-0793	Rd Hd Bolt 3/8-24 x .89	59.	736-0204	Flat Washer, .344 x .62 x .030
28.	781-1069	Front Axle Arm	60.	712-0158	Hex Lock Nut, 5/16-18
29.	726-0221	Cap Speed Nut, 1/2	61.	720-0283	Foam Grip (Blade Clutch Lever)
30.	734-1264	Wheel w/ Ball Bearing, 7 x 1.75	62.	747-1164	Clutch Rod, 3/8 x 33.5
31.	714-0101	Internal Cotter Pin, .08 x 1.42	63.	681-0044	Edger Base
32.	738-1176	Front Axle, .50 x 7.98	64.	720-0297	Foam Grip (Upper Handle), 20