


SECTION 8: ILLUSTRATED PARTS LIST

Model Series 340 Thru 345

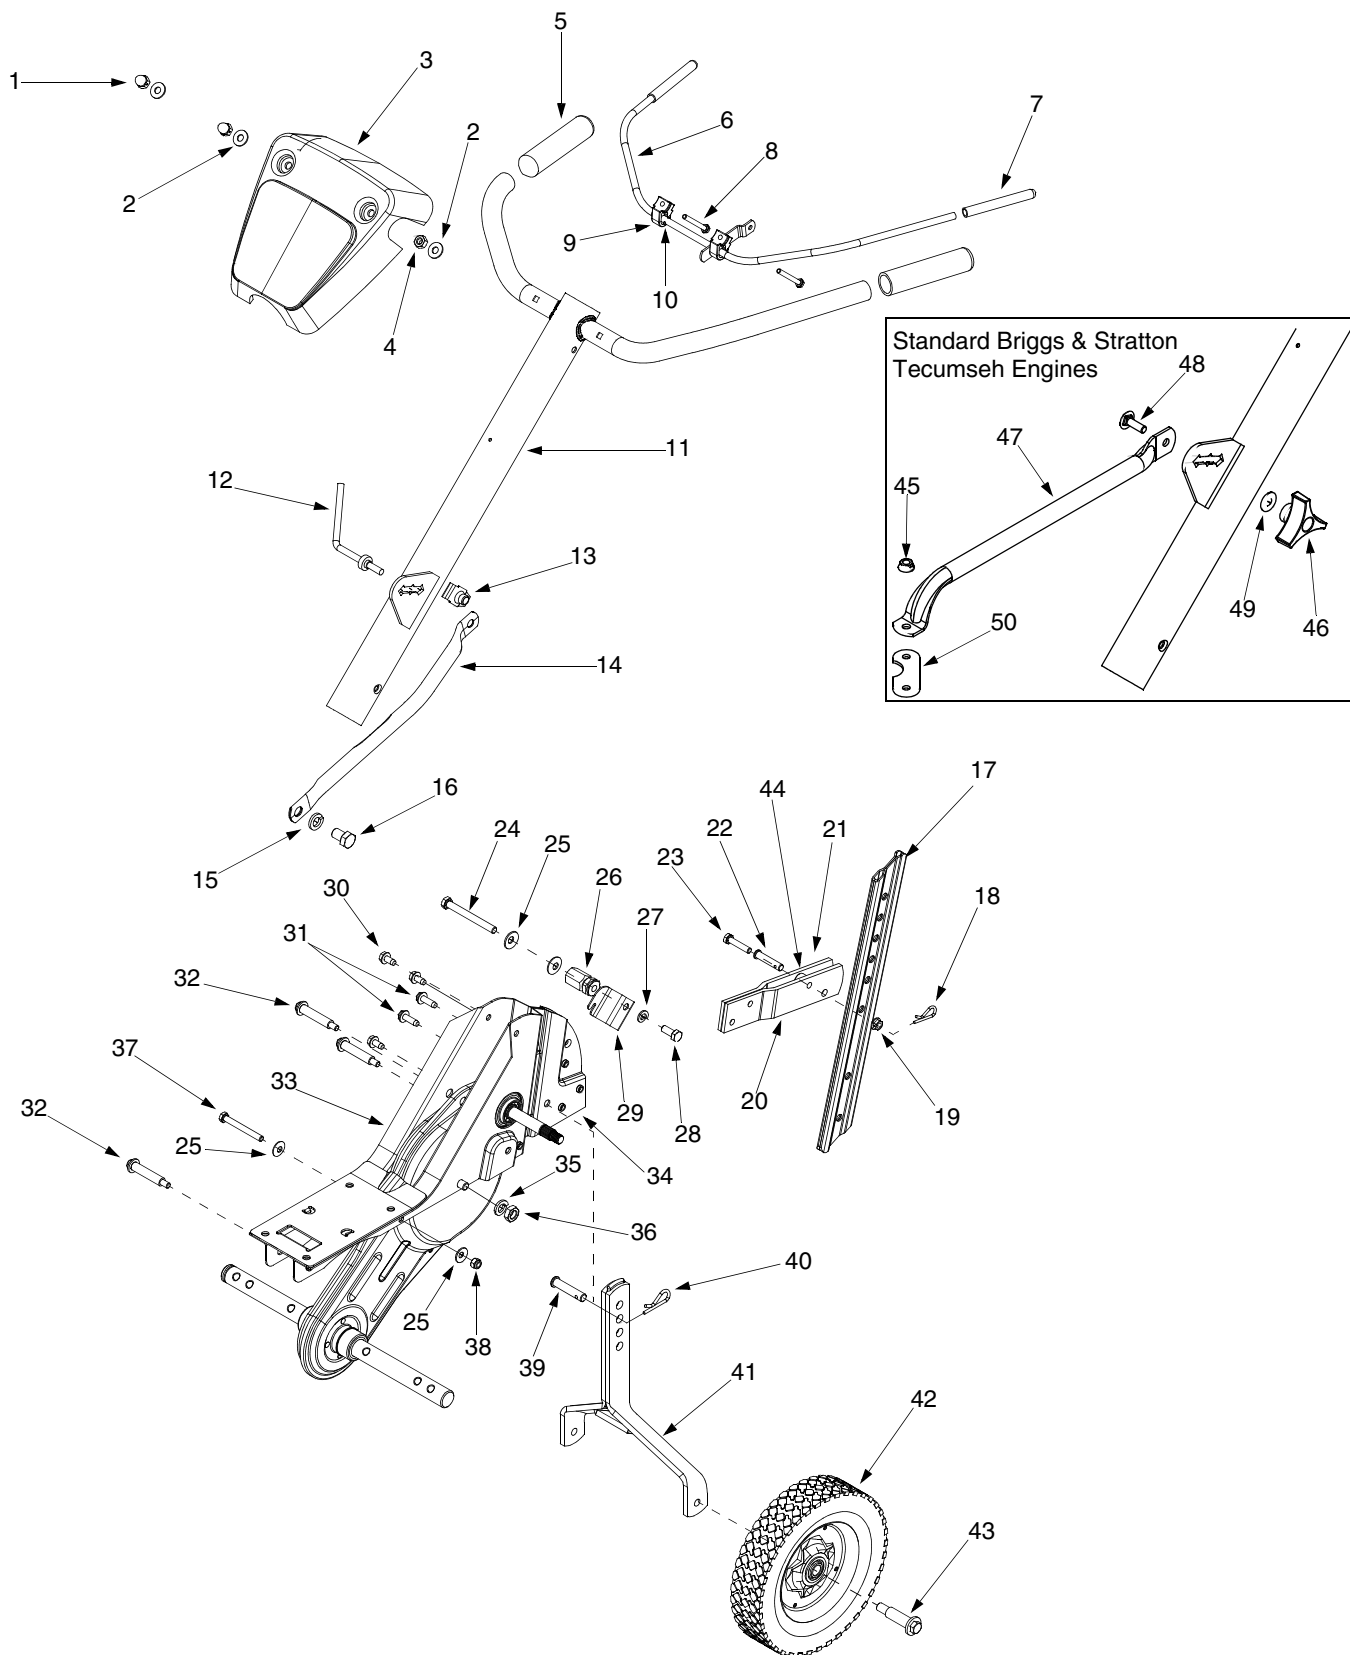


Model Series 340 Thru 345

Ref. No.	Part No.	Part Description	Ref. No.	Part No.	Part Description
1.	712-0442	Acorn Lock Nut 1/4-20	26.	711-1036	Spec. Hex Nut
2.	736-3020	Flat Washer.271" I.D. x.630" O.D.	27.	736-0119	L-Wash. 5/16" I.D.
3.	731-1599	Handle Cover	28.	710-3008	Hex Bolt 5/16-18 Gr. 5
4.	712-0287	Hex Nut 1/4-20 Gr.2	29.	786-0129	Cable Guide Bracket
5.	720-0274	Handle Grip	30.	710-0604	Hex Wash Screw 5/16-18 x.62"
6.	686-0083	Clutch Handle Assembly	31.	710-0602	Hex Wash. Hd. TT-Tap Scr.
7.	720-0269	Clutch Grip	32.	738-0934	Shdl. Bolt 5/16-18
8.	710-0641	Hex Bolt 1/4-20 x 2.25" Lg. Gr.5	33.	786-0138A	Frame (R.H.)
9.	731-1645A	Clutch Handle Holder	34.	786-0139A	Frame (L.H.)
10.	736-0140	Flat Washer.385" I.D. x.62" O.D.	35.	736-0171	Lock Washer 7/16
11.	649-0039	Handle Assembly Comp. †	36.	712-0240	Jam Nut 7/16-20 Gr. 2
	649-0022B	Handle Assembly Comp. ††	37.	710-0176	Hex Bolt 5/16-18 x 2.75" Lg.
12.	647-0042	Adjustment Crank †	38.	712-0429	Hex Nyloc Nut 5/16-18 Thd.
13.	726-0211	U Nut 5/16-18 †	39.	711-0415	Clevis Pin
14.	749-1101	Handle Brace †	40.	714-0149B	Cotter Pin
15.	736-0921	Lock Washer 1/2 †	41.	686-0081A	Wheel Hanger Brkt. Assy
16.	710-3194	Hex Bolt 1/2-20 Gr. †	42.	734-1566	Wheel Ass'y 8" x 1.75"
17.	786-0005	Depth Bar	43.	738-0929	Shoulder Screw.496 x 1.445
18.	714-0149B	Cotter Pin	44.	750-0890	Spacer
19.	712-04063	Hex Flange L-Nut 5/16-18	45.	712-04063	Hex Flange L-Nut 5/16-18 Thd. ††
20.	786-0003	Tail Piece Bracket (L.H.)	46.	720-0195	Hand Knob ††
21.	786-0004	Tail Piece Bracket (R.H.)	47.	749-0915A	Engine Tube Brace (Std. B&S)
22.	711-0415	Clevis Pin		749-1082	Engine Tube Brace (Tec.)
23.	710-0805	Hex Bolt 5/16-18 x 1.5" Lg.	48.	710-1236	Carr. Bolt 5/16-18 x 1 ††
24.	710-0189	Hex Bolt 5/16-18 x 3" Lg.	49.	736-0242	Bell. Wash.34" I.D. ††
25.	736-0242	Wash. Bell.340" I.D. x.872" O.D.	50.	786-0159	Engine Brkt. (Std B&S)

† Briggs & Stratton Intek Engine

†† Standard Briggs & Stratton and Tec. Engine


Model Series 340 Thru 345

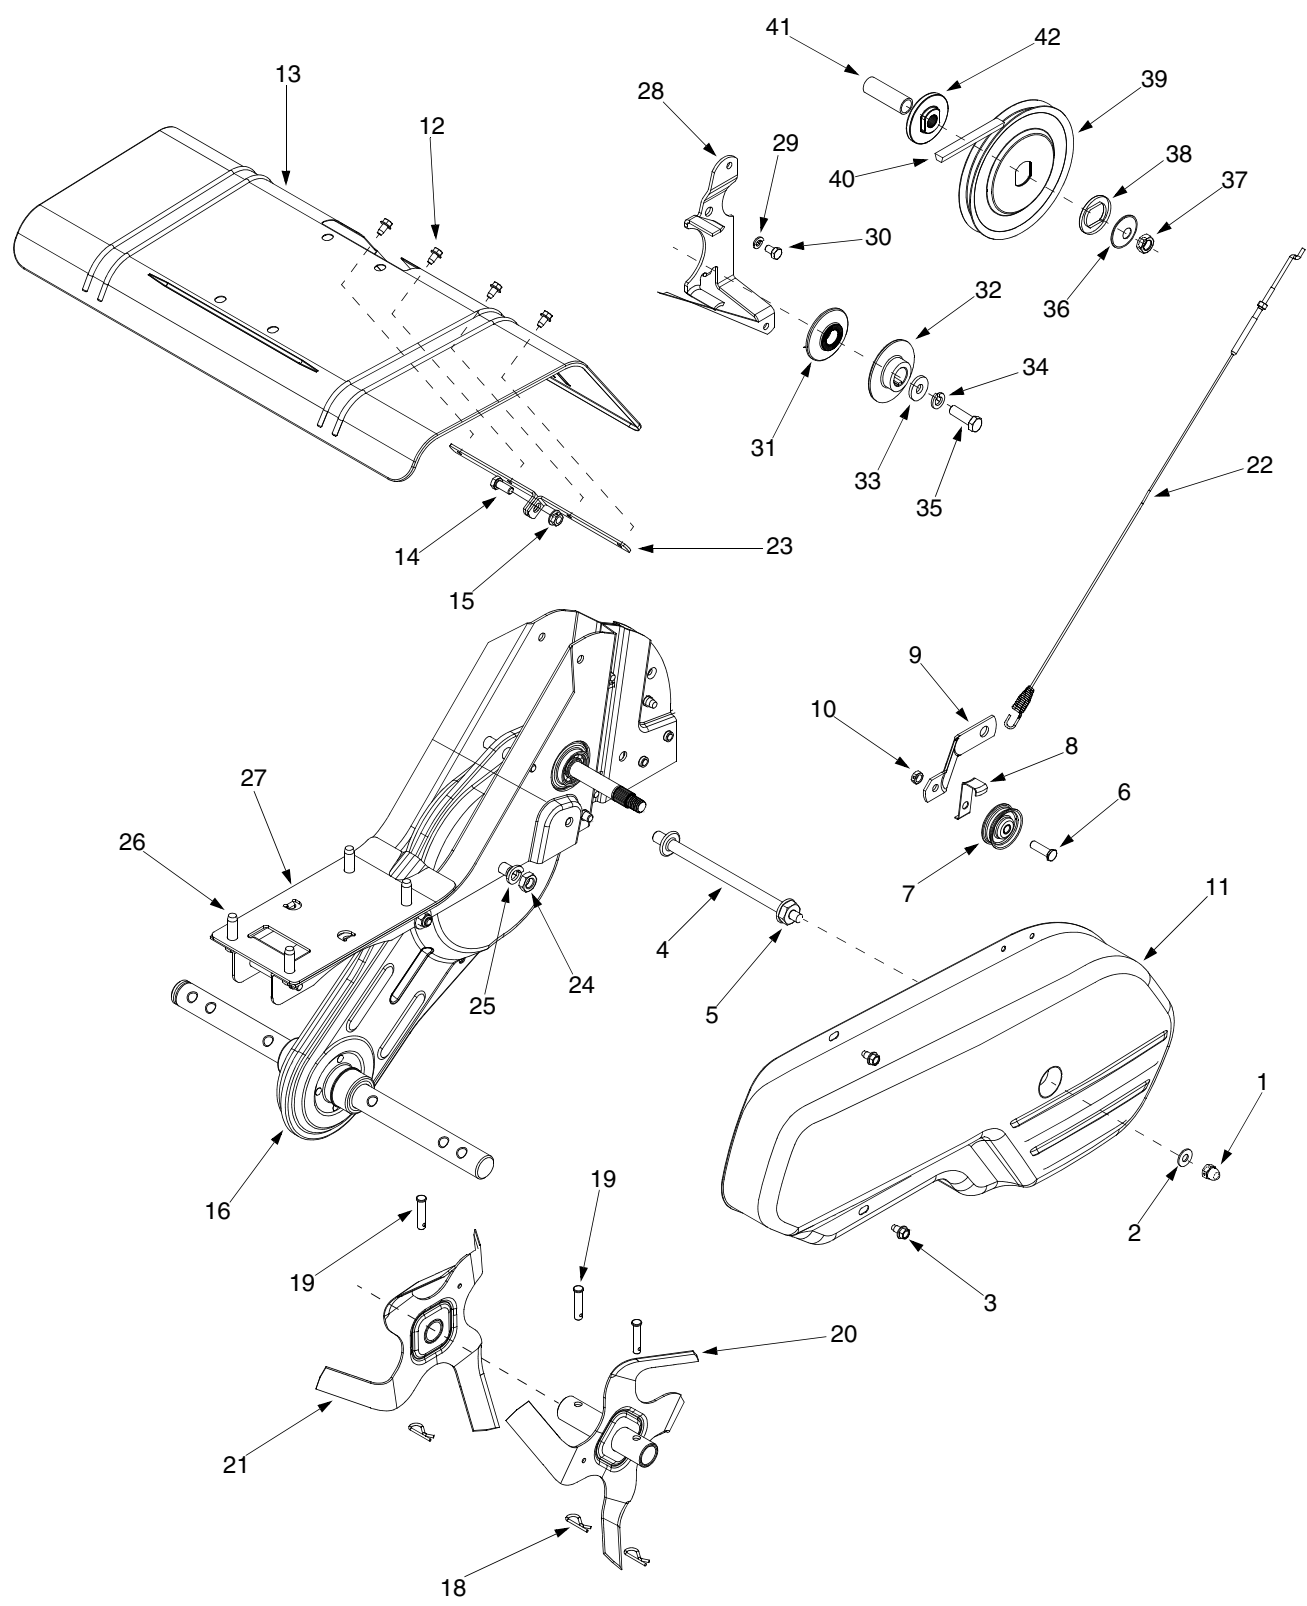

Model Series 340 Thru 345

Ref. No.	Part No.	Part Description	Ref. No.	Part No.	Part Description
1.	712-0392	Hex L-Stop nut 1/4-28	22.	746-0918	Forward Clutch Cable
2.	736-3020	Flat Wash.266" I.D. X.625" O.D.	23.	786-0053	Tine Shield Bracket
3.	710-0599	Hex Washer Screw 1/4-20 x.5"	24.	736-0171	L-Wash. 7/16" I.D.
4.	711-0920	Belt Cover Bolt	25.	712-0240	Hex Nut 7/16-20 Thd.
5.	712-04063	Hex Flange Top L-Nut 5/16-18	26.	710-0502A	Hex Washer Screw 3/8-16 x 1.25"
6.	710-0723	Hex Hd. Scr. 3/8-16 x 1.25" Lg.	27.	786-0145A	Engine Plate
7.	756-0313	FI-Idler 2.12" O.D.	28.	786-0039B	Bracket Cover
8.	786-0149	Idler Belt Keeper	29.	736-0119	Lock Washer 5/16
9.	786-0144	Idler Bracket	30.	710-0107	Hex Bolt 5/16-24 x.5"
10.	712-0266	Hex Cent. Jam Nut 3/8-16 Thd.	31.	756-0971	Inner Engine Pulley Half
11.	786-0056	Belt Cover	32.	756-0972	Outer Engine Pulley Half
12.	710-0599	Hex Washer Screw 1/4-20 x.5"	33.	736-0258	Flat Washer.385 ID x 1.0 OD
13.	786-0035A	Tine Shield	34.	736-0169	Lock Washer 3/8
14.	710-3008	Hex Hd. Cap Scr. 5/16-18 x.75" Lg	35.	710-0191	Hex Bolt 3/8-24 x 1.25"
15.	712-04063	Hex Flange Top L-Nut 5/16-18	36.	736-0112	Bell-Wash.525" I.D. x 1.5" O.D.
16.	686-0091	Chain Case Assembly Complete	37.	712-3029	Hex Jam Nut 1/2-20 Thd. (Gr. 5)
18.	714-0149B	Internal Cotter Pin	38.	736-0312	Retainer Washer Bearing
19.	711-0415	Clevis Pin	39.	756-0585	FI-Pulley 6" Dia.
20.	642-0005	Outer Tine Assembly L.H.	40.	754-0428	V-Belt (Forward)
	642-0004	Outer Tine Assembly R.H.	41.	750-0892	Spacer.64" Dia. x 2.4" Lg.
21.	642-0003	Inner Tine Assembly L.H.	42.	748-0350	Pulley Mounting Adapter
	642-0002	Inner Tine Assembly R.H.			

Model Series 390

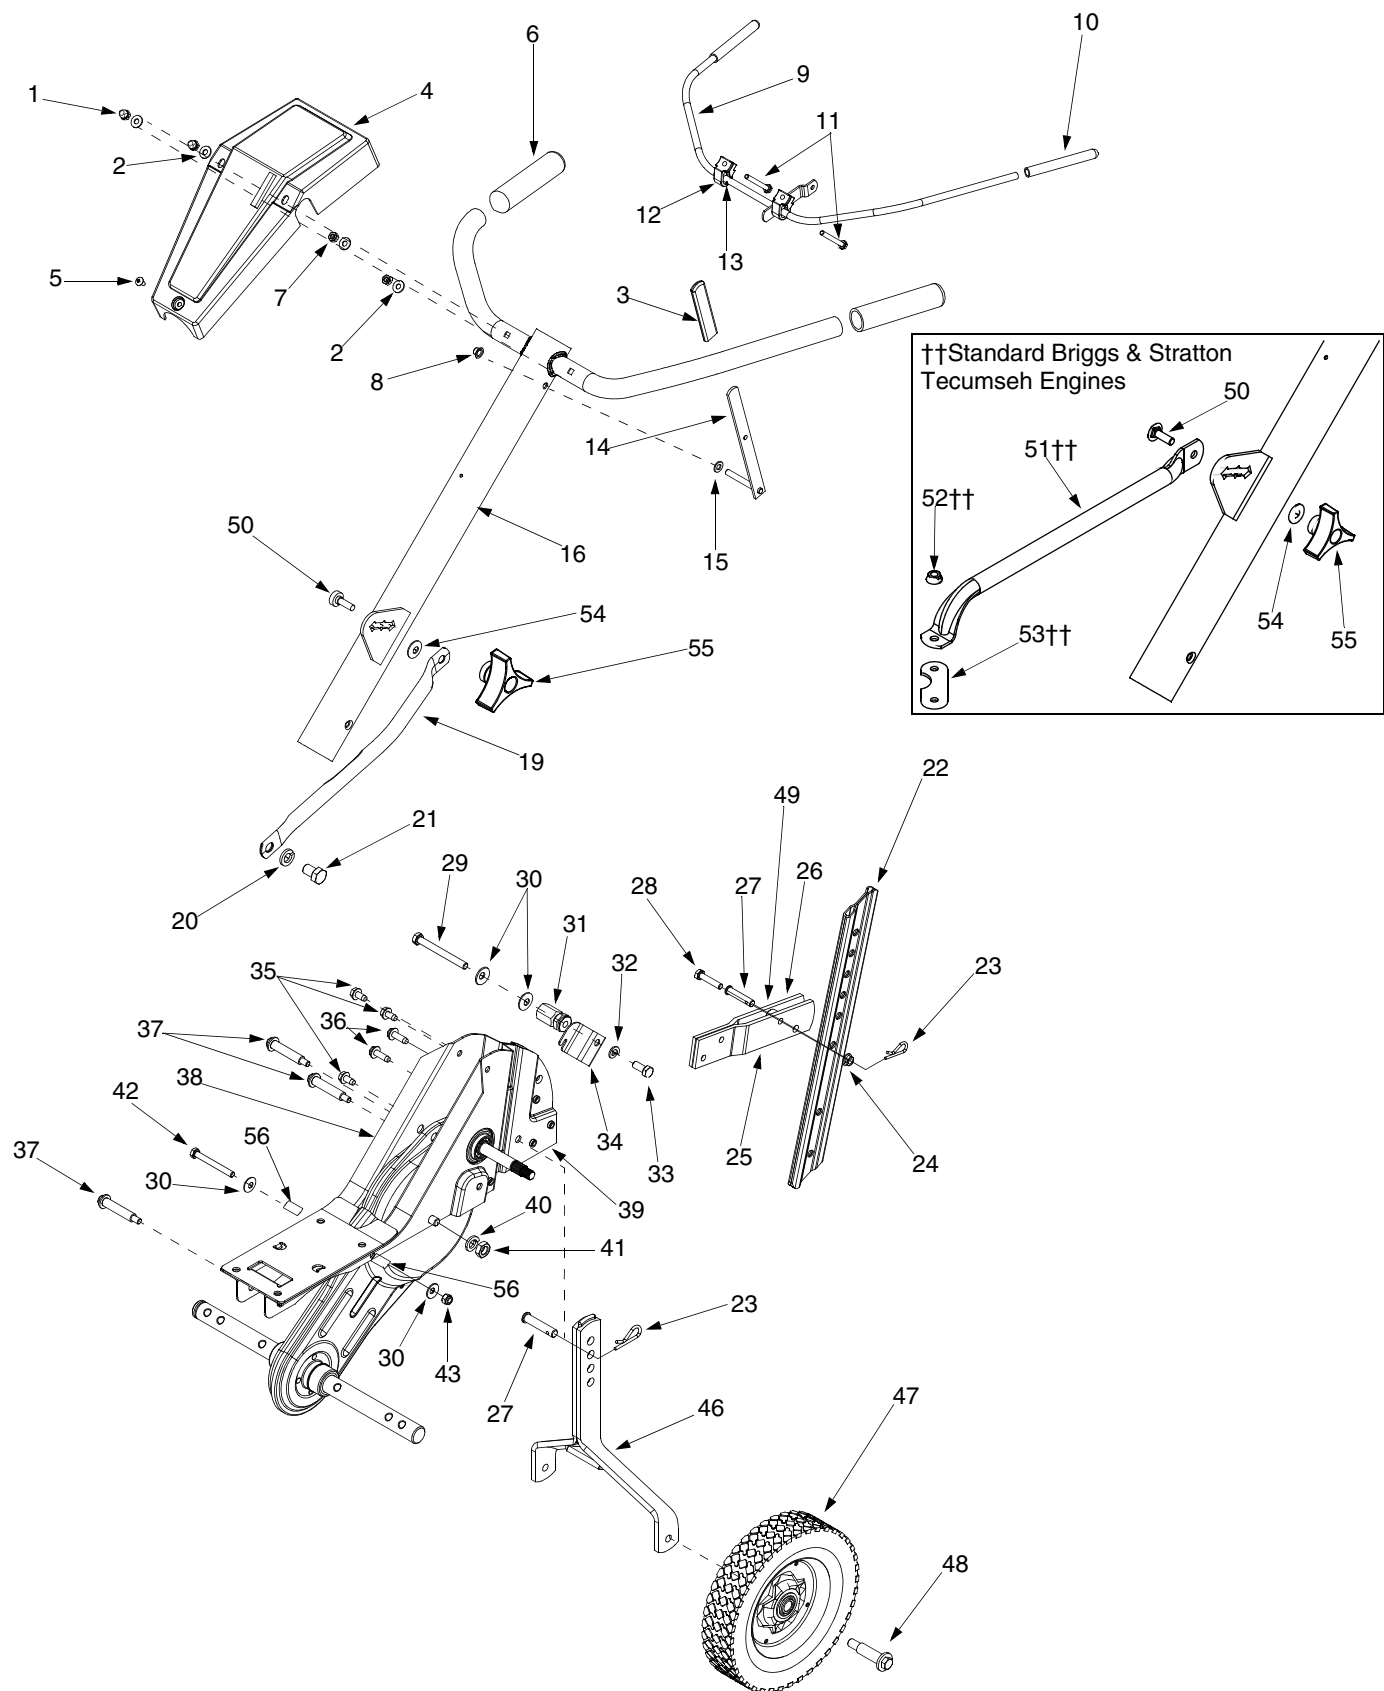

Model Series 390


REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1.	712-0442	Acorn Lock Nut 1/4-20	30.	736-0242	Wash. Bell.340" I.D. x.872" O.D.
2.	736-3020	Flat Washer.271" I.D. x.630" O.D.	31.	711-1036A	Spec. Hex Nut
3.	720-0270A	Reverse Handle Grip	32.	736-0119	L-Wash. 5/16" I.D.
4.	731-1600	Handle Cover w/o throttle	33.	710-3008	Hex Bolt 5/16-18 Gr. 5
5.	710-0779A	Truss Mach. Scr. #10 x 1/2" Lg.	34.	786-0129	Cable Guide Bracket
6.	720-0274	Handle Grip	35.	710-0604A	Hex Washer Screw 5/16-18 x.62" Lg.
7.	712-3006	Hex Nut 1/4-20 Gr.2	36.	710-0602	Hex Wash. Hd. TT-Tap Scr.
8.	726-0135	Cap Speed Nut	37.	738-0934	Shdl. Bolt 5/16-18
9.	686-0083	Clutch Handle Assembly	38.	786-0138A	Frame (R.H.)
10.	720-0269	Clutch Grip	39.	786-0139A	Frame (L.H.)
11.	710-0641	Hex Bolt 1/4-20 x 2.25" Lg. Gr.5	40.	736-0171	Lock Washer 7/16
12.	731-1645A	Clutch Handle Holder	41.	712-0240	Jam Nut 7/16-20 Gr. 2
13.	736-0140	Flat Washer.385" I.D. x.62" O.D.	42.	710-0176	Hex Bolt 5/16-18 x 2.75" Lg.
14.	686-0014A	Reverse Handle Ass'y	43.	712-0429	Hex Nylon Nut 5/16-18 Thd.
15.	736-0264	Flat Washer.344" I.D. x.62" O.D.	46.	686-0081A	Wheel Hanger Bracket Assembly
16.	649-04040	Handle Assembly Comp.	47.	734-1781	Wheel Ass'y 8" x 1.75"(Plastic)
19.	749-1401	Handle Brace † or †††		734-1566	Wheel Ass'y 8" x 1.75" (Steel)
20.	736-0921	Lock Washer 1/2 † or †††	48.	738-0929	Shoulder Screw.496 I.D. x 1.445 O.D.
21.	710-3194	Hex Bolt 1/2-20 Gr. 5 † or †††	49.	750-0890	Spacer
22.	786-0005	Depth Bar	50.	710-1236	Carr. Bolt 5/16-18 x 1
23.	714-0149B	Cotter Pin	51.	749-0915A	Engine Tube Brace (Std. B&S)
24.	712-04063	Hex Flange L-Nut 5/16-18 Thd. Gr.5		749-1082	Engine Tube Brace (Tec.)
25.	786-0003	Tail Piece Bracket (L.H.)	52.	712-04063	Hex Flange L-Nut 5/16-18 Thd. ††
26.	786-0004	Tail Piece Bracket (R.H.)	53.	786-0159	Engine Brkt. (Std. B&S)
27.	711-0415	Clevis Pin	54.	736-0242	Bell. Wash.34" I.D.
28.	710-0805	Hex Bolt 5/16-18 x 1.5" Lg.	55.	720-0195	Hand Knob
29.	710-0189	Hex Bolt 5/16-18 x 3" Lg.	56.	750-0470	Spacer

† Briggs & Stratton Intek Engine

†† Standard Briggs & Stratton and Tec. Engine

††† Honda Engine

Model Series 390

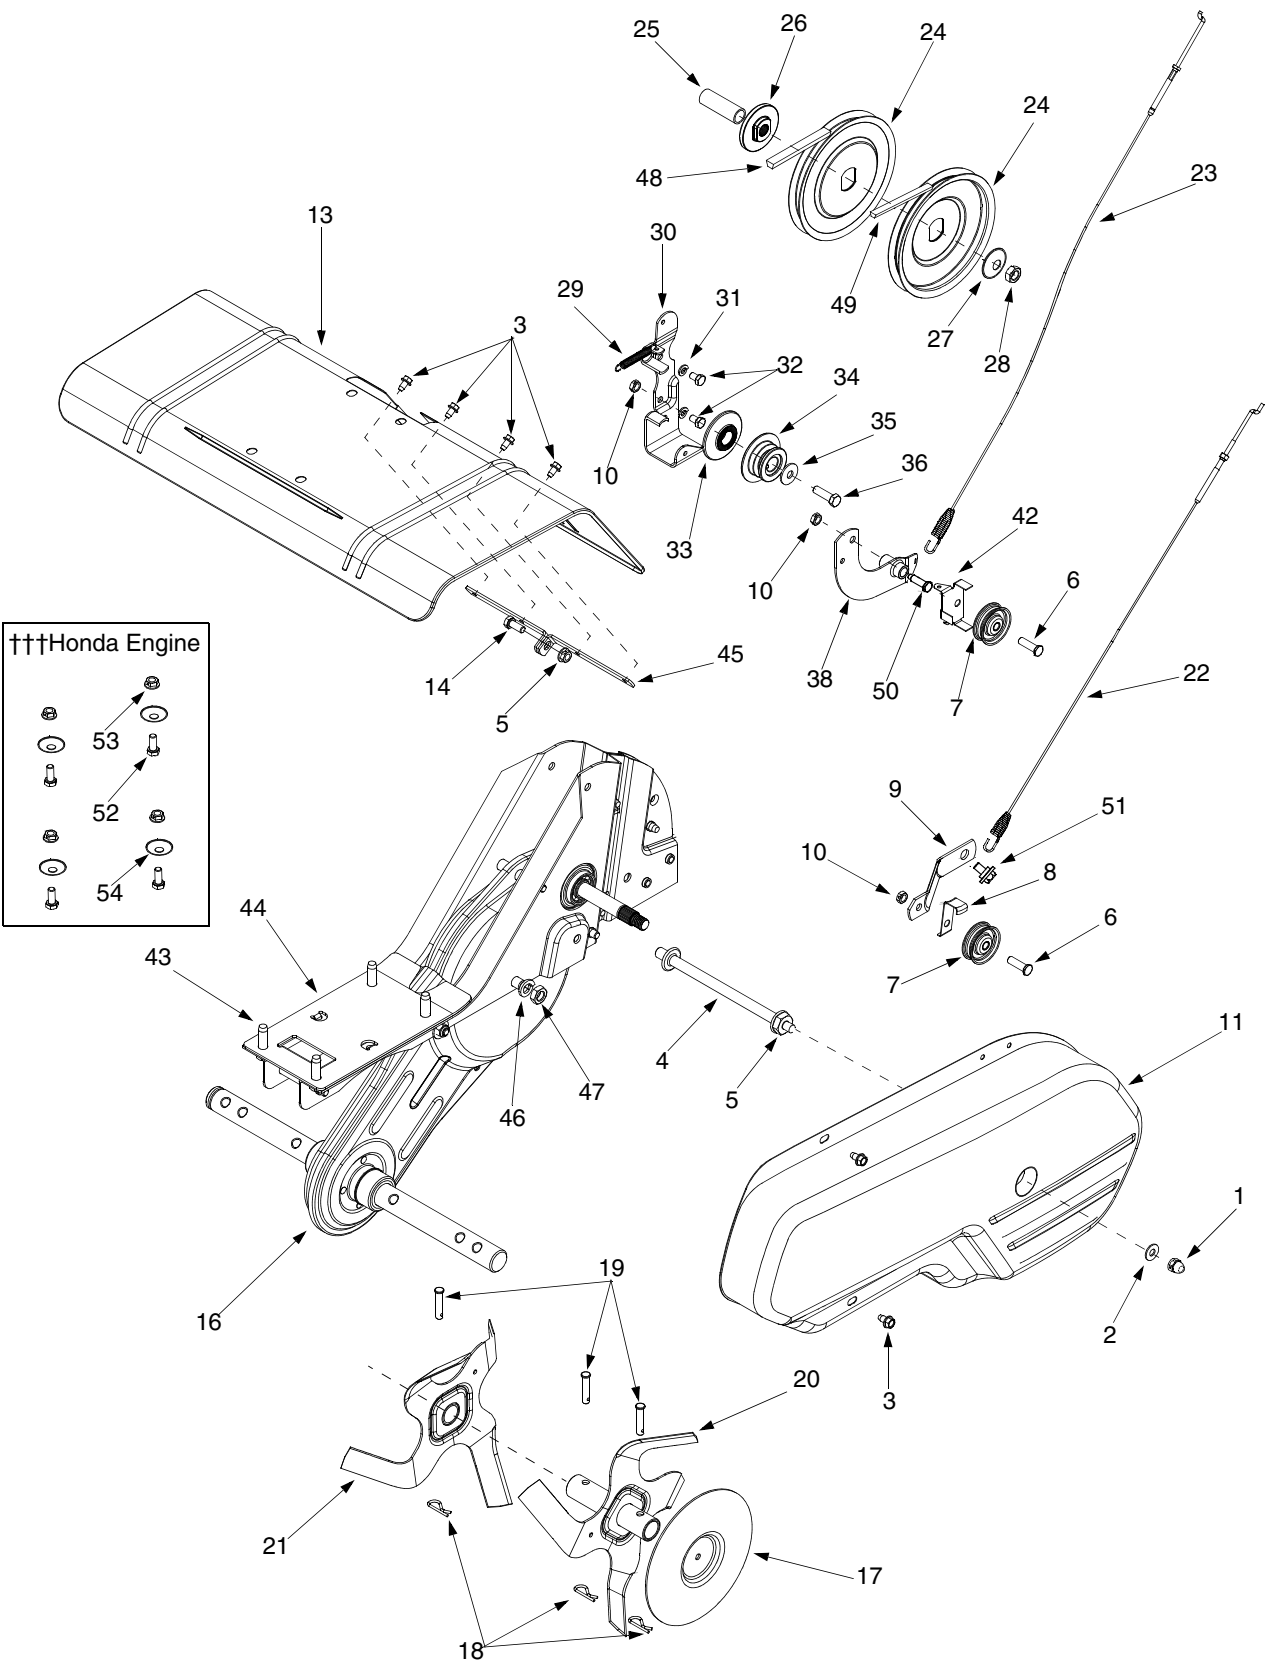

Model Series 390

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1.	712-0392	Hex L-Stop nut 1/4-28	26.	748-0350	Pulley Mounting Adapter
2.	736-3020	Flat Wash.266" I.D. x.625" O.D.	27.	736-0112	Bell-Wash.525" I.D. x 1.5" O.D.
3.	710-0599	Hex Washer TT-Tap Scr. 1/4-20 x.5"	28.	712-3029	Hex Jam Nut 1/2-20 Thd. (Gr. 5)
4.	711-0920	Belt Cover Bolt	29.	732-0697	Return Spring
5.	712-04063	Hex Flange Top L-Nut 5/16-18 (Gr.5)	30.	786-0040B	Reverse Bracket
6.	710-0723	Hex Hd. Scr. 3/8-16 x 1.25" Lg. (Gr.5)	31.	736-0119	Lock Washer 5/16
7.	756-0313	Flat Idler Pulley 2.12" O.D.	32.	710-0237	Hex Bolt 5/16-24 x.625"
8.	786-0149	Idler Belt Keeper	33.	756-0971	Engine Inner Half Pulley
9.	786-0144	Idler Bracket	34.	756-0600	Reverse Engine Pulley
10.	712-0266	Hex Cent. Jam Nut 3/8-16 Thd.	35.	736-0452	Bell Washer.396" I.D. x 1/14" O.D.
11.	786-0057	Belt Cover	36.	710-0152	Hex Bolt 3/8-24 x 1.00"
13.	786-0043A	Tine Shield	38.	686-0013	Reverse Arm Assembly
14.	710-3008	Hex Hd. Cap Scr. 5/16-18 x.75" Lg	42.	786-0041	Reverse Belt Keeper
16.	686-0091	Chain Case Assembly Complete	43.	710-0502A	Hex L-Wash. TT-Tap 3/8-16 x 1.25"
17.	686-0106	Outer Disc Plate Assembly	44.	786-0145A	Engine Plate
18.	714-0149B	Internal Cotter Pin	45.	786-0053	Tine Shield Bracket
19.	711-0415	Clevis Pin	46.	736-0171	L-Wash. 7/16" I.D.
20.	642-0023	Outer Tine Assembly L.H.	47.	712-0240	Hex Nut 7/16-20 Thd.
	642-0024	Outer Tine Assembly R.H.	48.	754-0428	V-Belt (Forward) 1/2 x 41.9"
21.	642-0003	Inner Tine Assembly L.H.	49.	754-0429	V-Belt (Reverse) 3/8 x 45.68"
	642-0002	Inner Tine Assembly R.H.	50.	738-0102	Shld. Screw.498 x 1.445
22.	746-0918	Forward Clutch Cable	51.	738-0930	Shld. Screw.560 x.165
23.	746-0953	Reverse Clutch Cable	52.	710-0805†††	Screw 5/16-18 x 1.50
24.	756-0585	FI-Pulley 6" Dia.	53.	712-3010†††	Hex Nut 5/16-18
25.	750-0892	Spacer.64" Dia. x 2.4" Lg.	54.	736-0242†††	Bell Washer

††† Honda Engine