



Model 804

Briggs & Stratton Intek Twin

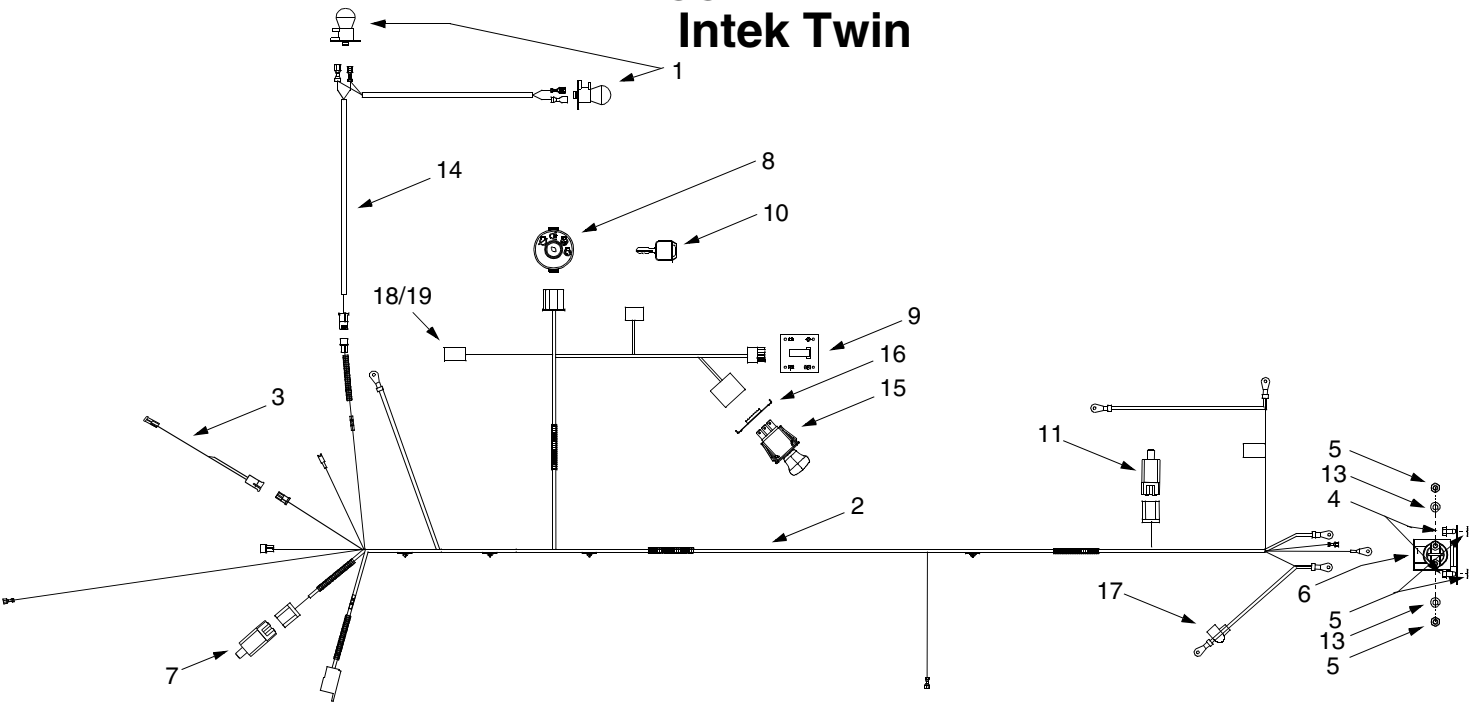


Kohler Twin

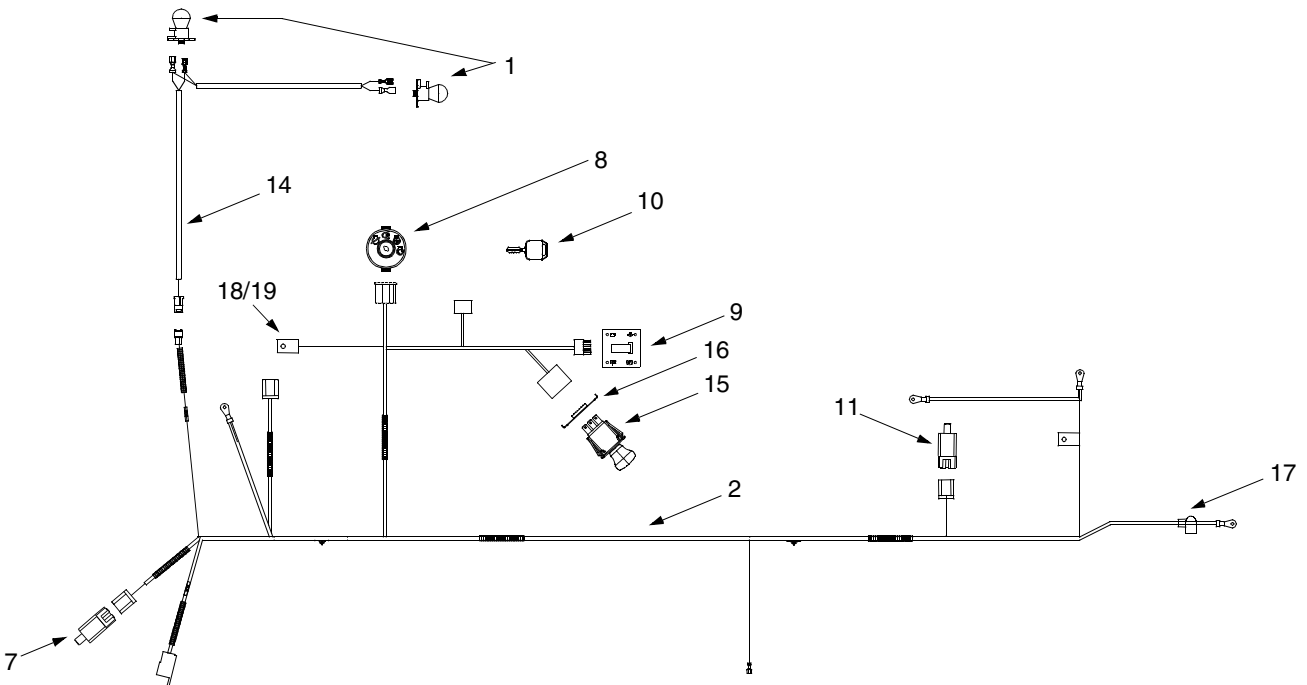

Electrical System

REF. NO.	PART NO.	DESCRIPTION
1	625-0051	Bulb/Socket Headlight Assembly
2	629-0939	Wiring Harness w/o Ref. 14 (units w/ B&S Intek Twin)
	629-0941	Wiring Harness w/o Ref. 14 (units w/ Kohler Twin)
3	629-0126	Harness Adapter, #18 x 5
4	710-0599	Self Tapping Screw, 1/4-20 x .5
5	712-3006	Hex Nut, 1/4-20
6	725-1426	Solenoid, 12-volt, 100 Amp
7	725-1657A	Snap Mount Safety Interlock Switch (Brake)
8	725-1741	Ignition Switch
9	725-1743	Indicator Monitor / Hour Meter
10	725-1745	Ignition Key
11	725-1747	Safety Plunger Switch (Seat)
12	736-0222	External Lock Washer, 1/4
13	736-0329	Lock Washer, 1/4
14	629-0309	Headlight Harness
15	725-1752	Electric PTO Switch
16	783-0462	Retainer Bracket
17	725-3007A	Positive Terminal Cover (Boot)
18	729-0357	Fuse Holder
19	725-1381	20-amp Fuse

Model 804

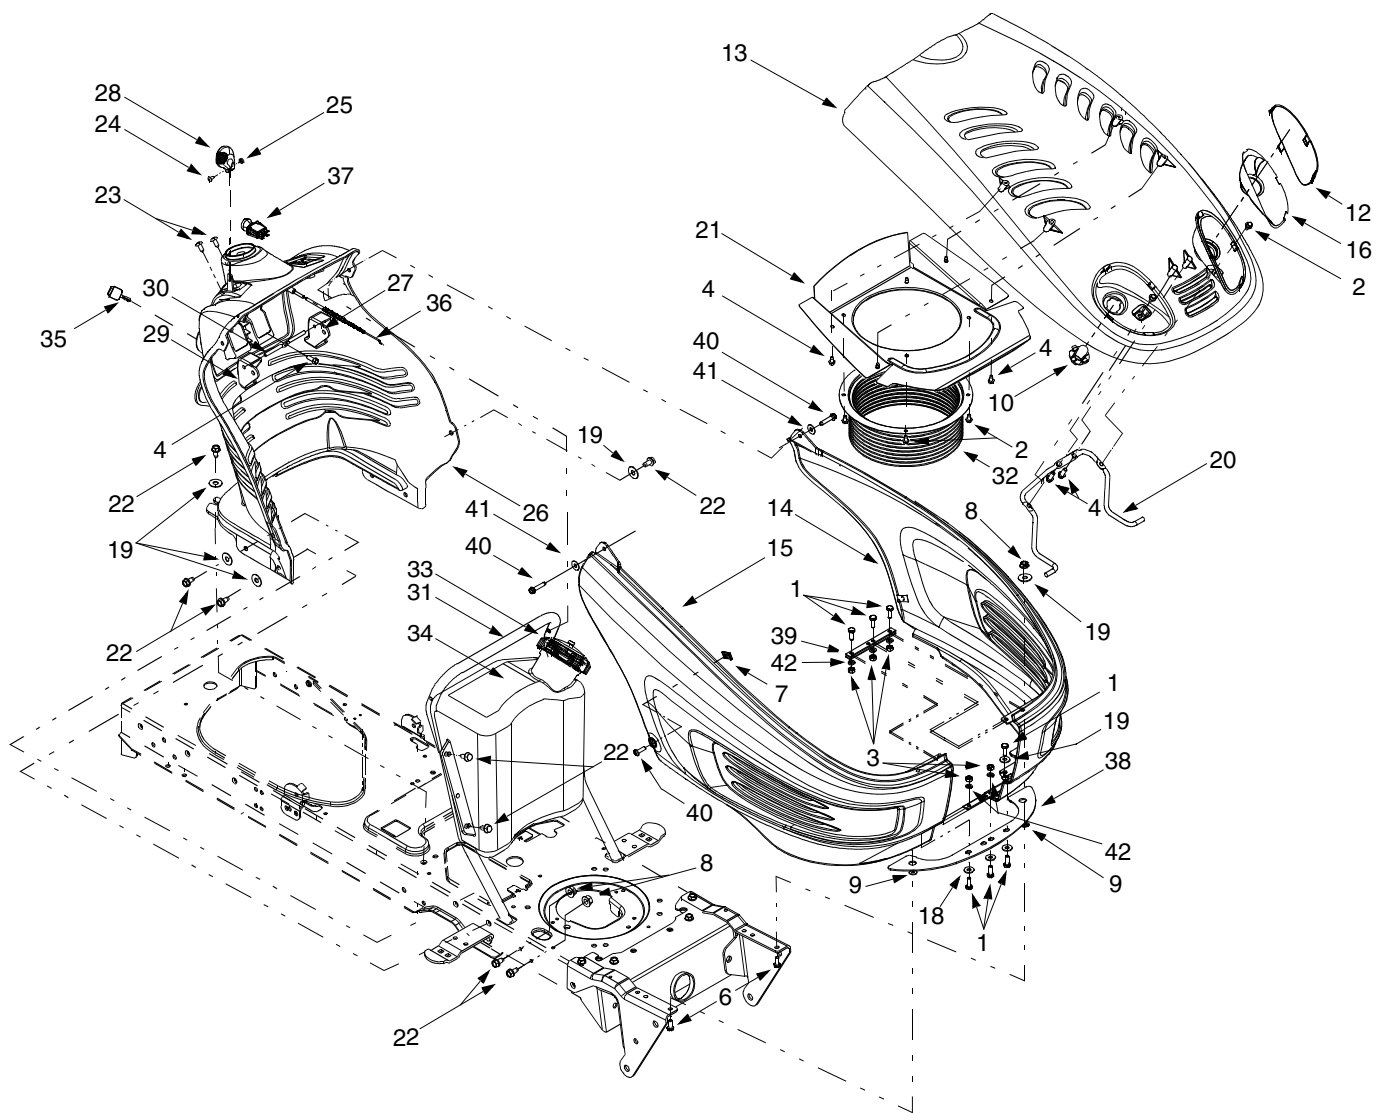

Tractor Body

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	710-3015	Hex Cap Screw, 1/4-20 x .75	23	710-1017	Torx Self-tapping Screw, 1/4-14 x .625
2	710-0599	Self-tapping Screw, 1/4-20 x .5	24	710-3217	Torx Screw, #8-32 x .375
3	712-3006	Hex Nut, 1/4-20	25	712-0142	Hex Nut, 8-32
4	710-0895	Self-tapping Screw, 1/4-15 x .75	26	731-0071	Dash Panel, 4-style
5	710-0924	Pan Phillips Screw, 1/4-20 x .75	27	731-0072	Parking Brake Button
6	710-0528	Hex Cap Screw, 5/16-18 x 1.25	28	731-1857	Throttle Control Lever
7	712-0292	U-type Speed Nut, 1/4-20	29	731-2106	Cruise Control Button
8	712-3004A	Flange Lock Nut, 5/16-18	30	747-1155	Brake/Cruise Pivot Rod
9	726-0201	Speed Nut	31	749-1087	Dash Support Tube
10	725-1649	Head Lamp Socket	32	731-2234	Intake Bellow
11	731-1978	RH Head Light Lens	33	751-0603	Fuel Cap
12	731-1979	LH Head Light Lens	34	751-0658A	Fuel Tank (three gallon)
13	731-1980	Hood, 4-style (Yellow)	35	725-1745	Ignition Key w/ plastic cover
14	731-1981A	LH Side Panel, 4-style (Yellow)		725-1744	Ignition Key w/o plastic cover
15	731-1982A	RH Side Panel, 4-style (Yellow)	36	746-1085	Choke Cable
16	731-1995	LH Head Light Reflector	37	725-1752	Electric PTO Switch
17	731-1996	RH Head Light Reflector	38	731-2272	Heat Shield
18	736-0173	Flat Washer, .28 x .74 x .063	39	783-1000	Grille Support Bracket
19	736-3078	Flat Washer, .349 x 1.0 x .063	40	710-0809	Self-tapping Screw, 1/4-20 x 1.25
20	747-1132A	Hood Support Rod	41	736-0342	Flat Washer, .283 x .75 x .030
21	783-0808	Heat Shield, 4-style	42	736-0329	Lock Washer, 1/4
22	710-0604A	Self-tapping Screw, 5/16-18 x .625			


NOTE: For **painted parts**, please refer to the list of color codes below. Please add the applicable color code, wherever needed, to the part number to order a replacement part. For instance, if a part numbered 700-xxxx is painted Yard-Man Green, the part number to order would be 700-xxxx-0665.

Yard-Man Green: 0665

Yard-Man Yellow: 0674

Powder Black: 0637

Model 804

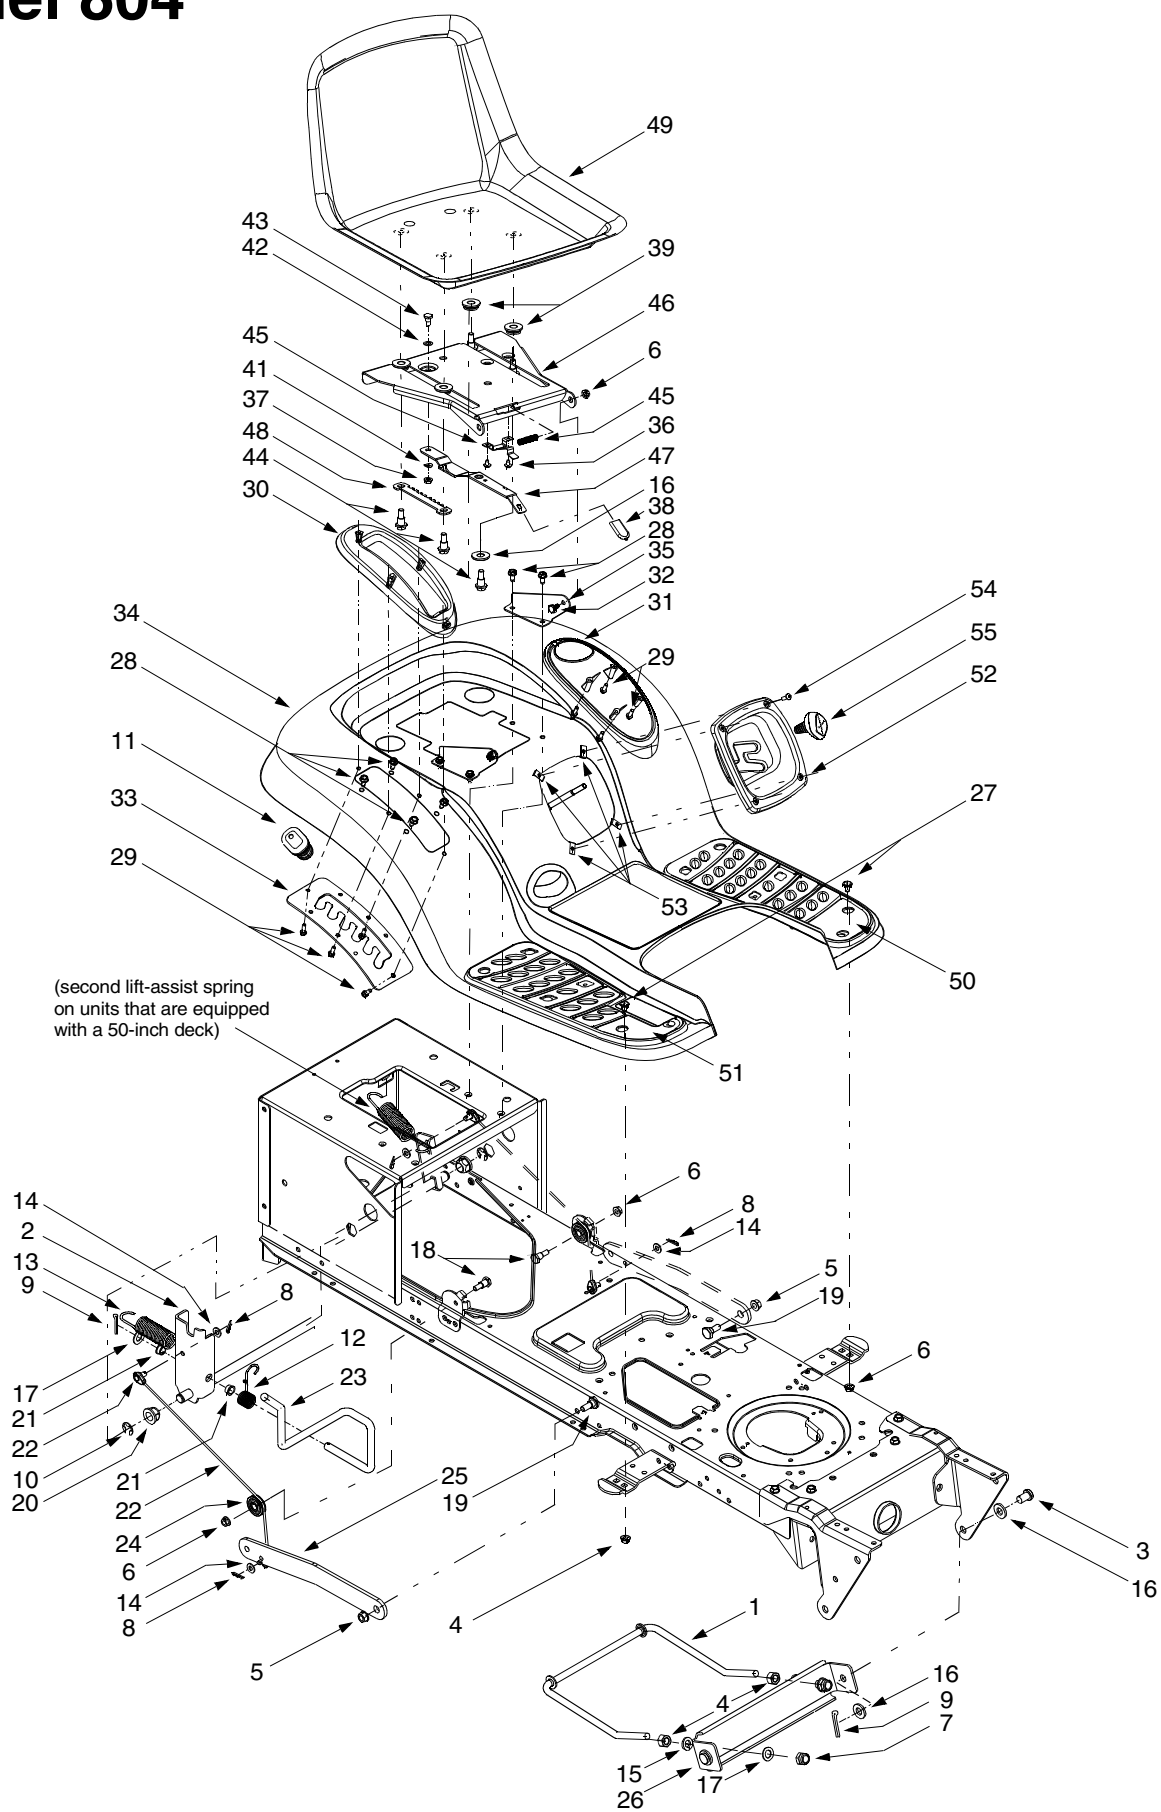

(second lift-assist spring
on units that are equipped
with a 50-inch deck)

Lift Assembly

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	747-1130	Deck Stabilizer Rod	29	710-0895	Self Tapping Screw, 1/4-15 x .75
2	683-0197	Lift Shaft Assembly	30	731-1990	Lift Lever Cover
3	711-0332	Clevis Pin, .5 x .78	31	731-1993	Cover w/ Cup Holder
4	712-0206	Hex Nut, 1/2-13	32	738-0155	Shoulder Screw, .437 x 1.62
5	712-0431	Flange Lock Nut, 3/8-16	33	783-0677	Lift Adjustment Bracket
6	712-3004A	Flange Lock Nut, 5/16-18	34	783-0763A	Fender
7	712-3083	Hex Nut, 1/2-13	35	783-0715	Seat Mounting Bracket
8	714-0104	Internal Cotter Pin	36	710-1268	Screw, #10-16 x .375
9	714-0111	Cotter Pin	37	712-3027	Hex Flange Lock Nut, 1/4-20
10	716-0106	E-ring	38	720-0309A	Seat Adjuster Grip
11	720-0311	Handle Grip	39	731-1989	Spacer
12	732-0874	Torsion Spring	40	732-0499	Compression Spring, .41 x 1.5
13	732-0934	Lift-assist Spring, 1.15 x 5.99	41	736-0175	Spring Washer, .265 x .562 x .025
14	736-0275	Flat Washer, 5/16	42	736-0204	Flat Washer, .344 x .62 x .03
15	736-0921	Lock Washer, 1/2	43	738-0137A	Shoulder Screw, .340 x .285, 1/4-20
16	736-3019	Flat Washer, .31 x 1.062 x .134	44	738-1007	Shoulder Screw, .50 x .50, 3/8-16
17	736-3084	Flat Washer, .51 x 1.12 x .06	45	783-0611	Seat Stop
18	738-0138	Hex Cap Screw, 5/16-18 x .62	46	783-0738	Seat Pivot Bracket
19	738-0380	Shoulder Screw, .5 x .27, 3/8-16	47	783-0739	Seat Adjustment Lever
20	741-0225	Hex Flange Bearing	48	783-0753	Seat Adjustment Selector
21	741-0715	Snap Flange Bearing	49	757-0372	Seat, Radiant Yellow w/ Drain Holes
22	746-0968	Lift Cable, 16.16	50	735-0657	LH Foot Pad
23	747-1111	Lift Handle	51	735-0656	RH Foot Pad
24	756-1154	Roller Pulley		726-3046	Foot Pad Clips (Not Shown)
25	783-0678	Arm Lift	52	731-2107	Shift Cover
26	783-0720A	Deck Stabilizer Bracket	53	712-0292	Speed Nut, 1/4-20
27	710-0260	Carriage Bolt, 5/16 x .62	54	710-0924	Phillips Screw, 1/4-20 x .75
28	710-0604	Self Tapping Screw, 5/16-18 x .625	55	631-0009	Shift Knob


NOTE: For **painted parts**, please refer to the list of color codes below. Please add the applicable color code, wherever needed, to the part number to order a replacement part. For instance, if a part numbered 700-xxxx is painted Yard-Man Green, the part number to order would be 700-xxxx-0665.

Yard-Man Green: 0665

Yard-Man Yellow: 0674

Powder Black: 0637

Model 804

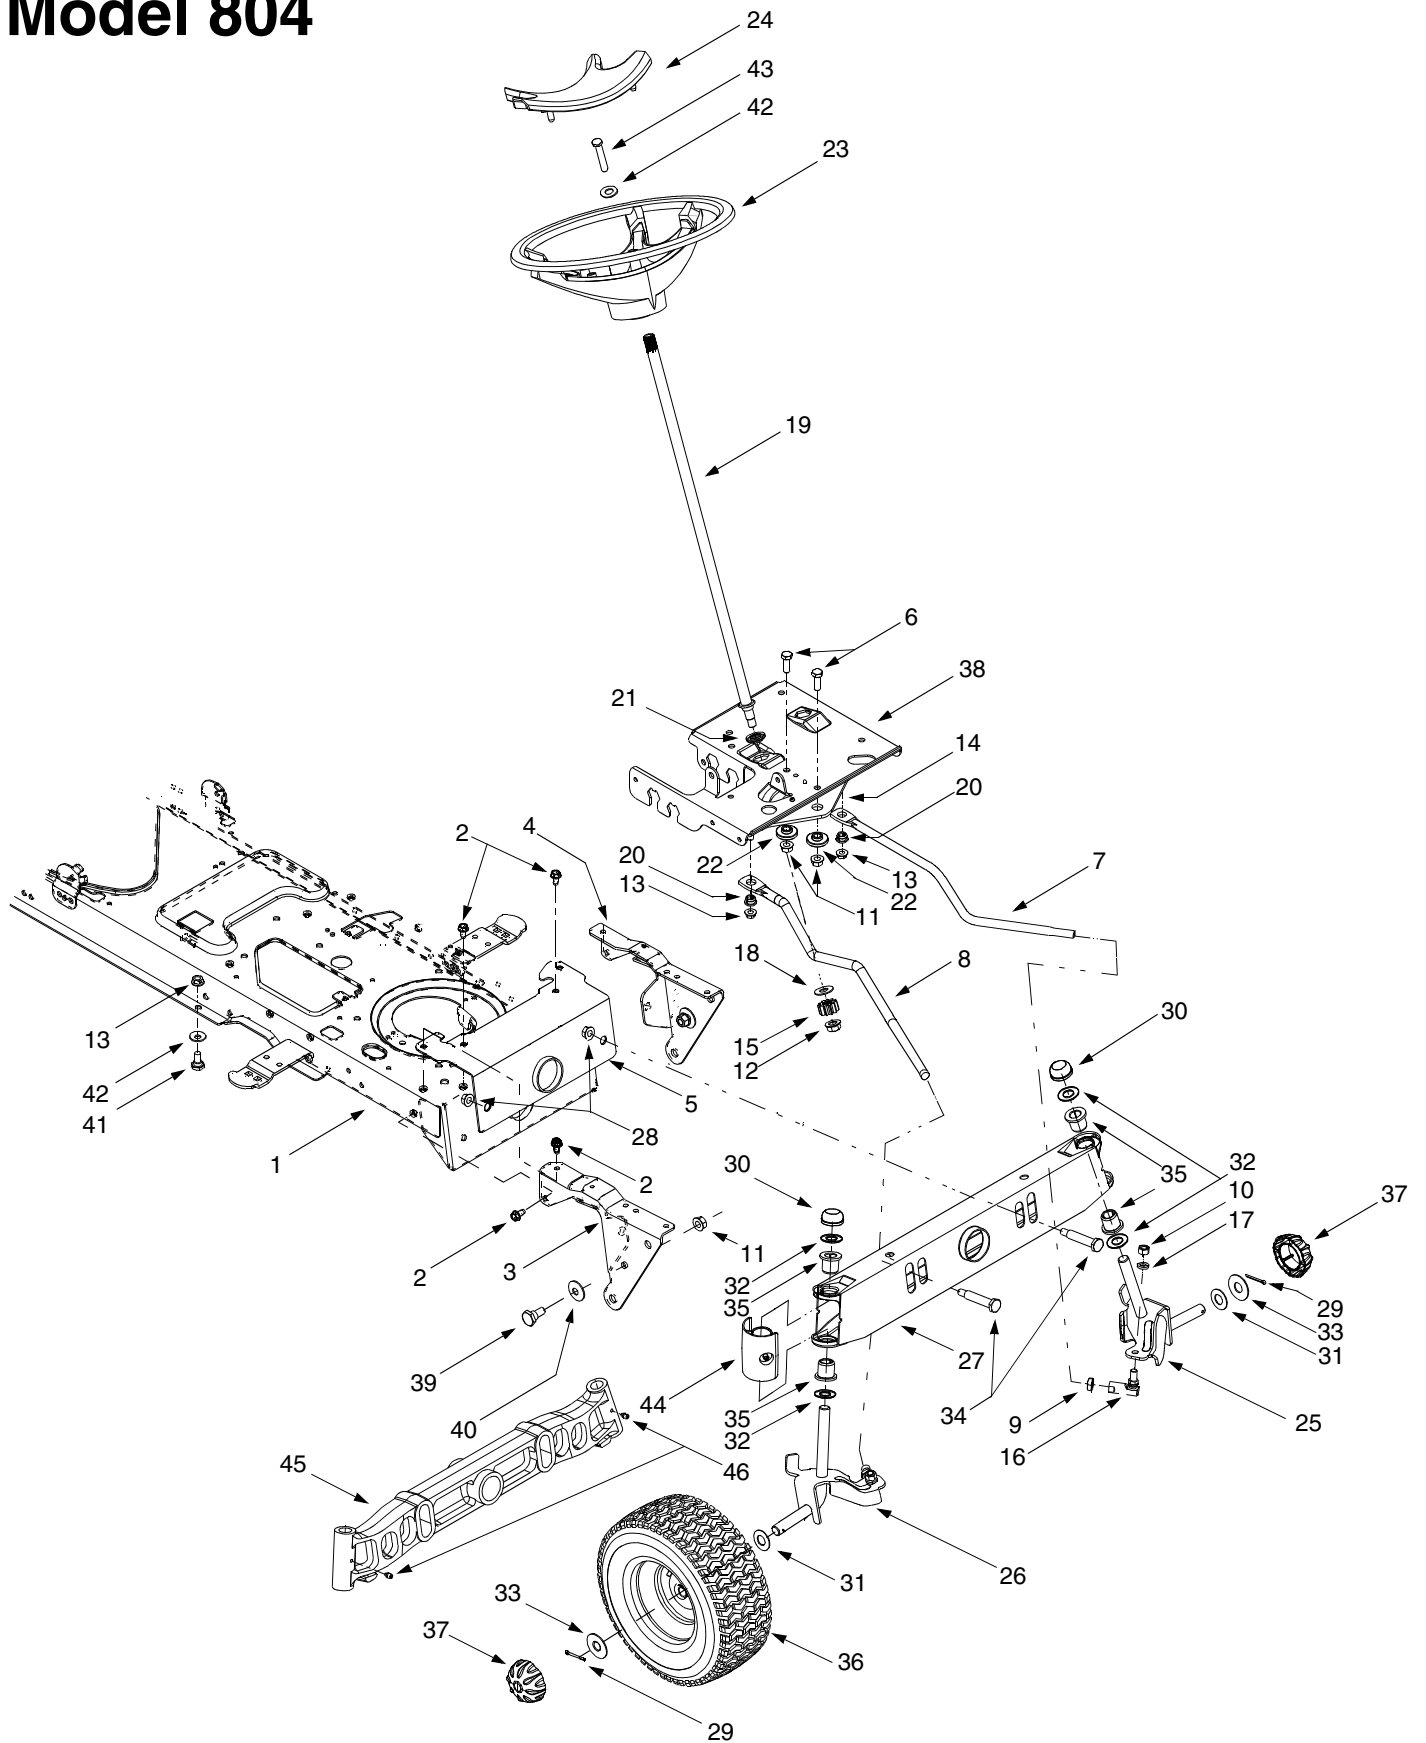

Steering Assembly

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	683-0304	Lower Frame Assembly	28	712-0431	Flange Lock Nut, 3/8-16
2	710-0604A	Self-tapping Screw, 16-18 x .625	29	714-0470	Cotter Pin
3	783-0726A	RH Pivot Support Bracket	30	726-0341	Push Cap, .750
4	783-0727	LH Pivot Support Bracket	31	736-0162	Flat Washer, .64 x 1.0 x .12
5	783-0728	Pivot Bar Bracket	32	736-0187	Flat Washer, .64 x 1.24 x .06
6	710-0514	Hex Cap Screw, 3/8-16 x 1 (Grade 5)		736-0316	Flat Washer, .78 x 1.59 x .06
7	711-1409	LH Drag Link	33	736-0285	Flat Washer, .635 x 1.589 x .06
8	711-1408	RH Drag Link	34	738-1011	Shoulder Screw, .5 x 2.2, 3/8-16
9	712-0240	Jam Nut, 7/16-20 (Grade 2)	35	741-0660	Flange Bearing, .760 ID x .937 OD
10	712-0241	Hex Nut, 3/8-24 (Grade 2)	36	634-0183	Wheel Assembly Complete, 16 x 6.5 x 8
11	712-0431	Flange Lock Nut, 3/8-16		634-0182	Rim Only
12	712-0459	Flange Lock Nut, 7/16-20		734-0255	Air Valve (Not Shown)
13	712-3004A	Flange Lock Nut, 5/16-18		734-1727	Tire Only, Square Shoulder
14	717-1550A	Steering Gear, 11/90 Ratio		741-0516	Plastic Flange (Not Shown)
15	717-1554	Steering Pinion Gear		741-0990	Plastic Flange w/ Fitting (Not Shown)
16	723-0448A	Ball Joint, 7/16-20	37	734-2290	Hub Cap
17	736-0169	Lock Washer, 3/8	38	783-0653B	Steering Support Bracket
18	736-3084	Flat Washer, .51 x 1.12 x .06	39	738-0143	Shoulder Screw, 3/8-16
19	738-1001	Steering Shaft, .625 OD x 24.4	40	736-0331	Bell Washer, .39 x 1.13 x .062
20	741-0475	Plastic Bushing, .38 ID	41	738-0140	Shoulder Screw, .435 x .178, 5/16 x .56
21	741-0656	Hex Flange Bearing, 5/8	42	736-0242	Bell Washer, .34 x .872
22	738-0372	Shoulder Spacer, .38 ID	43	710-0643	Hex Bolt, 5/16-18 X 1
23	731-1869	Steering Wheel	44	731-1291A	Pivot Bar End Cap
24	731-1904	Steering Wheel Cap w/ Icon	45	719-0525A	Cast Iron Pivot Bar (if so equipped)
25	638-0017	LH Axle Assembly, .750 Diameter	46	737-3000	Lube Fitting, 3/16 (if so equipped)
26	638-0018	RH Axle Assembly, .750 Diameter	47	710-1260A	Self-tapping Screw, 5/16-18 x .750
27	683-0128A	Pivot Bar			

NOTE: For **painted parts**, please refer to the list of color codes below. Please add the applicable color code, wherever needed, to the part number to order a replacement part. For instance, if a part numbered 700-xxxx is painted Yard-Man Green, the part number to order would be 700-xxxx-0665.

Yard-Man Green: 0665

Yard-Man Yellow: 0674


Powder Black: 0637

[illegible]

Drive System

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	618-0375	Variable-speed Bracket Assembly	45	783-0669	Idler Bracket
2	618-0376	Two-speed Transmission Assembly	46	647-0031	Brake Control Shaft Assembly
3	631-0009	Shifter Knob	47	647-0032	Speed Control Shaft Assembly
4	647-0037	Shift Lever	48	683-0266	AutoDrive™ Pedal Assembly
5	656-0050	Variable-speed Pulley Assembly	49	710-1135	Self Tapping Screw, 5/16-18 x 2.5
6	656-0051	Transmission Pulley, 8.5 x .5 - 36	50	711-0736	Ferrule, 1/4-20
7	683-0251	Double-idler Bracket	51	711-1363	Pin, 3/8-16 x 2.43
8	710-0189	Hex Cap Screw, 5/16-18 x 3	52	714-0104	Cotter Pin
9	710-0227	Self Tapping Screw, #8-18 x .5	53	732-0437	Compression Spring, .34 OD x 1.0
10	710-0347	Hex Cap Screw, 3/8-16 x 1.75	54	732-0955	Extension Spring, .5 OD x 1.41
11	710-0528	Hex Cap Screw, 5/16-18 x 1.25	55	735-0662	AutoDrive™ Pedal Pad
12	710-0778	Self-tapping Screw, 1/4-20 x 1.5	56	735-3049	Brake Pedal Pad
13	710-0604A	Self Tapping Screw, 5/16-18 x .625	57	736-0140	Flat Washer, .281 x .5 x .0625
14	710-3011	Hex Cap Screw, 3/8-16 x 2.25	58	736-0142	Flat Washer, 9/32 x 1/2 x 1/16
15	711-0677	Ferrule, 5/16 x .312 Dia.	59	736-0187	Flat Washer, .64 x 1.24 x .06
16	712-0181	Hex Jam Nut, 3/8-16	60	736-0204	Flat Washer, .344 x .062 x .03
17	712-0378	Hex Nut, 7/16-20	61	738-0155	Shoulder Screw, .437 x 1.62
18	712-0431	Flange Lock Nut, 3/8-16	62	738-0507B	Shoulder Screw, .5 x .434
19	712-0798	Hex Nut, 3/8-16	63	741-0225	Hex Flange Bearing
20	712-3004A	Flange Lock Nut, 5/16-18	64	741-3065A	Split Hex Flange Bearing
21	712-3008	Hex Jam Nut, 3/8-16	65	747-1137	Cruise Control Rod
22	714-0111	Cotter Pin	66	747-1138	Brake Lock Control Rod
23	723-3018	Ball Joint, 3/8-24	67	748-0413	Cruise Latch
24	725-1713	Spring Switch	68	748-0415A	Spacer, 5/16 x 1.54
25	726-0320	Insulator Nut Plate	69	783-0653B	Steering Support Bracket
26	732-0384	Extension Spring, .62 Dia. x 6.12	70	783-0732	AutoDrive™ Lockout Bracket
27	732-0716	Extension Spring, .59 OD x 4.0	71	783-0773	Brake Pedal
28	736-0105	Bell Washer, .401 x .870 x .063	72	783-0780A	Neutral Return Bracket
29	736-0169	Lock Washer, 3/8	73	783-0693	Axle Bracket
30	736-0275	Flat Washer, 5/16	74	683-0304	Lower Frame Assembly
31	736-0407	Bell Washer, .45 x 1.0 x .062	75	732-0963	Extension Spring, .5 OD x 6.37
32	736-0642	Flat Washer, .44 x .75 x .06	76	731-2290	Hub Cap
33	736-3010	Flat Washer, .407 x .812 x .135	77	712-3050	Lug Nut, 7/16-14
34	738-0322	Shoulder Screw, .625 Dia. x .21	78	634-0132	Wheel Assembly Complete, 23 x 9.5 x 12
35	747-1122	Brake Rod		634-0194	Rim Only
36	747-1123A	Belt Guard		734-0255	Air Valve
37	747-1127	Idler Adjustment Rod, 3/8		734-1728	Tire Only, Square Shoulder
38	710-1026	Self-tapping Screw, 1/4-20 x 1.75	79	750-0768	Split Spacer, .25 x .37 x 1.32
39	747-1185	Transmission Belt Guard Rod	80	750-0566	Spacer, .372 x .26 x 1.03
40	748-0416	Shoulder Spacer, .380 ID	81	712-3026	Jam Nut, 3/4-16
41	754-0467	Variable-speed Belt	82	736-0316	Flat Washer, .78 x 1.59 x .06
42	754-0468	Drive Belt	83	710-1260A	Hex Screw, 5/16-18 x .75
43	756-0981	Flat Idler, 2.75 OD	84	747-1185	Transmission Belt Guard Rod
44	783-0667	Transmission Torque Bracket	85	710-0599	Self Tapping Screw, 1/4-20 x .5

Model 804

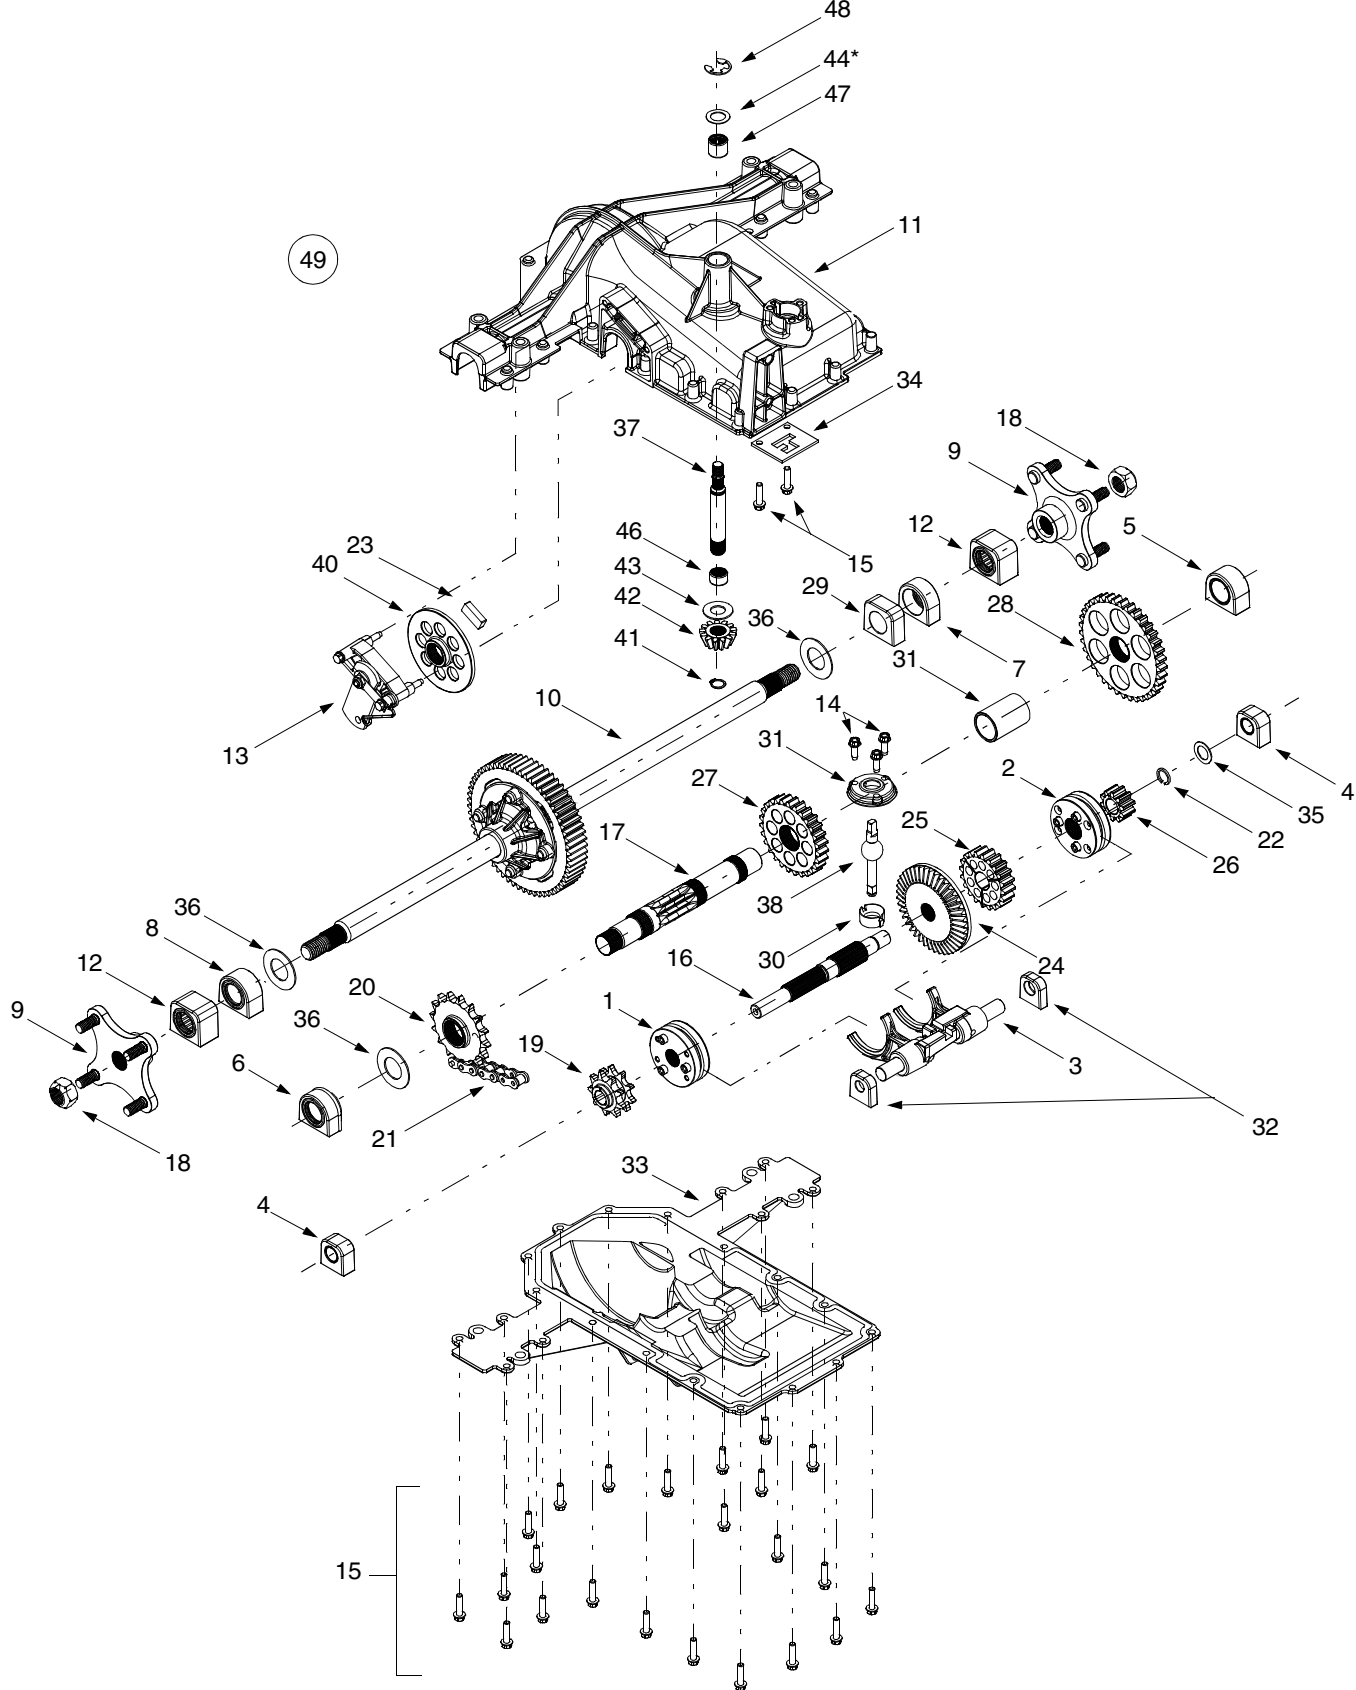

Two-speed Transmission


REF. NO.	PART NO.	DESCRIPTION
1	618-0225	Reverse Collar Assembly
2	618-0226	Hi-Lo Collar Assembly
3	618-0227A	Shift Fork Assembly
4	618-0284	Detent Block Assembly
5	618-0285	Output Bearing Block Assembly
6	618-0286	Output Seal Bearing Block Assembly
7	618-0287	Inboard Sealed Axle Block Assembly
8	618-0302	Inboard Sealed Axle Block Assembly
9	618-0365	Wheel Hub Assembly
10	618-0368	Differential Axle Assembly
11	719-0379A	Upper Housing
12	641-0002A	Axle Bearing Block Assembly
13	661-0012	Brake Assembly
14	710-0642	Self-tapping Screw, 1/4-20 x .75
15	710-0788	Self-tapping Screw, 1/4-20 x 1.0
16	711-1051A	Drive Shaft
17	711-1216	Output Shaft
18	712-1329	Nut, 3/4-16
19	713-0446	9-tooth Sprocket
20	713-0447	16-tooth Sprocket
21	713-0448	22-link Chain, .625
22	716-0131	External Snap Ring
23	717-0678	Brake Pad
24	717-1438	41-tooth Bevel Gear
25	717-1439	20-tooth Spur Gear
26	717-1440	10-tooth Spur Gear
27	717-1441	27-tooth Spur Gear
28	717-1442	37-tooth Spur Gear
29	718-0500	Inner Axle Bearing Block
30	718-0504	Shifter Insert
31	718-0505	Shifter Cover
32	718-0537	Shifter Bearing Block
33	719-0385	Lower Housing
34	718-0540	Lockout Plate
35	736-0337	Flat Washer, 5/8 x 1.0
36	736-3046A	Flat Washer, 1.01 x 1.86 x .060
37	711-1235	Input Shaft
38	747-1140	Shift Lever
39	750-1033A	Spacer, 1.13 x 1.38 x 1.968
40	761-0215	Disc Brake
41	716-0114	Retaining Ring, .56
42	717-1463	13-tooth Bevel Gear
43	736-0335	Flat Washer
44	736-0336	Flat Washer, 5/8 x 1.0 x .030*
	736-0337	Flat Washer, 5/8 x 1.0 x .040*
	736-0349	Flat Washer, 5/8 x 1.0 x .020*
46	741-0335	Needle Bearing
47	741-0696	Needle Bearing
48	716-0231	E-ring, .75
49	618-0376	Transmission Assembly Complete

NOTE: Transmission has a grease capacity of 32 oz. Order part number 737-0148.

NOTE: Upon reassembling transmission input shaft for any reason, refill its cavity with approximately 2/3 oz. of grease. Order part number 737-0289.

*Use appropriate flat washer in this application allowing no more than .012 maximum end play

Model 804

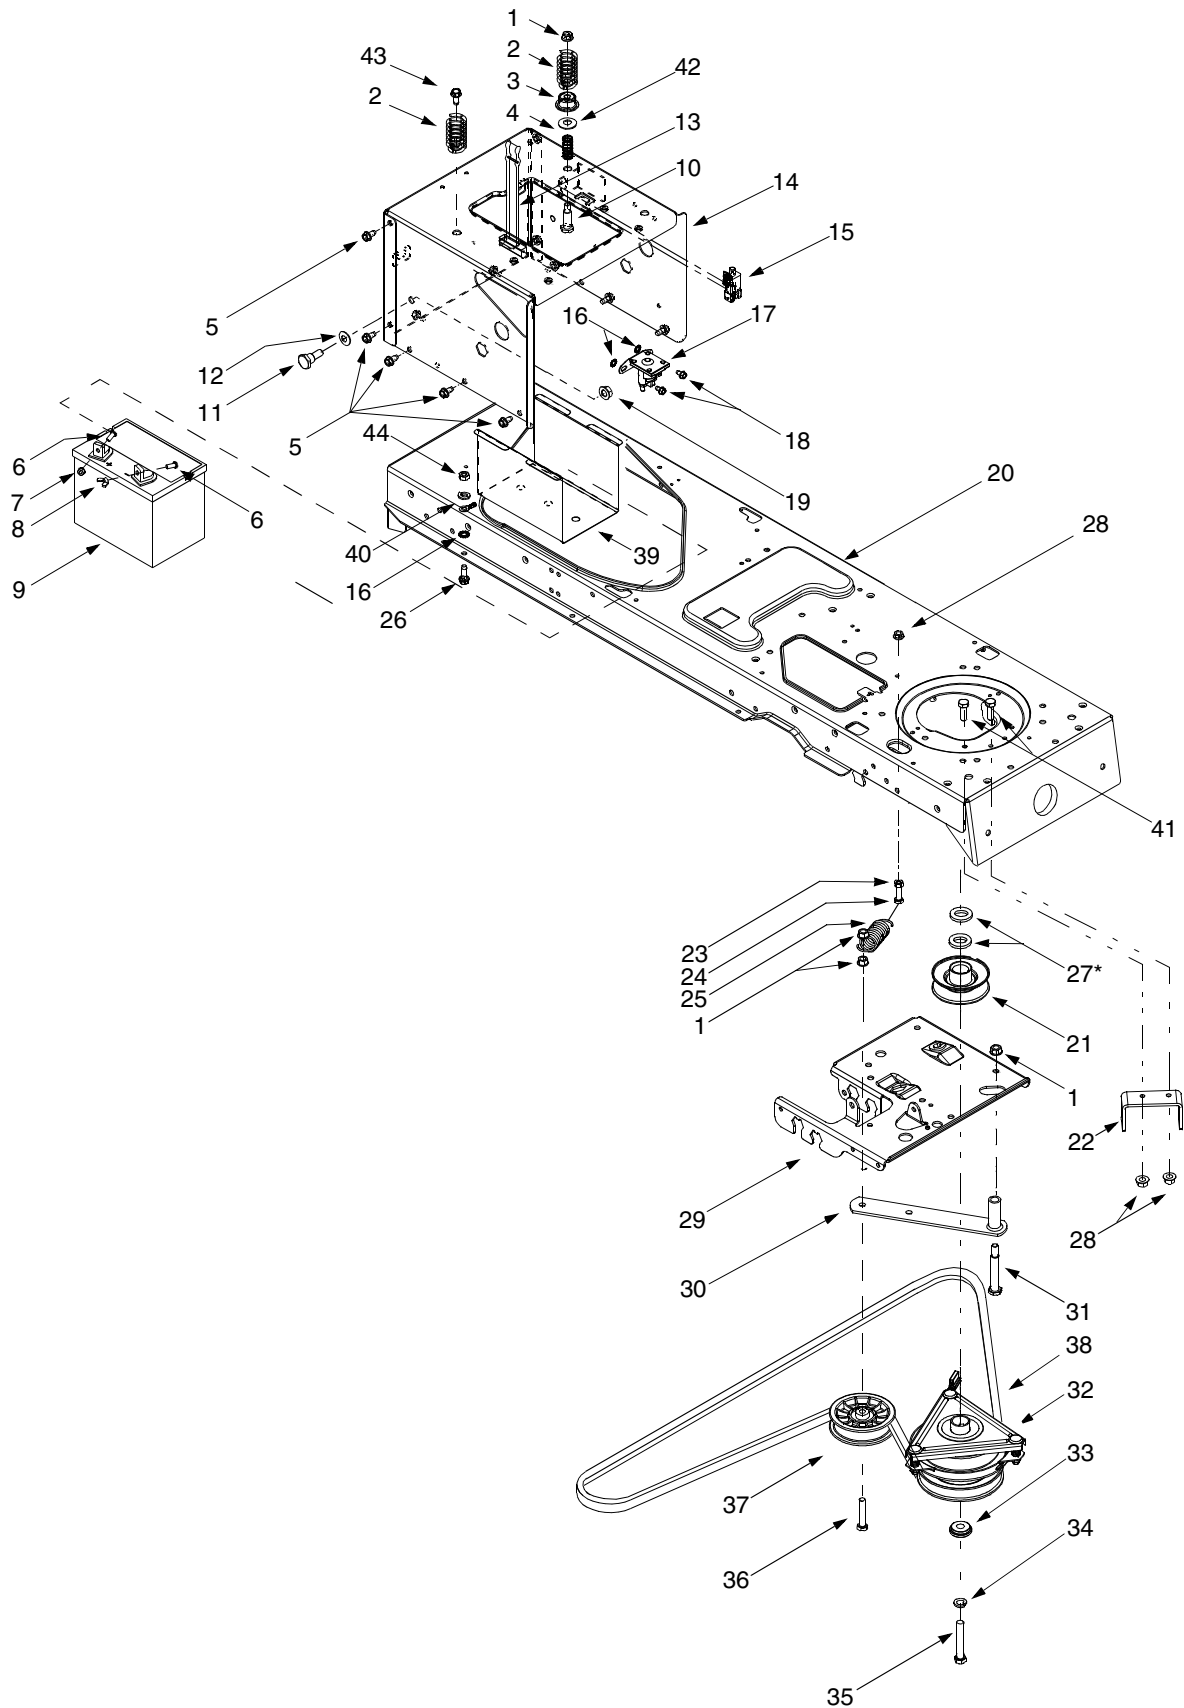

Power Take-off Systems

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	712-0431	Flange Lock Nut, 3/8-16	24	710-3180	Hex Cap Screw, 5/16-18 x 1.75 (Grade 5)
2	732-0735	Compression Spring, 1.318 x 2.37	25	732-0978	Extension Spring, 1.2 OD x 3.638
3	783-0733	Spacer Cup, 1.5 OD	26	710-0642	Self-tapping Screw, 1/4-20 x .750
4	732-0956	Compression Spring, .66 OD x 1.5	27	736-0277	Flat Washer, 1.031 x 1.62 x .095*
5	710-0604A	Self-tapping Screw, 5/16-18 x .625	28	712-3004A	Flange Lock Nut, 5/16-18
6	710-0751	Hex Cap Screw, 1/4-20 x .62	29	783-0653B	Steering Support Bracket
7	712-0271	Hex Sems Nut, 1/4-20	30	683-0294	Idler Bracket Assembly
8	712-3044	Wing Nut, 1/4-20	31	738-3056	Shoulder Screw, 1/2 Diameter x 2.5
9	725-1706	12-volt Battery, 270 CCA	32	717-1708	Electric PTO Clutch
10	738-1014	Shoulder Screw, .5 x 1.25, 3/8-16	33	738--0785	Shoulder Spacer, 1.38 x .445 x .36
11	738-1020	Shoulder Screw, .625 x .5, 7/16-20	34	736-0171	Lock Washer, 7/16
12	736-0407	Bell Washer, .45 x 1.0 x .062	35	710-3157	Hex Cap Screw, 7/16-20 x 3.25 (Grade 5)
13	723-0444	Battery Strap		710-0561	Hex Cap Screw, 7/16-20 x 2.5 (Grade 5)*
14	783-1033	Hitch Plate	36	710-3011	Hex Cap Screw, 3/8-16 x 2.25 (Grade 5)
15	725-1747	Safety Interlock Plunger Switch	37	756-0627	Flat Idler Pulley, 3.5 OD
16	736-0222	Lock Washer, 1/4	38	754-0476	PTO Belt (46-inch Decks)
17	725-1426	Solenoid, 12-Volt, 100 Amp		754-0475	PTO Belt (50-inch Decks)
18	710-0599	Self-tapping Screw, 1/4-20 x .5	39	783-0349	Battery Tray
19	712-0459	Flange Lock Nut, 7/16-20	40	736-0119	Lock Washer, 5/16
20	683-0304	Lower Frame Assembly	41	710-3025	Hex Cap Screw, 5/16-18 x .625
21	756-0639A	Engine Pulley, 3.56 OD	42	736-0105	Bell Washer, .401 x .870 x .063
22	783-1003	Electric Clutch Anti-rotation bracket	43	710-1650	Self-tapping Screw, 5/16-18 x .875
23	712-3010	Hex Nut, 5/16-18	44	712-3006	Hex Nut, 1/4-20

*Found on units equipped with a Kohler engine ONLY.

NOTE: For **painted parts**, please refer to the list of color codes below. Please add the applicable color code, wherever needed, to the part number to order a replacement part. For instance, if a part numbered 700-xxxx is painted Yard-Man Green, the part number to order would be 700-xxxx-0665.


Yard-Man Green: 0665

Yard-Man Yellow: 0674


Powder Black: 0637

Model 804

46-inch Deck

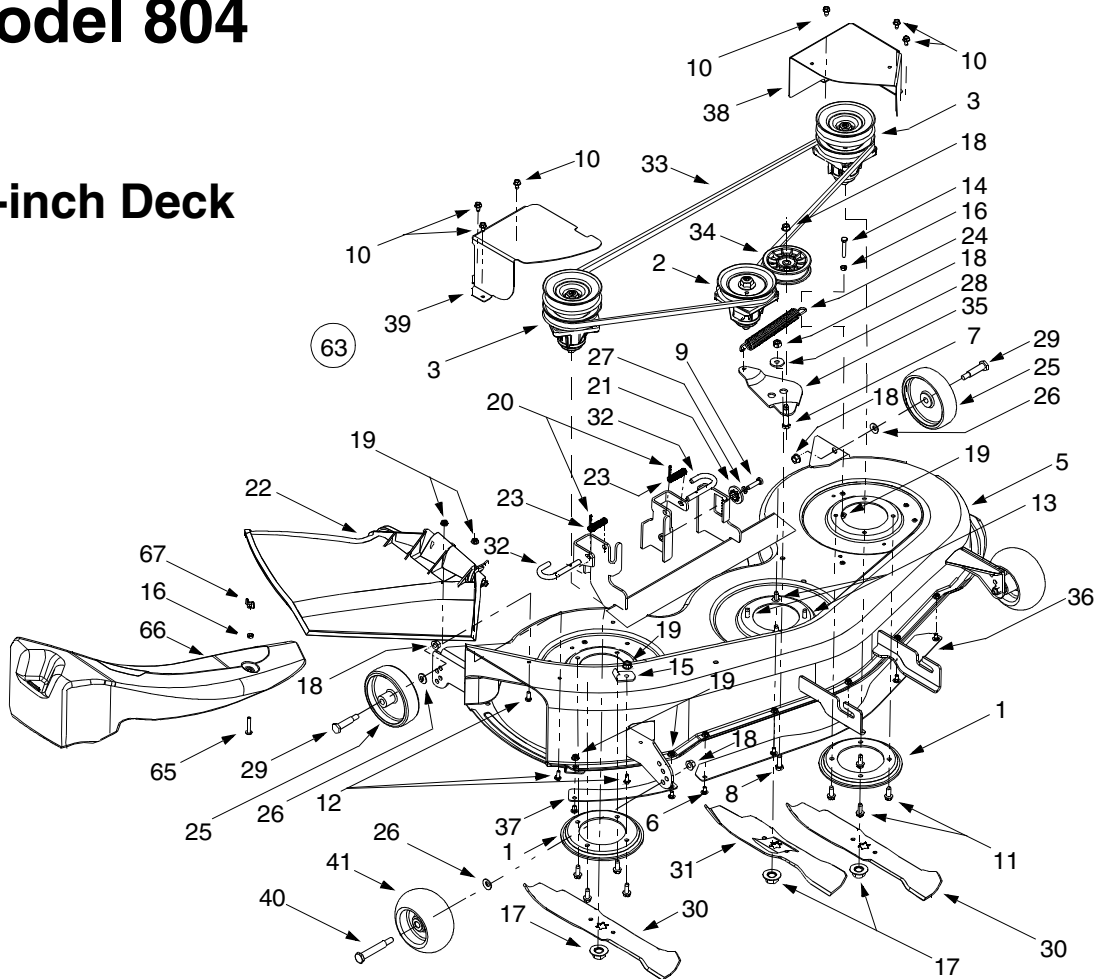

50-inch Deck

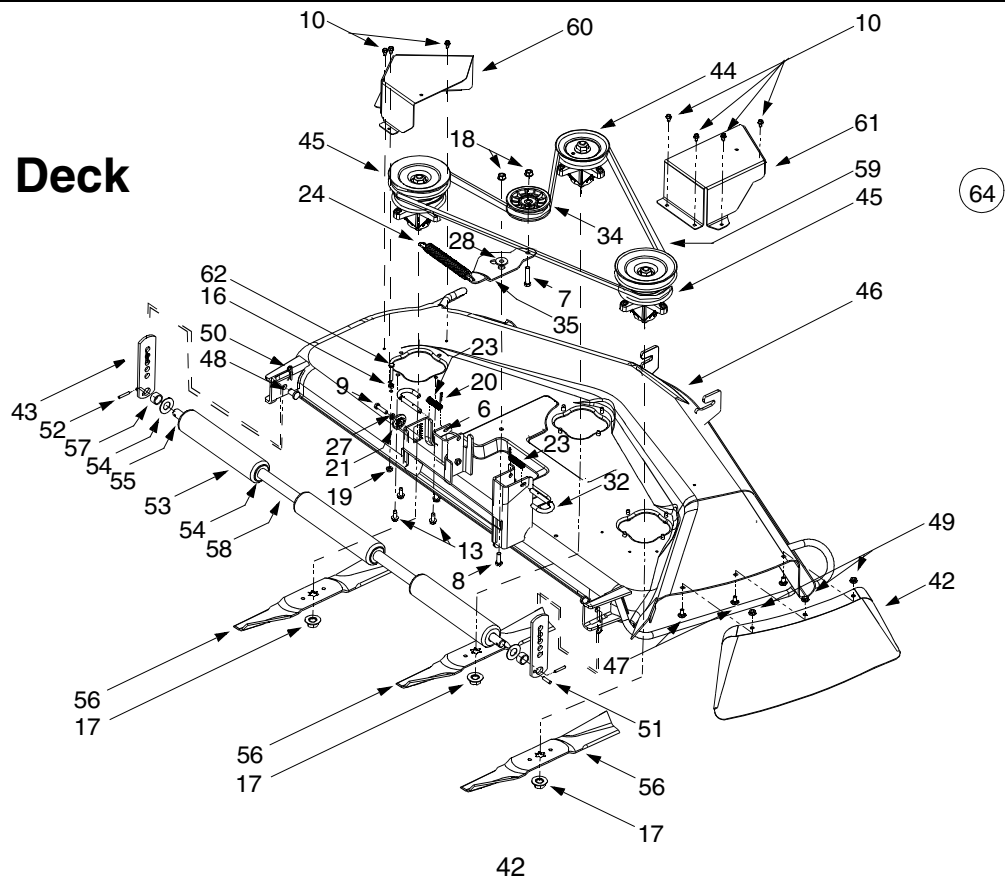

Cutting Decks

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	17982	Reinforcement Spindle Plate	34	756-0627	Flat Idler Pulley, 3.5 OD
2	618-0240	Center Spindle Assembly, 5 Dia.	35	783-0139	Idler Bracket
	756-0959	Pulley Only	36	783-0141	Center Deck Skirt
3	618-0241	Double Pulley Spindle Assembly	37	783-0142	RH Deck Skirt
	756-0603	Double Pulley Only	38	783-0747	LH Belt Cover
4	683-0254	Deck Adjustment Bracket w/ Weld Nut	39	783-0805A	RH Belt Cover
5	683-0199B	46-inch Deck Shell	40	738-3056	Shoulder Screw, .5 x 2.5
6	710-0167	Carriage Screw, 1/4-20 x .5	41	734-30586	Deck Wheel, 5
7	710-0347	Hex Cap Screw, 3/8-16 x 1.75	42	12649	Chute Guard
8	710-0514	Hex Cap Screw, 3/8-16 x 1.0	43	12650	Height Adjustment Bracket
9	710-0528	Hex Cap Screw, 5/16-18 x 1.25	44	618-0268	Center Spindle Assembly, 5 Dia.
10	710-0599	Self Tapping Screw, 1/4-20 x .5	45	618-0269	Double Pulley Spindle Assembly
11	710-0650	Self Tapping Screw, 5/16-18 x .875	46	683-0196	50-inch Deck Shell
12	710-0751	Hex Cap Screw, 1/4-20 x .62	47	710-0260	Carriage Bolt, 5/16-18 x .62
13	710-1260A	Self Tapping Screw, 5/16-18 x .75	48	711-0332	Clevis Pin, .50 Dia. x .78
14	712-0106	Hex Cap Screw, 1/4-20 x 1.25 (Grade 5)	49	712-3004A	Hex Flange Lock Nut, 5/16-18 (Grade 5)
15	16606	Retainer Hook	50	714-0145	Click Pin, .092 x 1.64
16	712-0291	Center Lock Nut, 1/4-20	51	715-0108	Spring Pin, 1/4 Dia. x 1
17	712-0417A	Hex Flange Nut, 5/8-18	52	715-0246	Spring Pin, 3/16 x 1.25
18	712-0431	Flange Lock Nut, 3/8-16	53	731-0335	Deck Roller
19	712-3027	Hex Flange Lock Nut, 1/4-20	54	736-0316	Flat Washer, .78 x 1.59 x .06
20	714-0104	Internal Cotter Pin, .072 x 1.12	55	738-0295	Deck Roller Shaft, .75 Dia. x 47.12
21	717-1553A	Deck Adjustment Gear	56	742-0623	Blade, Star Center, 17.3
22	731-1032B	Side Discharge Chute Assembly	57	750-0212	Spacer, .752 x 1.0 x .53
23	732-0306	Compression Spring, .406 x .531 x 1.75	58	750-0288	Spacer, .82 x 1.0 x 5.75
24	732-0594A	Extension Spring, .91 x 7.33	59	754-0291A	Deck Belt
25	734-0973	Deck Wheel, 5 x 1.38	60	783-0746	Belt Cover, L.H.
26	736-0105	Bell Washer, .401 x .87 x .063	61	783-0793	Belt Cover, R.H.
27	736-0119	Lock Washer, 5/16	62	710-3288	Hex Cap Screw, 1/4-20 x 1.62
28	738-0347	Shoulder Spacer, .625 x .169	63	753-0875	46-inch Deck Assembly Complete
29	738-0373	Shoulder Spacer, .498 x 1.53	64	753-0877	50-inch Deck Assembly Complete
30	742-0611	Three-in-one Blade, Star Center, 16.28	65	710-0578	Screw, 1/4-20 x 1.5 (if so equipped)
31	742-0612	Three-in-one Blade, Star Center, 14.88	66	731-1636	Mulch Plug, 46-inch Decks (if so equipped)
32	747-1116	Deck Release Pin	67	712-3087	Wing Nut, 1/4-20 (if so equipped)
33	754-0474	Deck Belt			

NOTE: For **painted parts**, please refer to the list of color codes below. Please add the applicable color code, wherever needed, to the part number to order a replacement part. For instance, if a part numbered 700-xxxx is painted Yard-Man Green, the part number to order would be 700-xxxx-0665.


Yard-Man Green: 0665

Yard-Man Yellow: 0674


Powder Black: 0637

Model 804

Briggs & Stratton Intek Twin

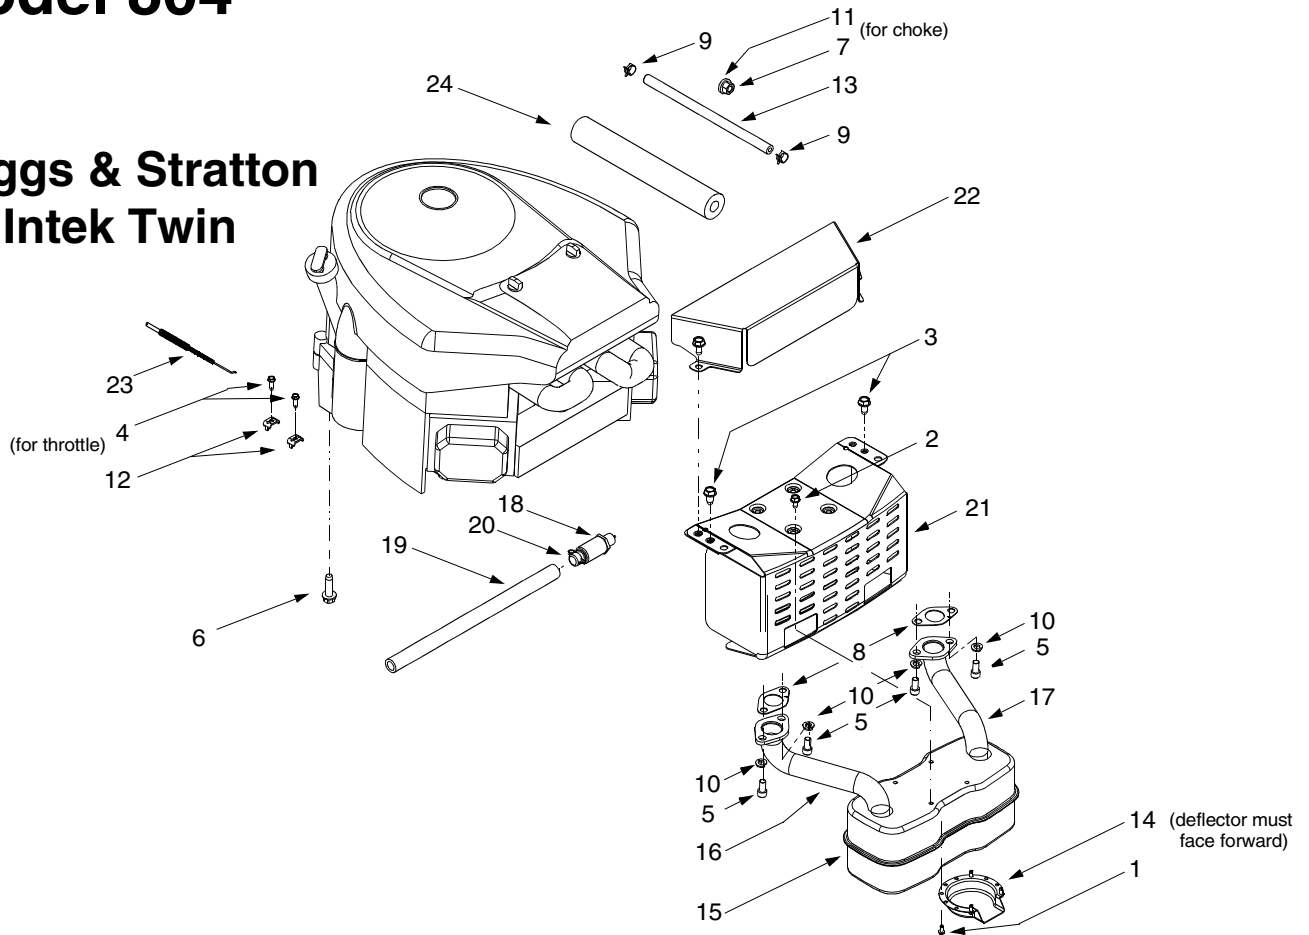

Kohler Twin-cylinder

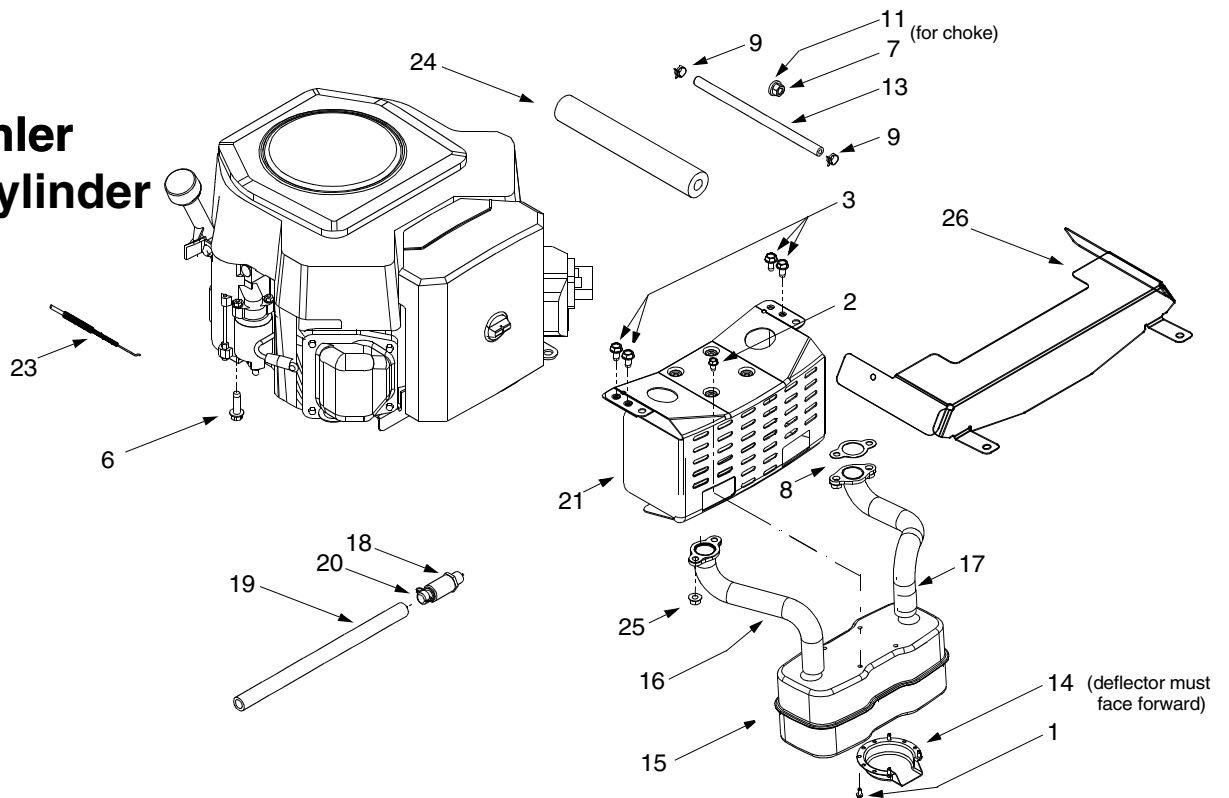

Engine Accessories

REF. NO.	PART NO.	DESCRIPTION
1	710-0148	Self Tapping Screw, #8-32 x .375
2	710-0599	Self Tapping Screw, 1/4-20 x .5
3	710-0604A	Self Tapping Screw, 5/16-18 x .625
4	710-1237	Screw, #10-32 x .625
5	710-1314	Socket Cap Screw, 5/16-18 x .625
6	710-1315	Self Tapping Screw, 3/8-16 x 1.25
7	712-3017	Hex Nut, 3/8-16
8	721-0460	Exhaust Gasket (Intek Twin)
	721-0377	Exhaust Gasket (Kohler Twin)
9	726-0205	Hose Clamp
10	736-0119	Lock Washer, 5/16
11	736-0300	Flat Washer, .406 x .875 x .059
12	751B221535	Casing Clamp
13	751-0535	Fuel Line Hose
14	751-0564	Muffler Deflector
15	751-0616	Muffler (Intek Twin)
	751-0805	Muffler (Kohler Twin)
16	751-0650	RH Exhaust Pipe (Intek Twin)
	751-0645	RH Exhaust Pipe (Kohler Twin)
17	751-0651	LH Exhaust Pipe (Intek Twin)
	751-0644A	LH Exhaust Pipe (Kohler Twin)
18	751-3140	Oil Drain Valve
19	751-3141-12	Oil Drain Hose
20	751-3142	Oil Drain Cap
21	783-0615	Muffler Heat Shield
22	783-0625B	Engine Heat Shield (Intek Twin)
23	746-1086	Throttle Cable (Intek Twin & Kohler Twin)
24	722-0263	Foam (fits over fuel line)
25	712-3086	Flange Nut, M8 x 1.25-6
26	783-0881	Heat Shield (Kohler Twin) (Mounts to Grille Front)

NOTE: For **painted parts**, please refer to the list of color codes below. Please add the applicable color code, wherever needed, to the part number to order a replacement part. For instance, if a part numbered 700-xxxx is painted Yard-Man Green, the part number to order would be 700-xxxx-0665.

Yard-Man Green: 0665

Yard-Man Yellow: 0674

Powder Black: 0637