




Illustrated Parts List

AutoDrive™ Garden Tractor
Model U804H

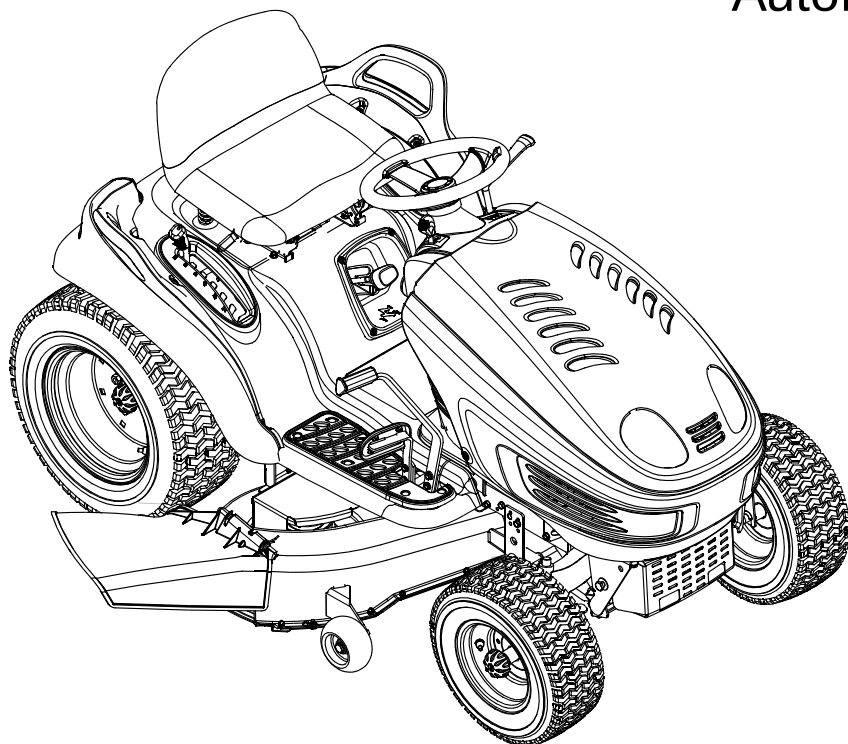


IMPORTANT: READ SAFETY RULES AND INSTRUCTIONS CAREFULLY

Warning: This unit is equipped with an internal combustion engine and should not be used on or near any unimproved forest-covered, brush-covered or grass-covered land unless the engine's exhaust system is equipped with a spark arrester meeting applicable local or state laws (if any). If a spark arrester is used, it should be maintained in effective working order by the operator. In the State of California the above is required by law (Section 4442 of the California Public Resources Code). Other states may have similar laws. Federal laws apply on federal lands. A spark arrester for the muffler is available through your nearest engine authorized service dealer or contact the service department, P.O. Box 361131 Cleveland, Ohio 44136-0019.

MTD LLC, P.O. BOX 361131 CLEVELAND, OHIO 44136-0019

SECTION 12: MODEL U804H PARTS LIST

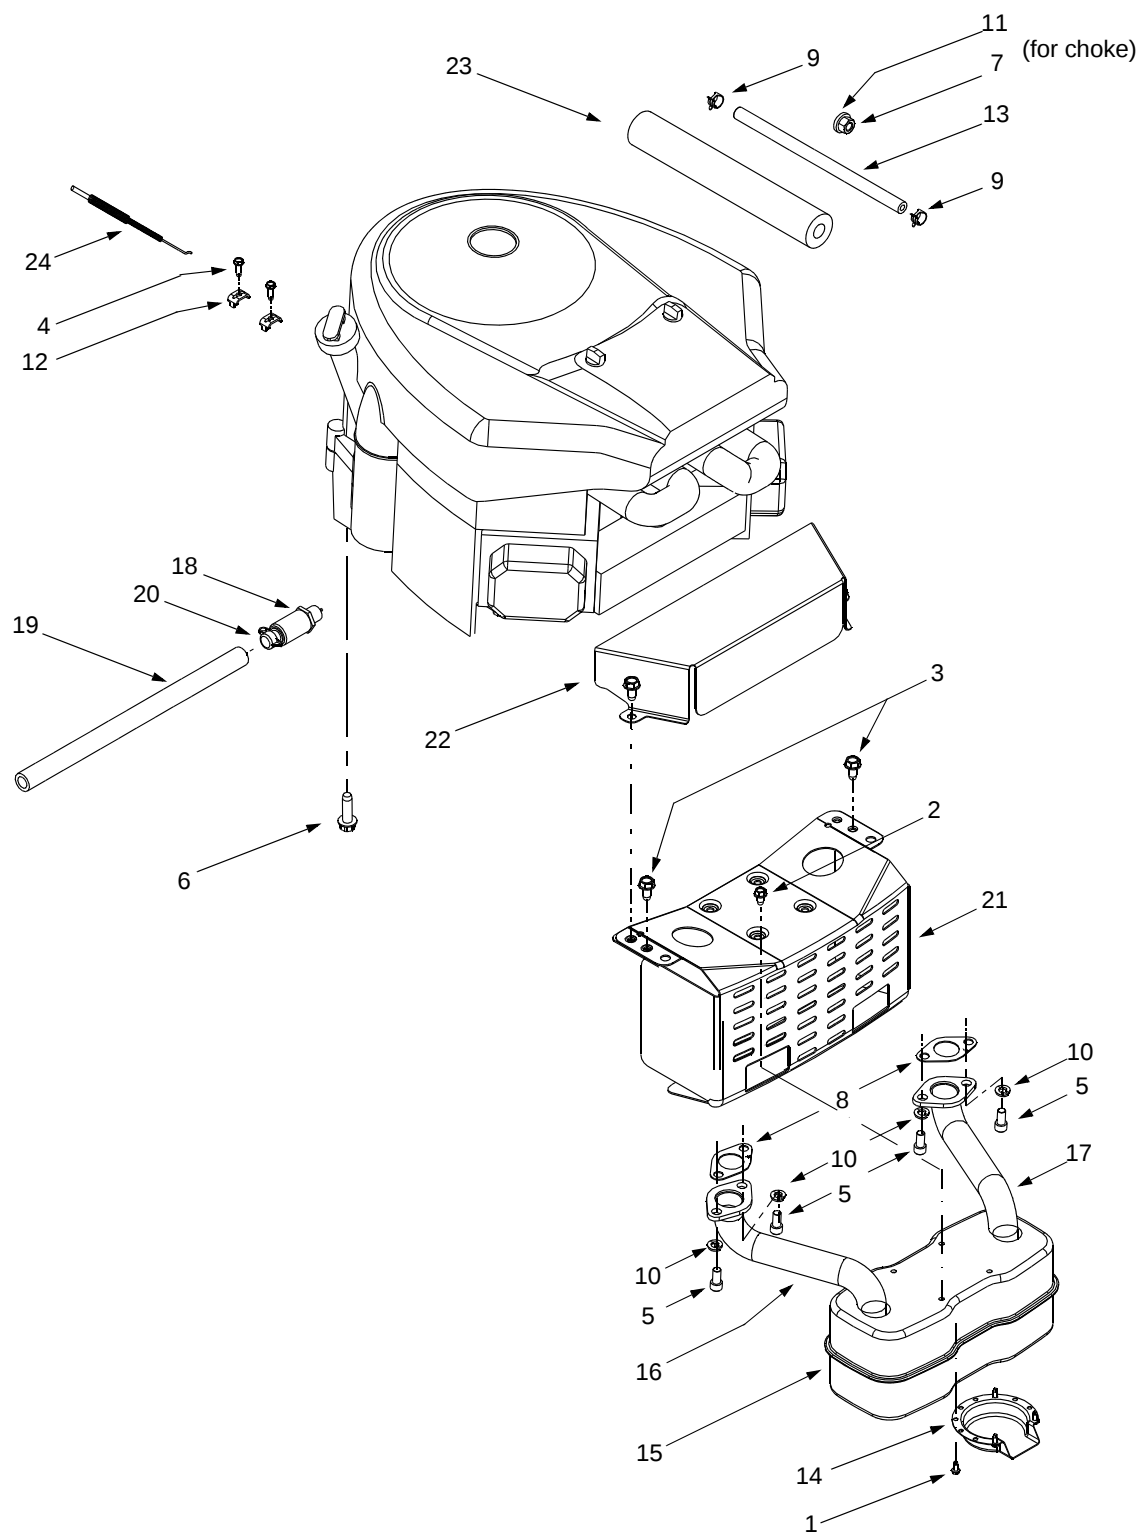

Model U804H

REF. NO.	PART NO.	DESCRIPTION
1	710-0227	Self-tapping Screw, #8-18 x.5
2	710-0599	Self-tapping Screw, 1/4-20 x.5
3	710-0726	Self-tapping Screw, 5/16-12 x.750
4	710-1237	Screw, #10-32 x.625
5	710-1314A	Socket Cap Screw, 5/16-18 x.625
6	710-1315	Self-tapping Screw, 3/8-16 x 1.25
7	712-3017	Hex Nut, 3/8-16
8	721-0460	Exhaust Gasket
9	726-0205	Hose Clamp
10	736-0119	Lock Washer, 5/16
11	736-0300	Flat Washer
12	751B221535	Casing Clamp
13	751-0535	Fuel Line Hose
14	751-0564	Muffler Deflector
15	751-0616	Muffler, Twin Inlet
16	751-0650	RH Exhaust Pipe
17	751-0651	LH Exhaust Pipe
18	751-3140	Oil Drain Valve
19	751-3141	Oil Drain Hose
20	751-3142	Oil Drain Cap
21	783-0615B	Muffler Heat Shield
22	783-0625C	Engine Heat Shield
23	722-0263	Foam (fits over fuel line)
24	746-1086	Throttle Cable


NOTE: For **painted parts**, please refer to the list of color codes below. Please add the applicable color code, wherever needed, to the part number to order a replacement part. For instance, if a part numbered 700-xxxx is painted Yard-Man Green, the part number to order would be 700-xxxx-0665.

Yard-Man Green: 0665

Yard-Man Yellow: 0674


Powder Black: 0637

Model U804H

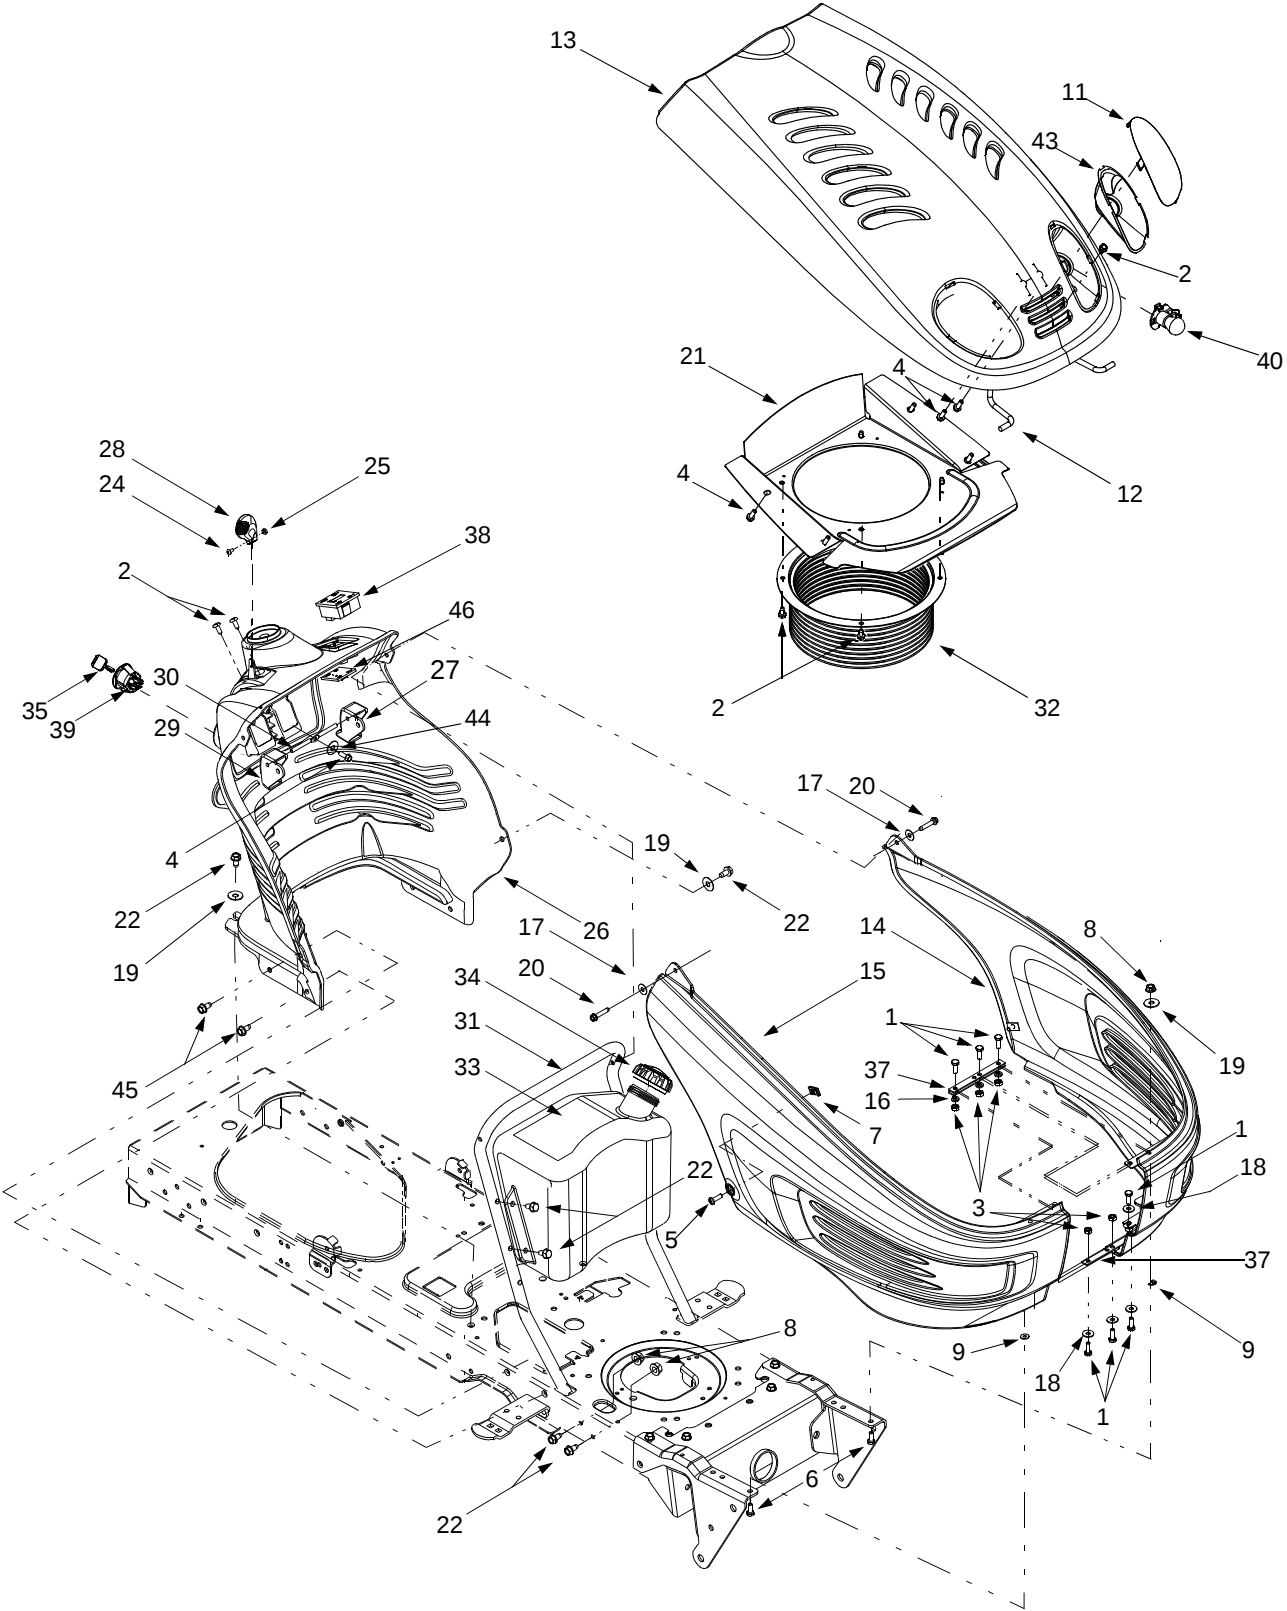

REF. NO.	PART NO.	DESCRIPTION
1	710-3015	Hex Cap Screw, 1/4-20 x.75
2	710-0599	Self-tapping Screw, 1/4-20 x.5
3	712-3027	Hex Nut, 1/4-20
4	710-0895	Self-tapping Screw, 1/4-15 x.75
5	710-0924	Pan Phillips Screw, 1/4-20 x.75
6	710-0528	Hex Cap Screw, 5/16-18 x 1.25
7	712-0292	U-type Speed Nut, 1/4-20
8	712-3004A	Flange Lock Nut, 5/16-18
9	726-0201	Speed Nut
11	731-1978	RH Head Light Lens
	731-1979	LH Head Light Lens
12	747-1132A	Hood Support Rod
13	731-1980B	Hood
14	731-1981C	LH Side Panel
15	731-1982C	RH Side Panel
17	736-0342	Flat Washer,.283 x.75 x.030
18	736-0173	Flat Washer,.28 x.74 x.063
19	736-3078	Flat Washer,.349 x 1.0 x.063
20	710-0642	Self-tapping Screw, 1/4-20 x.750
21	783-0808A	Hood Heat Shield w/o Intake Bellow
22	710-0726	Self-tapping Screw, 5/16-12
24	710-3217	Torx Screw, #8-32 x.375
25	712-0142	Hex Nut, 8-32
26	731-0071D	Dash Panel, 4-style
27	731-04214	Parking Brake Lever
28	731-1857	Throttle Control Lever
29	731-04213	Cruise Control Lever
30	747-1155	Brake/Cruise Pivot Rod
31	749-1087C	Dash Support Tube
32	731-2234A	Intake Bellow
33	751-0658D	Fuel Tank, 3-gallon
34	751-0603	Fuel Cap
35	725-1745	Ignition Key w/ plastic cover
	725-1744	Ignition Key w/o plastic cover
37	783-1000A	Grille Support Bracket
38	725-04036	Systems Indicator Monitor
39	725-1741	Ignition Switch
40	725-1649	Lamp Socket
	725-0963	Miniature Lamp
43	731-1996	RH Headlight Reflector
	731-1995	LH Headlight Reflector
—	629-0469B	Headlight Wire Harness
—	629-1071	Tractor Wire Harness (Manual PTO)
—	629-04048	Tractor Wire Harness (Electric PTO)
44	736-0142	Flat Washer,.281 x.50 x.063
45	710-1611B	Self-Tapping Screw, 5/16-18
46	783-0462	Electric PTO Switch Bracket Retainer

Model U804H

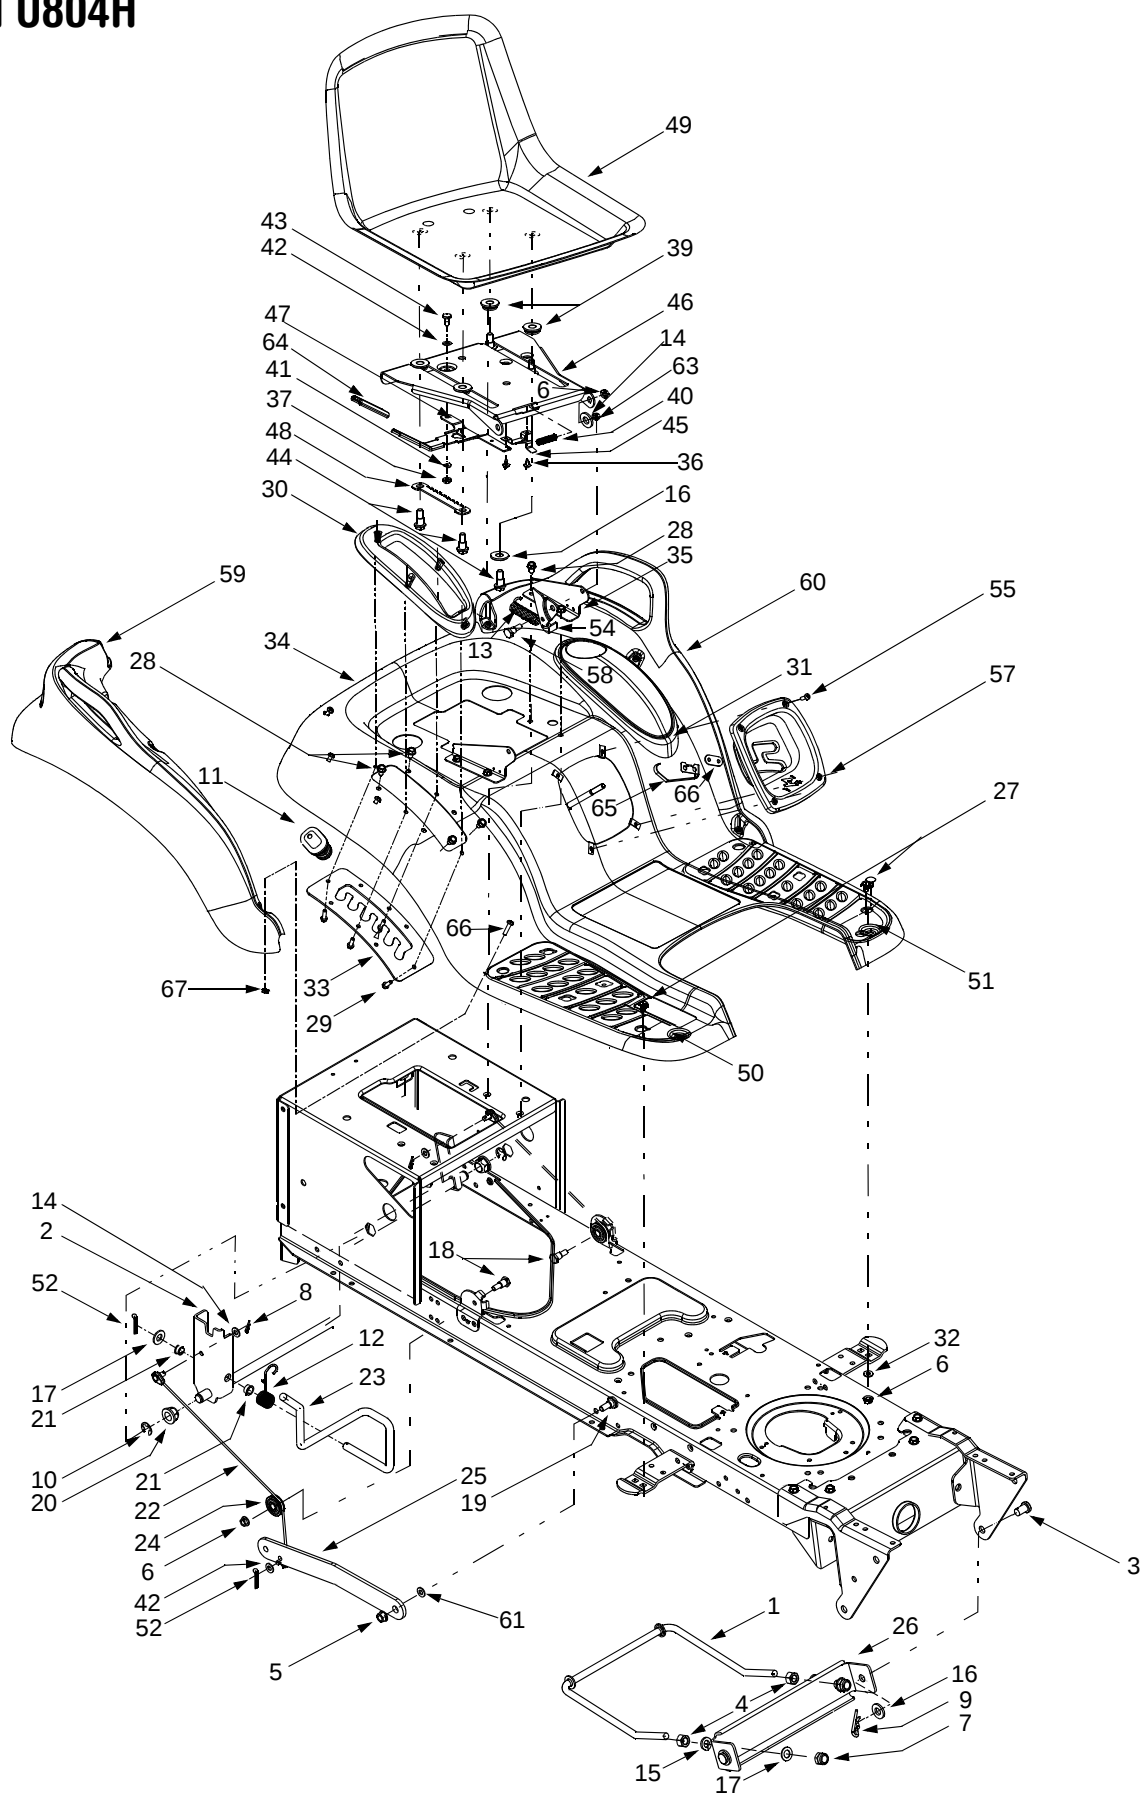

Model U804H

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	747-1130B	Deck Stabilizer Rod	34	783-1280	Fender
2	683-0197B	Lift Shaft Assembly	35	783-1489	Seat Mounting Bracket
3	711-0332	Clevis Pin,.5 x.78	36	710-1268	Screw, #10-16 x.375
4	712-0206	Hex Nut, 1/2-13	37	712-3027	Hex Flange Lock Nut, 1/4-20
5	712-0431	Flange Lock Nut, 3/8-16	39	731-04074	Spacer
6	712-3004A	Flange Lock Nut, 5/16-18	40	732-0499	Compression Spring,.41 x 1.5
7	712-3083	Hex Nut, 1/2-13	41	736-0175	Spring Washer,.265 x.562 x.025
8	714-0104	Internal Cotter Pin	42	736-0204	Flat Washer,.344 x.62 x.03
9	714-0145	Internal Cotter Pin	43	738-0137A	Shoulder Screw,.340 x.285,1/4-20
10	716-0106	E-ring	44	738-0966	Shoulder Screw,.50 x.825, 3/8-16
11	720-0311	Handle Grip	45	783-0611	Seat Stop
12	732-0874	Torsion Spring	46	783-0738A	Seat Pivot Bracket
13	732-1184	Extension Spring,.84 x 4.6	47	783-04246	Seat Adjustment Lever
14	736-0275	Flat Washer, 5/16	48	783-0753	Seat Adjustment Selector
15	736-0921	Lock Washer, 1/2	49	757-04012	High Back Seat, Yellow
16	736-3019	Flat Washer,.31 x 1.062 x.134	50	735-0656	RH Foot Pad
17	736-3084	Flat Washer,.51 x 1.12 x.06	51	735-0657	LH Foot Pad
18	738-0138A	Hex Cap Screw, 5/16-18 x.62	—	726-3046	Foot Pad Clips (Not shown)
19	738-0143	Shoulder Screw, 3/8-16	52	714-0111	Cotter Pin
20	741-0225	Hex Flange Bearing	54	783-0209A	LH Seat Lift Bracket
21	741-0715	Snap Flange Bearing	—	17239A	RH Seat Lift Bracket
22	746-0968	Lift Cable, 16.16	55	710-0788	Self-tapping Screw, 1/4-20 x 1.00
23	747-1111A	Lift Handle	57	731-2480A	Shift Lever Cover
24	756-1154	Roller Pulley	58	738-0296	Shoulder Screw,.437 x.286
25	783-0678A	Arm Lift	59	731-2618	RH Fender Flare
26	783-0720A	Deck Stabilizer Bracket	60	731-2619	LH Fender Flare
27	710-0260A	Carriage Bolt, 5/16 x.62	61	736-0160	Flat Washer,.53 x.93 x.050
28	710-0726	AB Screw, 5/16-12 x.75	62	726-0201	Speed Nut
29	710-0895	Self-tapping Screw, 1/4-15 x.75	63	720-04026	Side Seat Adjuster Grip
30	731-1990	Lift Lever Cover	64	725-1713	Switch
31	731-1993	Cover w/ Cup Holder	65	726-0320	Insulator Nut Plate
32	736-3078	Flat Washer,.349 x 1.0 x.063	66	710-0932	Screw, 1/4-20 x 1.00
33	783-0677	Lift Adjustment Bracket	67	712-0271	Hex Nut, 1/4-20


NOTE: For **painted parts**, please refer to the list of color codes below. Please add the applicable color code, wherever needed, to the part number to order a replacement part. For instance, if a part numbered 700-xxxx is painted Yard-Man Green, the part number to order would be 700-xxxx-0665.

Yard-Man Green: 0665

Yard-Man Yellow: 0674

Powder Black: 0637

Model U804H

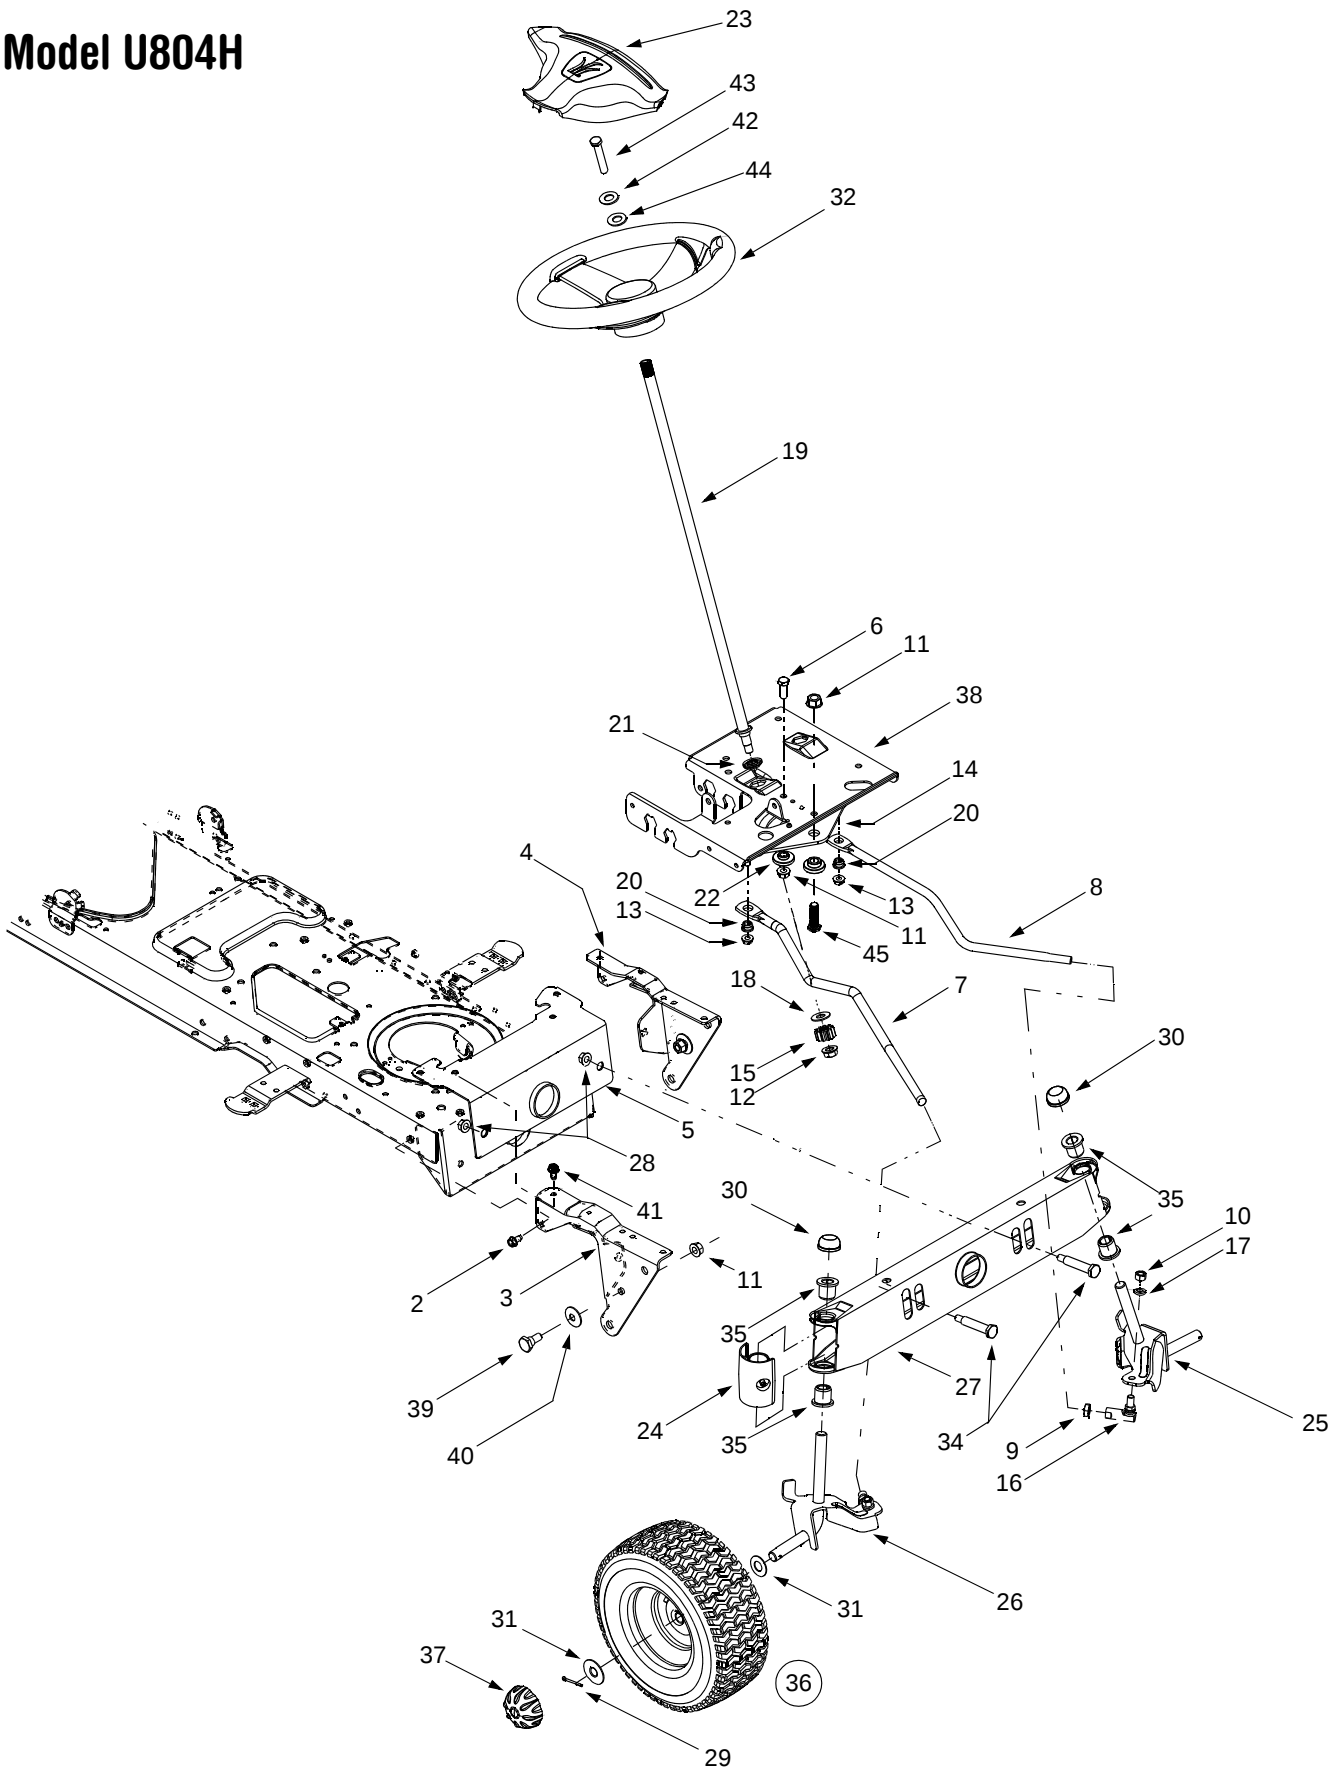

REF. NO.	PART NO.	DESCRIPTION
2	710-1238	Self-tapping Screw, 5/16-18 x.875
3	783-0726B	RH Pivot Support Bracket
4	783-0727A	LH Pivot Support Bracket
5	783-0728	Pivot Bar Bracket
6	710-0514	Hex Cap Screw, 3/8-16 x 1.00 (Grade 5)
7	711-1408	RH Drag Link
8	711-1409A	LH Drag Link
9	712-0240	Jam Nut, 7/16-20 (Grade 2)
10	712-0241	Hex Nut, 3/8-24 (Grade 2)
11	712-0431	Flange Lock Nut, 3/8-16
12	712-0459	Flange Lock Nut, 7/16-20
13	712-3004A	Flange Lock Nut, 5/16-18
14	717-1550D	Steering Gear, 11/90 Ratio
15	717-1554	Steering Pinion Gear
16	723-0448A	Ball Joint, 7/16-20
17	736-0169	Lock Washer, 3/8
18	736-3084	Flat Washer,.51 x 1.12 x.06
19	738-1001A	Steering Shaft,.625 OD x 24.4
20	741-0475	Plastic Bushing,.38 ID
21	741-0656	Hex Flange Bearing, 5/8
22	738-0372B	Shoulder Spacer,.38 ID
23	731-04065	Steering Wheel Cover
24	731-1291A	Pivot Bar End Cap w/ Fitting
25	638-0017	LH Axle Assembly,.75 Diameter
26	638-0018	RH Axle Assembly,.75 Diameter
27	683-0128A	Steel Pivot Bar
28	712-0431	Flange Lock Nut, 3/8-16
29	714-0162	Cotter Pin
30	726-0341	Push Cap,.75
31	736-0316	Flat Washer,.78 x 1.589 x.06
32	631-04008	Steering Wheel, Soft Grip, Three Spoke
34	738-1011	Shoulder Screw,.5 x 2.2, 3/8-16
35	741-0660	Flange Bearing,.76 ID x.937 OD
36	634-0183	Wheel Assembly, 16 x 6.5 x 8
		Square Shoulder
	634-0182	Rim Assembly Only
	734-0255	Air Valve (Not Shown)
	734-1727	Tire Only, Square Shoulder
37	734-2290A	Deluxe Hub Cap
38	783-0653F	Steering Support Bracket
39	738-0143	Shoulder Screw, 3/8-16
40	736-0331	Bell Washer,.39 x 1.13 x.062
41	710-1260A	Self-tapping Screw, 5/16-18 x.75
42	736-0242	Bell Washer,.34 x.872
43	710-0643	Hex Bolt, 5/16-18 X 1
44	736-3004	Flat Washer,.406ID x.875OD
45	710-04095	Hex Cap Screw, 3/8-16 x 1.00


NOTE: For **painted parts**, please refer to the list of color codes below. Please add the applicable color code, wherever needed, to the part number to order a replacement part. For instance, if a part numbered 700-xxxx is painted Yard-Man Green, the part number to order would be 700-xxxx-0665.

Yard-Man Green: 0665

Yard-Man Yellow: 0674

Powder Black: 0637

Model U804H

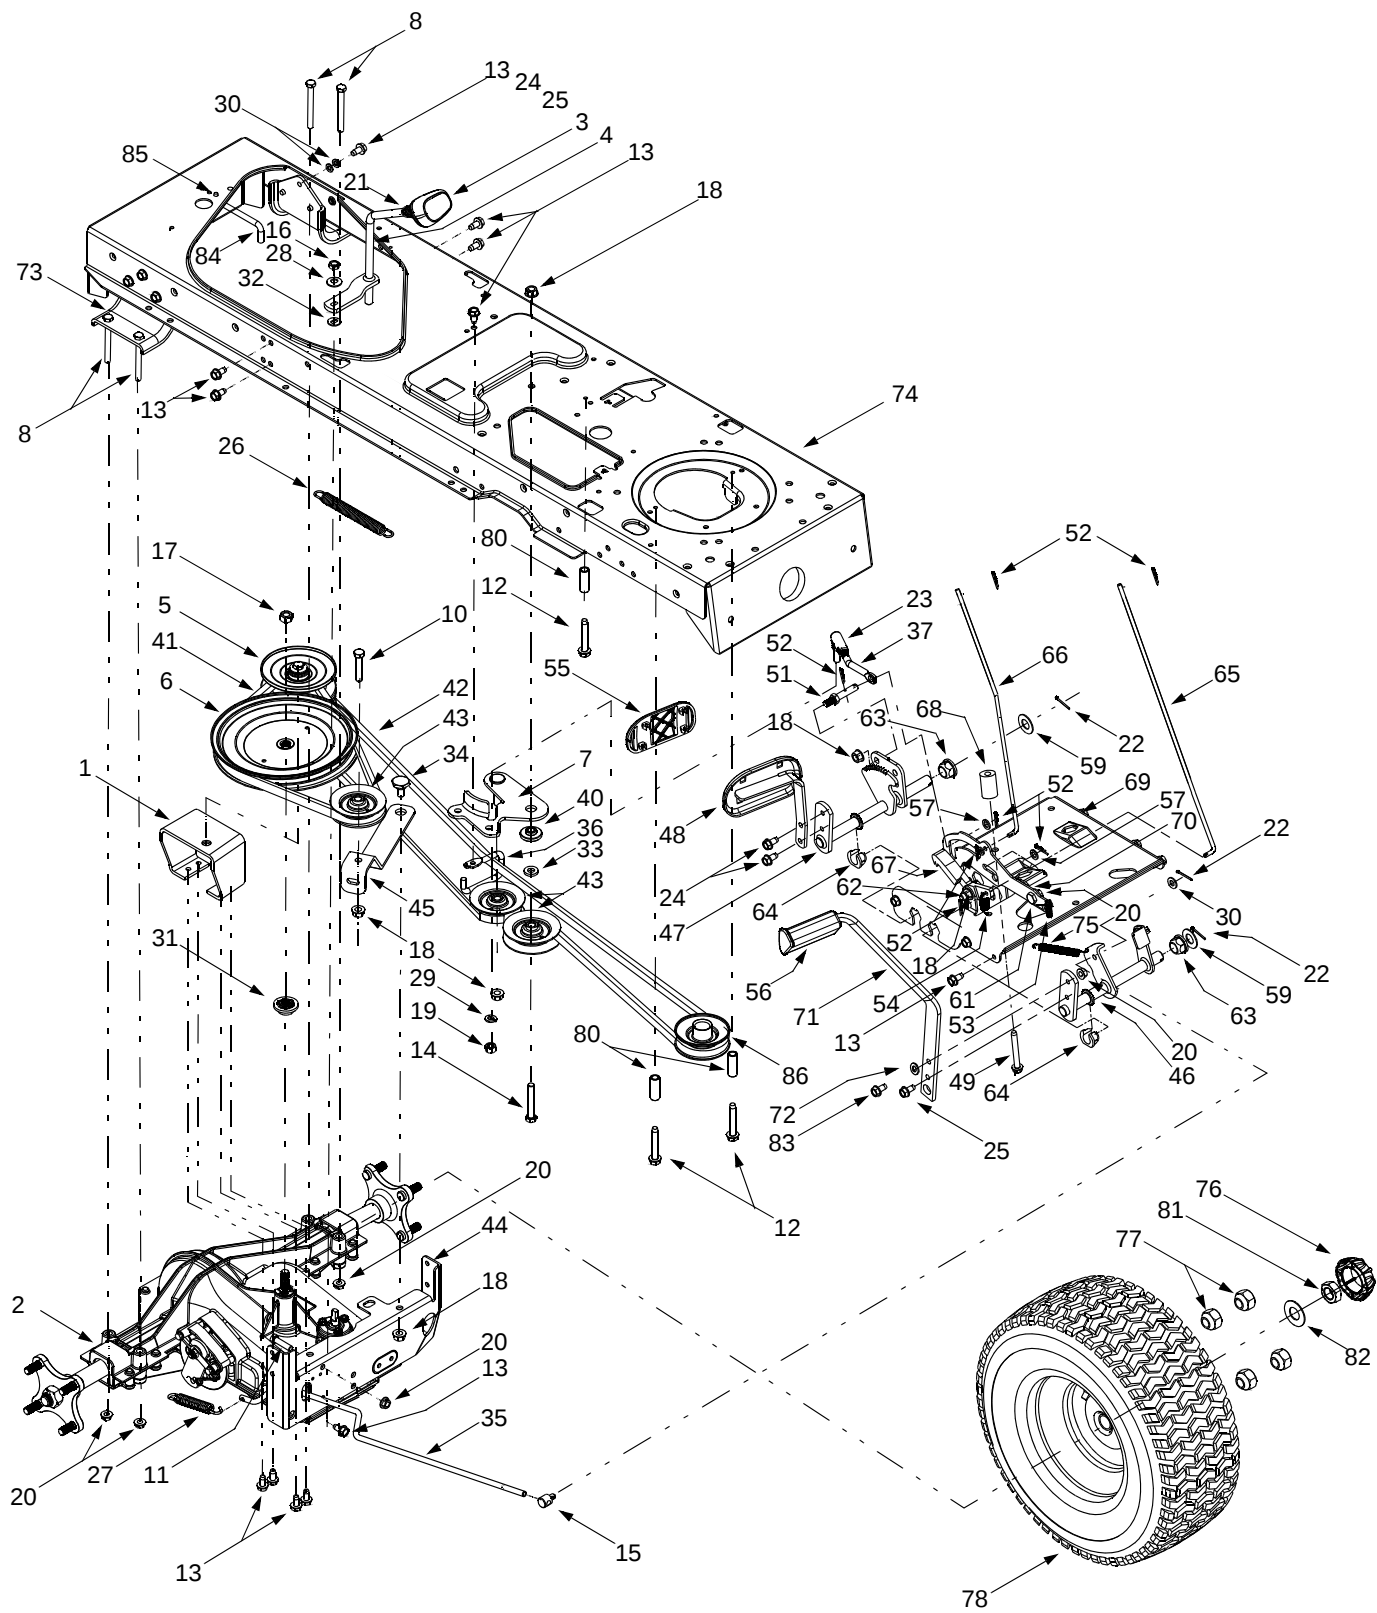

Model U804H

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	618-0375	Variable-speed Bracket Assembly	46	647-0031B	Brake Control Shaft Assembly
2	618-0376	Two-speed Transmission Assembly	47	647-0032	Speed Control Shaft Assembly
3	631-0009A	Shifter Knob	48	683-0266	Drive Pedal Assembly
4	647-0037	Shift Lever	49	710-1135	Self Tapping Screw, 5/16-18 x 2.5
5	656-0050	Variable-speed Pulley Assembly	51	711-1363	Pin, 3/8-16 x 2.43
6	756-0665	Transmission Pulley, 8.5	52	714-0104	Cotter Pin
7	683-0251	Double-idler Bracket	53	732-0335	Compression Spring,.405 x 1.17
8	710-0176	Hex Cap Screw, 5/16-18 x 2.75	54	732-0955	Extension Spring,.5 OD x 1.41
10	710-0347	Hex Cap Screw, 3/8-16 x 1.75	55	735-0662	Drive Pedal Pad
11	710-0805	Hex Cap Screw, 5/16-18 x 1.5	56	735-3049	Brake Pedal Pad
12	710-0809	Self-tapping Screw, 1/4-20 x 1.25	57	736-0262	Flat Washer,.385ID x.870OD
13	710-0726	Self Tapping Screw, 5/16-12 x.75	58	736-0142	Flat Washer, 9/32 x 1/2 x 1/16
14	710-3011	Hex Cap Screw, 3/8-16 x 2.25	59	736-0187	Flat Washer,.64 x 1.24 x.06
15	711-0677	Ferrule, 5/16 x.312 Dia.	61	738-0155	Shoulder Screw,.437 x 1.62
16	712-0181	Hex Jam Nut, 3/8-16	62	738-0507B	Shoulder Screw,.5 x.434
17	712-0702	Hex Flange Nut, 7/16-20	63	741-0225	Hex Flange Bearing
18	712-0431	Flange Lock Nut, 3/8-16	64	741-3065B	Split Hex Flange Bearing
19	712-3017	Hex Nut, 3/8-16	65	747-04096	Cruise Control Rod
20	712-3004A	Flange Lock Nut, 5/16-18	66	747-04093	Brake Lock Control Rod
21	712-3008	Hex Jam Nut, 3/8-16	67	748-0413	Cruise Latch
22	714-0111	Cotter Pin	68	748-0415B	Spacer, 5/16 x 1.54
23	723-3018	Ball Joint, 3/8-24	69	783-0653F	Steering Support Bracket
24	710-1260A	LD Screw, 5/16-18 x.75	70	783-0732	Drive Lockout Bracket
25	710-0650	Self-tapping Screw, 5/16-18 x.875	71	783-0773A	Brake Pedal
26	732-0384	Extension Spring,.62 Dia. x 6.12	72	736-3008	Flat Washer,.344 x.750 x.120
27	732-0716	Extension Spring,.59 OD x 4.0	73	783-0693	Axle Bracket
28	736-0105	Bell Washer,.401 x.870 x.063	74	683-0304C	Lower Frame Assembly
29	736-0169	Lock Washer, 3/8	75	732-0963	Extension Spring,.5 OD x 6.37
30	736-0275	Flat Washer, 5/16	76	731-2290A	Hub Cap
31	718-0771	Pulley Hub, 1/2 Spline	77	712-3050	Lug Nut, 7/16-14
32	736-0642	Flat Washer,.44 x.75 x.06	78	634-0132	Wheel Assembly Complete, 23 x 9.5 x 12
33	736-3010	Flat Washer,.407 x.812 x.135		634-0194	Rim Only
34	738-0322	Shoulder Screw,.625 Dia. x.21		734-0255	Air Valve
35	747-1122	Brake Rod		734-1728	Tire Only, Square Shoulder
36	747-1123A	Belt Guard	80	750-0566A	Spacer,.372 x.26 x 1.03
37	747-1127	Idler Adjustment Rod, 3/8	81	712-3026	Jam Nut, 3/4-16
40	738-0372B	Shoulder Spacer,.380 ID	82	736-0316	Flat Washer,.78 x 1.59 x.06
41	754-0468	Variable-speed Belt	83	710-1611B	Self-tapping Screw, 5/16-18 x.75
42	754-0467	Drive Belt	84	747-1185	Transmission Belt Guard Rod
43	756-0981A	Flat Idler, 2.75 OD	85	710-0599	Self Tapping Screw,1/4-20 x.5
44	783-0667B	Transmission Torque Bracket	86	756-0639B	Engine Pulley, 3.56"
45	783-0669	Idler Bracket			


NOTE: For **painted parts**, please refer to the list of color codes below. Please add the applicable color code, wherever needed, to the part number to order a replacement part. For instance, if a part numbered 700-xxxx is painted Yard-Man Green, the part number to order would be 700-xxxx-0665.

Yard-Man Green: 0665

Yard-Man Yellow: 0674

Powder Black: 0637

Model U804H

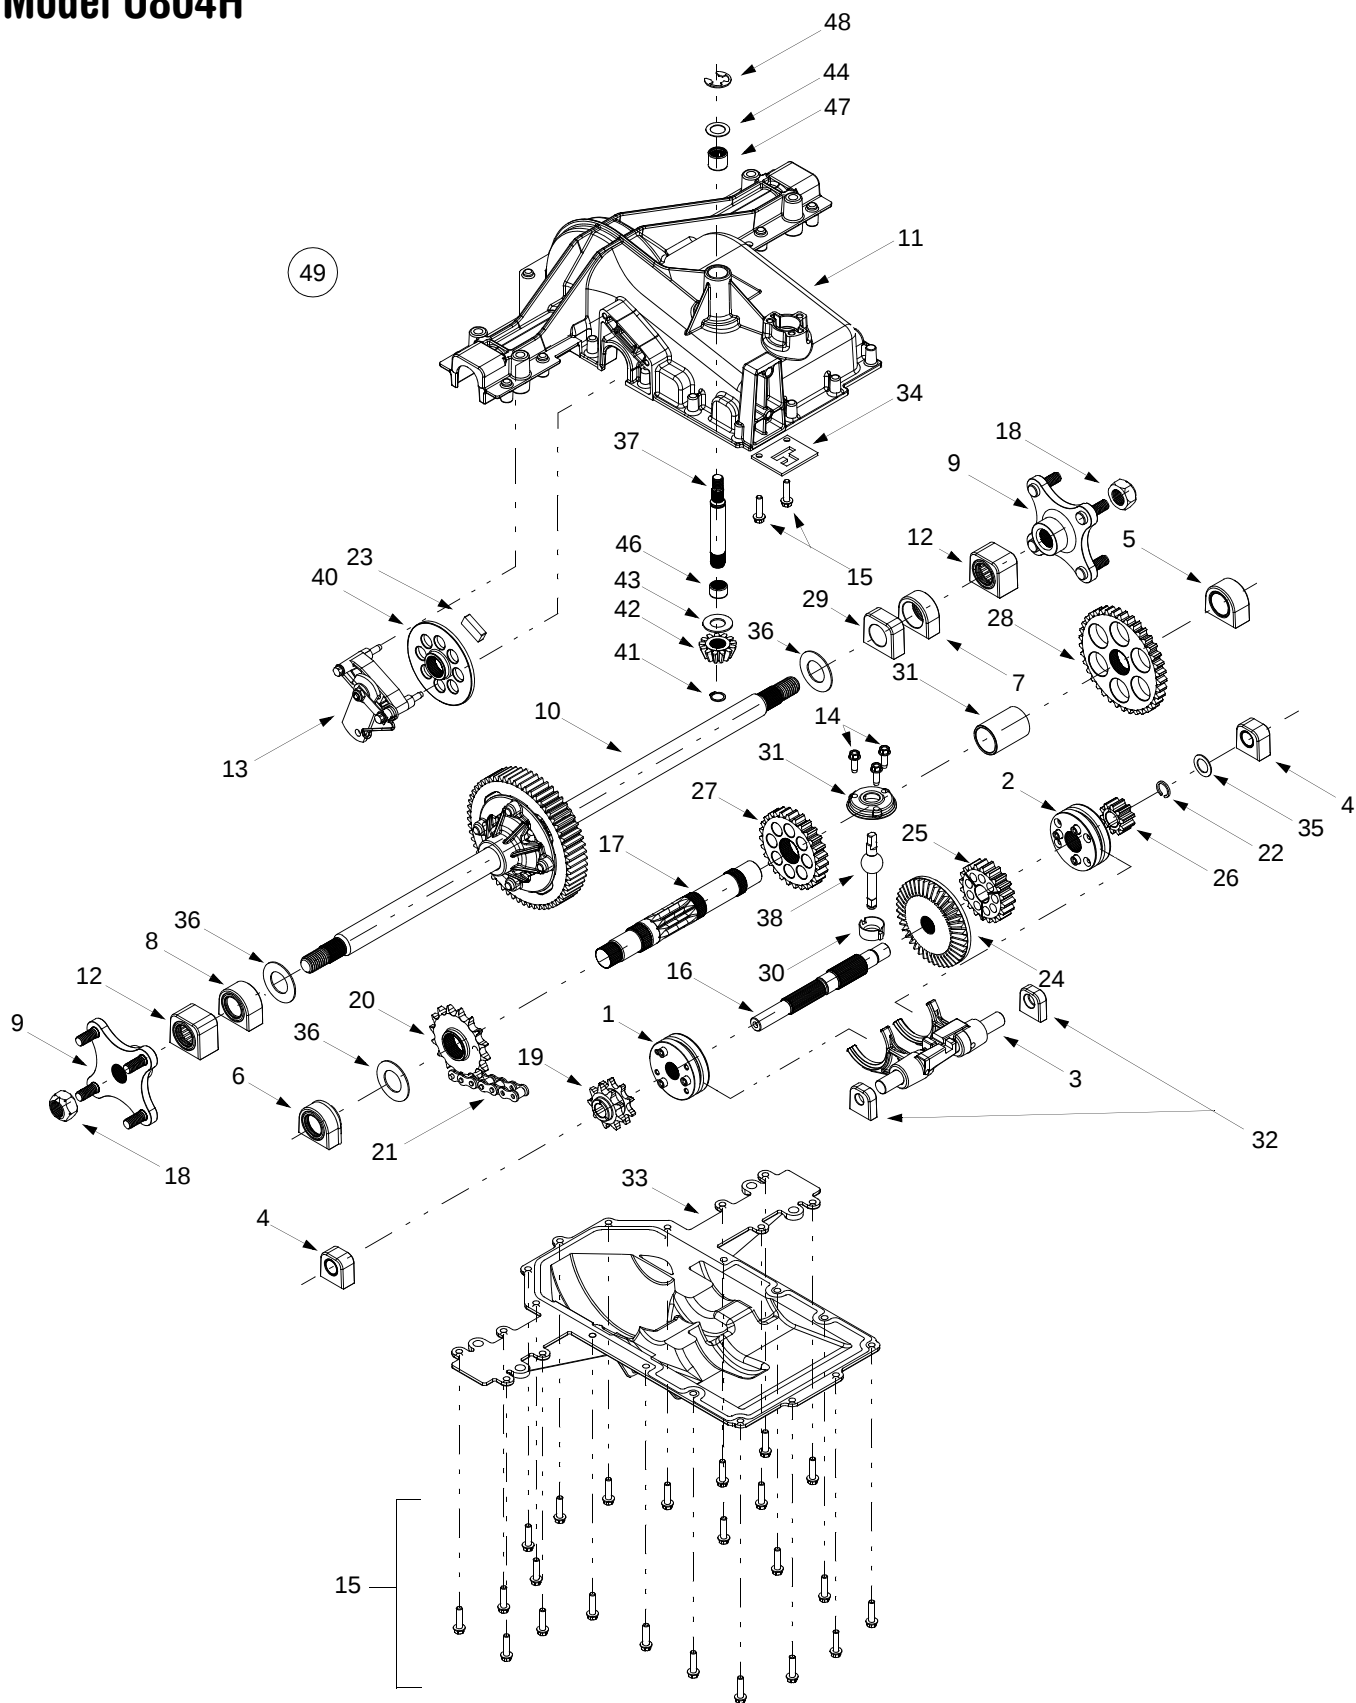


Model U804H

REF. NO.	PART NO.	DESCRIPTION
1	618-0225	Reverse Collar Assembly
2	618-0226	Hi-Lo Collar Assembly
3	618-0227A	Shift Fork Assembly
4	618-0284	Detent Block Assembly
5	618-0285	Output Bearing Block Assembly
6	618-0286	Output Seal Bearing Block Assembly
7	618-0287	Inboard Sealed Axle Block Assembly
8	618-0302	Inboard Sealed Axle Block Assembly
9	618-0365	Wheel Hub Assembly
10	618-0368	Differential Axle Assembly
11	719-0379A	Upper Housing
12	641-0002A	Axle Bearing Block Assembly
13	661-0012	Brake Assembly
14	710-0642	Self-tapping Screw, 1/4-20 x .75
15	710-0788	Self-tapping Screw, 1/4-20 x 1.0
16	711-1051A	Drive Shaft
17	711-1216	Output Shaft
18	712-1329	Nut, 3/4-16
19	713-0446	9-tooth Sprocket
20	713-0447	16-tooth Sprocket
21	713-0448	22-link Chain,.625
22	716-0131	External Snap Ring
23	717-0678	Brake Pad
24	717-1438	41-tooth Bevel Gear
25	717-1439	20-tooth Spur Gear
26	717-1440	10-tooth Spur Gear
27	717-1441	27-tooth Spur Gear
28	717-1442	37-tooth Spur Gear
29	718-0500	Inner Axle Bearing Block
30	718-0504	Shifter Insert
31	718-0505	Shifter Cover
32	718-0537	Shifter Bearing Block
33	719-0385	Lower Housing
34	718-0540	Lockout Plate
35	736-0337	Flat Washer, 5/8 x 1.0
36	736-3046A	Flat Washer, 1.01 x 1.86 x.060
37	711-1235	Input Shaft
38	747-1140	Shift Lever
39	750-1033A	Spacer, 1.13 x 1.38 x 1.968
40	761-0215	Disc Brake
41	716-0114	Retaining Ring,.56
42	717-1463	13-tooth Bevel Gear
43	736-0335	Flat Washer
44	736-0337	Flat Washer, 5/8 x 1.0 x.040
46	741-0335	Needle Bearing
47	741-0696	Needle Bearing
48	716-0231	E-ring,.75
49	618-0376	Transmission Assembly Complete

NOTE: Transmission has a grease capacity of 32 oz. Order part number 737-0148.

NOTE: Upon reassembling transmission input shaft for any reason, refill its cavity with approximately 2/3 oz. of grease. Order part number 737-0289.

Model U804H (w/ Electric PTO)

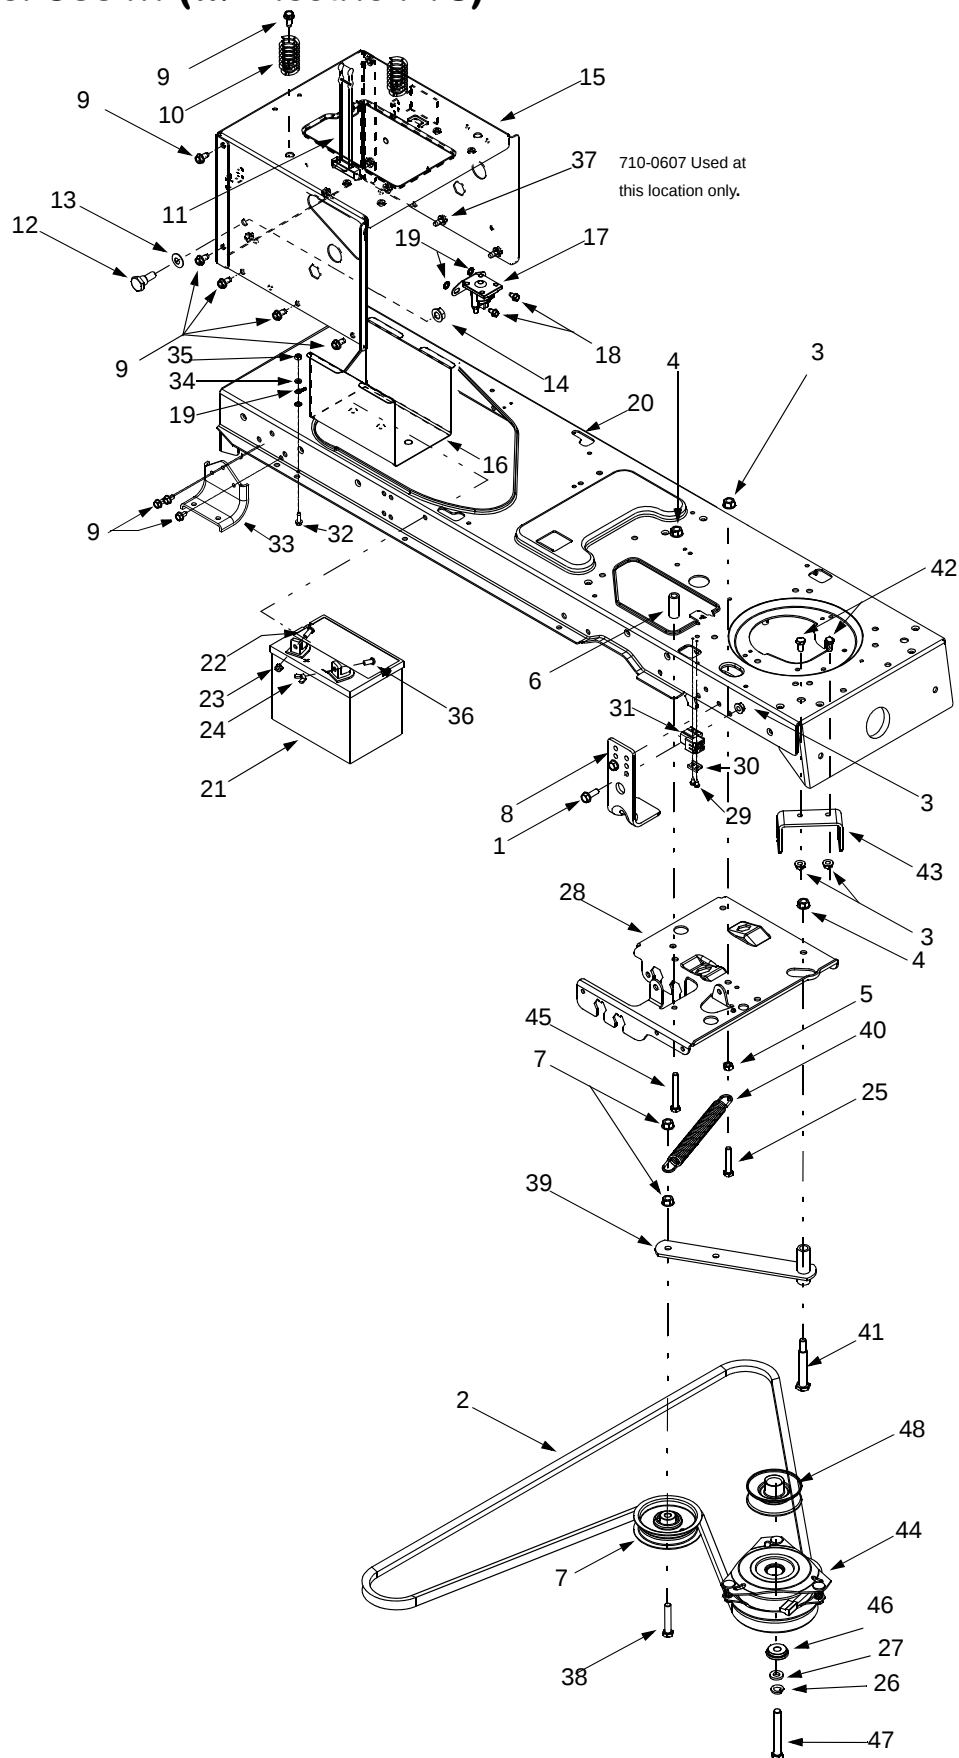

Model U804H

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	710-1238	Hex Head Washer Screw, 5/16-18 x.875	25	710-3180	Hex Cap Screw, 5/16-18 x 1.75
2	754-0476	PTO Belt	26	736-0171	Lock Washer, 7/16
3	712-3004A	Flange Lock Nut, 5/16-18	27	736-0322	Flat Washer, .450 x 1.25
4	712-0431	Flange Lock Nut, 3/8-16	28	783-0653F	Steering Support Bracket
5	712-3010	Hex Nut, 5/16-18	29	710-0224	AB Screw, #10-16 x 0.5
6	748-0415B	Spacer, 3/8 x 1.54	30	17962	Switch Plate
7	756-0627B	Idler Pulley, 3.5	31	725-04039	Switch
8	783-0891B	Deck Stop	32	710-0642	Self-tapping Screw, 1/4-20 x 0.75
9	710-0604A	Self Tapping Screw, 5/16-18 x.625	33	783-0693	Axle Bracket
10	732-04035	Compression Spring, 1.28 x 3.125	34	736-0329	Lock Washer
11	723-0444	Battery Strap	35	712-3006	Hex Nut, 1/4-20
12	738-1020	Shoulder Screw, .625 x.5, 7/16-20	36	738-1132	Shoulder Screw
13	736-0407	Bell Washer, .45 x 1.0 x.062	37	710-0607	Self-tapping Screw, 5/16 x 0.5
14	712-0459	Flange Lock Nut, 7/16-20	38	710-3144	Hex Cap Screw, 3/8-16 x 2.0
15	783-1031A	Hitch Plate	39	683-0294	Idler Bracket Assembly
16	783-0349	Battery Tray	40	732-0978	Extension Spring, .62 x 5.62
17	725-1426	Solenoid, 12-Volt, 100 Amp	41	738-0982	Shoulder Screw, .498 x 3.245
18	710-0599	Self Tapping Screw, 1/4-20 x.5	42	710-3025	Hex Cap Screw, 5/16-18 x.625
19	736-0222	Lock Washer, 1/4	43	783-1003	Electric Clutch Anti-rotation Bracket
20	683-0304C	Lower Frame Assembly	44	717-1709	Electric PTO Clutch
21	725-1706	12-volt Battery, 270 CCA	45	710-0859	Hex Cap Screw, 3/8-16 x 2.5
22	710-0703	Hex Cap Screw, 1/4-20 x.75	46	738-0785	Shoulder Spacer, 1.38 x.445 x.36
23	712-0271	Hex Sems Nut, 1/4-20	47	710-1049	Hex Cap Screw, 7/16-20 x 3.75 (Grade 5)
24	712-3044	Wing Nut, 1/4-20	48	756-0639A	Engine Pulley

IMPORTANT: For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.


NOTE: For **painted parts**, please refer to the list of color codes below. Please add the applicable color code, wherever needed, to the part number to order a replacement part. For instance, if a part numbered 700-xxxx is painted Yard-Man Green, the part number to order would be 700-xxxx-0665.

Yard-Man Green: 0665

Yard-Man Yellow: 0674

Powder Black: 0637

Model U804H (w/ Manual PTO)

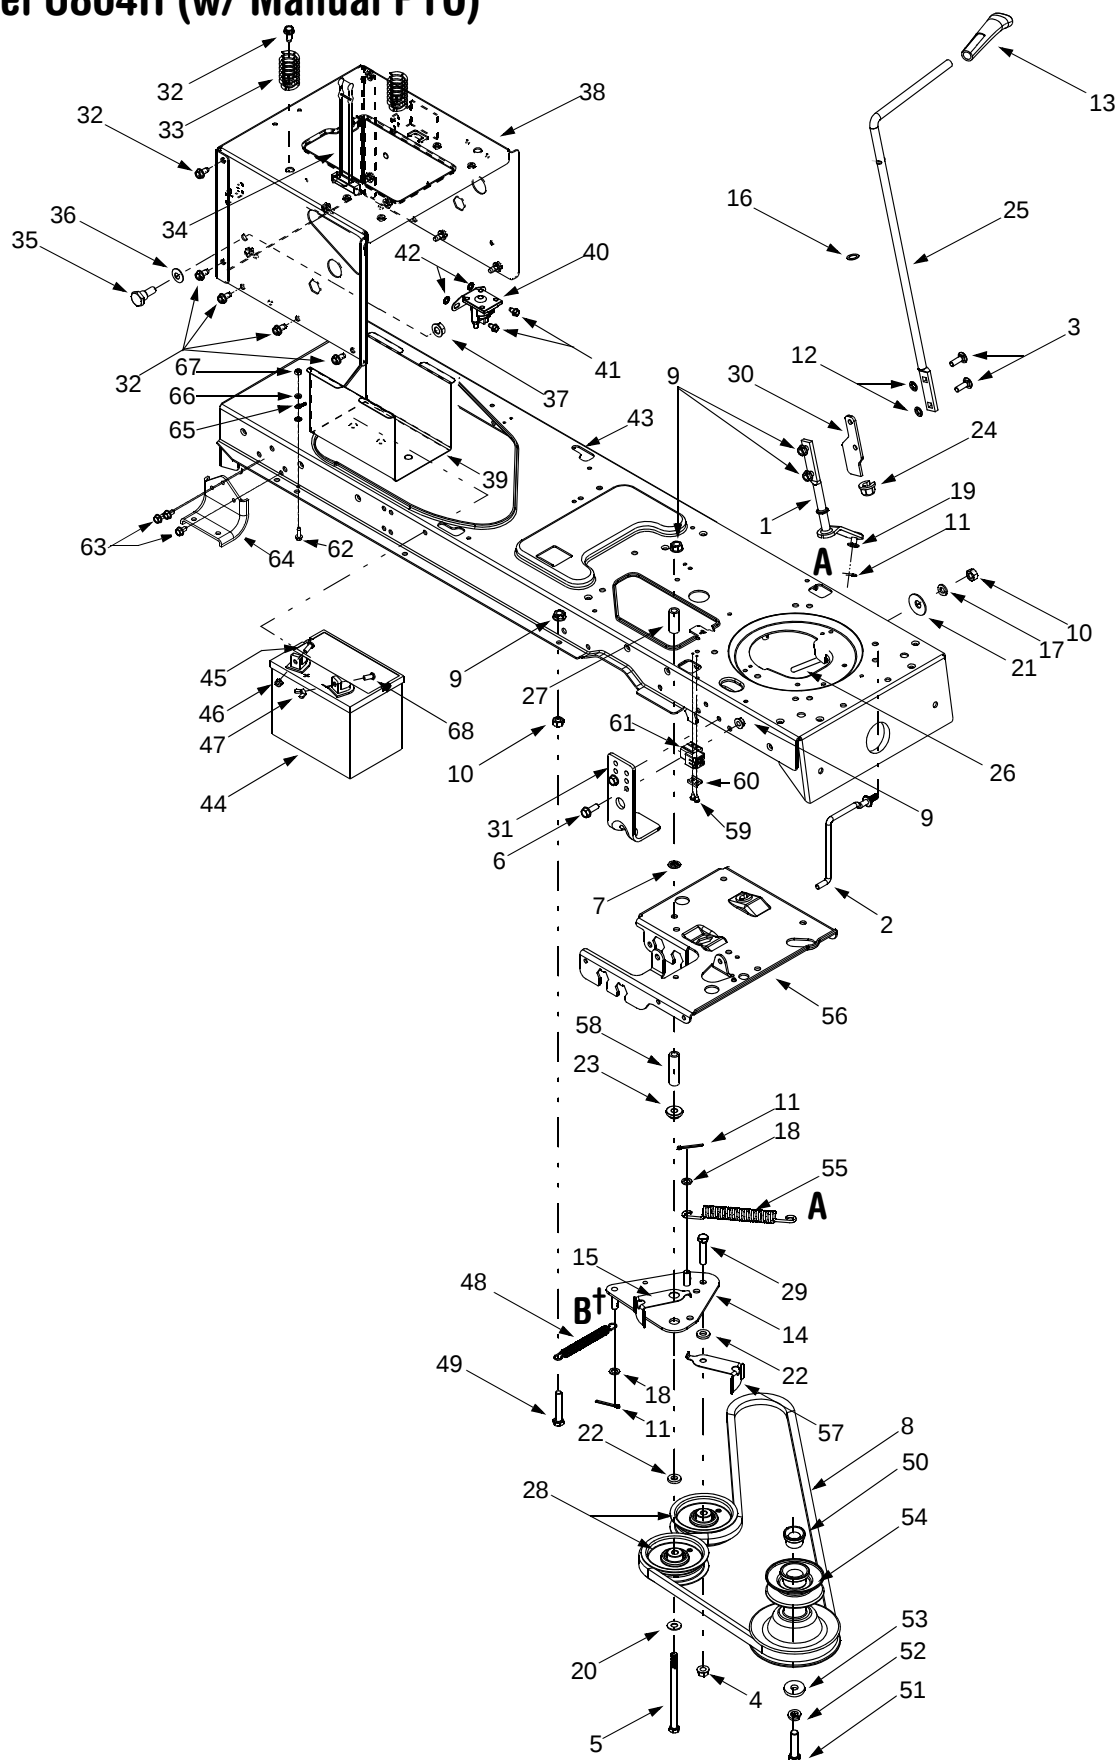

† Refer to **B** on page 42.

Model U804H



REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	647-0064	PTO Engagement Lever Assembly	35	738-1020	Shoulder Screw,.625 x.5, 7/16-20
2	747-1243	Belt Keeper Rod	36	736-0407	Bell Washer,.45 x 1.0 x.062
3	710-0276	Carriage Screw, 5/16-18 x 1.00	37	712-0459	Flange Lock Nut, 7/16-20
4	712-0431	Flange Lock Nut, 3/8-16	38	783-1031A	Hitch Plate
5	710-0831	Hex Cap Screw, 3/8-16 x 5.5	39	783-0349	Battery Tray
6	710-1238	Hex Head Washer Screw, 5/16-18 x.875	40	725-1426	Solenoid, 12-Volt, 100 Amp
7	712-0229	Push Nut, 3/8	41	710-0599	Self Tapping Screw, 1/4-20 x.5
8	754-0487	PTO Belt	42	736-0222	Lock Washer, 1/4
9	712-3004A	Flange Lock Nut, 5/16-18	43	683-0304C	Lower Frame Assembly
10	712-3010	Hex Nut, 5/16-18	44	725-1706	12-volt Battery, 270 CCA
11	714-0470	Cotter Pin, 1/8 x 1.25	45	710-0703	Hex Cap Screw, 1/4-20 x.75
12	726-0201	Speed Nut,.3125	46	712-0271	Hex Sems Nut, 1/4-20
13	731-2111A	PTO Knob	47	712-3044	Wing Nut, 1/4-20
14	683-0438	PTO Engagement Plate Assembly	48	732-1165	Extension Spring,.50 x 5.0
15	732-0991A	Belt Guard	49	710-3180	Hex Cap Screw, 5/16-18 x 1.75
16	736-0108	Flat Washer,.510 x.750 x.033	50	750-0596	Spacer Cup
17	736-0119	Lock Washer, 5/16	51	710-3029	Hex Head Cap Screw, 7/16-20 x 1.25
18	736-0140	Flat Washer,.385 x.62 x.063	52	736-0171	Lock Washer, 7/16
19	736-0275	Flat Washer, 5/16	53	736-0322	Flat Washer,.450 x 1.25
20	736-0300	Flat Washer,.406 x.875 x.059	54	756-0982B	Engine Pulley, 3.56 OD x 5.56
21	736-0331	Bell Washer,.39 x 1.13 x.062	55	732-0944	Extension Spring,.75 x 6.75
22	736-3010	Flat Washer,.407 x.812 x.135	56	783-0653F	Steering Support Bracket
23	738-0372A	Shoulder Spacer,.380	57	732-1013	Belt Guard
24	741-0708	Hex Split Flange Bearing,.5	58	750-0453	Spacer,.375 x 2.5
25	747-1112D	PTO Engagement Handle	59	710-0224	AB Screw, #10-16 x 0.5
26	747-1286	Belt Keeper Rod	60	17962	Switch Plate
27	748-0415B	Spacer, 3/8 x 1.54	61	725-04039	Switch
28	756-0627B	Idler Pulley, 3.5	62	710-0642	Self-tapping Screw, 1/4-20 x 0.75
29	710-0347	Hex Cap Screw, 3/8-16 x 1.75	63	710-0604A	Self-tapping Screw, 5/16-18 x.625
30	783-0744A	Engagement Stop	64	783-0693	Axle Bracket
31	783-0891B	Deck Stop	65	736-0222	Lock Washer
32	710-0604A	Self Tapping Screw, 5/16-18 x.625	66	736-0329	Lock Washer
33	732-04035	Compression Spring, 1.28 x 3.125	67	712-3006	Hex Nut, 1/4-20
34	723-0444	Battery Strap	68	738-1132	Shoulder Screw

IMPORTANT: For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

NOTE: For **painted parts**, please refer to the list of color codes below. Please add the applicable color code, wherever needed, to the part number to order a replacement part. For instance, if a part numbered 700-xxxx is painted Yard-Man Green, the part number to order would be 700-xxxx-0665.

Yard-Man Green: 0665
Yard-Man Yellow: 0674
Powder Black: 0637

Model U804H

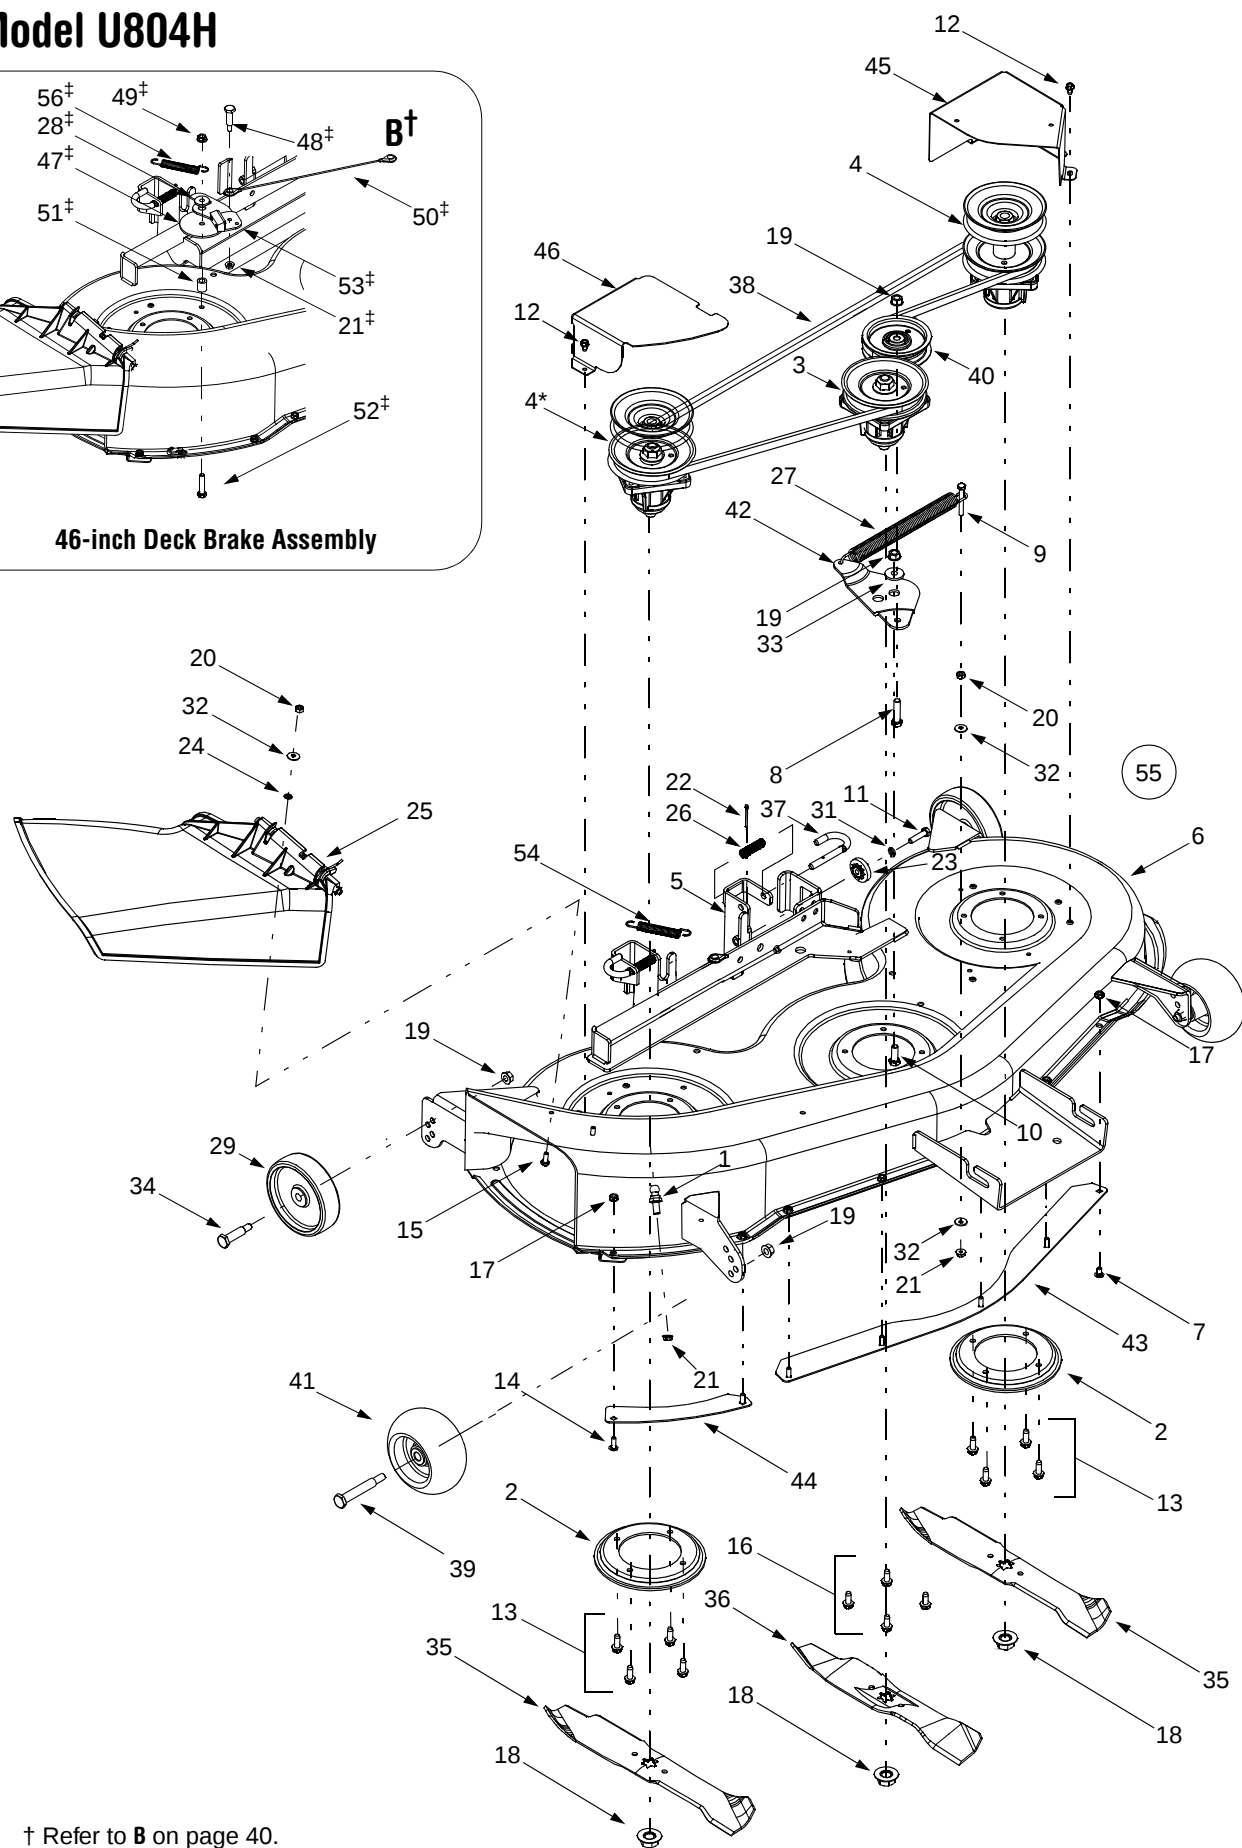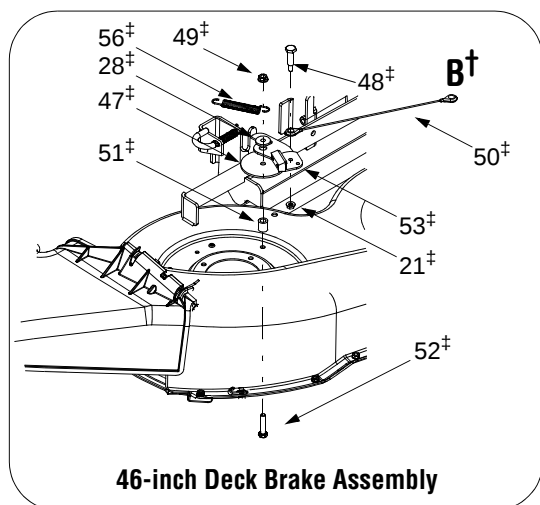

† Refer to **B** on page 40.

‡ Found on models equipped with a manual PTO only.

* A single pulley spindle (618-0240A or 618-0430A)

is found in this location on models with a manual PTO.

Model U804H

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	711-04069	Grass Catcher Pin	28	748-0324	Shoulder Spacer
2	17982	Spindle Reinforcement Plate	29	734-0973	Deck Wheel, 5 x 1.38
3	618-0430A	Spindle Assembly, 5.0 Dia.	31	736-0119	Lock Washer, 5/16
	756-1187	Pulley Only	32	736-0270	Bell Washer,.265 x.75 x.062
4	618-0595	Double Pulley Spindle Assembly	33	738-0347	Shoulder Spacer,.625 x 1.16
	756-1214	Double Pulley Only	34	738-0373	Shoulder Screw
5	683-0254	Deck Adjustment Bracket Assembly	35	742-0611	Three-in-one Blade, Star Center, 16.28"
6	683-0199C	46-inch Deck Shell	36	742-0612	Three-in-one Blade, Star Center, 14.88"
7	710-0167	Carriage Screw, 1/4-20 x.50	37	747-1116	Deck Release Pin
8	710-0344	Hex Cap Screw, 3/8-16 x 1.5	38	754-0349	Deck Belt, Poly
9	710-0501	Hex Cap Screw, 1/4-20 x 2.0	39	738-3056	Shoulder Screw, 1/2-2.5
10	710-0514	Hex Cap Screw, 3/8-16 x 1.0	40	756-0627B	Idler Pulley, 3.5
11	710-0528	Hex Cap Screw, 5/8-18 x 1.25	41	734-3058B	Deck Wheel, 5.0
12	710-0599	Self-tapping Screw,1/4-20 x.5	42	783-0139A	Idler Bracket
13	710-0650	Self-tapping Screw,15/16-18 x.875	43	783-0141	Center Deck Skirt
14	710-0703	Hex Screw, 1/4-20 x.75	44	783-0142	RH Deck Skirt
15	710-0751	Hex Cap Screw, 1/4-20 x.62	45	783-1347A	LH Belt Cover
16	710-1260A	Self-tapping Screw, 5/16-18 x.75	46	783-1450	RH Belt Cover
17	712-0271	Hex Sems Nut, 1/4-20	47	736-0416	Flat Washer,.320 x 3.0 x.125
18	712-0417A	Hex Flange Nut, 5/8-18	48	738-0572	Shoulder Screw,.374 x 1.16
19	712-0431	Flange Lock Nut, 3/8-16	49	712-3004A	Hex Nut, 5/16-18
20	712-3006	Hex Nut, 1/4-20	50	746-1107	Bracket Cable, 12"
21	712-3027	Hex Flange Lock Nut, 1/4-20	51	750-0807	Spacer,.385 x.625 x.70
22	714-0470	Cotter Pin, 1/8 x 1.25	52	710-0805	Hex Cap Screw, 5/16-18 x 1.5
23	717-1553B	Deck Adjustment Gear	53	17116	Deck Brake Assembly
24	726-0233	Push Nut.25 x.5	54	732-0934	Deck Lift Extension Spring, 1.15 x 5.99
25	731-1032B	Side Discharge Chute Assembly	55	753-0876	Deck Assembly Complete, Manual PTO (w/o Mulch Kit)
26	732-0306	Compression Spring,.406 x.531 x 1.75			
27	732-0594A	Extension Spring,.91 x 7.3	56	732-0429A	Extension Spring,.5 x 3.97

IMPORTANT: For a proper working machine, use Factory Approved Parts. **V-belts** are designed to engage and disengage safely. A substitute (non OEM) V-belt can be dangerous by not disengaging completely.

NOTE: For **painted parts**, please refer to the list of color codes below. Please add the applicable color code, wherever needed, to the part number to order a replacement part. For instance, if a part numbered 700-xxxx is painted Yard-Man Green, the part number to order would be 700-xxxx-0665.

Yard-Man Green: 0665

Yard-Man Yellow: 0674

Powder Black: 0637