

D.()	( Part N. sel en	Description
	Part Number Qty	
	33464A	Cylinder (Incl. 2, 4 & 33) (3-1/2" Bo re)
	31927	Pipe Plug, 3/8-18 sq. head (Use as re quired)
	28483	Pipe Plug (3/8-18 hex countersunk) (A s req.)
2		Pipe Plug (3/4-14 sq.hd.)(As req.)(Bu y local)
	9556	Pipe Plug (1/8-27 sq. hd.) (Use as re quired)
	28534	Pipe Plug(1/8-27 hex c/sunk headless) (As req)
	27652	Pin, Dowel
5	33497C	Crankshaft (Incl. 6 thru 9, 140 & 141 ) NOTE: When
		using this crankshaft to repair older units equippedwith
		straight cut cam and governor gears, it will be necessary to
		order 34751 helical governor gear assembly and 34752
		helical camshaft in order to the complete the repair.
6	29783	Pin, Crankshaft gear
	31931	Gear, Crankshaft (Straight)
	31932	Bearing, Tapered roller
	31928	Cup, Bearing
	34511	Piston, Pin & Ring Set (Std.) (3-1/2" Bore)
	34512	Piston, Pin & Ring Set (0.010" OS)
	34513	Piston, Pin & Ring Set (.020" OS)
	32238B	Piston & Pin Ass'y. (Std.)(3-1/2")(In cl.12)
	32239B	Piston & Pin Ass'y. (.010" OS) (Incl. 12)
	32240B	Piston & Pin Ass'y. (.020 " OS) (Incl12)
	31919	Ring, Piston pin retaining
	32241	Ring Set (Std.) (3-1/2" Bore)
	32242	Ring Set (3.01.0" OS)
	32243	
	· 32245 · 33093A	Ring Set (.020" OS)
	· 34383	Connecting Rod Assy. (Std.) (Incl.15, 1 6 & 17)
		Connecting Rod Assy. (.010" US)(Incl.1 5,16,17)
	34384	Connecting Rod Assy.(.020" US)(Incl.1 5,16.17)
	32077	Bolt, Connecting rod
	26073	Washer, Connecting rod
	28264	Nut Assy.
	33470	Camshaft (MCR) (Straight)
	33472	Lifter, Valve
	33471	Rod, Push
	33505	Intake Valve (Std.)
	33645	Intake Valve (1/32" OS)
	33506	Exhaust Valve (Std.)
	33646	Exhaust Valve (1/32" OS)
	33507	Spring, Valve
	33508	Retainer & Cap Set, Keeper valve
	33509	* "O" Ring (Intake only) (Also Incl. in 251)
	34410	* "O" Ring (Exhaust only) (Also Incl. i n 251)
	33510	Cap, Valve
	33473	Governor Gear & Shaft Ass'y. (Straigh t)
	650745	Washer, Flat
	35479	Washer, Flat (Use with 35322 spool)
	30590A	Washer, Flat
	31948	Spool, Governor
	31956B	* Gasket, Cylinder cover
	33466	Cylinder Cover Ass'y. (Incl.2, 33 & 1 34)
	31950	* Seal, Oil
	650451	Screw, 1/4-20 x 1"
	650492	Screw, 1/4-20 x 2-1/4"
36	32425	Rod Assy., Governor
37	32426	Spacer, Governor rod
38	29193	Ring, Retaining


Ref #	Part Number Qtv	Description
39	650687	Screw, 10-32 x 5/16"
	33495	Cover, Cylinder head
	34225A	* Gasket, Cylinder head
	33465	Head, Cylinder
	33657	Spark Plug (L-82C)
	650691	Washer, Flat
	650690	Washer, Belleville
	650692	Screw, 5/16-18 x 1-3/4"
	650746	
		Screw, 5/16-18 x 1-3/8"
	730218	Valve Guide Kit (Incl. 49)
	792035	Ring, Retaining
	33515A	* Gasket, Intake pipe
	33475	Pipe, Intake
	650378	Screw, Torx T-30, 5/16-18 x 1-1/8"
	792028	Screw, 5/16-18 x 7/8"
	33476A	* Gasket, Carburetor
55	33477A	Baffle, Air cleaner
56	792075	Nut, Lock 5/16-24 (Used in early prod uction)
57	33478	Link, Governor lever-to-throttle leve r
58	31963	Lever, Governor
59	31964	Clamp, Governor lever
	650518	Lockwasher, No. 10 E.T.
	30312	Screw, 10-32 x 1/2"
	650544	Screw, Torx T-25, 10-24 x 7/8"
	7975	Nut, 10-24
	31965	Plate, Governor spring
	33054	Lever Assy., Control
	28558	
		Washer, Wave
	31966	Bushing, Governor lever
	650597	Screw, 10-24 x 5/8"
	31967	Spring, Governor
	650591	Screw, 10-24 x 2"
	33099	Spring
	32599	"O" Ring (Incl. in 251)
	650666	Washer, Lock
74	32579	Baffle, Blower housing
75	650561	Screw, 1/4-20 x 5/8"
76	650592	Key, Flywheel
77A	730201	Trigger Pin Kit (Use as required)
	610854	Flywheel
	650594	Nut, Flywheel
	610855	Solid State Magneto (Incl. 158, 159 & 160)
	650661	Screw, 1/4-20 x 3/4"
	33479	Extension, Blower housing
	30063	Screw, 1/4-20 x 1/2"
	650751	Screw, 1/4-20 x 7/16"
		·
	33775A	Blower Hsg.(Incl.218A,219)(For elec.s tarter)
	8274	Washer, Lock
	8274	Washer, Lock
	650595	Screw, 5/16-24 x 3/8"
	650595	Screw, 5/16-24 x 3/8"
	650752	Screw, 1/4-20 x 7/16"
	35475	Tube, Push rod
	33481	* "O" Ring (Also Incl. in 251)
90	34754	Housing, Rocker arm
94	33484	* "O" Ring (Also Incl. in 251)
	650168	Washer, Flat
	32610A	Screw, 1/4-20 x 29/32"
55		,


Ref #	Part Number Q	y Description
	33485	Arm, Rocker
	33486	Ring, Retaining
	650755	Screw, 1/4-20 x 3/4"
	650864	Nut, Hex, 1/4-20
	650756	
		Stud, Rocker arm
	33487	* "O" Ring (Also Incl. in 251)
	33488	Cover, Rocker arm
	31958A	* Gasket, Breather (Also Incl. in 251)
	33489	Body Assy., Breather
106	33490	Tube, Breather
107	30102	* Screw, 10-32 x 5/8" (Also Incl. in 25 1)
108	650738	Screw, 1/4-20 x 5/8"
111	35471	* Gasket, Air cleaner
112	35472	Bracket, Air cleaner
	650399	Screw, 10-32 x 5/8"
	32008	Element, Air cleaner
	32810	Cover, Air cleaner
	650513	·
		Nut, Wing
	650675	Washer, Flat
	32426	Spacer, Screen
	33776	Screen, Pulley
	650670	Screw, 1/4-20 x 3/4"
123	27070	Washer, Lock
125	650590	Nut, Conduit
126	32043B	Muffler
127	32808	Nipple, Exhaust pipe
137	650744	Screw, 10-24 x 7/8"
	33467	Tube extension, Oil fill
	32577	Cover, Cylinder NOTE: Determine the gap between the cover
110	02071	and the machined surface on the cylinder, which can be
		from .001" up to .007", in which case no shim gaskets will be
		required. Use of gaskets must be limited to a combined total
		of .010" thick. Steel spacersmust be used as required to eli
147	792028	Screw, 5/16-18 x 7/8"
	31971	* Gasket, Shim (.004/.005 thick) NOTE: Determine the gap
100	01071	between the cover and the machined surface on the
		cylinder, which can be from .001" up to .007", in which case
		no shim gaskets will be required. Use of gaskets must be
		limited to a combined total of .010" thick. Steel
		spacersmust be used a
156	31972	* Gasket, Shim (.005/.007 thick) NOTE: Determine the gap
100	01072	between the cover and the machined surface on the
		cylinder, which can be from .001" up to .007", in which case
		no shim gaskets will be required. Use of gaskets must be
		limited to a combined total of .010" thick. Steel
		spacersmust be used a
157	32031	* Spacer, Steel (.010 thick) NOTE: Determine the gap
	02001	between the cover and the machined surface on the
		cylinder, which can be from .001" up to .007", in which case
		no shim gaskets will be required. Use of gaskets must be
		limited to a combined total of .010" thick. Steel
		spacersmust be used as re
158	610118	Cover, Spark plug
	610750	Grommet, Lead wire
	610408	Nut, 8-32
	33764	·
109	JJ/ U <del>1</del>	Dipstick (Incl. 190)


Ref #	Part Number C	ty Description
190	29985	"O" Ring
191	33468	Tube Assy., Oil filler
192	29673	* Gasket, Oil filler tube
193	29443	Clip, Wire
244A	550223	Decal, Name
244A	32676	Decal, Solid state
244B	31752	Decal, Air cleaner
244	34346	Decal, Instruction
246	631687	Valve, Seat & Spring Assy.
247	631680	Carburetor (Incl. 54 & 246) (Refer to Division 5, Section A, page 124 for breakdown)
	33516G 35075	* Gasket Set (Incl. items marked *) "O" Ring Kit (Incl. Nos. items marked +)


## ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY CEM.


## VIEW 2 of 3

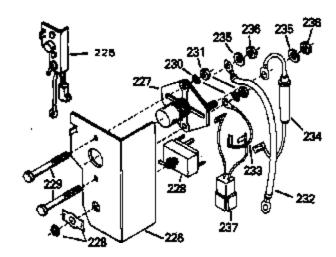


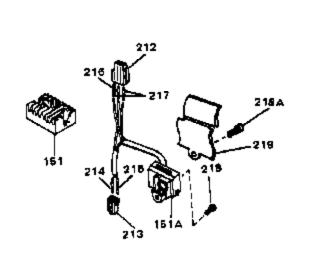


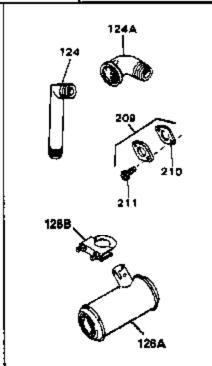

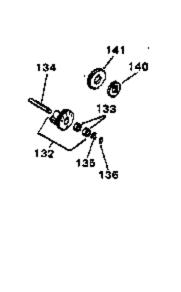

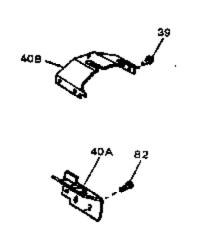


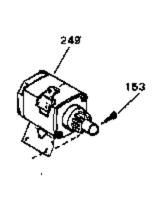

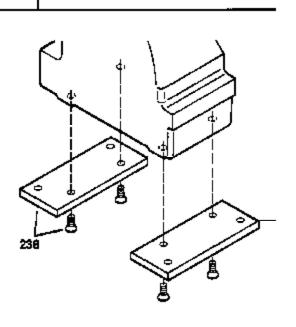

Ref #	Part Number	Qty	Description
82 126A	650687 30063 35731 33500A		Screw, 10-32 x 5/16" Screw, 1/4-20 x 1/2" Muffler (Incl. 126B) Counterbalance Weight Ass'y. Kit (Gears have helical teeth, which replace earlier straight tooth gears) (Incl. 33963 gear & 33965 weights)
134 135 136 140	33501 33502 33503 792017 33499 33963		Bearing, Needle Shaft, Counterbalance Washer, Thrust Ring, Retaining Spacer Gear, Counterbalance weight (Helical teeth) Gear, Counterbalance weight (Straight teeth) (For replacement see Ref. 132. Order correct kit for your enginemodel number.)
149 151 153 153 162 163A 209 210 211 238	610761 650416 610749 792028 650781 610819 610922 730178 34102B 30196 730212		Alt.Coil Ass'y.(Incl.162A & 163) (10 amp) Screw, 10-32 x 1" Regulator (10 Amp) Screw, 5/16-18 x 7/8"(Use w/32817 str .motor) Screw,5/16-18 x 11/16"(Use w/33835 st r.motor) Connector, Pyramid Terminal Ech.Adapter Kit (Incl.210 & 211)(As r equired) Gasket, Exhaust (Use as required) Screw, 5/16-18 x 3/4" (Use as require d) Adapter Plate Kit (Optional) NOTE: If you are having mounting problems in using a HH100 thru0H180 inplace of a large frame competitivebrand, we would like to call your attention to 730212 adapter plate kit. The kit converts the bottom mounting system found on HH100 thru 0H180 to a top mounting sys
249	33835		Electric Starter Motor (12-Volt) (Refer to Division 5, Section D for breakdown)

## ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER, PARTS NOT LISTED ARE SUPPLIED BY DEM.

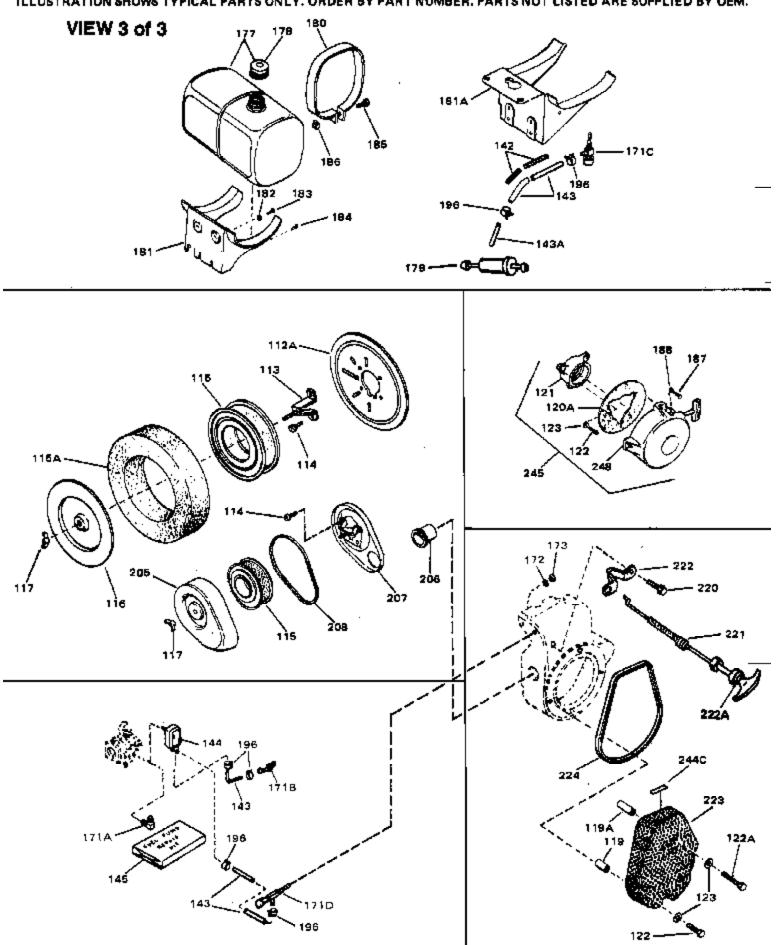

Ref #	Part Number C	Oty Description
114	650399	Screw, 10-32 x 5/8"
115	32008	Element, Air cleaner
117	650513	Nut, Wing
119	32426	Spacer, Screen
122	650670	Screw, 1/4-20 x 3/4"
123	27070	Washer, Lock
143	29774	Fuel Line (Braided 8.25")(21 cm)(As r equired)
143	30705	Fuel Line (Braided 16")(41 cm)(As req uired)
143	30962	Fuel Line (Braided 32")(81 cm)(As req uired)
144	32959	Pump, Impulse fuel
145	33010	Repair Kit, Impulse fuel pump
171B	32958	Fitting, Fuel pump
178	410144B	Fuel Cap (White Plastic)(Std)(As requ ired)
178	34210	Fuel Cap (Red Plastic) (Spurt resistant, High profile) (Use as
		required)
196	26460	Clamp, Fuel line (Use as required)
	730134	Rewind Starter Kit (Incl.120A, 121, 122, 187, 188 & 248)
210	100101	(Use as required)
		\ = = = · = -