




1 2 15A 15B 15 16 17 18 20	Part Number 34096C 27652 30700 650494 30699C 33454 29916 650548 32630 35256A	Qty	Description  Cylinder (Cl liner)(3-5/16")(Incl.2,20,41,43,72 & 119)  Pin, Dowel  Yoke, Governor  Screw, 6-40 x 5/16"  Rod Assy., Governor (Incl. 15A & 15B)  Governor Lever Assy.  Clamp, Governor lever  Screw, 8-32 x 5/16"  Seal, Oil  Blower Housing Baffle (With electric starter knockout) (Use as required)
25	29536		Blower Housing Baffle (Without electric starter knockout) (Use as required)
30 35 36 37A 37 38 40 40 40 41 41 41 42 42 42 42 43 45 46 47	650561 33365B 29826 29918 30322 29216 29642 34543 34544 34545 34031B 34032B 34033B 34037 34038 34039 27888 32591C 650662C 650662C 650662C 34034 32590		Screw, 1/4-20 x 5/8" Crankshaft (Incl. 108 & 109) Screw, 10-32 x 3/4" Lockwasher, #8 E.T. Nut & Lockwasher, 8-32 Locknut, 10-32 Ring, Retaining Piston, Pin & Ring Set (Std.) (3-3/16 ") Piston, Pin & Ring Set (.010" OS) Piston, Pin & Ring Set (.020" OS) Piston & Pin Ass'y. (Std.) (3-3/16") (I ncl.43) Piston & Pin Ass'y. (.010" OS) (Incl. 43) Piston & Pin Ass'y. (.020" OS) (Incl. 43) Ring Set (Std.) (3-3/16" Bore) Ring Set (.010" OS) Ring Set (.010" OS) Ring, Piston Pin retaining Rod Assy., Connecting (Incl. 46, 47 & 49) Bolt, Connecting rod (2 pieces) Bolt, Connecting rod (2 pieces) Lifter, Valve Plate, Lock & Oil dipper (This plate can be replaced by No. 34242 Oil dipper but No. 650662C screws must be used)
50 60 61 62 63 65 69 70 71 72 75 80 81 82 83 84 86 87	34242 34143 33273A 34126 650760 28545 650128 35262 33367B 33368 27642 31950 31845 30590A 30591 30588A 29193 650833 650832 32589		Dipper, Oil Camshaft (MCR) Extension, Blower housing Bracket, Grommet mounting Screw, 8-32 x 3/8" Grommet, Plastic Screw, 10-24 x 1/2" * Gasket, Flange Cover, Cylinder (Incl. 71, 75 & 80) Bushing, Crankshaft Plug, Oil drain Seal, Oil Shaft, Mechanical governor Washer, Flat Gear Assy., Governor (Incl. 81) Spool, Governor Ring, Retaining Screw, 1/4-20 x 1-3/16 (Use as required) Screw, 1/4-20 x 1-11/16" (Use as required) Key, Flywheel


	Dort Number Otiv	Description
	Part Number Qty 650815	Description Washer, Belleville
	8116	·
	610118	Nut, Hex
		Cover, Spark plug
	650489	Screw, 1/4-20 x 5/8"
108	29783	Pin, Crankshaft gear (Only serviceable when gear is pinned
		to crank.)
109	33245	Gear, Crankshaft
	34131	Ground Wire
	34041A	* Gasket, Cylinder head
	34030A	Head, Cylinder
	27878A	Exhaust Valve (Std.) (Incl. 151)
	27880A	Exhaust Valve (1/32" OS) (Incl. 151)
	34035	Intake Valve (Std.) (Incl. 151)
	34036	Intake Valve (1/32" OS) (Incl. 151)
	650691	Washer (Do not use with No. 6021A scr ew.)
	650690	Washer, Belleville (Use as required)
	650727	Screw, 5/16-18 x 1-3/4 (Use as required)
	6021A	
130	0021A	Screw, 5/16-18 x 1-1/2" (Use as required, but do notuse No.
		650691 washer.)
130	650711	Screw, 5/16-18 x 1-5/8 " (Use as required) (Can use 6021A
		but discard 650691 washer.)
130	650694A	Screw, 5/16-18 x 2" (Use as required)
	650737	Screw, 1/4-20 x 1/2" (Use as required)
	650738	Screw, 1/4-20 x 5/8 (Use as required)
	650713	
		Screw, 5/16-18 x 5/8" Washer, Internal Legis
	650890	Washer, Internal Lock
	33636	Resistor Spark Plug
	33369	Bracket, Governor gear
	650836	Screw, 10-24 x 1/2"
	27882	Cap, Upper valve spring
	27881	Spring, Valve
	32581	Cap, Lower valve spring
	27896A	* Gasket, Breather
	28423	Body, Breather
	28424	Element, Breather
	28425	Cover, Breather
	35350	Tube, Breather
	650128	Screw, 10-24 x 1/2"
	29752	Nut & Lockwasher, 1/4-28
	30088A	Screw, 1/4-28 x 1"
	33263	* Gasket, Carburetor
	33877	Pipe, Intake
	33371	Link, Governor lever
	31342	Spring, Compression
204	650549	Screw, 5-40 x 7/16"
206	610973	Terminal Assy.
207	33878	Link, Governor lever-to-throttle
210	27793	Clip, Conduit
211	28942	Screw, 10-32 x 3/8"
222A		Pop Rivet (Can be purchased locally)
223	650378	Screw, Torx T-30, 5/16-18 x 1-1/8"
	27915A	* Gasket, Intake pipe
	33375D	Blower Housing (For electric starter)
	650788	Screw, 5/16-18 x 3/4"
	29747B	Screw, 5/16-24 x 21/32"
	33272B	Cover, Cylinder head
200	OOL: 25	Soroi, Symnoor risaa


Ref #	Part Number	Qty	Description
275	33280A	•	Muffler
276	31588		Plate, Muffler locking
276	35741		Plate, Muffler locking
277	650729		Screw, 5/16-18 x 3-3/16" (Use as required)
277	651002		Screw, 5/16-18 x 4-1/4" (Use as required)
281	33013		Cover, Starter bubble
282	650760		Screw, 8-32 x 7/16"
285A	33662		Hub & Screen Assy.
287	29752		Nut, 1/4-28
290	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
290	30962		Fuel Line (Braided 32")(80cm)(As required)
291	30705		Fuel Line (Braided 16")(40cm)(As required)
292	26460		Fuel Line Clamp (Use as required)
295	32961		Valve, Fuel shut-off
298	650665		Screw, 1/4-15 x 7/8"
300	34156A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
			builtwith different size fuel inlet openings. Tanks with the
			1-3/16" I.D. opening use fuel cap 34210. Tanks with the
			1-1/2" I.D. opening use fuel cap 35355.
201 /	440444D		
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
			I.D.)
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required) (1.5" I.D.)
3∩1∆	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
30 IA	3-12 TO		as required) (1.5" I.D.)
	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	29673		* Gasket, Oil filler
	31297		Dipstick (Incl. 307)
	29443		Clip, Fuel line
	34140		Cover, Carburetor
	31291		Plug, Cover
	34154		Plate, Upper fuel tank mtg.
	34155		Bracket, Lower fuel tank mtg.
	650561		Screw, 1/4-20 x 5/8"
	34141		Guard, Starter
	32576		Seal, Snow Guard
	650767		Screw, 8-32 x 27/64"
	550223		Decal, Name
	34415		Decal, Choke
	34346		Decal, Instruction
	35274		Decal, Instruction
	631021		Inlet Needle, Seat & Clip Assy.
380	631917		Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
			page 138 for breakdown or Grid E-1)
400	33279G		* Gasket Set (Incl. items marked *)
	730225		SAE 30 4-Cycle Engine Oil (Quart)
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
	35824		Muffler Optional
			·

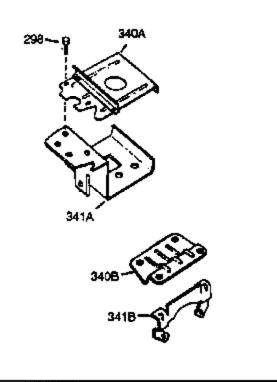


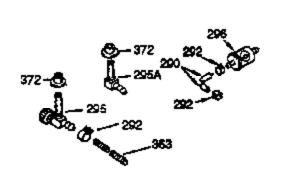


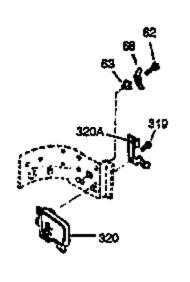


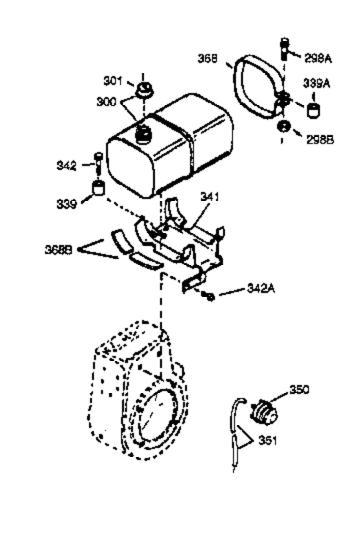

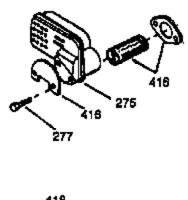


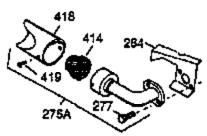






Ref #	Part Number	Qty	Description
	30322	-	Nut & Lockwasher, 8-32
62	650760		Screw, 8-32 x 3/8"
63	28545		Grommet, Plastic
68	33356		Tab, Ground terminal
129	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131A	650713		Screw, 5/16-18 x 5/8"
131	650737		Screw, 1/4-20 x 1/2" (Use as required )
131	650738		Screw, 1/4-20 x 5/8 (Use as required)
222A			Pop Rivet (Can be purchased locally)
274	35865		Gasket, Exhaust
275	33280A		Muffler
277	650729		Screw, 5/16-18 x 3-3/16" (Use as requ ired)
277	651002		Screw, 5/16-18 x 4-1/4" (Use as requi red)
285A	33662		Hub & Screen Assy.
290	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962		Fuel Line (Braided 32")(80cm)(As requ ired)
	26460		Fuel Line Clamp (Use as required)
	32961		Valve, Fuel shut-off
	650665		Screw, 1/4-15 x 7/8"
300	34156A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
			builtwith different size fuel inlet openings. Tanks with the
			1-3/16" I.D. opening use fuel cap 34210. Tanks with the
			1-1/2" I.D. opening use fuel cap 35355.
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
			I.D.)
201Λ	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
301A	33032		required) (1.5" I.D.)
			, , ,
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
			as required) (1.5" I.D.)
301A	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	29673		* Gasket, Oil filler
	34140		Cover, Carburetor
	31291		Plug, Cover
	34155		Bracket, Lower fuel tank mtg.
	650561		Screw, 1/4-20 x 5/8"
	570629A		Primer Assy.
	32180C		Line, Primer
	28819		Spring, Fuel line
	33323		Opt.Muffler Screen (Mini-Bike applica tion)
	730130		Kit, Exhaust adapter (Incl. 274 & 277)
	33700		Cover & Tube, Muffler (use as require d)
419	650578		Screw, 8-18 x 3/8" (use as required)
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
422	35824		Muffler Optional \( \)

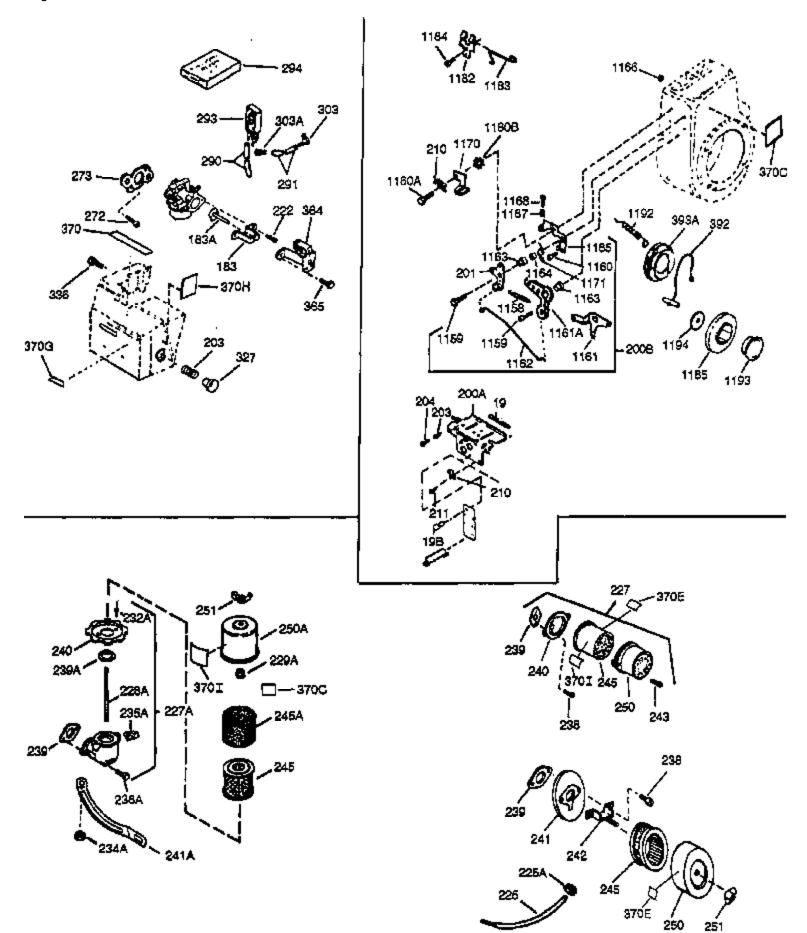

Ref #	Part Number (	Qty Description
37A	30322	Nut & Lockwasher, 8-32
129	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131	650737	Screw, 1/4-20 x 1/2" (Use as required )
131	650738	Screw, 1/4-20 x 5/8 (Use as required)
131A	650713	Screw, 5/16-18 x 5/8"
	33461A	Control Bracket (Incl. 19, 203, 204 & 206)
	730152	Control Bracket (Incl.1158-1171)(As r eq.)
	31342	Spring, Compression
	650549	Screw, 5-40 x 7/16"
	27793	Clip, Conduit
	28942	Screw, 10-32 x 3/8"
222A	20342	Pop Rivet (Can be purchased locally)
	700407	
221	730127	Air Cleaner Ass'y. (Incl. 238, 239, 242, 246, 250) (Use as
		required)
285A	33662	Hub & Screen Assy.
	29774	Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962	Fuel Line (Braided 32")(80cm)(As required)
	30705	Fuel Line (Braided 16")(40cm)(As required)
	33715	Impulse Fuel Pump NOTE: 34385 and 33715 (WIP)pumps
293	337 13	
		are replaced by 35813 and 35800 (WIP) pumps. The 33010
		(3000 series) repair kit is still available. The 35791 repair kit
		is used with the 35813 and 35800 fuel pumps.
294	35791	Fuel Pump Repair Kit NOTE: 34385 and 33715 (WIP)pumps
		are replaced by 35813 and 35800 (WIP) pumps. The 33010
		(3000 series) repair kit is still available. The 35791 repair kit
		is used with the 35813 and 35800 fuel pumps.
		·
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
		I.D.)
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
		required) (1.5" I.D.)
004.4	0.404.0	1 / ( /
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required) (1.5" I.D.)
301A	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
	32958	Fitting, Fuel
	29673	* Gasket, Oil filler
	34140	Cover, Carburetor
		·
	31291	Plug, Cover
	33377	Bracket, Carburetor cover mtg.
	650767	Screw, 8-32 x 27/64"
	34346	Decal, Instruction
	35274	Decal, Instruction
370C	34415	Decal, Choke
421	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
	35824	Muffler Optional (
	33374	Spring Extension
	30312	Screw, 10-32 x 1/2"
	28820	Screw, 10-32 x 1/2"
	27070	Lockwasher
	34138	Bracket, Choke wire
	34139	Control, Choke wire
	650760	Screw, 8-32 x 3/8"
1185	33816	Hub & Screen Assy.

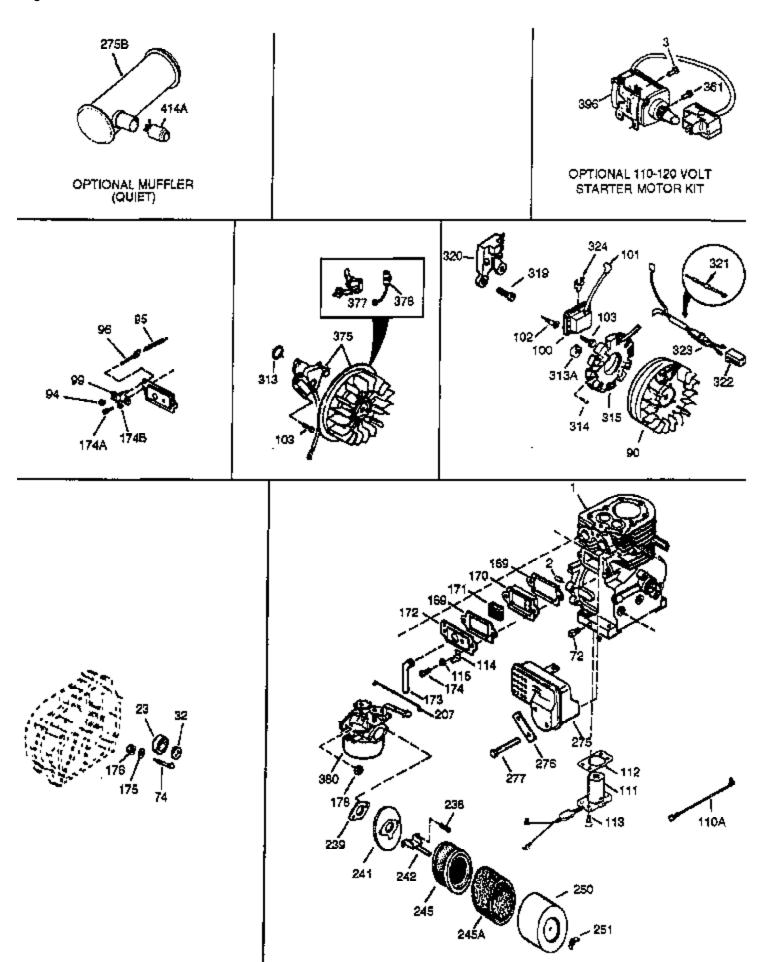

Ref #	Part Number Qty	Description
	34096C	Cylinder (CI liner)(3-5/16")(Incl.2,20,41,43,72 & 119)
	27652	Pin, Dowel
	30322	Nut & Lockwasher, 8-32
	27642	Plug, Oil drain
	610118	Cover, Spark plug
	650489	Screw, 1/4-20 x 5/8"
	650727 650743	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
	650713	Screw, 5/16-18 x 5/8"
	650737	Screw, 1/4-20 x 1/2" (Use as required )
	650738	Screw, 1/4-20 x 5/8 (Use as required)
	27896A	* Gasket, Breather
	28423	Body, Breather
	28424	Element, Breather
172	28425	Cover, Breather
173	35350	Tube, Breather
174	650128	Screw, 10-24 x 1/2"
178	29752	Nut & Lockwasher, 1/4-28
	33878	Link, Governor lever-to-throttle
222A		Pop Rivet (Can be purchased locally)
	391026	Muffler (Incl. 284, 284A & 416) (This spark arrester
2100	001020	mufflercan be used on any model.)
		•
275	33280A	Muffler
276	31588	Plate, Muffler locking
276	35741	Plate, Muffler locking
277	650729	Screw, 5/16-18 x 3-3/16" (Use as required)
	651002	Screw, 5/16-18 x 4-1/4" (Use as required)
	33662	Hub & Screen Assy.
	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
00 11 1		I.D.)
204.4	22222	•
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
		required) (1.5" I.D.)
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required) (1.5" I.D.)
0044	0=0==	. , , ,
	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
	29673	* Gasket, Oil filler
	33876	Gasket, Stator (Used only on Std. poi nt ign.)
	34140	Cover, Carburetor
338A	31291	Plug, Cover
375	610848	Magneto (w/ring gear for 120 Volt sta rter) NOTE: The
		complete magneto is not available as an assembly.
		Themagneto number is shown for reference purpose only.
		Order component parts individually, as shown in parts list.
		(Refer to Division 5, Section B, page 28 for breakdown or
		Fiche 18B, Grid F-1
^	205.474	,
	30547A	Breaker Points (Use with Std. point i gn.)
	30548B	Condenser
380	631917	Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
		page 138 for breakdown or Grid E-1)
<i>I</i> /21	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
	35824	Muffler Optional
722	000 <u>L</u> 1	Manior Optional