




Ref #	Part Number C	Qty D	Description
	34096C		Cylinder (CI liner)(3-5/16")(Incl.2,20,41,43,72 & 119)
	27652		in, Dowel
	32678		lipple, Oil drain
			• •
	30969		Cap, Oil drain
	30699C		Rod Assy., Governor (Incl. 15A & 15B)
15A	30700	Y	oke, Governor
15B	650494	S	Screw, 6-40 x 5/16"
16	33454	G	Sovernor Lever Assy.
	29916		Clamp, Governor lever
	650548		Screw, 8-32 x 5/16"
	32630		Seal, Oil
			·
25	29536		Blower Housing Baffle (Without electric starter knockout)
		(L	Jse as required)
25	35256A	В	Blower Housing Baffle (With electric starter knockout) (Use
			s required)
			. ,
	650561		Screw, 1/4-20 x 5/8"
30	33365B	С	Crankshaft (Incl. 108 & 109)
35	29826	S	Screw, 10-32 x 3/4"
	29918		ockwasher, #8 E.T.
	29216		ocknut, 10-32
	30322		lut & Lockwasher, 8-32
			·
	29642		Ring, Retaining
	34543		Piston, Pin & Ring Set (Std.) (3-3/16")
	34544		Piston, Pin & Ring Set (.010" OS)
40	34545	Р	Piston, Pin & Ring Set (.020" OS)
41	34031B	Р	Piston & Pin Ass'y. (Std.)(3-3/16")(I ncl.43)
41	34032B	Р	Piston & Pin Ass'y. (.010" OS) (Incl. 43)
	34033B		Piston & Pin Ass'y. (.020" OS) (Incl. 43)
	34037		Ring Set (Std.) (3-3/16" Bore)
	34038		Ring Set (.010" OS)
	34039		Ring Set (.020" OS)
			• ,
	27888		Ring, Piston Pin retaining
	32591C		Rod Assy., Connecting (Incl. 46, 47 & 49)
	650662C		Solt, Connecting rod (2 pieces)
47	650662C	В	Solt, Connecting rod (2 pieces)
48	34034	Li	ifter, Valve
49	34242	D	Dipper, Oil
50	34143	С	camshaft (MCR)
60	33273A		ixtension, Blower housing
	34126		Bracket, Grommet mounting
	650760		Screw, 8-32 x 3/8"
	28545		Grommet, Plastic
	650128		Screw, 10-24 x 1/2"
	35262		Gasket, Flange
	33367B		Cover, Cylinder (Incl. 71, 75 & 80)
	33368		Bushing, Crankshaft
72	27642	Р	Plug, Oil drain
75	31950	S	Seal, Oil
	31845		Shaft, Mechanical governor
	30590A		Vasher, Flat
	30591		Gear Assy., Governor (Incl. 81)
	30588A		Spool, Governor
	29193		Ring, Retaining
	650833		Screw, 1/4-20 x 1-3/16 (Use as required)
	650832		Screw, 1/4-20 x 1-11/16" (Use as required)
	32589		(ey, Flywheel
92	650815	V	Vasher, Belleville


	D. I.M. J.	
		/ Description
	8116	Nut, Hex
	610118	Cover, Spark plug
	650489	Screw, 1/4-20 x 5/8"
108	29783	Pin, Crankshaft gear (Only serviceable when gear is pinned
		to crank.)
109	33245	Gear, Crankshaft
	34240	Ground Wire
	34041A	* Gasket, Cylinder head
	34030A	Head, Cylinder
	27878A	Exhaust Valve (Std.) (Incl. 151)
	27880A	Exhaust Valve (1/32" OS) (Incl. 151)
	34035	Intake Valve (Std.) (Incl. 151)
	34036	Intake Valve (1/32" OS) (Incl. 151)
	650691	Washer (Do not use with No. 6021A scr ew.)
	650690	Washer, Belleville (Use as required)
	650727	Screw, 5/16-18 x 1-3/4 (Use as required)
	6021A	Screw, 5/16-18 x 1-1/2" (Use as required, but do notuse No.
130	0021A	650691 washer.)
		03009 i washer.)
130	650711	Screw, 5/16-18 x 1-5/8 " (Use as required) (Can use 6021A
		but discard 650691 washer.)
130	650694A	Screw, 5/16-18 x 2" (Use as required)
	650737	Screw, 1/4-20 x 1/2" (Use as required)
	650738	Screw, 1/4-20 x 5/8 (Use as required)
	650713	Screw, 5/16-18 x 5/8"
	650890	Washer, Internal Lock
	33636	Resistor Spark Plug
	33369	Bracket, Governor gear
	650836	Screw, 10-24 x 1/2"
	27882	Cap, Upper valve spring
	27881	Spring, Valve
	32581	Cap, Lower valve spring
	27896A	* Gasket, Breather
	28423	·
	28424	Body, Breather Element, Breather
	28425	Cover, Breather
	35350	•
	650128	Tube, Breather
	29752	Screw, 10-24 x 1/2" Nut 8 Lodgwooder, 1/4 28
	30088A	Nut & Lockwasher, 1/4-28 Screw, 1/4-28 x 1"
	33263	* Gasket, Carburetor
	33877	·
	33371	Pipe, Intake Link, Governor lever
	31342	
		Spring, Compression
	650549 610073	Screw, 5-40 x 7/16"
	610973	Terminal Assy.
	33878	Link, Governor lever-to-throttle
	27793	Clip, Conduit
	28942	Screw, 10-32 x 3/8" Pop Rivet (Cap be purebased locally)
222A	650270	Pop Rivet (Can be purchased locally)
	650378	Screw, Torx T-30, 5/16-18 x 1-1/8"
	27915A	* Gasket, Intake pipe
	34145	Blower Housing (For electric starter)
	650788	Screw, 5/16-18 x 3/4"
	29747B	Screw, 5/16-24 x 21/32"
	33272B	Cover, Cylinder head
275	33280A	Muffler


Ref #	Part Number C	ty Description
276	31588	Plate, Muffler locking
276	35741	Plate, Muffler locking
277	650729	Screw, 5/16-18 x 3-3/16" (Use as requ ired)
277	651002	Screw, 5/16-18 x 4-1/4" (Use as required)
281	33013	Cover, Starter bubble
	650760	Screw, 8-32 x 7/16"
	33662	Hub & Screen Assy.
	29752	Nut, 1/4-28
	29774	Fuel Line (Braided 8-1/4")(21cm)(As r equired)
290	30962	Fuel Line (Braided 32")(80cm)(As required)
291	30705	Fuel Line (Braided 16")(40cm)(As required)
292	26460	Fuel Line Clamp (Use as required)
298	650665	Screw, 1/4-15 x 7/8"
300	34156A	Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
		builtwith different size fuel inlet openings. Tanks with the
		1-3/16" I.D. opening use fuel cap 34210. Tanks with the
		1-1/2" I.D. opening use fuel cap 35355.
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
00171	4101415	I.D.)
2214	0000	•
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
		required) (1.5" I.D.)
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required) (1.5" I.D.)
301A	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
	33893A	Oil Fill Tube
	33590	"O" Ring
	34011A	Dipstick (Incl. 307)
	650765	Screw, 10-32 x 1/2"
	34140	Cover, Carburetor
	31291	Plug, Cover
	28942	Screw, Sems 10-32 x 3/8"
	34154	Plate, Upper fuel tank mtg.
	34155	Bracket, Lower fuel tank mtg.
	650561	Screw, 1/4-20 x 5/8"
	34141	Guard, Starter
	32576	Seal, Snow Guard
	650767	Screw, 8-32 x 27/64"
	34144	Decal, Primer
	34346	Decal, Instruction
	35274	Decal, Instruction
	34170	Decal, Instruction
	631021	Inlet Needle, Seat & Clip Assy.
	632038	Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
		page 152 for breakdown or Fiche18B, Grid E-7)
400	33279G	* Gasket Set (Incl. items marked *)
	730225	SAE 30 4-Cycle Engine Oil (Quart)
	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
	35824	Muffler Optional
122		

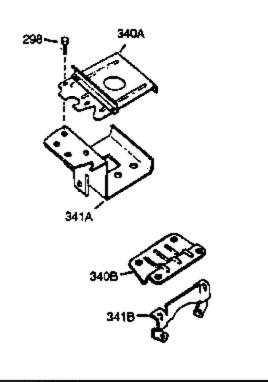


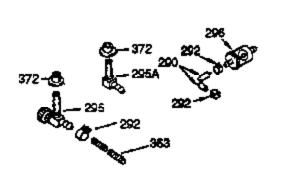


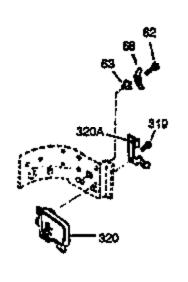

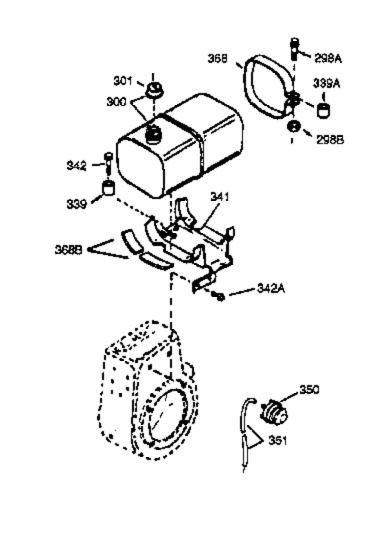

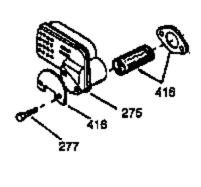

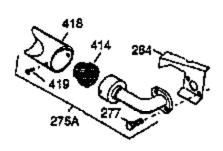

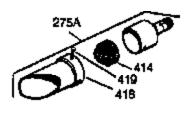



Ref #	Part Number	Qty	Description
37A	30322		Nut & Lockwasher, 8-32
62	650760		Screw, 8-32 x 3/8"
63	28545		Grommet, Plastic
129	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131A	650713		Screw, 5/16-18 x 5/8"
131	650737		Screw, 1/4-20 x 1/2" (Use as required)
131	650738		Screw, 1/4-20 x 5/8 (Use as required)
222A			Pop Rivet (Can be purchased locally)
274	35865		Gasket, Exhaust
275	33280A		Muffler
277	650729		Screw, 5/16-18 x 3-3/16" (Use as requ ired)
277	651002		Screw, 5/16-18 x 4-1/4" (Use as requi red)
285A	33662		Hub & Screen Assy.
290	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
290	30962		Fuel Line (Braided 32")(80cm)(As required)
292	26460		Fuel Line Clamp (Use as required)
298	650665		Screw, 1/4-15 x 7/8"
300	34156A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
			builtwith different size fuel inlet openings. Tanks with the
			1-3/16" I.D. opening use fuel cap 34210. Tanks with the
			1-1/2" I.D. opening use fuel cap 35355.
201Λ	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
301A	4101446		I.D.)
			,
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
00171	01210		as required) (1.5" I.D.)
	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	34140		Cover, Carburetor
	31291		Plug, Cover
	34155		Bracket, Lower fuel tank mtg.
	650561		Screw, 1/4-20 x 5/8"
	570629A		Primer Assy.
	32180C		Line, Primer
	34144		Decal, Primer
	33323		Opt.Muffler Screen (Mini-Bike applica tion)
	730130		Kit, Exhaust adapter (Incl. 274 & 277)
	33700		Cover & Tube, Muffler (use as require d)
	650578		Screw, 8-18 x 3/8" (use as required)
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
422	35824		Muffler Optional



Ref #	Part Number Qty	Description
	30322	Nut & Lockwasher, 8-32
	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
	650737	Screw, 1/4-20 x 1/2" (Use as required)
	650738	Screw, 1/4-20 x 5/8 (Use as required)
	650713	Screw, 5/16-18 x 5/8"
	33461A	Control Bracket (Incl. 19, 203, 204 & 206)
	730152	Control Bracket (Incl.1158-1171)(As r eq.)
	31342	Spring, Compression
	650549	Screw, 5-40 x 7/16"
	27793	Clip, Conduit
	28942	Screw, 10-32 x 3/8"
222A	20342	Pop Rivet (Can be purchased locally)
	730127	Air Cleaner Ass'y. (Incl. 238, 239, 242, 246, 250) (Use as
221	130121	required)
2051	22662	. ,
	33662	Hub & Screen Assy.
	29774	Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962	Fuel Line (Braided 32")(80cm)(As required)
	30705	Fuel Line (Braided 16")(40cm)(As required)
293	33715	Impulse Fuel Pump NOTE: 34385 and 33715 (WIP)pumps
		are replaced by 35813 and 35800 (WIP) pumps. The 33010
		(3000 series) repair kit is still available. The 35791 repair kit
		is used with the 35813 and 35800 fuel pumps.
294	35791	Fuel Pump Repair Kit NOTE: 34385 and 33715 (WIP)pumps
		are replaced by 35813 and 35800 (WIP) pumps. The 33010
		(3000 series) repair kit is still available. The 35791 repair kit
		is used with the 35813 and 35800 fuel pumps.
201 /	410144B	·
30 IA	4101 44 6	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
		I.D.)
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
		required) (1.5" I.D.)
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required) (1.5" I.D.)
201 /	35355	, , ,
		Fuel Cap (Red Plastic)(1.75" I.D.)
	32958	Fitting, Fuel
	650765	Screw, 10-32 x 1/2"
	34140	Cover, Carburetor
	31291	Plug, Cover
	33377	Bracket, Carburetor cover mtg.
	650767	Screw, 8-32 x 27/64"
	34346	Decal, Instruction
	35274	Decal, Instruction
	34170	Decal, Instruction
	34144	Decal, Primer
	34414	Decal, Warning
	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
	35824	Muffler Optional
	33374	Spring Extension
	30312	Screw, 10-32 x 1/2"
	28820	Screw, 10-32 x 1/2"
1160	27070	Lockwasher
1182	34138	Bracket, Choke wire
	34139	Control, Choke wire
	650257	Screw, 8-32 x 5/16"
	33816	Hub & Screen Assy.
		•



Ref #	Part Number Qty	Description
	34096C	Cylinder (CI liner)(3-5/16")(Incl.2,20,41,43,72 & 119)
	27652	Pin, Dowel
	30322	Nut & Lockwasher, 8-32
	27642	Plug, Oil drain
	610118	Cover, Spark plug
	650489	
		Screw, 1/4-20 x 5/8"
	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
	650713	Screw, 5/16-18 x 5/8"
	650737	Screw, 1/4-20 x 1/2" (Use as required)
	650738	Screw, 1/4-20 x 5/8 (Use as required)
169	27896A	* Gasket, Breather
170	28423	Body, Breather
171	28424	Element, Breather
172	28425	Cover, Breather
173	35350	Tube, Breather
	650128	Screw, 10-24 x 1/2"
	29752	Nut & Lockwasher, 1/4-28
	33878	Link, Governor lever-to-throttle
222A	33070	·
	204020	Pop Rivet (Can be purchased locally)
2/5B	391026	Muffler (Incl. 284, 284A & 416) (This spark arrester
		mufflercan be used on any model.)
275	33280A	Muffler
	31588	Plate, Muffler locking
	35741	Plate, Muffler locking
	650729	
		Screw, 5/16-18 x 3-3/16" (Use as required)
	651002	Screw, 5/16-18 x 4-1/4" (Use as requi red)
	33662	Hub & Screen Assy.
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
		I.D.)
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
		required) (1.5" I.D.)
		• • • • • • • • • • • • • • • • • • • •
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required) (1.5" I.D.)
204 A	25255	Fire Con (Bod Blootic)/4 75" LD.)
	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
	33876	Gasket, Stator (Used only on Std. poi nt ign.)
	34140	Cover, Carburetor
	31291	Plug, Cover
	34144	Decal, Primer
375	610848	Magneto (w/ring gear for 120 Volt sta rter) NOTE: The
		complete magneto is not available as an assembly.
		Themagneto number is shown for reference purpose only.
		Order component parts individually, as shown in parts list.
		(Refer to Division 5, Section B, page 28 for breakdown or
		Fiche 18B, Grid F-1
		·
377	30547A	Breaker Points (Use with Std. point i gn.)
	30548B	Condenser
	632038	Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
230		page 152 for breakdown or Fiche18B, Grid E-7)
	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
422	35824	Muffler Optional