



Ref #	Part Number Qty	Description
	34096C	Cylinder (CI liner)(3-5/16")(Incl.2,20,41,43,72 & 119)
	27652	Pin, Dowel
	650820	Screw, 1/4-20 x 1/2"
	30968	Nipple, Oil drain
		• •
	30969	Cap, Oil drain
	30699C	Rod Assy., Governor (Incl. 15A & 15B)
	650494	Screw, 6-40 x 5/16"
15A	30700	Yoke, Governor
16	33454	Governor Lever Assy.
17	29916	Clamp, Governor lever
18	650548	Screw, 8-32 x 5/16"
	32630	Seal, Oil
	29536	Blower Housing Baffle (Without electric starter knockout)
25	20000	(Use as required)
25	35256A	Blower Housing Baffle (With electric starter knockout) (Use
20	33230A	as required)
26	650564	• ,
	650561	Screw, 1/4-20 x 5/8"  Crankel of t (loc) 4 00 8 400)
	33719B	Crankshaft (Incl. 108 & 109)
	29826	Screw, 10-32 x 3/4"
	29918	Lockwasher, #8 E.T.
37	29216	Locknut, 10-32
37A	30322	Nut & Lockwasher, 8-32
38	29642	Ring, Retaining
40	34543	Piston, Pin & Ring Set (Std.) (3-3/16 ")
	34544	Piston, Pin & Ring Set (.010" OS)
	34545	Piston, Pin & Ring Set (.020" OS)
	34031B	
		Piston & Pin Ass'y. (Std.)(3-3/16")(I ncl.43)
	34032B	Piston & Pin Ass'y. (.010" OS) (Incl. 43)
	34033B	Piston & Pin Ass'y. (.020" OS) (Incl. 43)
	34037	Ring Set (Std.) (3-3/16" Bore)
42	34038	Ring Set (.010" OS)
42	34039	Ring Set (.020" OS)
43	27888	Ring, Piston Pin retaining
45	32591C	Rod Assy., Connecting (Incl. 46, 47 & 49)
	650662C	Bolt, Connecting rod (2 pieces)
	650662C	Bolt, Connecting rod (2 pieces)
	34034	Lifter, Valve
	34242	
		Dipper, Oil
	34143	Camshaft (MCR)
	33273A	Extension, Blower housing
	34126	Bracket, Grommet mounting
	650760	Screw, 8-32 x 3/8"
63	28545	Grommet, Plastic
65	650128	Screw, 10-24 x 1/2"
69	35262	* Gasket, Flange
	33367B	Cover, Cylinder (Incl. 71, 75 & 80)
	33368	Bushing, Crankshaft
	27642	Plug, Oil drain
	31950	Seal, Oil
	31845	Shaft, Mechanical governor
	30590A	Washer, Flat
	30591	Gear Assy., Governor (Incl. 81)
83	30588A	Spool, Governor
84	29193	Ring, Retaining
	650833	Screw, 1/4-20 x 1-3/16 (Use as requir ed)
	650832	Screw, 1/4-20 x 1-11/16" (Use as required)
	32589	Key, Flywheel
09	02000	i voy, i iyvvi iooi


Ref # Part Number 92 650815	Qty Description Washer, Belleville
92 030013	vvasilei, Delleville
93 8116	Nut, Hex
101 610118	
	Cover, Spark plug
103 650516	Screw, 1/4-20 x 1-1/8"
108 29783	Pin, Crankshaft gear (Only serviceable when gear is pinned
	to crank.)
109 33245	Gear, Crankshaft
110 34240	Ground Wire
119 34923A	* Gasket, Cylinder head
120 34030A	Head, Cylinder
125 27878A	Exhaust Valve (Std.) (Incl. 151)
125 27880A	Exhaust Valve (1/32" OS) (Incl. 151)
126 34035	Intake Valve (Std.) (Incl. 151)
126 34036	Intake Valve (0.0.1) (Incl. 151) Intake Valve (1/32" OS) (Incl. 151)
127 650691	Washer (Do not use with No. 6021A scr ew.)
128 650690	,
	Washer, Belleville (Use as required)
129 650727	Screw, 5/16-18 x 1-3/4 (Use as required)
130 6021A	Screw, 5/16-18 x 1-1/2" (Use as required, but do notuse No.
	650691 washer.)
130 650711	Screw, 5/16-18 x 1-5/8 " (Use as required) (Can use 6021A
	but discard 650691 washer.)
420 0500044	,
130 650694A	Screw, 5/16-18 x 2" (Use as required)
131A 650713	Screw, 5/16-18 x 5/8"
131 650737	Screw, 1/4-20 x 1/2" (Use as required )
131 650738	Screw, 1/4-20 x 5/8 (Use as required)
133 650890	Washer, Internal Lock
135 33636	Resistor Spark Plug
139 33369	Bracket, Governor gear
140 650836	Screw, 10-24 x 1/2"
149A 35862	Seal Assy., Intake valve
150 27881	Spring, Valve
151 32581	Cap, Lower valve spring
169 27896A	* Gasket, Breather
170 28423	Body, Breather
171 28424	Element, Breather
172 28425	Cover, Breather
173 35350	Tube, Breather
174 650128	Screw, 10-24 x 1/2"
178 29752	Nut & Lockwasher, 1/4-28
182 30088A	Screw, 1/4-28 x 1"
183 34587	Bracket, Choke
184 33263	* Gasket, Carburetor
185 33877	Pipe, Intake
186 34667	Link, Governor lever
200 34664	Control Bracket (Incl.19,203, 204, 20 6 & 209)
203 31342	Spring, Compression
204 650549	Screw, 5-40 x 7/16"
204 630349	Terminal Assy.
207 33878	Link, Governor lever-to-throttle
209 650821	Screw, 10-32 x 1/2"
210 27793	Clip, Conduit
211 28942	Screw, 10-32 x 3/8"
219 34586	Rod, Choke
220 35438	Knob, Control
222 28820	Screw, 10-32 x 1/2"
222A	Pop Rivet (Can be purchased locally)


Def #	Dark November	Description
		Description
	650378	Screw, Torx T-30, 5/16-18 x 1-1/8"
	27915A	* Gasket, Intake pipe
	34822A	Blower Housing
	650788 20747B	Screw, 5/16-18 x 3/4"
	29747B	Screw, 5/16-24 x 21/32"
	33272B	Cover, Cylinder head
	33280A	Muffler
	31588	Plate, Muffler locking
	35741	Plate, Muffler locking
	650729	Screw, 5/16-18 x 3-3/16" (Use as required)
	651002	Screw, 5/16-18 x 4-1/4" (Use as requi red)
	33013	Cover, Starter bubble
	650760	Screw, 8-32 x 7/16"
	33662	Hub & Screen Assy.
	29752	Nut, 1/4-28
	29774	Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962	Fuel Line (Braided 32")(80cm)(As required)
	30705	Fuel Line (Braided 16")(40cm)(As requ ired)
	26460	Fuel Line Clamp (Use as required)
	650665	Screw, 1/4-15 x 7/8"
300	34156A	Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
		builtwith different size fuel inlet openings. Tanks with the
		1-3/16" I.D. opening use fuel cap 34210. Tanks with the
		1-1/2" I.D. opening use fuel cap 35355.
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
		I.D.)
201Λ	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
301A	33032	required) (1.5" I.D.)
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required) (1.5" I.D.)
301A	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
	33893A	Oil Fill Tube
307	33590	"O" Ring
	34011A	Dipstick (Incl. 307)
	650765	Screw, 10-32 x 1/2"
	34666	Cover, Carburetor
	31291	Plug, Cover
	28942	Screw, Sems 10-32 x 3/8"
	34154	Plate, Upper fuel tank mtg.
	34155	Bracket, Lower fuel tank mtg.
342	650561	Screw, 1/4-20 x 5/8"
359	34141	Guard, Starter
360	32576	Seal, Snow Guard
	650767	Screw, 8-32 x 27/64"
	34416	Decal, Instruction
	35274	Decal, Instruction
	34686	Decal, Name
	34589	Decal, Choke
	34417	Decal, Primer
	631021	Inlet Needle, Seat & Clip Assy.
	632110	Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
200	<del></del>	page 168 for breakdown or Fiche18B, Grid E-9)
400	222700	,
	33279G 730335	* Gasket Set (Incl. items marked *)
	730225	SAE 30 4-Cycle Engine Oil (Quart)
421	730226	SAE 5W30 4-Cycle Engine Oil (Quart)


Ref # Part Number Otv	Description
Rei # Pait Number Qty	Description
422 35824	Muffler Optional
422 33624	Muttler Optional

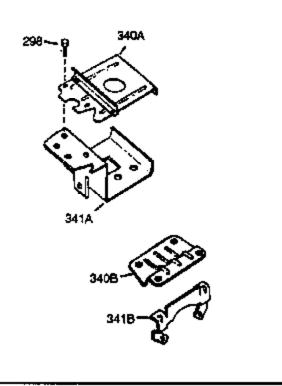


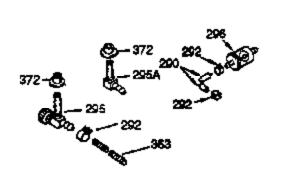


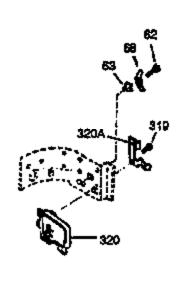


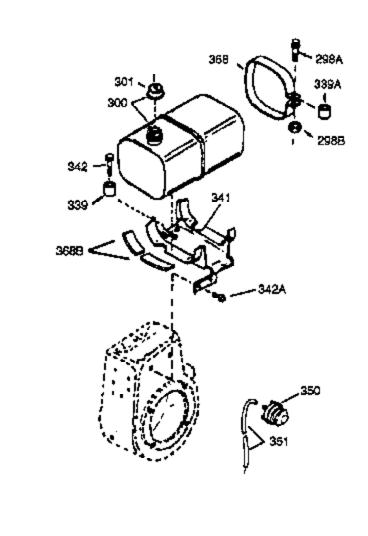

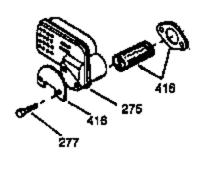


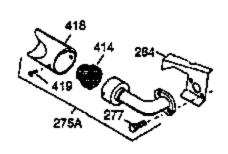

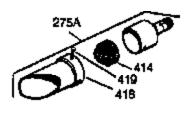




Def !!	Dort Number	O+ -	Description
	Part Number	Qty	Description
	30322		Nut & Lockwasher, 8-32
	650760 39545		Screw, 8-32 x 3/8"
	28545		Grommet, Plastic
	650727		Screw, 5/16-18 x 1-3/4 (Use as required)
	650737		Screw, 1/4-20 x 1/2" (Use as required )
	650738		Screw, 1/4-20 x 5/8 (Use as required)
	650713		Screw, 5/16-18 x 5/8"
222A	05005		Pop Rivet (Can be purchased locally)
	35865		Gasket, Exhaust
	33280A		Muffler
	650729		Screw, 5/16-18 x 3-3/16" (Use as required)
	651002		Screw, 5/16-18 x 4-1/4" (Use as requi red)
	33662		Hub & Screen Assy.
	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962		Fuel Line (Braided 32")(80cm)(As required)
	26460		Fuel Line Clamp (Use as required)
	650665		Screw, 1/4-15 x 7/8"
300	34156A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
			builtwith different size fuel inlet openings. Tanks with the
			1-3/16" I.D. opening use fuel cap 34210. Tanks with the
			1-1/2" I.D. opening use fuel cap 35355.
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
			I.D.)
0044	00000		•
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
			as required) (1.5" I.D.)
004.4	05055		. , , ,
	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	34666		Cover, Carburetor
	31291		Plug, Cover
	34155		Bracket, Lower fuel tank mtg.
	650561		Screw, 1/4-20 x 5/8"
	570682		Primer Assy.
	32180C		Line, Primer
	34417		Decal, Primer
	33323		Opt.Muffler Screen (Mini-Bike applica tion)
	730130		Kit, Exhaust adapter (Incl. 274 & 277 )
	33700		Cover & Tube, Muffler (use as require d)
	650578		Screw, 8-18 x 3/8" (use as required)
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
422	35824		Muffler Optional

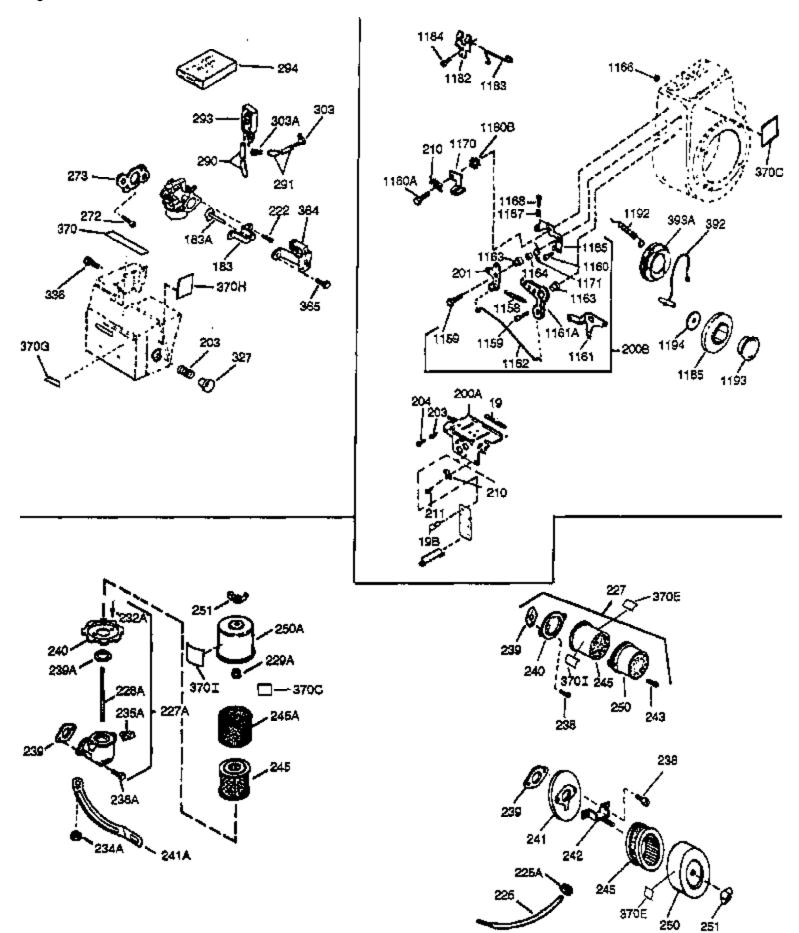

Ref #	Part Number Qty	Description
37A	30322	Nut & Lockwasher, 8-32
129	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131A	650713	Screw, 5/16-18 x 5/8"
131	650737	Screw, 1/4-20 x 1/2" (Use as required )
131	650738	Screw, 1/4-20 x 5/8 (Use as required)
183	34587	Bracket, Choke
200B	730152	Control Bracket (Incl.1158-1171)(As r eq.)
203	31342	Spring, Compression
204	650549	Screw, 5-40 x 7/16"
210	27793	Clip, Conduit
211	28942	Screw, 10-32 x 3/8"
222	28820	Screw, 10-32 x 1/2"
222A		Pop Rivet (Can be purchased locally)
227	730127	Air Cleaner Ass'y. (Incl. 238, 239, 242, 246, 250) (Use as
		required)
285A	33662	Hub & Screen Assy.
290	29774	Fuel Line (Braided 8-1/4")(21cm)(As r equired)
290	30962	Fuel Line (Braided 32")(80cm)(As required)
291	30705	Fuel Line (Braided 16")(40cm)(As required)
293	33715	Impulse Fuel Pump NOTE: 34385 and 33715 (WIP)pumps
		are replaced by 35813 and 35800 (WIP) pumps. The 33010
		(3000 series) repair kit is still available. The 35791 repair kit
		is used with the 35813 and 35800 fuel pumps.
294	35791	Fuel Pump Repair Kit NOTE: 34385 and 33715 (WIP)pumps
20 .	35.51	are replaced by 35813 and 35800 (WIP) pumps. The 33010
		(3000 series) repair kit is still available. The 35791 repair kit
		is used with the 35813 and 35800 fuel pumps.
204 A	44.04.44D	• •
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
		I.D.)
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
		required) (1.5" I.D.)
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required) (1.5" I.D.)
201 /	25255	Fuel Con (Pad Diagtic)/1.75" LD.)
	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
	32958 650765	Fitting, Fuel
	650765	Screw, 10-32 x 1/2"
	34666	Cover, Carburetor
	31291	Plug, Cover
	33377	Bracket, Carburetor cover mtg.
	650767	Screw, 8-32 x 27/64"
	34416 35274	Decal, Instruction
	35274 34589	Decal, Instruction
		Decal, Choke
	34417 34414	Decal, Warning
	34414 730226	Decal, Warning
	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
	35824	Muffler Optional
	30312	Screw, 10-32 x 1/2"
	28820	Screw, 10-32 x 1/2"
	27070	Lockwasher
1183	33816	Hub & Screen Assy.

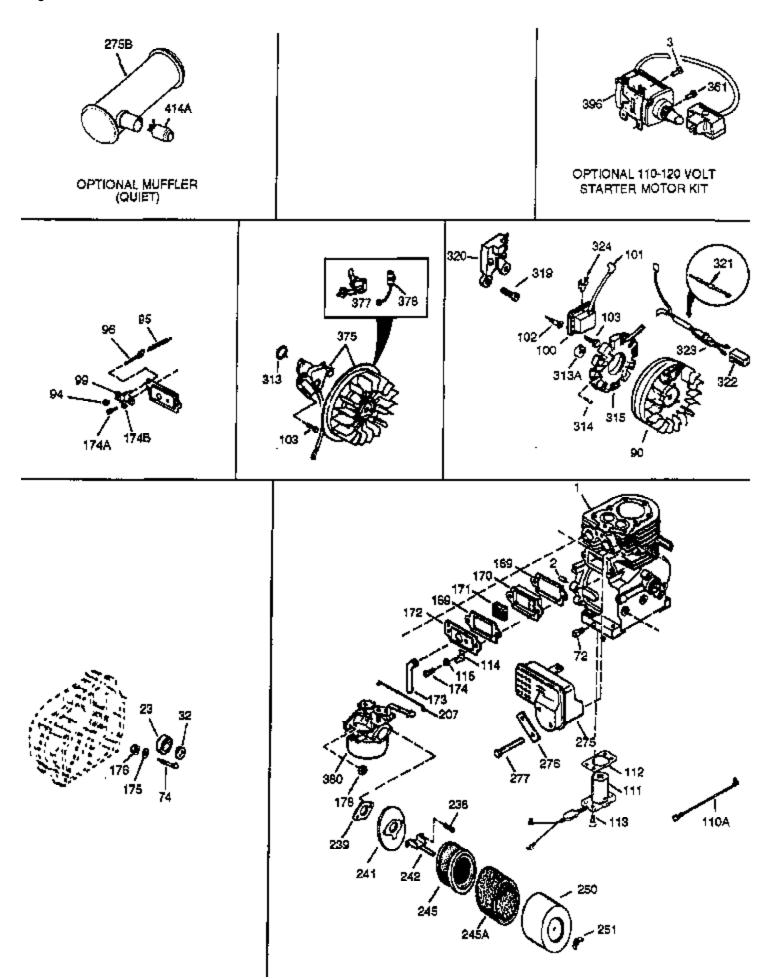

1 34096C	Ref #	Part Number Q	ty Description
3 650620 377 30322 72 27642 72 27642 Plug, Oil drain 10 610118 103 650516 129 650737 131A 650737 131A 650737 131 650738 131 650738 131 650738 131 650738 131 650738 131 650738 132 5crew, 174-20 x 12° (Use as required) 133 650738 144-20 x 12° (Use as required) 157 28423 167 28424 177 28425 178 28752 179 28425 174 650128 174 650128 175 28752 178 28752 178 28752 178 28752 178 28752 178 28752 179 33878 101, Covernor lever-to-throttel 170 28420 170 28421 171 28424 172 28425 173 33280A 174 650128 175 33280A 176 31588 177 650729 177 650729 178 650729 179 650729 179 650729 170 650729 1	1	34096C	Cylinder (CI liner)(3-5/16")(Incl.2,20,41,43,72 & 119)
77. 27642 72. 277642 73. 277642 74. 277642 75. 277642 76. 101 810118 76. 260516 77. 277642 79. 101 610118 76. 260516 77. 277642 79. 101 610118 76. 260727 76. 277627 76. 277627 76. 277627 76. 277627 76. 277627 77. 277627 77. 277627 77. 277627 78. 277667 78. 277667	2	27652	Pin, Dowel
72 27642 Plug. Oil drain 101 610118 Cover, Spark plug 102 650516 Screw, 1/4-20 x 1-1/8* 129 650727 Screw, 5/16-18 x 5/8* 131 650737 Screw, 5/16-18 x 5/8* 131 650738 Screw, 5/16-18 x 5/8* 131 650738 Screw, 1/4-20 x 1/2* (Use as required ) 131 650738 Screw, 1/4-20 x 5/8 (Use as required ) 131 650738 Screw, 1/4-20 x 5/8 (Use as required ) 131 650738 Screw, 1/4-20 x 5/8 (Use as required ) 132 6423 Screw, 1/4-20 x 5/8 (Use as required ) 132 6424 Element, Breather 132 6425 Cover, Breather 133 650128 Screw, 10-24 x 1/2* 147 650128 Screw, 10-24 x 1/2* 148 69752 Univ. Governor lever-to-throttle 149 69128 Screw, 10-24 x 1/2* 158 391026 Screw, 10-24 x 1/2* 169 189 189 189 189 189 189 189 189 189 18	3	650820	Screw, 1/4-20 x 1/2"
72 27642 Plug. Oil drain 101 610118 Cover, Spark plug 102 650516 Screw, 1/4-20 x 1-1/8* 129 650727 Screw, 5/16-18 x 5/8* 131 650737 Screw, 5/16-18 x 5/8* 131 650738 Screw, 5/16-18 x 5/8* 131 650738 Screw, 1/4-20 x 1/2* (Use as required ) 131 650738 Screw, 1/4-20 x 5/8 (Use as required ) 131 650738 Screw, 1/4-20 x 5/8 (Use as required ) 131 650738 Screw, 1/4-20 x 5/8 (Use as required ) 132 6423 Screw, 1/4-20 x 5/8 (Use as required ) 132 6424 Element, Breather 132 6425 Cover, Breather 133 650128 Screw, 10-24 x 1/2* 147 650128 Screw, 10-24 x 1/2* 148 69752 Univ. Governor lever-to-throttle 149 69128 Screw, 10-24 x 1/2* 158 391026 Screw, 10-24 x 1/2* 169 189 189 189 189 189 189 189 189 189 18	37A	30322	Nut & Lockwasher, 8-32
101 610118	72	27642	
103 650516 129 650727 131A 650713 131 650737 131 650737 131 650738 132 650738 132 650738 133 650738 134 650738 135 650738 136 650738 136 650738 137 8crew, 1/4-20 x 1/2" (Use as required) 137 650738 138 650738 149 27886A 150 28423 171 28424 172 28425 173 33350 174 28425 173 33350 174 650128 178 29752 178 29752 179 39878 179 29845 179 29845 179 29845 179 29845 179 29845 179 29845 179 29845 179 29845 179 29845 179 29845 179 29845 179 29845 179 29875 179 29845 179 2			
129 650727 131A 650713 131 650737 131 650737 131 650737 131 650738 132 650738 132 650738 133 650738 134 650738 135 650738 136 650738 136 650737 131 650738 131 650738 132 650738 132 650738 132 650738 132 650738 132 650738 132 650738 132 650738 132 650738 132 650738 132 650738 132 650738 132 650738 132 650738 133 650738 134 650738 135 650739 144 650128 147 650128 147 650128 147 650729 147 651002			
1314 650713   Screw, 5/16-18 x 5/8"   Screw, 1/4-20 x 1/2" (Use as required )			
131 650737   Screw, 1/4-20 x 1/2" (Use as required )			
131 650738 169 27896A 170 29423 171 29424 172 29423 173 23425 173 33350 174 29752 174 650128 175 29752 178 29752 178 29752 179 38778 179 29425 179 3878 179 29427 179 29427 179 29428 179 29752 179			
188   27898A			
170   28423   Body, Breather   Element, Breather   Cover, Breather   True, Breather   Cover, Breather   Tube, Breather   Screw, 10-24 x 1/2"   Nuff. & Lockwasher, 1/4-28   Link, Governor lever-to-throttle   Pop Rivet (Can be purchased locally)   Pop Rivet (Can be purchased locally)   Muffler (Incl. 284, 294A & 416) (This spark arrester mufflercan be used on any model.)   Muffler locking   Pop Rivet (Can be purchased locally)   Muffler locking   Pop Rivet (Can be purchased locally)   Muffler locking   Pop Rivet (Can be purchased locally)   Pop Rivet (Can be purchased locally)   Muffler locking   Pop Rivet (Can be purchased locally)   Pop Rivet (Use a sequired)   P			
171   28424   Element, Breather   172   28425   Cover, Breather   Tube, Breather   Tube, Breather   Tube, Breather   Tube, Breather   173   35350   Tube, Breather   Tube, Breather   174   650128   Screw, 10-24 x 1/2"   Nut & Lockwasher, 1/4-28   Link, Governor lever-to-throttle   Pop Rivet (Can be purchased locally)   Muffler (Incl. 284, 2844 & 416) (This spark arrester mufflercan be used on any model.)   Muffler (Incl. 284, 2844 & 416) (This spark arrester mufflercan be used on any model.)   Muffler (Incl. 284, 2844 & 416) (This spark arrester mufflercan be used on any model.)   Muffler   Screw, 5/16-18 x 3-316" (Use as required)   Screw, 5/16-18 x 3-316" (Use as require			·
172 28425 173 35350 174 650128 178 29752 178 29752 178 29752 179 38178 179 391026 179 33280A 170 3188			
173 35350 174 650128 175 29752 176 29752 177 33878 178 29752 277 33878 275 391026 275 391026 275 391026 275 33280A 276 31588 276 35741 277 650729 277 651002 285A 33662 277 651002 285A 33662 301A 410144B 276 313535 301A 33032 276 276 276 276 276 276 276 276 276 276			·
174 650128   Screw. 10-24 x 1/2"     178 29752   Nut & Lockwasher, 1/4-28     207 33878   Link, Governor lever-to-throttle     222A   Pop Rivet (Can be purchased locally)     275B 391026   Muffler (Incl. 284, 2844 & 416) (This spark arrester mufflercan be used on any model.)     275 33280A   Muffler     276 31588   Plate, Muffler locking     276 35741   Plate, Muffler locking     277 650729   Screw, 5/16-18 x 3-3/16" (Use as required)     278 33662   Hub & Screen Assy.     279 410144B   Screen Assy.     301A 33032   Fuel Cap (White Plastic)(Standard) (Use as required) (1.5" I.D.)     301A 33032   Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.)     301A 34210   Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.)     301A 35355   Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.)     301A 35355   Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.)     301A 35355   Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.)     301A 35356   Gasket, Stator (Used only on Std. point ign.)     301A 34291   Plug. Cover     370D 34417   Decal, Primer     375 610982   Magneto (wiring gear) (12 Volt, 3 Amp ) NOTE: The complete magneto is not available as an assembly.     Themagneto number is shown for reference purpose only.     376 610767A   Breaker Points (Use with Std. point i gn.)     377 30547A   Breaker Points (Use with Std. point i gn.)     378 610767A   Condenser     380 632110   Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A, page 186 for breakdown or Fiche18B, Grid E-9)     421 730226   SAE 5W30 4-Cycle Engine Oil (Quart)			
178 29752 207 33878 207 33878 208 Link, Governor lever-to-throttle 222A 275B 391026 275B 33280A 305B Plate, Muffler (Incl. 284, 284A & 416) (This spark arrester mufflercan be used on any model.) 305B Plate, Muffler locking 3076 35741 3076 850729 3077 651002 3078 5076-18 x 3-3/16" (Use as requi ired) 3078 3082 3079 5716-18 x 3-3/16" (Use as requi ired) 3070 410144B 3070 2070 8070 8070 8070 8070 8070 8070 8			
Link, Governor lever-to-throttle   Pop Rivet (Can be purchased locally)			
222A   275B 391026   Pop Rivet (Can be purchased locally)   Muffler (Incl. 284, 284A & 416) (This spark arrester mufflercan be used on any model.)			
Muffler (Ind. 284, 284A & 416) (This spark arrester mufflercan be used on any model.)   275 33280A		33878	·
mufflercan be used on any model.)  275 33280A  276 31588  Plate, Muffler locking  Screw, 5/16-18 x 3-3/16" (Use as required)  Screw, 5/16-18 x 4-1/4" (Use as required)  Screw, 5/16-18 x 3-3/16" (Use as r	222A		Pop Rivet (Can be purchased locally)
275 33280A	275B	391026	Muffler (Incl. 284, 284A & 416) (This spark arrester
276 31588 276 35741 277 650729 277 650729 277 651002 277 651002 285A 33662 301A 410144B 301A 33032 301A 33032 301A 33032 301A 33032 301A 33032 301A 33032 301A 34210 301A 35355 301A 35356 301A 3506 301A			mufflercan be used on any model.)
276 31588 276 35741 277 650729 277 650729 277 651002 277 651002 285A 33662 301A 410144B 301A 33032 301A 33032 301A 33032 301A 33032 301A 33032 301A 33032 301A 34210 301A 35355 301A 35356 301A 3506 301A	275	222004	Mufflor
Plate, Muffler locking Screw, 5/16-18 x 3-3/16" (Use as requ ired) Screw, 5/16-18 x 4-1/4" (Use as requi red) Hub & Screen Assy.  301A 410144B Fuel Cap (White Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.)  301A 33032 Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.)  301A 34210 Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.)  301A 35355 Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.)  313A 33876 Gasket, Stator (Used only on Std. poi nt ign.) Cover, Carburetor Plug, Cover 370D 34417 Decal, Primer Magneto (wfring gear) (12 Volt, 3 Amp ) NOTE: The complete magneto is not available as an assembly. Themagneto number is shown for reference purpose only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 36 for breakdown or Fiche 18B, Grid F-3  377 30547A Save Sex Sex Sex Sex Sex Sex Sex Sex Sex Se			
Screw, 5/16-18 x 3-3/16" (Use as requ ired)			
277 651002 285A 33662 301A 33062 301A 410144B 410144B 51D. 301A 33032 Fuel Cap (White Plastic)(Standard) (Use as required) (1.5" I.D.) 501A 33032 Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.) 501A 34210 Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.) 501A 35355 Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.) 501A 35355 Fuel Cap (Red Plastic)(1.75" I.D.) 501B 313A 33876 Gasket, Stator (Used only on Std. point ign.) 501B 313A 33876 Cover, Carburetor 501B 338A 31291 Cover 501B 370D 34417 Decal, Primer 610982 Magneto (wfring gear) (12 Volt, 3 Amp.) NOTE: The complete magneto is not available as an assembly. Themagneto number is shown for reference purpose only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 36 for breakdown or Fiche 18B, Grid F-3 S77 30547A S78 610767A Condenser Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A, page 168 for breakdown or Fiche18B, Grid E-9) 501B 301B 3032			
Hub & Screen Assy. Fuel Cap (White Plastic)(Standard) (Use as required) (1.5" I.D.)  301A 33032 Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.)  301A 34210 Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.)  301A 35355 Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.)  313A 33876 Gasket, Stator (Used only on Std. point ign.) Cover, Carburetor Plug, Cover  370D 34417 Decal, Primer Magneto (w/ring gear) (12 Volt, 3 Amp.) NOTE: The complete magneto is not available as an assembly. Themagneto number is shown for reference purpose only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 36 for breakdown or Fiche 18B, Grid F-3  377 30547A Breaker Points (Use with Std. point i gn.) Condenser Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A, page 168 for breakdown or Fiche18B, Grid E-9)  421 730226 SAE 5W30 4-Cycle Engine Oil (Quart)			
Fuel Cap (White Plastic) (Standard) (Use as required) (1.5" I.D.)  301A 33032  Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.)  301A 34210  Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.)  301A 35355  Substitute (Stator (Used only on Std. point ign.)  301A 343876  301A 34210  Fuel Cap (Red Plastic) (1.75" I.D.)  301A 35355  Fuel Cap (Red Plastic) (1.75" I.D.)  Gasket, Stator (Used only on Std. point ign.)  Cover, Carburetor  Plug, Cover  Plug, Cover  Plug, Cover  Decal, Primer  Magneto (wiring gear) (12 Volt, 3 Amp) NOTE: The complete magneto is not available as an assembly.  Themagneto number is shown for reference purpose only.  Order component parts individually, as shown in parts list.  (Refer to Division 5, Section B, page 36 for breakdown or Fiche 18B, Grid F-3  377 30547A  378 610767A  380 632110  Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.)  Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.)  Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.)  Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.)  Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.)  Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.)  Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.)  Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.)  Fuel Cap (Red Plastic) (Spurt Resistant, Design of I.Spurt Individually (Individually Individually Individua			
I.D.)  301A 33032  Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.)  301A 34210  Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.)  301A 35355  Fuel Cap (Red Plastic)(1.75" I.D.)  313A 33876  Gasket, Stator (Used only on Std. poi nt ign.)  Cover, Carburetor  Plug, Cover  Plug, Cover  Adagneto (Wring gear) (12 Volt, 3 Amp.)  NOTE: The complete magneto is not available as an assembly.  Themagneto number is shown for reference purpose only.  Order component parts individually, as shown in parts list.  (Refer to Division 5, Section B, page 36 for breakdown or Fiche 18B, Grid F-3  377 30547A  378 610767A  380 632110  Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A, page 168 for breakdown or Fiche18B, Grid E-9)  421 730226  SAE 5W30 4-Cycle Engine Oil (Quart)			
Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.)  301A 34210  Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.)  301A 35355  Fuel Cap (Red Plastic)(1.75" I.D.)  313A 33876  Gasket, Stator (Used only on Std. poi nt ign.)  Cover, Carburetor  Plug, Cover  Plug, Cover  Plug, Cover  370D 34417  Decal, Primer  Magneto (w/ring gear) (12 Volt, 3 Amp ) NOTE: The complete magneto is not available as an assembly. Themagneto number is shown for reference purpose only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 36 for breakdown or Fiche 18B, Grid F-3  377 30547A  378 610767A  380 632110  Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.)  Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.)  Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (Use as required) (1.5" I.D.)  Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (Use as required) (1.5" I.D.)  Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (Use as required) (1.5" I.D.)  Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (Use as required) (Use as required) (1.5" I.D.)  Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required)	301A	410144B	
required) (1.5" I.D.)  301A 34210  Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.)  301A 35355  Fuel Cap (Red Plastic)(1.75" I.D.)  313A 33876  Gasket, Stator (Used only on Std. poi nt ign.)  Cover, Carburetor  318A 31291  Plug, Cover  Plug, Cover  Plug, Cover  Decal, Primer  Magneto (w/ring gear) (12 Volt, 3 Amp) NOTE: The complete magneto is not available as an assembly. Themagneto number is shown for reference purpose only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 36 for breakdown or Fiche 18B, Grid F-3  377 30547A  378 610767A  380 632110  Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.)  Fuel Cap (Red Plastic) (1.5" I.D.)  Gasket, Stator (Used only on Std. poin tign.)  NOTE: The complete magneto is not available as an assembly. Themagneto number is shown in parts list. (Refer to Division 5, Section B, page 36 for breakdown or Fiche 18B, Grid F-3  377 30547A  Breaker Points (Use with Std. point i gn.)  Condenser  Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A, page 168 for breakdown or Fiche18B, Grid E-9)  421 730226  SAE 5W30 4-Cycle Engine Oil (Quart)			I.D.)
required) (1.5" I.D.)  301A 34210  Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.)  301A 35355  Fuel Cap (Red Plastic)(1.75" I.D.)  313A 33876  Gasket, Stator (Used only on Std. poi nt ign.)  337 34666  Cover, Carburetor  Plug, Cover  Plug, Cover  Plug, Cover  Decal, Primer  Magneto (w/ring gear) (12 Volt, 3 Amp) NOTE: The complete magneto is not available as an assembly. Themagneto number is shown for reference purpose only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 36 for breakdown or Fiche 18B, Grid F-3  377 30547A  378 610767A  380 632110  Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.)  Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.)  Fuel Cap (Red Plastic) (1.5" I.D.)  Gasket, Stator (Used only on Std. point ign.)  NOTE: The complete magneto is not available as an assembly. Themagneto number is shown for reference purpose only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 36 for breakdown or Fiche 18B, Grid F-3  377 30547A  378 610767A  Condenser  Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A, page 168 for breakdown or Fiche18B, Grid E-9)  421 730226  SAE 5W30 4-Cycle Engine Oil (Quart)	301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
as required) (1.5" I.D.)  301A 35355  Fuel Cap (Red Plastic)(1.75" I.D.)  Gasket, Stator (Used only on Std. poi nt ign.)  Cover, Carburetor  Plug, Cover  Plug, Cover  370D 34417  Decal, Primer  Magneto (w/ring gear) (12 Volt, 3 Amp ) NOTE: The complete magneto is not available as an assembly. Themagneto number is shown for reference purpose only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 36 for breakdown or Fiche 18B, Grid F-3  377 30547A  380 632110  Breaker Points (Use with Std. point i gn.)  Condenser  Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A, page 168 for breakdown or Fiche18B, Grid E-9)  421 730226  SAE 5W30 4-Cycle Engine Oil (Quart)			
as required) (1.5" I.D.)  301A 35355  Fuel Cap (Red Plastic)(1.75" I.D.)  Gasket, Stator (Used only on Std. poi nt ign.)  Cover, Carburetor  Plug, Cover  Plug, Cover  370D 34417  Decal, Primer  Magneto (w/ring gear) (12 Volt, 3 Amp ) NOTE: The complete magneto is not available as an assembly. Themagneto number is shown for reference purpose only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 36 for breakdown or Fiche 18B, Grid F-3  377 30547A  380 632110  Breaker Points (Use with Std. point i gn.)  Condenser  Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A, page 168 for breakdown or Fiche18B, Grid E-9)  421 730226  SAE 5W30 4-Cycle Engine Oil (Quart)	201 /	24240	Fuel Can (Pad Diactic) (Spurt Pagistant, High Profile) (Lian
301A 35355  313A 33876  337 34666  338A 31291  370 34417  375 610982  Section B, page 36 for breakdown or Fiche 18B, Grid F-9  377 30547A  378 610767A  380 632110  Section B, page 168 for breakdown or Fiche 18B, Grid E-9)  421 730226  Fuel Cap (Red Plastic)(1.75" I.D.)  Gasket, Stator (Used only on Std. point ign.)  Gasket, Stator (Used only on Std. point ign.)  Cover, Carburetor  Plug, Cover  Decal, Primer  Magneto (w/ring gear) (12 Volt, 3 Amp.) NOTE: The complete magneto is not available as an assembly. Themagneto number is shown for reference purpose only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 36 for breakdown or Fiche 18B, Grid F-3  Breaker Points (Use with Std. point i gn.)  Condenser  Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A, page 168 for breakdown or Fiche18B, Grid E-9)	30 IA	34210	
313A 33876 337 34666 338A 31291 370D 34417 375 610982  See a			as required) (1.5 1.D.)
313A 33876 337 34666 338A 31291 370D 34417 375 610982  See a	301A	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
337 34666 338A 31291 370D 34417 Decal, Primer 375 610982 Magneto (w/ring gear) (12 Volt, 3 Amp ) NOTE: The complete magneto is not available as an assembly. Themagneto number is shown for reference purpose only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 36 for breakdown or Fiche 18B, Grid F-3  377 30547A Breaker Points (Use with Std. point i gn.) Condenser Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A, page 168 for breakdown or Fiche18B, Grid E-9)  421 730226 SAE 5W30 4-Cycle Engine Oil (Quart)			
338A 31291 370D 34417 375 610982  Plug, Cover Decal, Primer Magneto (w/ring gear) (12 Volt, 3 Amp ) NOTE: The complete magneto is not available as an assembly. Themagneto number is shown for reference purpose only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 36 for breakdown or Fiche 18B, Grid F-3  377 30547A 378 610767A 380 632110  Breaker Points (Use with Std. point i gn.) Condenser Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A, page 168 for breakdown or Fiche18B, Grid E-9)  SAE 5W30 4-Cycle Engine Oil (Quart)			
370D 34417 375 610982  Decal, Primer Magneto (w/ring gear) (12 Volt, 3 Amp ) NOTE: The complete magneto is not available as an assembly. Themagneto number is shown for reference purpose only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 36 for breakdown or Fiche 18B, Grid F-3  377 30547A  378 610767A  380 632110  Breaker Points (Use with Std. point i gn.) Condenser Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A, page 168 for breakdown or Fiche18B, Grid E-9)  SAE 5W30 4-Cycle Engine Oil (Quart)			
Magneto (w/ring gear) (12 Volt, 3 Amp ) NOTE: The complete magneto is not available as an assembly. Themagneto number is shown for reference purpose only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 36 for breakdown or Fiche 18B, Grid F-3  377 30547A  378 610767A  380 632110  Breaker Points (Use with Std. point i gn.)  Condenser  Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A, page 168 for breakdown or Fiche18B, Grid E-9)  SAE 5W30 4-Cycle Engine Oil (Quart)			
complete magneto is not available as an assembly.  Themagneto number is shown for reference purpose only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 36 for breakdown or Fiche 18B, Grid F-3  377 30547A  Breaker Points (Use with Std. point i gn.) Condenser Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A, page 168 for breakdown or Fiche18B, Grid E-9)  421 730226  SAE 5W30 4-Cycle Engine Oil (Quart)			
Themagneto number is shown for reference purpose only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 36 for breakdown or Fiche 18B, Grid F-3  377 30547A Breaker Points (Use with Std. point i gn.) Condenser 380 632110 Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A, page 168 for breakdown or Fiche18B, Grid E-9)  421 730226 SAE 5W30 4-Cycle Engine Oil (Quart)	3/3	010902	
Order component parts individually, as shown in parts list.  (Refer to Division 5, Section B, page 36 for breakdown or Fiche 18B, Grid F-3  377 30547A  378 610767A  380 632110  Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A, page 168 for breakdown or Fiche18B, Grid E-9)  421 730226  Order component parts individually, as shown in parts list.  (Refer to Division 5, Section B, page 36 for breakdown or Fiche 18B, Grid E-9)  SAE 5W30 4-Cycle Engine Oil (Quart)			
(Refer to Division 5, Section B, page 36 for breakdown or Fiche 18B, Grid F-3  377 30547A  378 610767A  380 632110  Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A, page 168 for breakdown or Fiche18B, Grid E-9)  421 730226  SAE 5W30 4-Cycle Engine Oil (Quart)			
Fiche 18B, Grid F-3  377 30547A  378 610767A  380 632110  421 730226  Fiche 18B, Grid F-3  Breaker Points (Use with Std. point i gn.)  Condenser  Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A, page 168 for breakdown or Fiche18B, Grid E-9)  SAE 5W30 4-Cycle Engine Oil (Quart)			
377 30547A 378 610767A 380 632110  Breaker Points (Use with Std. point i gn.) Condenser Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A, page 168 for breakdown or Fiche18B, Grid E-9)  SAE 5W30 4-Cycle Engine Oil (Quart)			
378 610767A 380 632110 Condenser Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A, page 168 for breakdown or Fiche18B, Grid E-9) 421 730226 SAE 5W30 4-Cycle Engine Oil (Quart)			Fiche 18B, Grid F-3
378 610767A 380 632110 Condenser Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A, page 168 for breakdown or Fiche18B, Grid E-9) 421 730226 SAE 5W30 4-Cycle Engine Oil (Quart)	377	30547A	Breaker Points (Use with Std. point i an )
380 632110 Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A, page 168 for breakdown or Fiche18B, Grid E-9) 421 730226 SAE 5W30 4-Cycle Engine Oil (Quart)			· • • ·
page 168 for breakdown or Fiche18B, Grid E-9)  421 730226  SAE 5W30 4-Cycle Engine Oil (Quart)			
421 730226 SAE 5W30 4-Cycle Engine Oil (Quart)	300	002110	
			page 100 101 DIEAKUOWITOL FIGHETOD, GITU E-8)
	421	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
·	422	35824	
			·