



Ref #	Part Number Q	ty Description
1	34096C	Cylinder (CI liner)(3-5/16")(Incl.2,20,41,43,72 & 119)
	27652	Pin, Dowel
	30968	Nipple, Oil drain
		• • •
	30969	Cap, Oil drain
	30700	Yoke, Governor
	650494	Screw, 6-40 x 5/16"
15	30699C	Rod Assy., Governor (Incl. 15A & 15B)
16	33454	Governor Lever Assy.
	29916	Clamp, Governor lever
	650548	Screw, 8-32 x 5/16"
	32630	Seal, Oil
	29536	•
23	29330	Blower Housing Baffle (Without electric starter knockout)
		(Use as required)
25	35256A	Blower Housing Baffle (With electric starter knockout) (Use
		as required)
26	650561	Screw, 1/4-20 x 5/8"
	33719B	Crankshaft (Incl. 108 & 109)
	29826	Screw, 10-32 x 3/4"
	29918	Lockwasher, #8 E.T.
		·
	30322	Nut & Lockwasher, 8-32
	29216	Locknut, 10-32
	29642	Ring, Retaining
40	34543	Piston, Pin & Ring Set (Std.) (3-3/16 ")
40	34544	Piston, Pin & Ring Set (.010" OS)
40	34545	Piston, Pin & Ring Set (.020" OS)
	34031B	Piston & Pin Ass'y. (Std.)(3-3/16")(I ncl.43)
	34032B	Piston & Pin Ass'y. (.010" OS) (Incl. 43)
	34033B	Piston & Pin Ass'y. (.020" OS) (Incl. 43)
	34037	Ring Set (Std.) (3-3/16" Bore)
	34038	Ring Set (.010" OS)
	34039	Ring Set (.020" OS)
	27888	Ring, Piston Pin retaining
45	32591C	Rod Assy., Connecting (Incl. 46, 47 & 49)
46	650662C	Bolt, Connecting rod (2 pieces)
	650662C	Bolt, Connecting rod (2 pieces)
	34034	Lifter, Valve
	34242	Dipper, Oil
	34143	Camshaft (MCR)
	33273A	Extension, Blower housing
	34126	Bracket, Grommet mounting
	650760	Screw, 8-32 x 3/8"
	28545	Grommet, Plastic
65	650128	Screw, 10-24 x 1/2"
	35262	* Gasket, Flange
	33367B	Cover, Cylinder (Incl. 71, 75 & 80)
	33368	Bushing, Crankshaft
	27642	Plug, Oil drain
	31950	Seal, Oil
	31845	Shaft, Mechanical governor
	30590A	Washer, Flat
82	30591	Gear Assy., Governor (Incl. 81)
83	30588A	Spool, Governor
	29193	Ring, Retaining
	650833	Screw, 1/4-20 x 1-3/16 (Use as requir ed)
	650832	Screw, 1/4-20 x 1-1/16" (Use as required)
	32589	Key, Flywheel
92	650815	Washer, Belleville


	D. I.M. J.	D : #
		Description
	8116	Nut, Hex
	610118	Cover, Spark plug
	650516	Screw, 1/4-20 x 1-1/8"
108	29783	Pin, Crankshaft gear (Only serviceable when gear is pinned
		to crank.)
109	33245	Gear, Crankshaft
	34240	Ground Wire
	34923A	* Gasket, Cylinder head
	34030A	Head, Cylinder
	27878A	Exhaust Valve (Std.) (Incl. 151)
	27880A	Exhaust Valve (1/32" OS) (Incl. 151)
	34035	Intake Valve (Std.) (Incl. 151)
	34036	Intake Valve (1/32" OS) (Incl. 151)
	650691	Washer (Do not use with No. 6021A scr ew.)
	650690	Washer, Belleville (Use as required)
	650727	Screw, 5/16-18 x 1-3/4 (Use as required)
	6021A	Screw, 5/16-18 x 1-1/2" (Use as required, but do notuse No.
130	0021A	650691 washer.)
		000091 Washer.)
130	650711	Screw, 5/16-18 x 1-5/8 " (Use as required) (Can use 6021A
		but discard 650691 washer.)
130	650694A	Screw, 5/16-18 x 2" (Use as required)
	650713	Screw, 5/16-18 x 5/8"
	650737	Screw, 1/4-20 x 1/2" (Use as required)
	650738	Screw, 1/4-20 x 5/8 (Use as required)
	650890	Washer, Internal Lock
	33636	Resistor Spark Plug
	33369	Bracket, Governor gear
	650836	Screw, 10-24 x 1/2"
	35862	Seal Assy., Intake valve
	27881	Spring, Valve
	32581	1 0
	27896A	Cap, Lower valve spring * Gasket, Breather
	28423	·
	28424	Body, Breather Element, Breather
		·
	28425	Cover, Breather
	35350 650428	Tube, Breather
	650128	Screw, 10-24 x 1/2"
	29752	Nut & Lockwasher, 1/4-28
	30088A	Screw, 1/4-28 x 1"
	34587	Bracket, Choke
	33263	* Gasket, Carburetor
	33877	Pipe, Intake
	34667	Link, Governor lever
	34664	Control Bracket (Incl.19,203, 204, 20 6 & 209)
	31342	Spring, Compression
	650549	Screw, 5-40 x 7/16"
	610973	Terminal Assy.
	33878	Link, Governor lever-to-throttle
	650821	Screw, 10-32 x 1/2"
	27793	Clip, Conduit
	28942	Screw, 10-32 x 3/8"
	34586	Rod, Choke
	35438	Knob, Control
	28820	Screw, 10-32 x 1/2"
222A	050070	Pop Rivet (Can be purchased locally)
223	650378	Screw, Torx T-30, 5/16-18 x 1-1/8"


Ref #	Part Number	Qty	Description
224	27915A		* Gasket, Intake pipe
260	34822A		Blower Housing
261	650788		Screw, 5/16-18 x 3/4"
	29747B		Screw, 5/16-24 x 21/32"
	33272B		Cover, Cylinder head
	33280A		Muffler
	31588		Plate, Muffler locking
	35741		Plate, Muffler locking
	650729		Screw, 5/16-18 x 3-3/16" (Use as required)
	651002		Screw, 5/16-18 x 4-1/4" (Use as requi red)
285A	33662		Hub & Screen Assy.
287	29752		Nut, 1/4-28
290	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962		Fuel Line (Braided 32")(80cm)(As required)
	30705		Fuel Line (Braided 16")(40cm)(As requ ired)
	26460		Fuel Line Clamp (Use as required)
	650665		Screw, 1/4-15 x 7/8"
300	34156A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
			builtwith different size fuel inlet openings. Tanks with the
			1-3/16" I.D. opening use fuel cap 34210. Tanks with the
			1-1/2" I.D. opening use fuel cap 35355.
201Λ	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
3017	4101440		
			I.D.)
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
			as required) (1.5" I.D.)
201 /	SESE		Fuel Can (Bad Blastia)/4 75" LD.)
	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	33893A		Oil Fill Tube
	33590		"O" Ring
	34011A		Dipstick (Incl. 307)
336	650765		Screw, 10-32 x 1/2"
337	34666		Cover, Carburetor
338	28942		Screw, Sems 10-32 x 3/8"
	31291		Plug, Cover
	34154		Plate, Upper fuel tank mtg.
	34155		Bracket, Lower fuel tank mtg.
	650561		Screw, 1/4-20 x 5/8"
			· · · · · · · · · · · · · · · · · · ·
	34141		Guard, Starter
	32576		Seal, Snow Guard
	30063		Screw, Torx T-30, 1/4-20 x 1/2"
	650767		Screw, 8-32 x 27/64"
	34417		Decal, Primer
370	34416		Decal, Instruction
370	35274		Decal, Instruction
370A	34686		Decal, Name
	34589		Decal, Choke
	631021		Inlet Needle, Seat & Clip Assy.
	632110		Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
300	002110		page 168 for breakdown or Fiche18B, Grid E-9)
			page 100 101 bleakuowii 01 Fluie 100, Gilu E-9)
395	35763A		Electric Starter Motor (12 Volt) (Refer to service number
			stamped on end cap of motor, or on decal, for identification.
			Refer to Division 5, Section D for breakdown or Fiche 18B,
			Grid G-6)
			,
400	33279G		* Gasket Set (Incl. items marked *)
			•


Ref # Pai	art Number Qty	Description
420 730	0225	SAE 30 4-Cycle Engine Oil (Quart)
421 730	0226	SAE 5W30 4-Cycle Engine Oil (Quart)
422 358	824	Muffler Optional

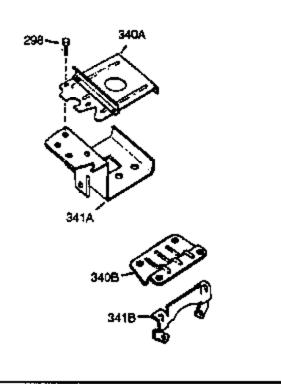


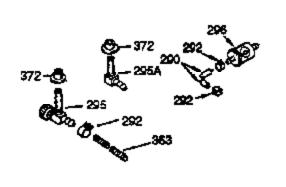


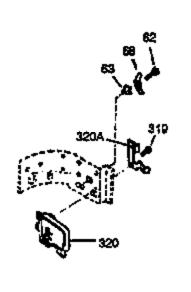


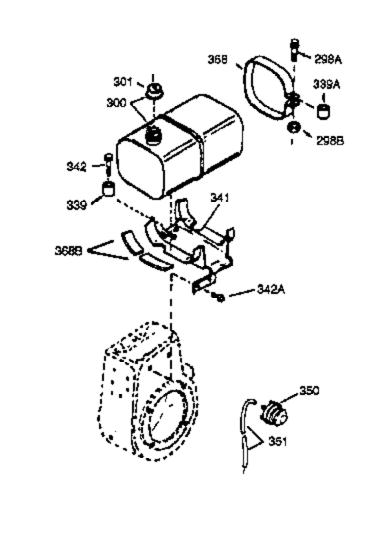

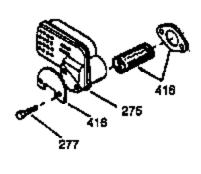


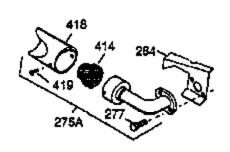






Ref #	Part Number	Qty	Description
	30322		Nut & Lockwasher, 8-32
62	650760		Screw, 8-32 x 3/8"
	28545		Grommet, Plastic
129	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131	650737		Screw, 1/4-20 x 1/2" (Use as required)
131	650738		Screw, 1/4-20 x 5/8 (Use as required)
131A	650713		Screw, 5/16-18 x 5/8"
222A			Pop Rivet (Can be purchased locally)
274	35865		Gasket, Exhaust
275	33280A		Muffler
277	650729		Screw, 5/16-18 x 3-3/16" (Use as required)
277	651002		Screw, 5/16-18 x 4-1/4" (Use as required)
285A	33662		Hub & Screen Assy.
290	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
290	30962		Fuel Line (Braided 32")(80cm)(As requ ired)
292	26460		Fuel Line Clamp (Use as required)
298	650665		Screw, 1/4-15 x 7/8"
300	34156A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
			builtwith different size fuel inlet openings. Tanks with the
			1-3/16" I.D. opening use fuel cap 34210. Tanks with the
			1-1/2" I.D. opening use fuel cap 35355.
301Δ	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
001/1	11011110		I.D.)
			·
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
			as required) (1.5" I.D.)
204.4	05055		. , , , ,
	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	34666		Cover, Carburetor
	31291		Plug, Cover Procket Lewer fuel took mtg
	34155		Bracket, Lower fuel tank mtg.
	650561		Screw, 1/4-20 x 5/8"
	570682		Primer Assy.
	32180C		Line, Primer
	34417		Decal, Primer
	33323		Opt.Muffler Screen (Mini-Bike applica tion)
	730130		Kit, Exhaust adapter (Incl. 274 & 277)
	33700		Cover & Tube, Muffler (use as require d)
	650578		Screw, 8-18 x 3/8" (use as required)
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
422	35824		Muffler Optional

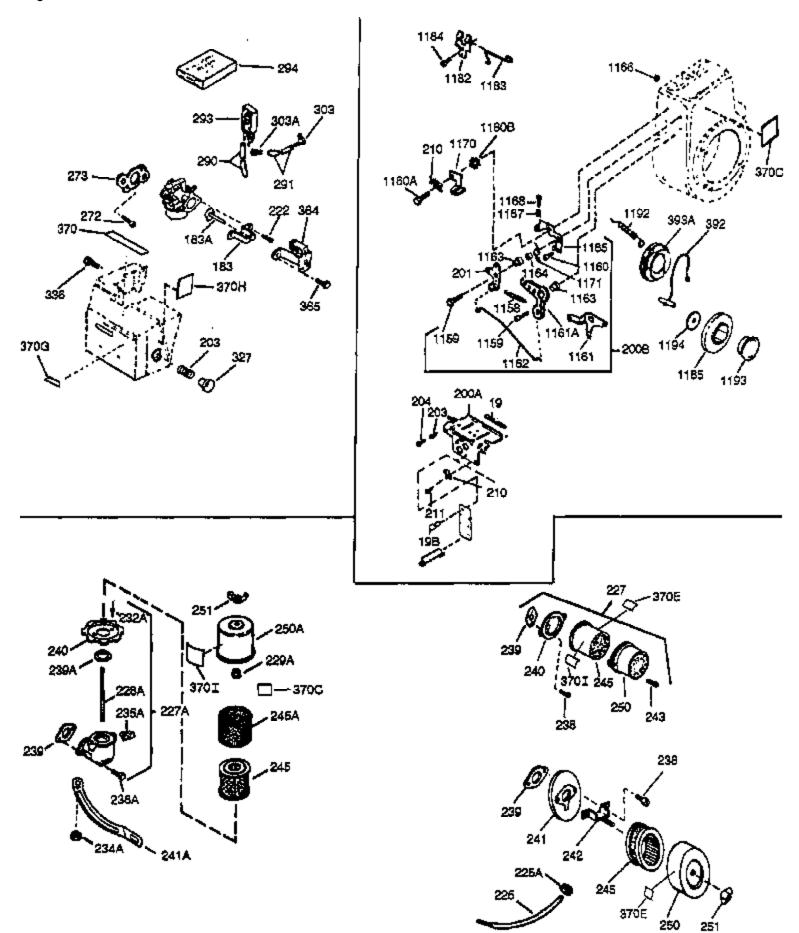

		y Description
	30322	Nut & Lockwasher, 8-32
129	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131A	650713	Screw, 5/16-18 x 5/8"
131	650737	Screw, 1/4-20 x 1/2" (Use as required)
131	650738	Screw, 1/4-20 x 5/8 (Use as required)
183	34587	Bracket, Choke
	730152	Control Bracket (Incl.1158-1171)(As r eq.)
	31342	Spring, Compression
	650549	Screw, 5-40 x 7/16"
	27793	Clip, Conduit
	28942	Screw, 10-32 x 3/8"
	28820	
	20020	Screw, 10-32 x 1/2"
222A	700407	Pop Rivet (Can be purchased locally)
227	730127	Air Cleaner Ass'y. (Incl. 238, 239, 242, 246, 250) (Use as
		required)
285Δ	33662	Hub & Screen Assy.
	29774	Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962	
		Fuel Line (Braided 32")(80cm)(As required)
	30705	Fuel Line (Braided 16")(40cm)(As required)
293	33715	Impulse Fuel Pump NOTE: 34385 and 33715 (WIP)pumps
		are replaced by 35813 and 35800 (WIP) pumps. The 33010
		(3000 series) repair kit is still available. The 35791 repair kit
		is used with the 35813 and 35800 fuel pumps.
204	25701	Fuel Duma Beneir Kit NOTE: 24295 and 22715 (MID) number
294	35791	Fuel Pump Repair Kit NOTE: 34385 and 33715 (WIP)pumps
		are replaced by 35813 and 35800 (WIP) pumps. The 33010
		(3000 series) repair kit is still available. The 35791 repair kit
		is used with the 35813 and 35800 fuel pumps.
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
00171	11011115	I.D.)
		·
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
		required) (1.5" I.D.)
201 /	24240	Fuel Can (Pad Plantia) (Spurt Posistant, High Profile) (Llas
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required) (1.5" I.D.)
301A	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
	32958	Fitting, Fuel
	650765	Screw, 10-32 x 1/2"
	34666	•
		Cover, Carburetor
	31291	Plug, Cover
	33377	Bracket, Carburetor cover mtg.
	650767	Screw, 8-32 x 27/64"
	34416	Decal, Instruction
	35274	Decal, Instruction
370C	34589	Decal, Choke
370D	34417	Decal, Primer
	34414	Decal, Warning
	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
	35824	Muffler Optional
	30312	Screw, 10-32 x 1/2"
	28820	Screw, 10-32 x 1/2"
	27070	Lockwasher
1185	33816	Hub & Screen Assy.

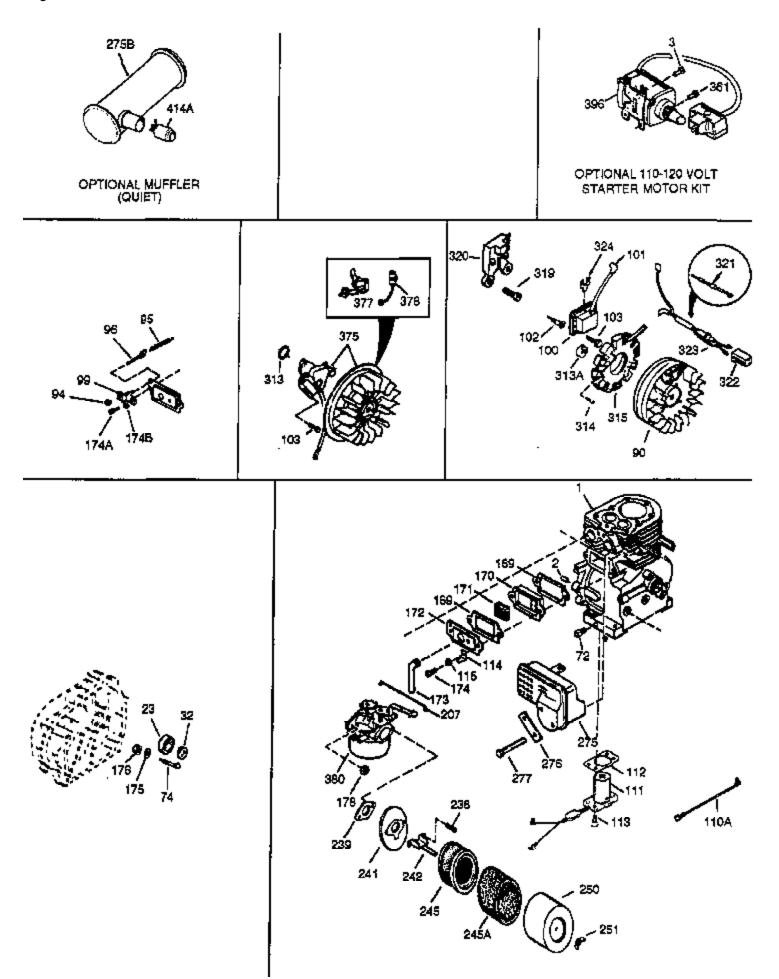

Ref #	Part Number Q	ty Description
1	34096C	Cylinder (CI liner)(3-5/16")(Incl.2,20,41,43,72 & 119)
2	27652	Pin, Dowel
	30322	Nut & Lockwasher, 8-32
72	27642	Plug, Oil drain
101	610118	Cover, Spark plug
103	650516	Screw, 1/4-20 x 1-1/8"
129	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131	650737	Screw, 1/4-20 x 1/2" (Use as required)
131	650738	Screw, 1/4-20 x 5/8 (Use as required)
131A	650713	Screw, 5/16-18 x 5/8"
169	27896A	* Gasket, Breather
170	28423	Body, Breather
171	28424	Element, Breather
172	28425	Cover, Breather
173	35350	Tube, Breather
174	650128	Screw, 10-24 x 1/2"
178	29752	Nut & Lockwasher, 1/4-28
207	33878	Link, Governor lever-to-throttle
222A		Pop Rivet (Can be purchased locally)
275	33280A	Muffler
275B	391026	Muffler (Incl. 284, 284A & 416) (This spark arrester
		mufflercan be used on any model.)
276	31588	Plate, Muffler locking
	35741	Plate, Muffler locking
	650729	Screw, 5/16-18 x 3-3/16" (Use as required)
	651002	
	33662	Screw, 5/16-18 x 4-1/4" (Use as requi red) Hub & Screen Assy.
	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
30 IA	4101440	I.D.)
		,
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
		required) (1.5" I.D.)
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
00171	0.1210	as required) (1.5" I.D.)
		• • • • • • • • • • • • • • • • • • • •
	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
	33876	Gasket, Stator (Used only on Std. poi nt ign.)
	34666	Cover, Carburetor
	31291	Plug, Cover
	30063	Screw, Torx T-30, 1/4-20 x 1/2"
	34417	Decal, Primer
375	610982	Magneto (w/ring gear) (12 Volt, 3 Amp) NOTE: The
		complete magneto is not available as an assembly.
		Themagneto number is shown for reference purpose only.
		Order component parts individually, as shown in parts list.
		(Refer to Division 5, Section B, page 36 for breakdown or
		Fiche 18B, Grid F-3
277	30547A	Breaker Points (Use with Std. point i gn.)
	610767A	Condenser
	632110	
300	00Z I IU	Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
		page 168 for breakdown or Fiche18B, Grid E-9)
421	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
422	35824	Muffler Optional