




Ref #	Part Number C	tty Description
1	34096C	Cylinder (CI liner)(3-5/16")(Incl.2,20,41,43,72 & 119)
2	27652	Pin, Dowel
	30968	Nipple, Oil drain
	30969	Cap, Oil drain
	30699C	Rod Assy., Governor (Incl. 15A & 15B)
		· · · · · · · · · · · · · · · · · · ·
	650494	Screw, 6-40 x 5/16"
	30700	Yoke, Governor
	33454	Governor Lever Assy.
17	29916	Clamp, Governor lever
18	650548	Screw, 8-32 x 5/16"
20	32630	Seal, Oil
25	29536	Blower Housing Baffle (Without electric starter knockout)
		(Use as required)
		,
25	35256A	Blower Housing Baffle (With electric starter knockout) (Use
		as required)
26	650561	Screw, 1/4-20 x 5/8"
	33365B	,
		Crankshaft (Incl. 108 & 109)
	29826	Screw, 10-32 x 3/4"
	29918	Lockwasher, #8 E.T.
	30322	Nut & Lockwasher, 8-32
37	29216	Locknut, 10-32
38	29642	Ring, Retaining
40	34543	Piston, Pin & Ring Set (Std.) (3-3/16 ")
40	34544	Piston, Pin & Ring Set (.010" OS)
	34545	Piston, Pin & Ring Set (.020" OS)
	34031B	Piston & Pin Ass'y. (Std.)(3-3/16")(I ncl.43)
	34032B	Piston & Pin Ass'y. (.010" OS) (Incl. 43)
		• , , , ,
	34033B	Piston & Pin Ass'y. (.020" OS) (Incl. 43)
	34037	Ring Set (Std.) (3-3/16" Bore)
	34038	Ring Set (.010" OS)
	34039	Ring Set (.020" OS)
	27888	Ring, Piston Pin retaining
45	32591C	Rod Assy., Connecting (Incl. 46, 47 & 49)
46	650662C	Bolt, Connecting rod (2 pieces)
47	650662C	Bolt, Connecting rod (2 pieces)
48	34034	Lifter, Valve
49	34242	Dipper, Oil
	34143	Camshaft (MCR)
	33273A	Extension, Blower housing
	34126	Bracket, Grommet mounting
	650760	
		Screw, 8-32 x 3/8"
	28545	Grommet, Plastic
	650128	Screw, 10-24 x 1/2"
	35262	* Gasket, Flange
	33367B	Cover, Cylinder (Incl. 71, 75 & 80)
	33368	Bushing, Crankshaft
72	27642	Plug, Oil drain
75	31950	Seal, Oil
80	31845	Shaft, Mechanical governor
	30590A	Washer, Flat
	30591	Gear Assy., Governor (Incl. 81)
	30588A	Spool, Governor
	29193	Ring, Retaining
	650833	Screw, 1/4-20 x 1-3/16 (Use as required)
	650832	Screw, 1/4-20 x 1-11/16" (Use as requ ired)
	32589	Key, Flywheel
92	650815	Washer, Belleville


Ref #	Part Number	Otv	Description
	8116	~')	Nut, Hex
	610118		Cover, Spark plug
	650489		Screw, 1/4-20 x 5/8"
			·
108	29783		Pin, Crankshaft gear (Only serviceable when gear is pinned
			to crank.)
109	33245		Gear, Crankshaft
	34240		Ground Wire
	34041A		* Gasket, Cylinder head
	34030A		Head, Cylinder
	27878A		Exhaust Valve (Std.) (Incl. 151)
	27880A		Exhaust Valve (1/32" OS) (Incl. 151)
	34035		Intake Valve (Std.) (Incl. 151)
	34036		Intake Valve (1/32" OS) (Incl. 151)
	650691		Washer (Do not use with No. 6021A scr ew.)
	650690		Washer, Belleville (Use as required)
129	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
130	6021A		Screw, 5/16-18 x 1-1/2" (Use as required, but do notuse No.
			650691 washer.)
120	650711		Screw, 5/16-18 x 1-5/8 " (Use as required) (Can use 6021A
130	030711		but discard 650691 washer.)
			but discard 05009 i washer.)
130	650694A		Screw, 5/16-18 x 2" (Use as required)
131	650737		Screw, 1/4-20 x 1/2" (Use as required )
131	650738		Screw, 1/4-20 x 5/8 (Use as required)
131A	650713		Screw, 5/16-18 x 5/8"
	650890		Washer, Internal Lock
	33636		Resistor Spark Plug
	33369		Bracket, Governor gear
	650836		Screw, 10-24 x 1/2"
	27882		Cap, Upper valve spring
	27881		
			Spring, Valve
	32581		Cap, Lower valve spring
	27896A		* Gasket, Breather
	28423		Body, Breather
	28424		Element, Breather
	28425		Cover, Breather
	35350		Tube, Breather
	650128		Screw, 10-24 x 1/2"
	29752		Nut & Lockwasher, 1/4-28
182	30088A		Screw, 1/4-28 x 1"
	34587		Bracket, Choke
184	33263		* Gasket, Carburetor
185	33877		Pipe, Intake
186	33371		Link, Governor lever
203	31342		Spring, Compression
	650549		Screw, 5-40 x 7/16"
	610973		Terminal Assy.
	33878		Link, Governor lever-to-throttle
	27793		Clip, Conduit
	28942		Screw, 10-32 x 3/8"
	34586		
			Rod, Choke
	35438		Knob, Control
222A	00000		Pop Rivet (Can be purchased locally)
	28820		Screw, 10-32 x 1/2"
	650378		Screw, Torx T-30, 5/16-18 x 1-1/8"
	27915A		* Gasket, Intake pipe
260	34145		Blower Housing (For electric starter)


Ref #	Part Number Qty	Description
	650788	Screw, 5/16-18 x 3/4"
262	29747B	Screw, 5/16-24 x 21/32"
265	33272B	Cover, Cylinder head
275	33280A	Muffler
276	31588	Plate, Muffler locking
276	35741	Plate, Muffler locking
277	650729	Screw, 5/16-18 x 3-3/16" (Use as requ ired)
	651002	Screw, 5/16-18 x 4-1/4" (Use as required)
	33013	Cover, Starter bubble
	650760	Screw, 8-32 x 7/16"
	33662	Hub & Screen Assy.
	29752	Nut, 1/4-28
	29774	Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962	Fuel Line (Braided 32")(80cm)(As required)
	30705	Fuel Line (Braided 32 )(40cm)(As required)
	26460	Fuel Line Clamp (Use as required)
	32961	Valve, Fuel shut-off
	650665	Screw, 1/4-15 x 7/8"
		·
300	34156A	Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
		builtwith different size fuel inlet openings. Tanks with the
		1-3/16" I.D. opening use fuel cap 34210. Tanks with the
		1-1/2" I.D. opening use fuel cap 35355.
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
		I.D.)
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
		required) (1.5" I.D.)
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required) (1.5" I.D.)
301A	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
	29673	* Gasket, Oil filler
	31297	Dipstick (Incl. 307)
	650765	Screw, 10-32 x 1/2"
	34140	Cover, Carburetor
	28942	Screw, Sems 10-32 x 3/8"
	31291	Plug, Cover
	34154	Plate, Upper fuel tank mtg.
	34155	Bracket, Lower fuel tank mtg.
	650561	Screw, 1/4-20 x 5/8"
	34141	Guard, Starter
	32576	Seal, Snow Guard
	650767	Screw, 8-32 x 27/64"
	34589 34346	Decal, Choke
	34346	Decal, Instruction
	35274	Decal, Instruction
	34144	Decal, Primer
	631021	Inlet Needle, Seat & Clip Assy.
380	632110	Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
		page 168 for breakdown or Fiche18B, Grid E-9)
400	33279G	* Gasket Set (Incl. items marked *)
420	730225	SAE 30 4-Cycle Engine Oil (Quart)
421	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
422	35824	Muffler Optional (

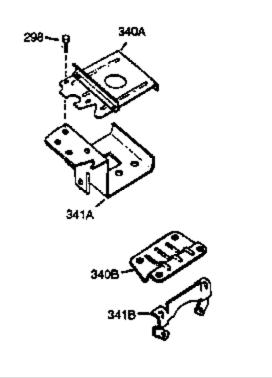


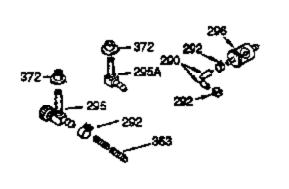


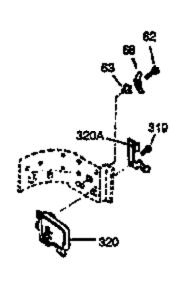


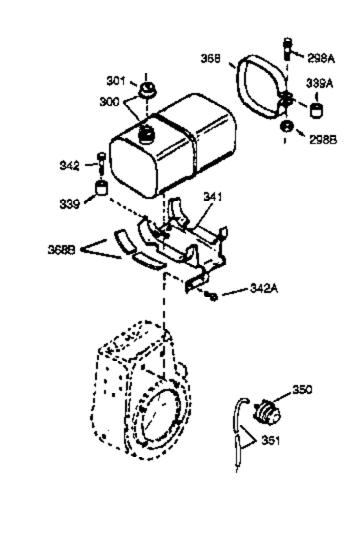

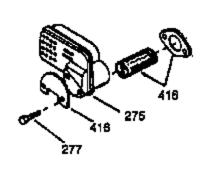


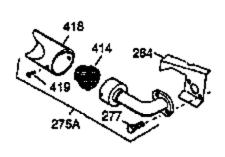

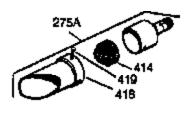




Ref #	Part Number	Qtv	Description
	30322	,	Nut & Lockwasher, 8-32
62	650760		Screw, 8-32 x 3/8"
63	28545		Grommet, Plastic
68	33356		Tab, Ground terminal
129	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131A	650713		Screw, 5/16-18 x 5/8"
131	650737		Screw, 1/4-20 x 1/2" (Use as required )
131	650738		Screw, 1/4-20 x 5/8 (Use as required)
222A			Pop Rivet (Can be purchased locally)
274	35865		Gasket, Exhaust
275	33280A		Muffler
277	650729		Screw, 5/16-18 x 3-3/16" (Use as requ ired)
277	651002		Screw, 5/16-18 x 4-1/4" (Use as requi red)
285A	33662		Hub & Screen Assy.
290	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962		Fuel Line (Braided 32")(80cm)(As requ ired)
	26460		Fuel Line Clamp (Use as required)
	32961		Valve, Fuel shut-off
	650665		Screw, 1/4-15 x 7/8"
300	34156A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
			builtwith different size fuel inlet openings. Tanks with the
			1-3/16" I.D. opening use fuel cap 34210. Tanks with the
			1-1/2" I.D. opening use fuel cap 35355.
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
			I.D.)
201Λ	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
301A	33032		required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
			as required) (1.5" I.D.)
301A	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	29673		* Gasket, Oil filler
	34140		Cover, Carburetor
	31291		Plug, Cover
	34155		Bracket, Lower fuel tank mtg.
	650561		Screw, 1/4-20 x 5/8"
	570629A		Primer Assy.
	32180C		Line, Primer
	34144		Decal, Primer
414	33323		Opt.Muffler Screen (Mini-Bike applica tion)
	730130		Kit, Exhaust adapter (Incl. 274 & 277)
	33700		Cover & Tube, Muffler (use as require d)
	650578		Screw, 8-18 x 3/8" (use as required)
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
	35824		Muffler Optional
			•

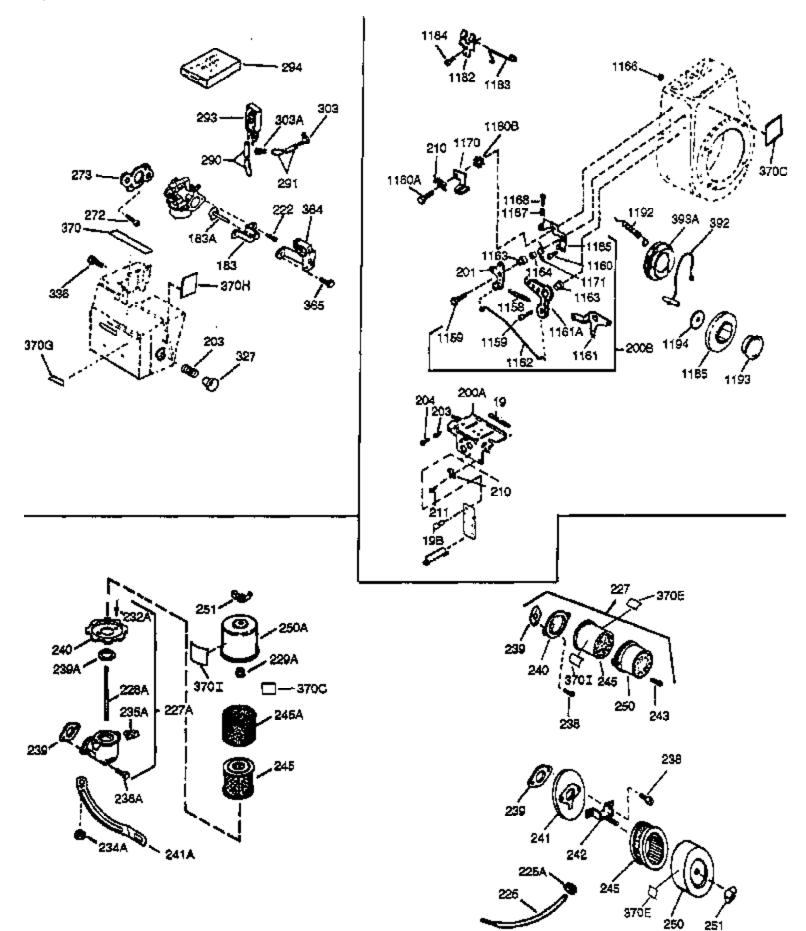

30322 650727 650737 650738 650713 34587 33461A 730152 31342 650549 27793 28942 28820	Qty	Description  Nut & Lockwasher, 8-32  Screw, 5/16-18 x 1-3/4 (Use as required)  Screw, 1/4-20 x 1/2" (Use as required)  Screw, 1/4-20 x 5/8 (Use as required)  Screw, 5/16-18 x 5/8"  Bracket, Choke  Control Bracket (Incl. 19, 203, 204 & 206)  Control Bracket (Incl.1158-1171)(As r eq.)  Spring, Compression  Screw, 5-40 x 7/16"  Clip, Conduit  Screw, 10-32 x 3/8"  Screw, 10-32 x 1/2"  Pop Rivet (Can be purchased locally)  Air Cleaner Ass'y. (Incl. 238, 239, 242, 246, 250) (Use as required)
33662 29774 30962 30705 33715		Hub & Screen Assy. Fuel Line (Braided 8-1/4")(21cm)(As r equired) Fuel Line (Braided 32")(80cm)(As required) Fuel Line (Braided 16")(40cm)(As required) Impulse Fuel Pump NOTE: 34385 and 33715 (WIP)pumps are replaced by 35813 and 35800 (WIP) pumps. The 33010 (3000 series) repair kit is still available. The 35791 repair kit is used with the 35813 and 35800 fuel pumps.
35791		Fuel Pump Repair Kit NOTE: 34385 and 33715 (WIP)pumps are replaced by 35813 and 35800 (WIP) pumps. The 33010 (3000 series) repair kit is still available. The 35791 repair kit is used with the 35813 and 35800 fuel pumps.
410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5" I.D.)
33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.)
34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.)
35355 32958 29673 650765 34140 31291 33377 650767 34346 35274 34589 34144 34414 730226 35824 33374 30312 28820 27070 33816		Fuel Cap (Red Plastic)(1.75" I.D.) Fitting, Fuel  * Gasket, Oil filler Screw, 10-32 x 1/2" Cover, Carburetor Plug, Cover Bracket, Carburetor cover mtg. Screw, 8-32 x 27/64" Decal, Instruction Decal, Instruction Decal, Choke Decal, Primer Decal, Warning SAE 5W30 4-Cycle Engine Oil (Quart) Muffler Optional Spring Extension Screw, 10-32 x 1/2" Screw, 10-32 x 1/2" Lockwasher Hub & Screen Assy.
	30322 650727 650737 650738 650713 34587 33461A 730152 31342 650549 27793 28942 28820 730127 33662 29774 30962 30705 33715 35791 410144B 33032 34210 35355 32958 29673 650765 34140 31291 33377 650767 34346 35274 34589 34144 34414 34414 730226 35824 33374 30312 28820 27070	30322 650727 650737 650738 650713 34587 33461A 730152 31342 650549 27793 28942 28820 730127 33662 29774 33962 30705 33715 35791 410144B 33032 34210 35355 32958 29673 650765 34140 31291 33377 650767 34346 35274 34589 34144 34144 34144 730226 35824 33374 30312 28820 27070

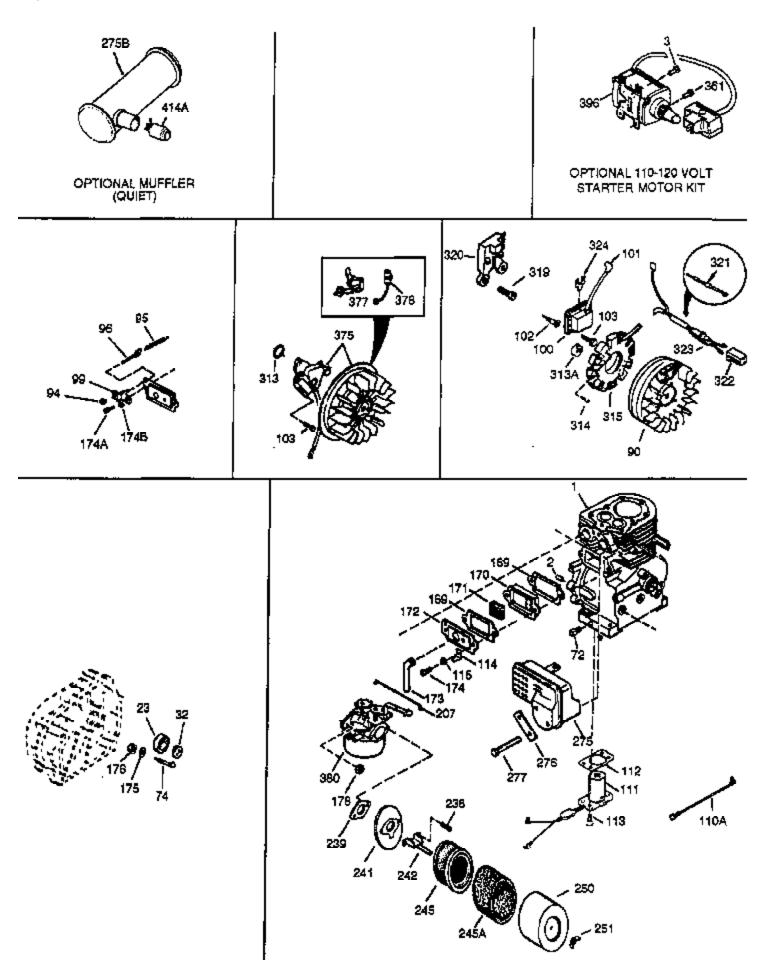

Ref #	Part Number Qty	Description
	34096C	Cylinder (CI liner)(3-5/16")(Incl.2,20,41,43,72 & 119)
	27652	Pin, Dowel
	30322	Nut & Lockwasher, 8-32
	27642	Plug, Oil drain
	610118	Cover, Spark plug
	650489	Screw, 1/4-20 x 5/8"
	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
	650713	Screw, 5/16-18 x 5/8"
	650737	Screw, 1/4-20 x 1/2" (Use as required )
131	650738	Screw, 1/4-20 x 5/8 (Use as required)
169	27896A	* Gasket, Breather
170	28423	Body, Breather
171	28424	Element, Breather
	28425	Cover, Breather
	35350	Tube, Breather
	650128	Screw, 10-24 x 1/2"
	29752	Nut & Lockwasher, 1/4-28
	33878	Link, Governor lever-to-throttle
	33076	
222A	204200	Pop Rivet (Can be purchased locally)
2/5B	391026	Muffler (Incl. 284, 284A & 416) (This spark arrester
		mufflercan be used on any model.)
275	33280A	Muffler
	31588	Plate, Muffler locking
	35741	· · · · · · · · · · · · · · · · · · ·
		Plate, Muffler locking
	650729	Screw, 5/16-18 x 3-3/16" (Use as required)
	651002	Screw, 5/16-18 x 4-1/4" (Use as requi red)
	33662	Hub & Screen Assy.
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
		I.D.)
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
		required) (1.5" I.D.)
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required) (1.5" I.D.)
201 /	35355	Fuel Cap (Pad Plactic)/1.75" LD.)
		Fuel Cap (Red Plastic)(1.75" I.D.)
	29673	* Gasket, Oil filler
	33876	Gasket, Stator (Used only on Std. poi nt ign.)
	34140	Cover, Carburetor
	31291	Plug, Cover
370D	34144	Decal, Primer
375	610848	Magneto (w/ring gear for 120 Volt sta rter) NOTE: The
		complete magneto is not available as an assembly.
		Themagneto number is shown for reference purpose only.
		Order component parts individually, as shown in parts list.
		(Refer to Division 5, Section B, page 28 for breakdown or
		Fiche 18B, Grid F-1
	30547A	Breaker Points (Use with Std. point i gn.)
378	30548B	Condenser
380	632110	Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
		page 168 for breakdown or Fiche18B, Grid E-9)
40.4	700000	
	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
422	35824	Muffler Optional