




Ref #	Part Number Qty	Description
1	34096C	Cylinder (CI liner)(3-5/16")(Incl.2,20,41,43,72 & 119)
2	27652	Pin, Dowel
3	650820	Screw, 1/4-20 x 1/2"
	32678	Nipple, Oil drain
	30969	Cap, Oil drain
	30700	Yoke, Governor
	650494	Screw, 6-40 x 5/16"
	30699C	Rod Assy., Governor (Incl. 15A & 15B)
	33454	Governor Lever Assy.
17	29916	Clamp, Governor lever
18	650548	Screw, 8-32 x 5/16"
20	32630	Seal, Oil
	29536	Blower Housing Baffle (Without electric starter knockout)
		(Use as required)
O.E.	252564	
25	35256A	Blower Housing Baffle (With electric starter knockout) (Use
		as required)
26	650561	Screw, 1/4-20 x 5/8"
30	33365B	Crankshaft (Incl. 108 & 109)
35	29826	Screw, 10-32 x 3/4"
36	29918	Lockwasher, #8 E.T.
	30322	Nut & Lockwasher, 8-32
	29216	Locknut, 10-32
	29642	Ring, Retaining
	34543	Piston, Pin & Ring Set (Std.) (3-3/16 ")
	34544	Piston, Pin & Ring Set (.010" OS)
	34545	Piston, Pin & Ring Set (.020" OS)
41	34031B	Piston & Pin Ass'y. (Std.)(3-3/16")(I ncl.43)
41	34032B	Piston & Pin Ass'y. (.010" OS) (Incl. 43)
41	34033B	Piston & Pin Ass'y. (.020" OS) (Incl. 43)
	34037	Ring Set (Std.) (3-3/16" Bore)
	34038	Ring Set (.010" OS)
	34039	Ring Set (.020" OS)
	27888	Ring, Piston Pin retaining
		<u> </u>
	32591C	Rod Assy., Connecting (Incl. 46, 47 & 49)
	650662C	Bolt, Connecting rod (2 pieces)
	650662C	Bolt, Connecting rod (2 pieces)
	34034	Lifter, Valve
49	34242	Dipper, Oil
50	34143	Camshaft (MCR)
60	33273A	Extension, Blower housing
	34126	Bracket, Grommet mounting
	650760	Screw, 8-32 x 3/8"
	28545	Grommet, Plastic
	650128	Screw, 10-24 x 1/2"
		·
	35262	* Gasket, Flange
	33367B	Cover, Cylinder (Incl. 71, 75 & 80)
	33368	Bushing, Crankshaft
	27642	Plug, Oil drain
75	31950	Seal, Oil
80	31845	Shaft, Mechanical governor
	30590A	Washer, Flat
	30591	Gear Assy., Governor (Incl. 81)
	30588A	Spool, Governor
	29193	Ring, Retaining
	650833	Screw, 1/4-20 x 1-3/16 (Use as required)
	650832	Screw, 1/4-20 x 1-11/16" (Use as requ ired)
89	32589	Key, Flywheel


Ref#	Part Number	Qtv	Description
	650815		Washer, Belleville
	8116		Nut, Hex
	610118		Cover, Spark plug
	650516		
			Screw, 1/4-20 x 1-1/8"
108	29783		Pin, Crankshaft gear (Only serviceable when gear is pinned
			to crank.)
	33245		Gear, Crankshaft
110	34240		Ground Wire
119	34923A		* Gasket, Cylinder head
120	34030A		Head, Cylinder
125	27878A		Exhaust Valve (Std.) (Incl. 151)
	27880A		Exhaust Valve (1/32" OS) (Incl. 151)
	34035		Intake Valve (Std.) (Incl. 151)
	34036		Intake Valve (1/32" OS) (Incl. 151)
	650691		Washer (Do not use with No. 6021A scr ew.)
	650690		Washer, Belleville (Use as required)
	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
130	6021A		Screw, 5/16-18 x 1-1/2" (Use as required, but do notuse No.
			650691 washer.)
130	650711		Screw, 5/16-18 x 1-5/8 " (Use as required) (Can use 6021A
			but discard 650691 washer.)
130	650694A		Screw, 5/16-18 x 2" (Use as required)
131	650737		Screw, 1/4-20 x 1/2" (Use as required)
131	650738		Screw, 1/4-20 x 5/8 (Use as required)
	650713		Screw, 5/16-18 x 5/8"
	650890		Washer, Internal Lock
	33636		Resistor Spark Plug
	33369		•
			Bracket, Governor gear
	650836		Screw, 10-24 x 1/2"
	35862		Seal Assy., Intake valve
	27881		Spring, Valve
	32581		Cap, Lower valve spring
	27896A		* Gasket, Breather
170	28423		Body, Breather
171	28424		Element, Breather
172	28425		Cover, Breather
173	35350		Tube, Breather
	650128		Screw, 10-24 x 1/2"
	29752		Nut & Lockwasher, 1/4-28
	30088A		Screw, 1/4-28 x 1"
	34587		Bracket, Choke
	33263		* Gasket, Carburetor
	33877		Pipe, Intake
			! '
	34667		Link, Governor lever
	34664		Control Bracket (Incl.19,203, 204, 20 6 & 209)
	31342		Spring, Compression
	650549		Screw, 5-40 x 7/16"
	610973		Terminal Assy.
207	33878		Link, Governor lever-to-throttle
209	650821		Screw, 10-32 x 1/2"
	27793		Clip, Conduit
	28942		Screw, 10-32 x 3/8"
	34586		Rod, Choke
	35438		Knob, Control
	28820		Screw, 10-32 x 1/2"
	20020		·
222A			Pop Rivet (Can be purchased locally)


Ref #	Part Number 0	Qty Description
	650378	Screw, Torx T-30, 5/16-18 x 1-1/8"
224	27915A	* Gasket, Intake pipe
260	34822A	Blower Housing
261	650788	Screw, 5/16-18 x 3/4"
	29747B	Screw, 5/16-24 x 21/32"
	33272B	Cover, Cylinder head
	33280A	Muffler
	31588	Plate, Muffler locking
	35741	Plate, Muffler locking
	650729	Screw, 5/16-18 x 3-3/16" (Use as requ ired)
	651002	Screw, 5/16-18 x 4-1/4" (Use as requi red)
	33013	Cover, Starter bubble
	650760	Screw, 8-32 x 7/16"
	33662	Hub & Screen Assy.
	29752	Nut, 1/4-28
	29774	Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962	Fuel Line (Braided 32")(80cm)(As required)
	30705	Fuel Line (Braided 16")(40cm)(As required)
	26460	Fuel Line Clamp (Use as required)
	32961 650665	Valve, Fuel shut-off Screw, 1/4-15 x 7/8"
	34156A	Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
300	54150A	builtwith different size fuel inlet openings. Tanks with the
		1-3/16" I.D. opening use fuel cap 34210. Tanks with the
		1-1/2" I.D. opening use fuel cap 35355.
2014	4404445	
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5" I.D.)
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.)
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required) (1.5" I.D.)
301A	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
305	33893A	Oil Fill Tube
307	33590	"O" Ring
310	34011A	Dipstick (Incl. 307)
336	650765	Screw, 10-32 x 1/2"
	34666	Cover, Carburetor
	31291	Plug, Cover
	28942	Screw, Sems 10-32 x 3/8"
	34154	Plate, Upper fuel tank mtg.
	34155	Bracket, Lower fuel tank mtg.
	650561	Screw, 1/4-20 x 5/8"
	34141	Guard, Starter
	32576	Seal, Snow Guard
	650767	Screw, 8-32 x 27/64"
	35274 634,034	Decal, Instruction
	631021	Inlet Needle, Seat & Clip Assy.
380	632110	Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A, page 168 for breakdown or Fiche18B, Grid E-9)
400	33279G	* Gasket Set (Incl. items marked *)
	730225	SAE 30 4-Cycle Engine Oil (Quart)
	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
422	35824	Muffler Optional

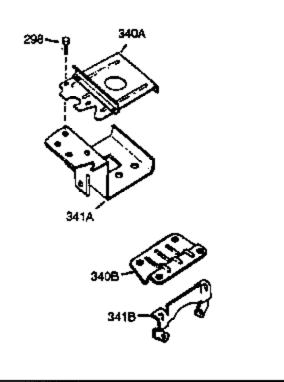


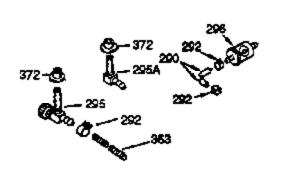


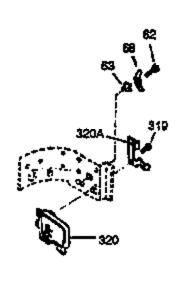


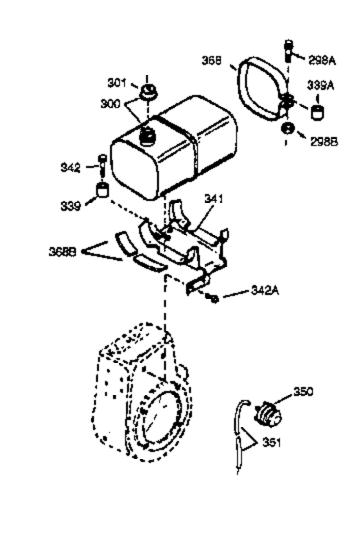

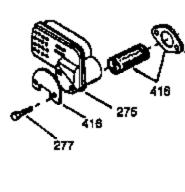


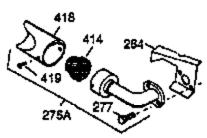




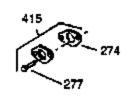

Ref #	Part Number	Qty	Description
37A	30322	-	Nut & Lockwasher, 8-32
62	650760		Screw, 8-32 x 3/8"
63	28545		Grommet, Plastic
68	33356		Tab, Ground terminal
129	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131	650737		Screw, 1/4-20 x 1/2" (Use as required)
131	650738		Screw, 1/4-20 x 5/8 (Use as required)
131A	650713		Screw, 5/16-18 x 5/8"
222A			Pop Rivet (Can be purchased locally)
274	35865		Gasket, Exhaust
275	33280A		Muffler
277	650729		Screw, 5/16-18 x 3-3/16" (Use as requ ired)
277	651002		Screw, 5/16-18 x 4-1/4" (Use as requi red)
285A	33662		Hub & Screen Assy.
290	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
290	30962		Fuel Line (Braided 32")(80cm)(As required)
292	26460		Fuel Line Clamp (Use as required)
295	32961		Valve, Fuel shut-off
298	650665		Screw, 1/4-15 x 7/8"
300	34156A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
			builtwith different size fuel inlet openings. Tanks with the
			1-3/16" I.D. opening use fuel cap 34210. Tanks with the
			1-1/2" I.D. opening use fuel cap 35355.
201 /	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
30 IA	4101 44 6		I.D.)
			ו.ט.ן
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required) (1.5" I.D.)
3∩1∆	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
30171	01210		as required) (1.5" I.D.)
	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	34666		Cover, Carburetor
	31291		Plug, Cover
	34155		Bracket, Lower fuel tank mtg.
	650561		Screw, 1/4-20 x 5/8"
	570682		Primer Assy.
	32180C		Line, Primer
	33323		Opt.Muffler Screen (Mini-Bike applica tion)
	730130		Kit, Exhaust adapter (Incl. 274 & 277)
	33700		Cover & Tube, Muffler (use as require d)
	650578		Screw, 8-18 x 3/8" (use as required)
421	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
422	35824		Muffler Optional

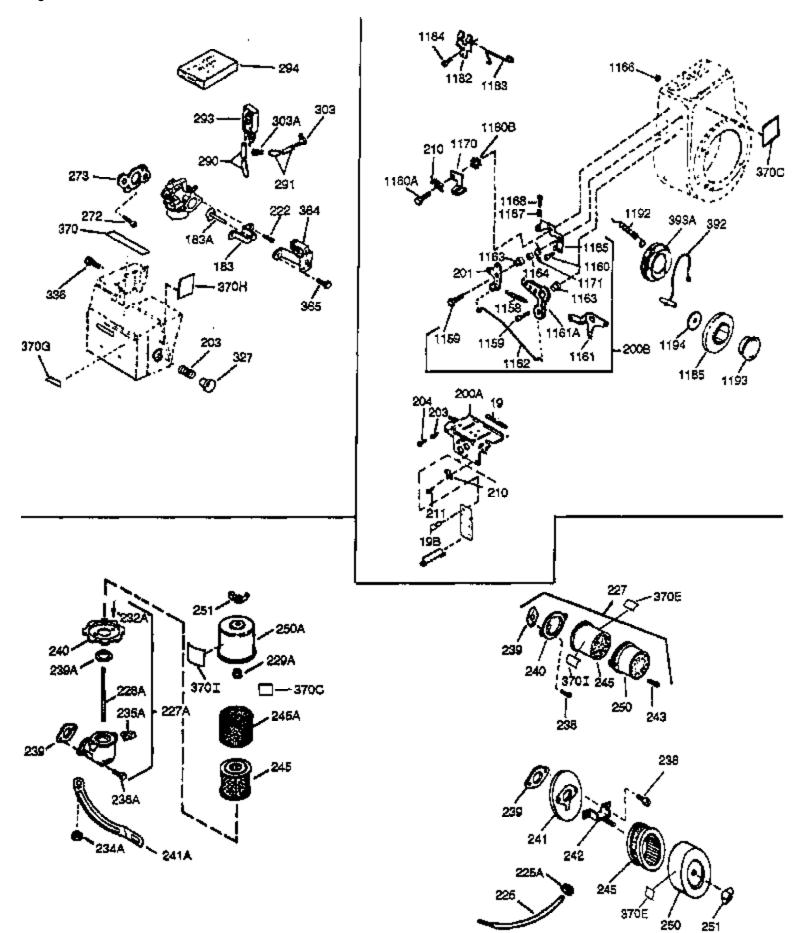

D ₀ f #	Part Number	Ot /	Description
	30322	Qıy	Nut & Lockwasher, 8-32
	650727		
			Screw, 5/16-18 x 1-3/4 (Use as requir ed)
	650713		Screw, 5/16-18 x 5/8" Screw, 4/4-20 x 4/2" (Libe on required.)
	650737		Screw, 1/4-20 x 1/2" (Use as required)
	650738		Screw, 1/4-20 x 5/8 (Use as required)
	34587		Bracket, Choke
	730152		Control Bracket (Incl.1158-1171)(As r eq.)
	31342		Spring, Compression
	650549		Screw, 5-40 x 7/16"
	27793		Clip, Conduit
	28942		Screw, 10-32 x 3/8"
	28820		Screw, 10-32 x 1/2"
222A			Pop Rivet (Can be purchased locally)
227	730127		Air Cleaner Ass'y. (Incl. 238, 239, 242, 246, 250) (Use as
			required)
285Δ	33662		Hub & Screen Assy.
	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962		Fuel Line (Braided 32")(80cm)(As required)
	30705		Fuel Line (Braided 16")(40cm)(As required)
	33715		Impulse Fuel Pump NOTE: 34385 and 33715 (WIP)pumps
293	337 13		are replaced by 35813 and 35800 (WIP) pumps. The 33010
			(3000 series) repair kit is still available. The 35791 repair kit
			is used with the 35813 and 35800 fuel pumps.
294	35791		Fuel Pump Repair Kit NOTE: 34385 and 33715 (WIP)pumps
			are replaced by 35813 and 35800 (WIP) pumps. The 33010
			(3000 series) repair kit is still available. The 35791 repair kit
			is used with the 35813 and 35800 fuel pumps.
201 /	410144P		Fuel Can (Mhite Plantia)(Standard) (Llan as required) (1.5"
30 IA	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
			I.D.)
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required) (1.5" I.D.)
204.4	0.404.0		
<i>3</i> 01A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
			as required) (1.5" I.D.)
301A	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	32958		Fitting, Fuel
	650765		Screw, 10-32 x 1/2"
	34666		Cover, Carburetor
	31291		Plug, Cover
	33377		Bracket, Carburetor cover mtg.
	650767		Screw, 8-32 x 27/64"
	35274		Decal, Instruction
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
	35824		Muffler Optional
	30312		Screw, 10-32 x 1/2"
	28820		Screw, 10-32 x 1/2"
	27070		Lockwasher
	33816		Hub & Screen Assy.
1163	33010		TIUD & SCIECTI ASSY.

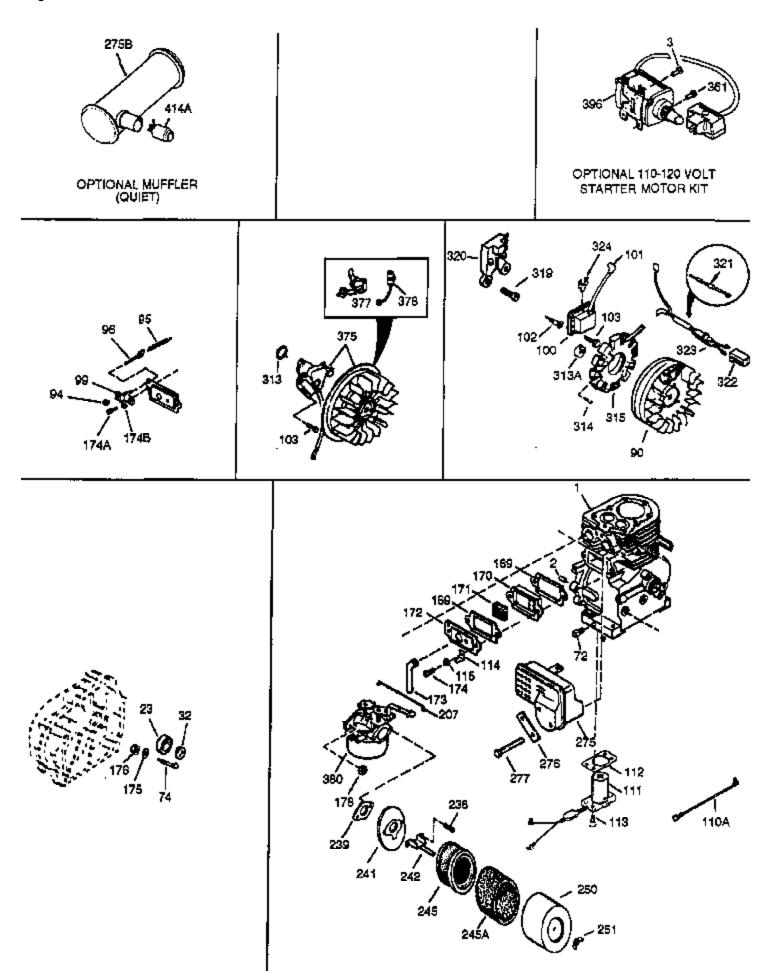

Ref #	Part Number	Qty	Description
1	34096C		Cylinder (CI liner)(3-5/16")(Incl.2,20,41,43,72 & 119)
	27652		Pin, Dowel
	650820		Screw, 1/4-20 x 1/2"
	30322		Nut & Lockwasher, 8-32
72	27642		Plug, Oil drain
101	610118		Cover, Spark plug
	650516		Screw, 1/4-20 x 1-1/8"
	650727		·
			Screw, 5/16-18 x 1-3/4 (Use as requir ed)
	650713		Screw, 5/16-18 x 5/8"
131	650737		Screw, 1/4-20 x 1/2" (Use as required)
131	650738		Screw, 1/4-20 x 5/8 (Use as required)
169	27896A		* Gasket, Breather
	28423		Body, Breather
	28424		Element, Breather
172	28425		Cover, Breather
173	35350		Tube, Breather
174	650128		Screw, 10-24 x 1/2"
	29752		Nut & Lockwasher, 1/4-28
			·
	33878		Link, Governor lever-to-throttle
222A			Pop Rivet (Can be purchased locally)
275B	391026		Muffler (Incl. 284, 284A & 416) (This spark arrester
			mufflercan be used on any model.)
			• • •
275	33280A		Muffler
276	31588		Plate, Muffler locking
	35741		Plate, Muffler locking
	650729		Screw, 5/16-18 x 3-3/16" (Use as required)
	651002		Screw, 5/16-18 x 4-1/4" (Use as requi red)
	33662		Hub & Screen Assy.
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
			I.D.)
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
			as required) (1.5" I.D.)
			. , , ,
	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
313A	33876		Gasket, Stator (Used only on Std. poi nt ign.)
337	34666		Cover, Carburetor
	31291		Plug, Cover
3/3	610982		
			complete magneto is not available as an assembly.
			Themagneto number is shown for reference purpose only.
			Order component parts individually, as shown in parts list.
			(Refer to Division 5, Section B, page 36 for breakdown or
			Fiche 18B, Grid F-3
			TIME TOD, CHAIT TO
377	30547A		Breaker Points (Use with Std. point i gn.)
	610767A		Condenser
380	632110		Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
			page 168 for breakdown or Fiche18B, Grid E-9)
404	720226		CAE FINISO 4 Cycle Engine Oil (Overt)
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
422	35824		Muffler Optional