




Ref #	Part Number Qty	Description
1	34096C	Cylinder (CI liner)(3-5/16")(Incl.2,20,41,43,72 & 119)
2	27652	Pin, Dowel
3	650820	Screw, 1/4-20 x 1/2"
	30968	Nipple, Oil drain
	30969	Cap, Oil drain
	650494	Screw, 6-40 x 5/16"
	30700	Yoke, Governor
	30699C	Rod Assy., Governor (Incl. 15A & 15B)
	33454	Governor Lever Assy.
	29916	Clamp, Governor lever
	650548	Screw, 8-32 x 5/16"
20	32630	Seal, Oil
25	29536	Blower Housing Baffle (Without electric starter knockout)
		(Use as required)
25	35256A	Blower Housing Baffle (With electric starter knockout) (Use
25	33230A	as required)
	050504	. ,
	650561	Screw, 1/4-20 x 5/8"
	33459A	Crankshaft (Incl. 108 & 109)
35	29826	Screw, 10-32 x 3/4"
36	29918	Lockwasher, #8 E.T.
37	29216	Locknut, 10-32
37A	30322	Nut & Lockwasher, 8-32
38	29642	Ring, Retaining
	34543	Piston, Pin & Ring Set (Std.) (3-3/16 ")
	34544	Piston, Pin & Ring Set (.010" OS)
	34545	Piston, Pin & Ring Set (.020" OS)
	34031B	· ,
		Piston & Pin Ass'y. (Std.)(3-3/16")(I ncl.43)
	34032B	Piston & Pin Ass'y. (.010" OS) (Incl. 43)
	34033B	Piston & Pin Ass'y. (.020" OS) (Incl. 43)
	34037	Ring Set (Std.) (3-3/16" Bore)
	34038	Ring Set (.010" OS)
42	34039	Ring Set (.020" OS)
43	27888	Ring, Piston Pin retaining
45	32591C	Rod Assy., Connecting (Incl. 46, 47 & 49)
46	650662C	Bolt, Connecting rod (2 pieces)
47	650662C	Bolt, Connecting rod (2 pieces)
	34034	Lifter, Valve
	34242	Dipper, Oil
	34143	Camshaft (MCR)
	33273A	Extension, Blower housing
	34126	<u> </u>
	650760	Bracket, Grommet mounting
		Screw, 8-32 x 3/8"
	28545	Grommet, Plastic
	650128	Screw, 10-24 x 1/2"
	35262	* Gasket, Flange
	33367B	Cover, Cylinder (Incl. 71, 75 & 80)
71	33368	Bushing, Crankshaft
72	27642	Plug, Oil drain
75	31950	Seal, Oil
	31845	Shaft, Mechanical governor
	30590A	Washer, Flat
	30591	Gear Assy., Governor (Incl. 81)
	30588A	Spool, Governor
	29193	Ring, Retaining
	650833	Screw, 1/4-20 x 1-3/16 (Use as required)
	650832	Screw, 1/4-20 x 1-11/16" (Use as required)
89	32589	Key, Flywheel


92 93 101 103	Part Number 650815 8116 610118 650516 29783	Qty	Description Washer, Belleville Nut, Hex Cover, Spark plug Screw, 1/4-20 x 1-1/8" Pin, Crankshaft gear (Only serviceable when gear is pinned to crank.)
119 120 125 125 126 126 127 128 129	33245 34923A 34030A 27878A 27880A 34035 34036 650691 650690 650727 6021A		Gear, Crankshaft * Gasket, Cylinder head Head, Cylinder Exhaust Valve (Std.) (Incl. 151) Exhaust Valve (1/32" OS) (Incl. 151) Intake Valve (Std.) (Incl. 151) Intake Valve (1/32" OS) (Incl. 151) Washer (Do not use with No. 6021A scr ew.) Washer, Belleville (Use as required) Screw, 5/16-18 x 1-3/4 (Use as required, but do notuse No. 650691 washer.)
130	650711		Screw, 5/16-18 x 1-5/8 " (Use as required) (Can use 6021A but discard 650691 washer.)
131A 131 133 135 139 140 149A 150 151 169 170 171 172 173 174 178 182 183 184 185 186 200 203 204 206 207 209 215 219 220	650694A 650737 650738 650890 33636 33369 650836 35862 27881 32581 27896A 28423 28424 28425 35350 650128 29752 30088A 34587 33263 33877 34667 34677 31342 650549 610973 33878 650821 32410 34586 35438 28820		Screw, 5/16-18 x 2" (Use as required) Screw, 5/16-18 x 5/8" Screw, 1/4-20 x 1/2" (Use as required) Screw, 1/4-20 x 5/8 (Use as required) Washer, Internal Lock Resistor Spark Plug Bracket, Governor gear Screw, 10-24 x 1/2" Seal Assy., Intake valve Spring, Valve Cap, Lower valve spring * Gasket, Breather Body, Breather Element, Breather Tube, Breather Tube, Breather Tube, Breather Screw, 10-24 x 1/2" Nut & Lockwasher, 1/4-28 Screw, 1/4-28 x 1" Bracket, Choke * Gasket, Carburetor Pipe, Intake Link, Governor lever Control Bracket (Incl.19, 203, 204, 2 06, 209) Spring, Compression Screw, 5-40 x 7/16" Terminal Assy. Link, Governor lever-to-throttle Screw, 10-32 x 1/2" Knob, Speed control Rod, Choke Knob, Control Screw, 10-32 x 1/2" Pop Rivet (Can be purchased locally)
	650378 27915A		Screw, Torx T-30, 5/16-18 x 1-1/8" * Gasket, Intake pipe


Ref #	Part Number Q	y Description
260	34822A	Blower Housing
	650788	Screw, 5/16-18 x 3/4"
	29747B	Screw, 5/16-24 x 21/32"
	33272B	Cover, Cylinder head
	34185A	Muffler
	31588	Plate, Muffler locking
	35741	Plate, Muffler locking
	650729	Screw, 5/16-18 x 3-3/16" (Use as required)
	651002	Screw, 5/16-18 x 4-1/4" (Use as requi red)
	33013	Cover, Starter bubble
	650760	Screw, 8-32 x 7/16"
	33662	Hub & Screen Assy.
	29752	Nut, 1/4-28
	29774	Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962	Fuel Line (Braided 32")(80cm)(As required)
	30705	Fuel Line (Braided 16")(40cm)(As required)
	26460 32961	Fuel Line Clamp (Use as required)
	650665	Valve, Fuel shut-off Screw, 1/4-15 x 7/8"
	34156A	Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
300	34130A	builtwith different size fuel inlet openings. Tanks with the
		1-3/16" I.D. opening use fuel cap 34210. Tanks with the
		1-1/2" I.D. opening use fuel cap 35355.
	<u>-</u>	
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
		I.D.)
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
		required) (1.5" I.D.)
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required) (1.5" I.D.)
301A	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
	33893A	Oil Fill Tube
	33590	"O" Ring
	34011A	Dipstick (Incl. 307)
325A	29443	Clip, Fuel line
336	650765	Screw, 10-32 x 1/2"
337	34666	Cover, Carburetor
338A	31291	Plug, Cover
	28942	Screw, Sems 10-32 x 3/8"
	34154	Plate, Upper fuel tank mtg.
	34155	Bracket, Lower fuel tank mtg.
	650561	Screw, 1/4-20 x 5/8"
	34141	Guard, Starter
	32576	Seal, Snow Guard
	650767	Screw, 8-32 x 27/64"
	34346 35274	Decal, Instruction
	35274 34679	Decal, Instruction Decal, Choke
	34144	Decal, Primer
	631021	Inlet Needle, Seat & Clip Assy.
	632110	Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
300	002110	page 168 for breakdown or Fiche18B, Grid E-9)
400	33279G	,
	730225	* Gasket Set (Incl. items marked *) SAE 30 4-Cycle Engine Oil (Quart)
	730226	SAE 50 4-Cycle Engine Oil (Quart)
	35824	Muffler Optional
722		mailor optional

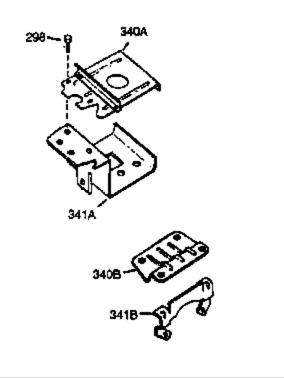


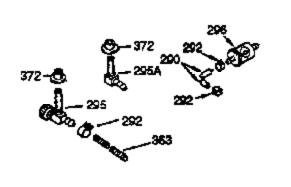


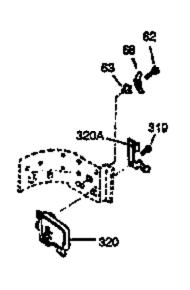


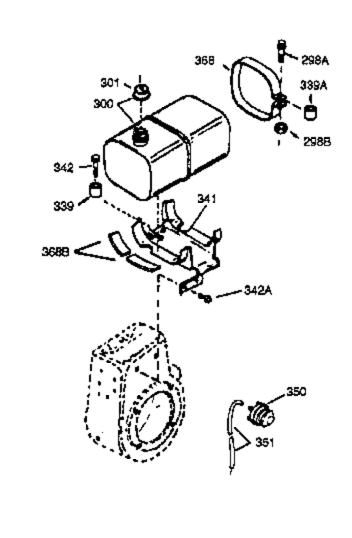

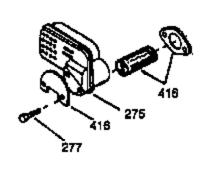


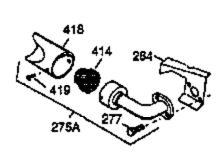






Ref #	Part Number	Qty	Description
37A	30322	•	Nut & Lockwasher, 8-32
62	650760		Screw, 8-32 x 3/8"
63	28545		Grommet, Plastic
129	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131	650737		Screw, 1/4-20 x 1/2" (Use as required)
131	650738		Screw, 1/4-20 x 5/8 (Use as required)
131A	650713		Screw, 5/16-18 x 5/8"
222A			Pop Rivet (Can be purchased locally)
274	35865		Gasket, Exhaust
275	34185A		Muffler
277	650729		Screw, 5/16-18 x 3-3/16" (Use as requ ired)
277	651002		Screw, 5/16-18 x 4-1/4" (Use as requi red)
285A	33662		Hub & Screen Assy.
290	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
290	30962		Fuel Line (Braided 32")(80cm)(As requ ired)
292	26460		Fuel Line Clamp (Use as required)
295	32961		Valve, Fuel shut-off
298	650665		Screw, 1/4-15 x 7/8"
300	34156A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
			builtwith different size fuel inlet openings. Tanks with the
			1-3/16" I.D. opening use fuel cap 34210. Tanks with the
			1-1/2" I.D. opening use fuel cap 35355.
3∩1∆	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
30 IA	4101410		I.D.)
			·
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
00 17 1	0.210		as required) (1.5" I.D.)
	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	34666		Cover, Carburetor
	31291		Plug, Cover
	34155		Bracket, Lower fuel tank mtg.
	650561		Screw, 1/4-20 x 5/8"
	570682		Primer Assy.
	32180C		Line, Primer
	34144		Decal, Primer
	33323		Opt.Muffler Screen (Mini-Bike applica tion)
	730130		Kit, Exhaust adapter (Incl. 274 & 277)
	33700		Cover & Tube, Muffler (use as require d)
	650578		Screw, 8-18 x 3/8" (use as required)
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
422	35824		Muffler Optional

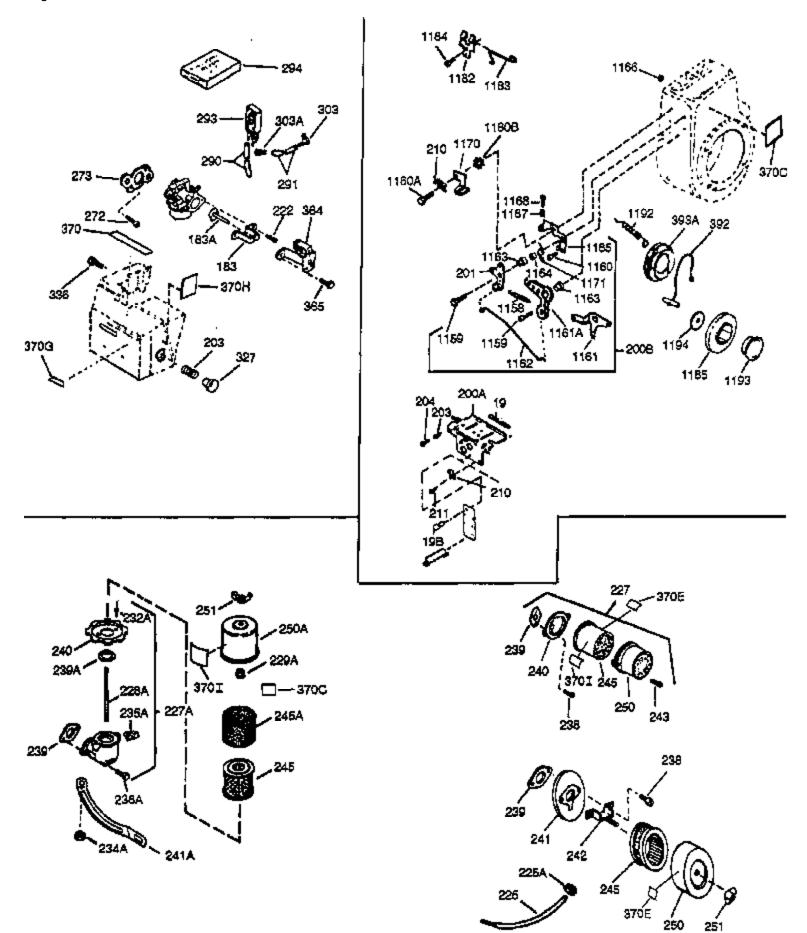

Ref #	Part Number C	Qty	Description
	30322		Nut & Lockwasher, 8-32
	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131	650737		Screw, 1/4-20 x 1/2" (Use as required)
131	650738		Screw, 1/4-20 x 5/8 (Use as required)
131A	650713		Screw, 5/16-18 x 5/8"
183	34587		Bracket, Choke
	730152		Control Bracket (Incl.1158-1171)(As r eq.)
	31342		Spring, Compression
	650549		Screw, 5-40 x 7/16"
	28820		Screw, 10-32 x 1/2"
222A			Pop Rivet (Can be purchased locally)
	730127		Air Cleaner Ass'y. (Incl. 238, 239, 242, 246, 250) (Use as
	. 55		required)
285A	33662		Hub & Screen Assy.
	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962		Fuel Line (Braided 32")(80cm)(As required)
	30705		Fuel Line (Braided 16")(40cm)(As required)
	33715		Impulse Fuel Pump NOTE: 34385 and 33715 (WIP)pumps
			are replaced by 35813 and 35800 (WIP) pumps. The 33010
			(3000 series) repair kit is still available. The 35791 repair kit
			is used with the 35813 and 35800 fuel pumps.
20/	35791		Fuel Pump Repair Kit NOTE: 34385 and 33715 (WIP)pumps
234	33791		are replaced by 35813 and 35800 (WIP) pumps. The 33010
			(3000 series) repair kit is still available. The 35791 repair kit
			is used with the 35813 and 35800 fuel pumps.
			• •
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
			I.D.)
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
			as required) (1.5" I.D.)
301A	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	32958		Fitting, Fuel
	650765		Screw, 10-32 x 1/2"
	34666		Cover, Carburetor
	31291		Plug, Cover
	33377		Bracket, Carburetor cover mtg.
	650767		Screw, 8-32 x 27/64"
	34346		Decal, Instruction
	35274		Decal, Instruction
	34679		Decal, Choke
	34144		Decal, Primer
	34414		Decal, Warning
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
	35824		Muffler Optional
	30312		Screw, 10-32 x 1/2"
	28820		Screw, 10-32 x 1/2"
	27070		Lockwasher
	33816		Hub & Screen Assy.
1100	00010		TIME & COLOUIT 100y.

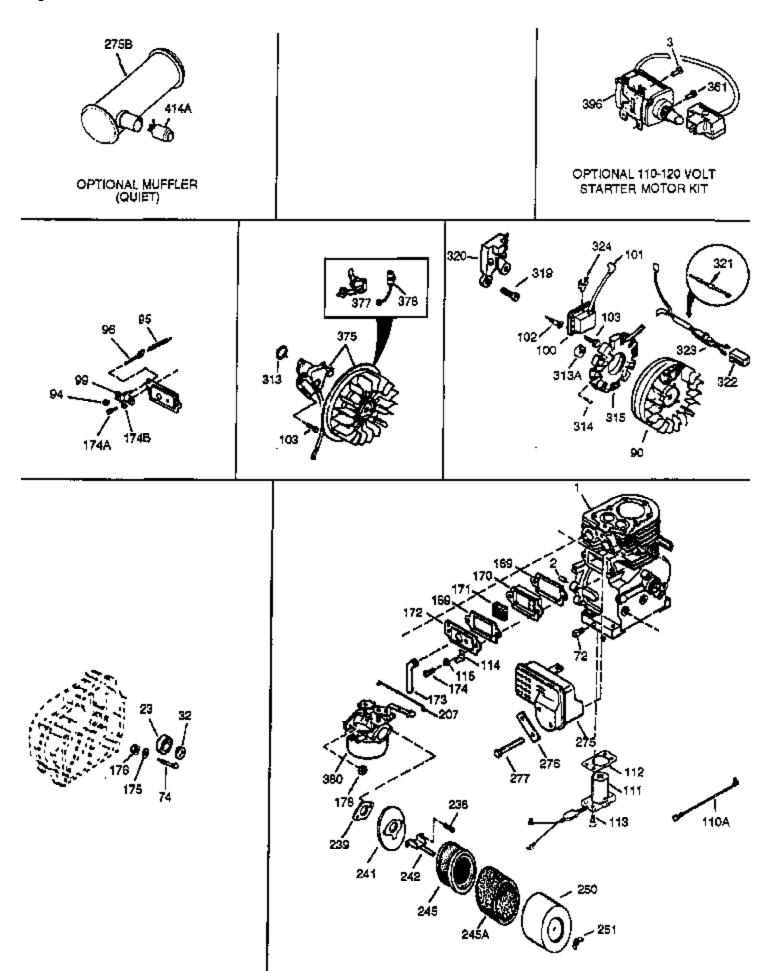

Ref #	Part Number Qt	y Description
1	34096C	Cylinder (CI liner)(3-5/16")(Incl.2,20,41,43,72 & 119)
2	27652	Pin, Dowel
3	650820	Screw, 1/4-20 x 1/2"
37A	30322	Nut & Lockwasher, 8-32
72	27642	Plug, Oil drain
101	610118	Cover, Spark plug
	650516	Screw, 1/4-20 x 1-1/8"
	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
	650713	Screw, 5/16-18 x 5/8"
	650737	Screw, 1/4-20 x 1/2" (Use as required)
	650738	Screw, 1/4-20 x 5/8 (Use as required)
	27896A	* Gasket, Breather
	28423	Body, Breather
	28424	•
	28425	Element, Breather
		Cover, Breather
	35350	Tube, Breather
	650128	Screw, 10-24 x 1/2"
	29752	Nut & Lockwasher, 1/4-28
	33878	Link, Governor lever-to-throttle
222A		Pop Rivet (Can be purchased locally)
275B	391026	Muffler (Incl. 284, 284A & 416) (This spark arrester
		mufflercan be used on any model.)
275	34185A	Muffler
	31588	Plate, Muffler locking
	35741	Plate, Muffler locking
	650729	Screw, 5/16-18 x 3-3/16" (Use as required)
	651002	Screw, 5/16-18 x 4-1/4" (Use as required)
	33662	Hub & Screen Assy.
	410144B	
301A	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5" I.D.)
0044	0000	
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
		required) (1.5" I.D.)
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required) (1.5" I.D.)
201 /	25255	Fuel Cap (Pad Plactic)/1.75" LD)
	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
	33876	Gasket, Stator (Used only on Std. poi nt ign.)
	34666	Cover, Carburetor
	31291	Plug, Cover
	34144	Decal, Primer
375	610982	Magneto (w/ring gear) (12 Volt, 3 Amp) NOTE: The
		complete magneto is not available as an assembly.
		Themagneto number is shown for reference purpose only.
		Order component parts individually, as shown in parts list.
		(Refer to Division 5, Section B, page 36 for breakdown or
		Fiche 18B, Grid F-3
377	30547A	Breaker Points (Use with Std. point i gn.)
	610767A	Condenser
	632110	Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
300	00 <u>2</u> 110	page 168 for breakdown or Fiche18B, Grid E-9)
	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
422	35824	Muffler Optional