



Ref #	Part Number Qty	Description
	34922A	Cylinder (CI liner)(3-5/16")(Incl.2,2 0 & 72)
	27652	Pin, Dowel
	30699C	Rod Assy., Governor (Incl. 15A & 15B)
	30700	Yoke, Governor
	650494	Screw, 6-40 x 5/16"
	33454	Governor Lever Assy.
	29916	Clamp, Governor lever
	650548	Screw, 8-32 x 5/16"
	32630	Seal, Oil
	35256A	Blower Housing Baffle (With electric starter knockout) (Use
20	30200A	, ,
		as required)
25	29536	Blower Housing Baffle (Without electric starter knockout)
		(Use as required)
26	650561	Screw, 1/4-20 x 5/8"
	33365B	Crankshaft (Incl. 108 & 109)
	29826	Screw, 10-32 x 3/4"
	29918	Lockwasher, #8 E.T.
	30322	Nut & Lockwasher, 8-32
	29216	Locknut, 10-32
	29642	·
	29042 34860A	Ring, Retaining Pinton Pin & Ping Set (Std.) (2.5/16")
		Piston, Pin & Ring Set (Std.)(3-5/16")
	34861A	Piston, Pin & Ring Set (.010" OS)
	34862A	Piston, Pin & Ring Set (.020" OS)
	34863	Piston & Pin Ass'y. (Std.)(3-5/16")(I ncl.43)
	34864	Piston & Pin Ass'y. (.010" OS) (Incl. 43)
	34865	Piston & Pin Ass'y. (.020" OS) (Incl. 43)
	34866A	Ring Set (Std.) (3-5/16" Bore)
	34867A	Ring Set (.010" OS)
	34868A	Ring Set (.020" OS)
	27888	Ring, Piston Pin retaining
45	32591C	Rod Assy., Connecting (Incl. 46, 47 & 49)
46	650662C	Bolt, Connecting rod (2 pieces)
47	650662C	Bolt, Connecting rod (2 pieces)
48	34034	Lifter, Valve
49	34242	Dipper, Oil
50	34143	Camshaft (MCR)
60	33273A	Extension, Blower housing
61	34126	Bracket, Grommet mounting
62	650760	Screw, 8-32 x 3/8"
	28545	Grommet, Plastic
	650128	Screw, 10-24 x 1/2"
	35262	* Gasket, Flange
	33367B	Cover, Cylinder (Incl. 71, 75 & 80)
	33368	Bushing, Crankshaft
	27642	Plug, Oil drain
	31950	Seal, Oil
	31845	Shaft, Mechanical governor
	30590A	Washer, Flat
	30591	Gear Assy., Governor (Incl. 81)
	30588A	Spool, Governor
		•
	29193	Ring, Retaining
	650833	Screw, 1/4-20 x 1-3/16 (Use as required)
	650832	Screw, 1/4-20 x 1-11/16" (Use as required)
	32589	Key, Flywheel
	650815	Washer, Belleville
	8116	Nut, Hex
101	610118	Cover, Spark plug


	Part Number	Qty	Description
	650516		Screw, 1/4-20 x 1-1/8"
108	29783		Pin, Crankshaft gear (Only serviceable when gear is pinned
			to crank.)
109	33245		Gear, Crankshaft
	34240		Ground Wire
119	34923A		* Gasket, Cylinder head
120	34030A		Head, Cylinder
125	27878A		Exhaust Valve (Std.) (Incl. 151)
125	27880A		Exhaust Valve (1/32" OS) (Incl. 151)
126	34035		Intake Valve (Std.) (Incl. 151)
126	34036		Intake Valve (1/32" OS) (Incl. 151)
127	650691		Washer (Do not use with No. 6021A scr ew.)
128	650690		Washer, Belleville (Use as required)
129	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
130	6021A		Screw, 5/16-18 x 1-1/2" (Use as required, but do notuse No.
			650691 washer.)
130	650711		Screw, 5/16-18 x 1-5/8 " (Use as required) (Can use 6021A
100	000/11		but discard 650691 washer.)
			,
	650694A		Screw, 5/16-18 x 2" (Use as required)
	650737		Screw, 1/4-20 x 1/2" (Use as required)
	650738		Screw, 1/4-20 x 5/8 (Use as required)
	650713		Screw, 5/16-18 x 5/8"
	650890		Washer, Internal Lock
	33636		Resistor Spark Plug
	33369		Bracket, Governor gear
	650836		Screw, 10-24 x 1/2"
	35862		Seal Assy., Intake valve
	27881		Spring, Valve
	32581		Cap, Lower valve spring
	27896A		* Gasket, Breather
	28423		Body, Breather
	28424		Element, Breather
	28425		Cover, Breather
	35350		Tube, Breather
	650128		Screw, 10-24 x 1/2"
	29752		Nut & Lockwasher, 1/4-28
	30088A		Screw, 1/4-28 x 1"
	34587 33263		Bracket, Choke * Gasket, Carburetor
	33877		Pipe, Intake
	34667		Link, Governor lever
	34664		Control Bracket (Incl.19,203, 204, 20 6 & 209)
	31342		Spring, Compression
	650549		Screw, 5-40 x 7/16"
	610973		Terminal Assy.
	33878		Link, Governor lever-to-throttle
	650821		Screw, 10-32 x 1/2"
	27793		Clip, Conduit
	28942		Screw, 10-32 x 3/8"
	34586		Rod, Choke
	35438		Knob, Control
222A			Pop Rivet (Can be purchased locally)
	28820		Screw, 10-32 x 1/2"
	650378		Screw, Torx T-30, 5/16-18 x 1-1/8"
	27915A		* Gasket, Intake pipe
	34822A		Blower Housing
200	· · · · · · · · · · · · · · · · · · ·		2.0.1.01.1.1.04.01119


Ref #	Part Number	Qtv	Description
	650788	,	Screw, 5/16-18 x 3/4"
	29747B		Screw, 5/16-24 x 21/32"
	33272B		Cover, Cylinder head
	33280A		Muffler
	31588		Plate, Muffler locking
	35741		Plate, Muffler locking
	650729		Screw, 5/16-18 x 3-3/16" (Use as requ ired)
	651002		Screw, 5/16-18 x 4-1/4" (Use as required)
	33662		Hub & Screen Assy.
	29752		Nut, 1/4-28
	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962		Fuel Line (Braided 32")(80cm)(As required)
	30705		Fuel Line (Braided 16")(40cm)(As requ ired)
	26460		Fuel Line Clamp (Use as required)
	32961		Valve, Fuel shut-off
	650665		Screw, 1/4-15 x 7/8"
300	34156A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
			builtwith different size fuel inlet openings. Tanks with the
			1-3/16" I.D. opening use fuel cap 34210. Tanks with the
			1-1/2" I.D. opening use fuel cap 35355.
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
30 <i></i> t			I.D.)
			,
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required) (1.5" I.D.)
3∩1∆	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
30 IA	3-210		as required) (1.5" I.D.)
			as required) (1.5 1.5.)
301A	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
305	33893A		Oil Fill Tube
307	33590		"O" Ring
310	34011A		Dipstick (Incl. 307)
336	650765		Screw, 10-32 x 1/2"
337	34666		Cover, Carburetor
	28942		Screw, Sems 10-32 x 3/8"
338A	31291		Plug, Cover
	34154		Plate, Upper fuel tank mtg.
	34155		Bracket, Lower fuel tank mtg.
	650561		Screw, 1/4-20 x 5/8"
	34141		Guard, Starter
	32576		Seal, Snow Guard
	30063		Screw, Torx T-30, 1/4-20 x 1/2"
	650767		Screw, 8-32 x 27/64"
	34589		Decal, Choke
	34686		Decal, Name
	34144		Decal, Primer
	34346		· · · · · · · · · · · · · · · · · · ·
	35274		Decal Instruction
			Decal, Instruction
	631021		Inlet Needle, Seat & Clip Assy.
380	632110		Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
			page 168 for breakdown or Fiche18B, Grid E-9)
395	35763A		Electric Starter Motor (12 Volt) (Refer to service number
			stamped on end cap of motor, or on decal, for identification.
			Refer to Division 5, Section D for breakdown or Fiche 18B,
			Grid G-6)
. = =	000700		,
	33279G		* Gasket Set (Incl. items marked *)
420	730225		SAE 30 4-Cycle Engine Oil (Quart)


Ref # Part Number	Qty Description
421 730226	SAE 5W30 4-Cycle Engine Oil (Quart)
422 35824	Muffler Optional

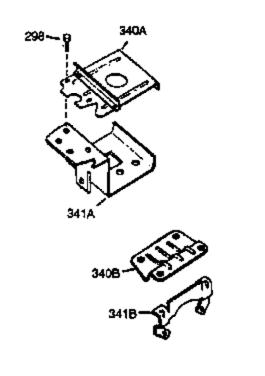


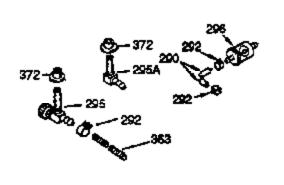


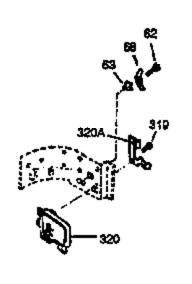


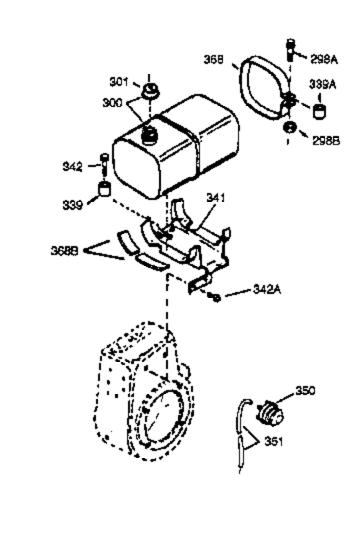

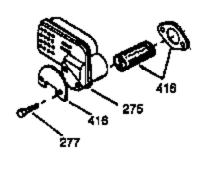


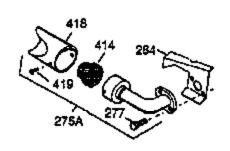






Ref #	Part Number	Qty	Description
37A	30322	•	Nut & Lockwasher, 8-32
62	650760		Screw, 8-32 x 3/8"
63	28545		Grommet, Plastic
129	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131	650737		Screw, 1/4-20 x 1/2" (Use as required)
	650738		Screw, 1/4-20 x 5/8 (Use as required)
	650713		Screw, 5/16-18 x 5/8"
222A			Pop Rivet (Can be purchased locally)
	35865		Gasket, Exhaust
	33280A		Muffler
	650729		Screw, 5/16-18 x 3-3/16" (Use as requ ired)
	651002		Screw, 5/16-18 x 4-1/4" (Use as requi red)
	33662		Hub & Screen Assy.
	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962		Fuel Line (Braided 32")(80cm)(As required)
	26460		Fuel Line Clamp (Use as required)
	32961		Valve, Fuel shut-off
	650665		Screw, 1/4-15 x 7/8"
	34156A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
000	04100/1		builtwith different size fuel inlet openings. Tanks with the
			1-3/16" I.D. opening use fuel cap 34210. Tanks with the
			1-1/2" I.D. opening use fuel cap 35355.
	=		1 0 1
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
			I.D.)
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required) (1.5" I.D.)
204.4	0.404.0		• • • • • • • • • • • • • • • • • • • •
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
			as required) (1.5" I.D.)
301A	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	34666		Cover, Carburetor
338A	31291		Plug, Cover
	34155		Bracket, Lower fuel tank mtg.
342	650561		Screw, 1/4-20 x 5/8"
	570682		Primer Assy.
	32180C		Line, Primer
	34144		Decal, Primer
	33323		Opt.Muffler Screen (Mini-Bike applica tion)
	730130		Kit, Exhaust adapter (Incl. 274 & 277)
	33700		Cover & Tube, Muffler (use as require d)
	650578		Screw, 8-18 x 3/8" (use as required)
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
	35824		Muffler Optional
<i>:</i>			

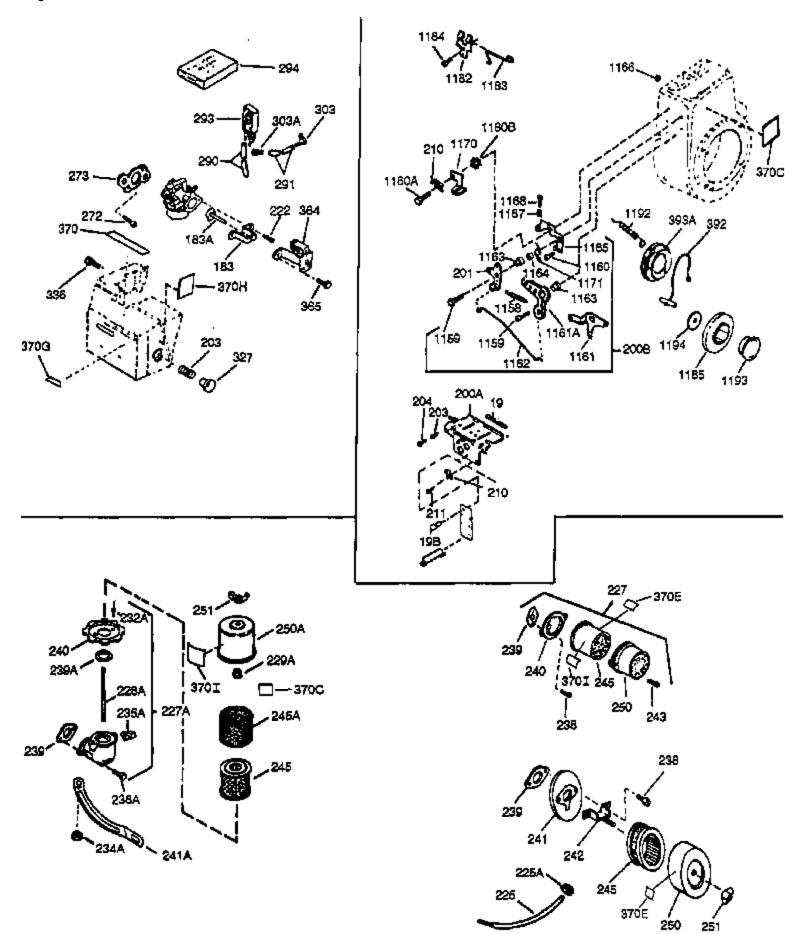

Ref #	Part Number Qty	Description
37A	30322	Nut & Lockwasher, 8-32
129	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131	650737	Screw, 1/4-20 x 1/2" (Use as required)
131	650738	Screw, 1/4-20 x 5/8 (Use as required)
131A	650713	Screw, 5/16-18 x 5/8"
183	34587	Bracket, Choke
200B	730152	Control Bracket (Incl.1158-1171)(As r eq.)
203	31342	Spring, Compression
204	650549	Screw, 5-40 x 7/16"
210	27793	Clip, Conduit
211	28942	Screw, 10-32 x 3/8"
222	28820	Screw, 10-32 x 1/2"
222A		Pop Rivet (Can be purchased locally)
227	730127	Air Cleaner Ass'y. (Incl. 238, 239, 242, 246, 250) (Use as
		required)
285A	33662	Hub & Screen Assy.
290	29774	Fuel Line (Braided 8-1/4")(21cm)(As r equired)
290	30962	Fuel Line (Braided 32")(80cm)(As required)
291	30705	Fuel Line (Braided 16")(40cm)(As required)
293	33715	Impulse Fuel Pump NOTE: 34385 and 33715 (WIP)pumps
		are replaced by 35813 and 35800 (WIP) pumps. The 33010
		(3000 series) repair kit is still available. The 35791 repair kit
		is used with the 35813 and 35800 fuel pumps.
294	35791	Fuel Pump Repair Kit NOTE: 34385 and 33715 (WIP)pumps
		are replaced by 35813 and 35800 (WIP) pumps. The 33010
		(3000 series) repair kit is still available. The 35791 repair kit
		is used with the 35813 and 35800 fuel pumps.
201 /	410144B	• •
30 IA	4101 44 6	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
		I.D.)
301A	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
		required) (1.5" I.D.)
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required) (1.5" I.D.)
204 A	25255	
	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
	32958	Fitting, Fuel
	650765	Screw, 10-32 x 1/2"
	34666	Cover, Carburetor
	31291	Plug, Cover
	33377	Bracket, Carburetor cover mtg.
	650767	Screw, 8-32 x 27/64"
	34346	Decal, Instruction
	35274 34589	Decal, Instruction
		Decal, Choke
	34144 34414	Decal, Warning
	34414 730226	Decal, Warning
	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
	35824 30312	Muffler Optional
	30312	Screw, 10-32 x 1/2"
	28820	Screw, 10-32 x 1/2"
	27070	Lockwasher
1183	33816	Hub & Screen Assy.

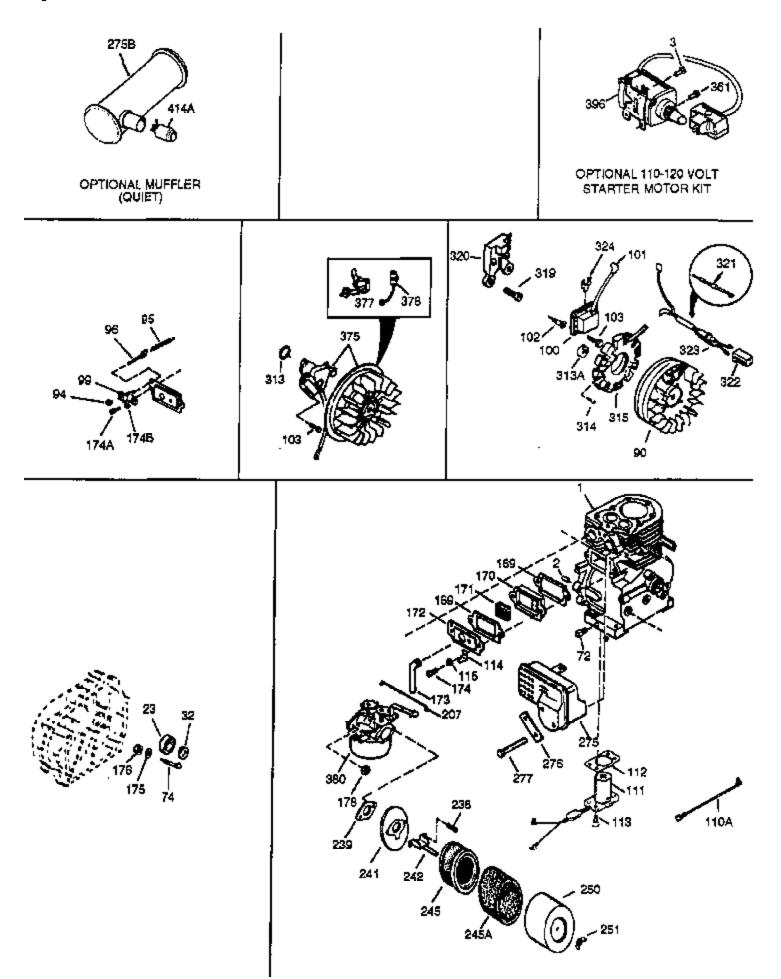

Ref #	Part Number Q	ty Description
1	34922A	Cylinder (CI liner)(3-5/16")(Incl.2,2 0 & 72)
2	27652	Pin, Dowel
37A	30322	Nut & Lockwasher, 8-32
72	27642	Plug, Oil drain
101	610118	Cover, Spark plug
103	650516	Screw, 1/4-20 x 1-1/8"
129	650727	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131A	650713	Screw, 5/16-18 x 5/8"
131	650737	Screw, 1/4-20 x 1/2" (Use as required)
131	650738	Screw, 1/4-20 x 5/8 (Use as required)
169	27896A	* Gasket, Breather
170	28423	Body, Breather
	28424	Element, Breather
	28425	Cover, Breather
	35350	Tube, Breather
	650128	Screw, 10-24 x 1/2"
	29752	Nut & Lockwasher, 1/4-28
	33878	Link, Governor lever-to-throttle
222A		Pop Rivet (Can be purchased locally)
275B	391026	Muffler (Incl. 284, 284A & 416) (This spark arrester
		mufflercan be used on any model.)
275	33280A	Muffler
	31588	Plate, Muffler locking
	35741	Plate, Muffler locking
	650729	Screw, 5/16-18 x 3-3/16" (Use as requ ired)
	651002	Screw, 5/16-18 x 4-1/4" (Use as required)
	33662	Hub & Screen Assy.
	410144B	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
		I.D.)
301Δ	33032	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
301A	33002	required) (1.5" I.D.)
301A	34210	Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		as required) (1.5" I.D.)
301A	35355	Fuel Cap (Red Plastic)(1.75" I.D.)
	33876	Gasket, Stator (Used only on Std. poi nt ign.)
	34666	Cover, Carburetor
	31291	Plug, Cover
	30063	Screw, Torx T-30, 1/4-20 x 1/2"
	34144	Decal, Primer
	610982	Magneto (w/ring gear) (12 Volt, 3 Amp) NOTE: The
		complete magneto is not available as an assembly.
		Themagneto number is shown for reference purpose only.
		Order component parts individually, as shown in parts list.
		(Refer to Division 5, Section B, page 36 for breakdown or
		Fiche 18B, Grid F-3
077	205.47.1	
	30547A 610767A	Breaker Points (Use with Std. point i gn.)
	610767A	Condenser Carburator (Incl. 194.8, 270) (Refer to Division 5, Section A
300	632110	Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A, page 168 for breakdown or Fiche18B, Grid E-9)
		,
	730226	SAE 5W30 4-Cycle Engine Oil (Quart)
422	35824	Muffler Optional