




Pof #	Part Number Qty	Description
	34922A	Cylinder (CI liner)(3-5/16")(Incl.2,2 0 & 72)
	27652	Pin, Dowel
	650494	Screw, 6-40 x 5/16"
	30699C	
		Rod Assy., Governor (Incl. 15A & 15B)
	30700	Yoke, Governor
	33454	Governor Lever Assy.
	29916	Clamp, Governor lever
	650548	Screw, 8-32 x 5/16"
	32630	Seal, Oil
25	29536	Blower Housing Baffle (Without electric starter knockout)
		(Use as required)
25	35256A	Blower Housing Baffle (With electric starter knockout) (Use
25	00200/ (as required)
		• ,
	650561	Screw, 1/4-20 x 5/8"
30	33720B	Crankshaft (Incl. 108 & 109)
35	29826	Screw, 10-32 x 3/4"
36	29918	Lockwasher, #8 E.T.
37A	30322	Nut & Lockwasher, 8-32
	29216	Locknut, 10-32
	29642	Ring, Retaining
	34860A	Piston, Pin & Ring Set (Std.)(3-5/16")
	34861A	Piston, Pin & Ring Set (0.10" OS)
	34862A	Piston, Pin & Ring Set (.020" OS)
	34863	Piston & Pin Ass'y. (Std.)(3-5/16")(I ncl.43)
	34864	Piston & Pin Ass'y. (.010" OS) (Incl. 43)
	34865	Piston & Pin Ass'y. (.020" OS) (Incl. 43)
	34866A	Ring Set (Std.) (3-5/16" Bore)
	34867A	Ring Set (.010" OS)
42	34868A	Ring Set (.020" OS)
43	27888	Ring, Piston Pin retaining
45	32591C	Rod Assy., Connecting (Incl. 46, 47 & 49)
46	650662C	Bolt, Connecting rod (2 pieces)
47	650662C	Bolt, Connecting rod (2 pieces)
	34034	Lifter, Valve
	34242	Dipper, Oil
	34143	Camshaft (MCR)
	33273A	Extension, Blower housing
	650128	Screw, 10-24 x 1/2"
	35262	* Gasket, Flange
	33626B	Cyl.Cover (Incl.71,75,80,179,180,220, 221)
	27642	Plug, Oil drain
	33625	Seal, Oil
	31845	Shaft, Mechanical governor
	30590A	Washer, Flat
	30591	Gear Assy., Governor (Incl. 81)
83	30588A	Spool, Governor
84	29193	Ring, Retaining
86	650833	Screw, 1/4-20 x 1-3/16 (Use as requir ed)
	650832	Screw, 1/4-20 x 1-11/16" (Use as required)
	32589	Key, Flywheel
	650815	Washer, Belleville
	8116	Nut, Hex
	610118	·
		Cover, Spark plug
	650516	Screw, 1/4-20 x 1-1/8" Pip. Cropkobaft goar (Only continued when goar is pipped
108	29783	Pin, Crankshaft gear (Only serviceable when gear is pinned
		to crank.)


	Part Number Qty	/ Description
109	33245	Gear, Crankshaft
119	34923A	* Gasket, Cylinder head
120	34030A	Head, Cylinder
125	27878A	Exhaust Valve (Std.) (Incl. 151)
	27880A	Exhaust Valve (1/32" OS) (Incl. 151)
	34035	Intake Valve (Std.) (Incl. 151)
	34036	Intake Valve (1/32" OS) (Incl. 151)
	650691	Washer (Do not use with No. 6021A scr ew.)
	650690	
		Washer, Belleville (Use as required)
	650727	Screw, 5/16-18 x 1-3/4 (Use as required)
130	6021A	Screw, 5/16-18 x 1-1/2" (Use as required, but do notuse No.
		650691 washer.)
130	650711	Screw, 5/16-18 x 1-5/8 " (Use as required) (Can use 6021A
		but discard 650691 washer.)
		,
	650694A	Screw, 5/16-18 x 2" (Use as required)
	650737	Screw, 1/4-20 x 1/2" (Use as required)
131	650738	Screw, 1/4-20 x 5/8 (Use as required)
131A	650713	Screw, 5/16-18 x 5/8"
133	650890	Washer, Internal Lock
135	33636	Resistor Spark Plug
139	33369	Bracket, Governor gear
	650836	Screw, 10-24 x 1/2"
	35862	Seal Assy., Intake valve
	27881	Spring, Valve
	32581	Cap, Lower valve spring
	27896A	* Gasket, Breather
	28423	Body, Breather
	28424	
		Element, Breather
	28425	Cover, Breather
	35350	Tube, Breather
	650128	Screw, 10-24 x 1/2"
	29752	Nut & Lockwasher, 1/4-28
	30088A	Screw, 1/4-28 x 1"
	33263	* Gasket, Carburetor
	34707	Pipe, Intake
	34661	Link, Governor lever
200	34664	Control Bracket (Incl.19,203, 204, 20 6 & 209)
203	31342	Spring, Compression
204	650549	Screw, 5-40 x 7/16"
207	33878	Link, Governor lever-to-throttle
209	650821	Screw, 10-32 x 1/2"
210	27793	Clip, Conduit
	28942	Screw, 10-32 x 3/8"
222A		Pop Rivet (Can be purchased locally)
	650378	Screw, Torx T-30, 5/16-18 x 1-1/8"
	27915A	* Gasket, Intake pipe
	33269A	Cover, Air cleaner
	33375D	Blower Housing (For electric starter)
	650788	Screw, 5/16-18 x 3/4"
		·
	29747B	Screw, 5/16-24 x 21/32"
	33272B	Cover, Cylinder head
	34185A	Muffler
	31588	Plate, Muffler locking
	35741	Plate, Muffler locking
	650729	Screw, 5/16-18 x 3-3/16" (Use as requ ired)
	651002	Screw, 5/16-18 x 4-1/4" (Use as requi red)
285A	33662	Hub & Screen Assy.


Ref#	Part Number	Qty	Description
	29752		Nut, 1/4-28
	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962		Fuel Line (Braided 32")(80cm)(As required)
291	30705		Fuel Line (Braided 16")(40cm)(As required)
	26460		Fuel Line Clamp (Use as required)
298	650665		Screw, 1/4-15 x 7/8"
300	34156A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were builtwith different size fuel inlet openings. Tanks with the 1-3/16" I.D. opening use fuel cap 34210. Tanks with the 1-1/2" I.D. opening use fuel cap 35355.
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5" I.D.)
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.)
301A	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	33893A		Oil Fill Tube
	33590		"O" Ring
310	34011A		Dipstick (Incl. 307)
338A	31291		Plug, Cover
340	34154		Plate, Upper fuel tank mtg.
341	34155		Bracket, Lower fuel tank mtg.
	650561		Screw, 1/4-20 x 5/8"
	30063		Screw, Torx T-30, 1/4-20 x 1/2"
	34346		Decal, Instruction
	35274		Decal, Instruction
	34686		Decal, Name
	631021		Inlet Needle, Seat & Clip Assy.
380	632242		Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A, page A4-4 for breakdown or Fiche 18B, Grid D-3)
395	35763A		Electric Starter Motor (12 Volt) (Refer to service number stamped on end cap of motor, or on decal, for identification. Refer to Division 5, Section D for breakdown or Fiche 18B, Grid G-6)
400	33279G		* Gasket Set (Incl. items marked *)
	730225		SAE 30 4-Cycle Engine Oil (Quart)
421	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
422	35824		Muffler Optional

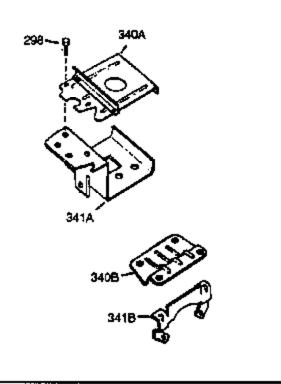


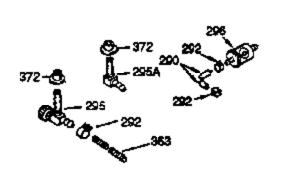


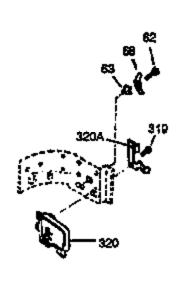

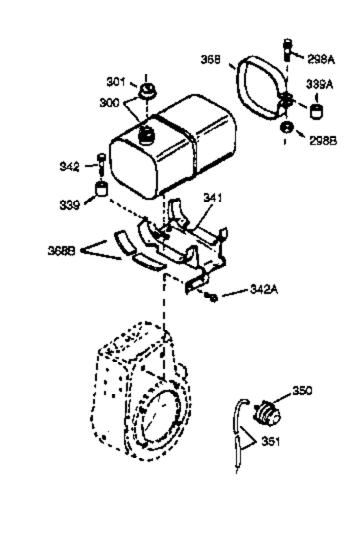

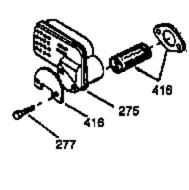


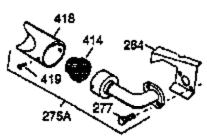





Ref #	Part Number (Qty [Description
37A	30322	N	Nut & Lockwasher, 8-32
129	650727	5	Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131A	650713	5	Screw, 5/16-18 x 5/8"
131	650737	5	Screw, 1/4-20 x 1/2" (Use as required)
131	650738	5	Screw, 1/4-20 x 5/8 (Use as required)
222A		F	Pop Rivet (Can be purchased locally)
250B	33269A		Cover, Air cleaner
274	35865		Gasket, Exhaust
275	34185A		Muffler
277	650729	5	Screw, 5/16-18 x 3-3/16" (Use as requ ired)
277	651002	5	Screw, 5/16-18 x 4-1/4" (Use as requi red)
285A	33662	H	Hub & Screen Assy.
290	29774	F	Fuel Line (Braided 8-1/4")(21cm)(As r equired)
290	30962	F	Fuel Line (Braided 32")(80cm)(As requ ired)
292	26460	F	Fuel Line Clamp (Use as required)
298	650665	5	Screw, 1/4-15 x 7/8"
300	34156A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
		b	ouiltwith different size fuel inlet openings. Tanks with the
			1-3/16" I.D. opening use fuel cap 34210. Tanks with the
		1	1-1/2" I.D. opening use fuel cap 35355.
301A	410144B	F	Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
			i.D.)
201Λ	33032		
30 IA	33032	Г r	Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
		a	as required) (1.5" I.D.)
301A	35355	F	Fuel Cap (Red Plastic)(1.75" I.D.)
319	28820		Screw, 10-32 x 1/2"
320	610938	F	Regulator (7 Amp)
320A	32765	(Clamp, Blower housing extension
338A	31291		Plug, Cover
341	34155	Е	Bracket, Lower fuel tank mtg.
342	650561	5	Screw, 1/4-20 x 5/8"
414	33323		Opt.Muffler Screen (Mini-Bike applica tion)
415	730130		Kit, Exhaust adapter (Incl. 274 & 277)
	33700		Cover & Tube, Muffler (use as require d)
	650578		Screw, 8-18 x 3/8" (use as required)
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
	35824		Muffler Optional (
			·

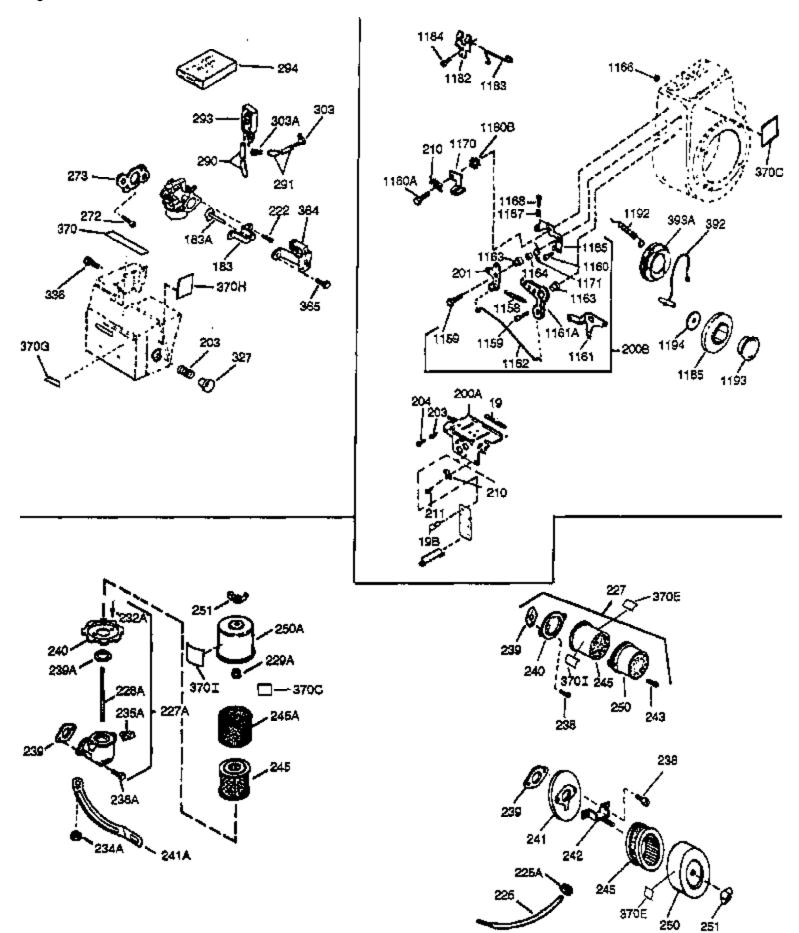

Ref #	Part Number	Qty	Description
129 131 131A 200B 203 204 210 211	30322 650727 650737 650738 650713 730152 31342 650549 27793 28942		Nut & Lockwasher, 8-32 Screw, 5/16-18 x 1-3/4 (Use as requir ed) Screw, 1/4-20 x 1/2" (Use as required) Screw, 1/4-20 x 5/8 (Use as required) Screw, 5/16-18 x 5/8" Control Bracket (Incl.1158-1171)(As r eq.) Spring, Compression Screw, 5-40 x 7/16" Clip, Conduit Screw, 10-32 x 3/8" Pop Rivet (Can be purchased locally) Air Cleaner Ass'y. (Incl. 238, 239, 242, 246, 250) (Use as required)
239 241 242 245 250B 251 285A 290 290 291	28820 27272A 33266 33267 33268 33269A 650513 33662 29774 30962 30705 33715		Screw, 10-32 x 1/2" * Gasket, Air cleaner Bracket, Air cleaner Bracket, Air cleaner Element, Air cleaner Cover, Air cleaner Nut, Wing 1/4-20 Hub & Screen Assy. Fuel Line (Braided 8-1/4")(21cm)(As r equired) Fuel Line (Braided 32")(80cm)(As requ ired) Fuel Line (Braided 16")(40cm)(As requ ired) Fuel Line (Braided 16")(40cm)(As requ ired) Impulse Fuel Pump NOTE: 34385 and 33715 (WIP)pumps are replaced by 35813 and 35800 (WIP) pumps. The 33010 (3000 series) repair kit is still available. The 35791 repair kit is used with the 35813 and 35800 fuel pumps.
294	35791		Fuel Pump Repair Kit NOTE: 34385 and 33715 (WIP)pumps are replaced by 35813 and 35800 (WIP) pumps. The 33010 (3000 series) repair kit is still available. The 35791 repair kit is used with the 35813 and 35800 fuel pumps.
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5" I.D.)
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.)
303 338A 370 370 421 422 1159 1160 1160	35355 32958 31291 34346 35274 730226 35824 30312 28820 27070 33816		Fuel Cap (Red Plastic)(1.75" I.D.) Fitting, Fuel Plug, Cover Decal, Instruction Decal, Instruction SAE 5W30 4-Cycle Engine Oil (Quart) Muffler Optional Screw, 10-32 x 1/2" Screw, 10-32 x 1/2" Lockwasher Hub & Screen Assy.



Ref #	Part Number	Qty	Description
1	34922A		Cylinder (CI liner)(3-5/16")(Incl.2,2 0 & 72)
2	27652		Pin, Dowel
	33627		Bearing, Ball
	33628		Washer, Thrust
	30322		Nut & Lockwasher, 8-32
	27642		Plug, Oil drain
	31855		
			Retainer, Bearing
	610118		Cover, Spark plug
	650516		Screw, 1/4-20 x 1-1/8"
	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
	650713		Screw, 5/16-18 x 5/8"
131	650737		Screw, 1/4-20 x 1/2" (Use as required)
131	650738		Screw, 1/4-20 x 5/8 (Use as required)
169	27896A		* Gasket, Breather
170	28423		Body, Breather
	28424		Element, Breather
	28425		Cover, Breather
	35350		Tube, Breather
	650128		
			Screw, 10-24 x 1/2"
	650778		Lockwasher
	650580		Nut, Lock
	29752		Nut & Lockwasher, 1/4-28
	33878		Link, Governor lever-to-throttle
222A			Pop Rivet (Can be purchased locally)
238	28820		Screw, 10-32 x 1/2"
239	27272A		* Gasket, Air cleaner
241	33266		Bracket, Air cleaner
	33267		Bracket, Air cleaner
	33268		Element, Air cleaner
	33269A		Cover, Air cleaner
	650513		Nut, Wing 1/4-20
	391026		Muffler (Incl. 284, 284A & 416) (This spark arrester
2/30	391020		, , , , , , , , , , , , , , , , , , , ,
			mufflercan be used on any model.)
275	34185A		Muffler
	31588		Plate, Muffler locking
	35741		Plate, Muffler locking
	650729		Screw, 5/16-18 x 3-3/16" (Use as required)
	651002		Screw, 5/16-18 x 4-1/4" (Use as requi red)
	33662		Hub & Screen Assy.
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
			I.D.)
301Δ	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
30 IA	33032		
			required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
55	5.2.0		as required) (1.5" I.D.)
			. , ,
	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
313A	33876		Gasket, Stator (Used only on Std. poi nt ign.)
319	28820		Screw, 10-32 x 1/2"
	610938		Regulator (7 Amp)
	31291		Plug, Cover
	30063		Screw, Torx T-30, 1/4-20 x 1/2"
301	3000		OGGW, TOTA 1-30, 1/4-20 A 1/2

Ref #	Part Number	Qty	Description
375	610979		Magneto (w/ring gear) (12 Volt, 7 Amp) NOTE: The complete magneto is not available as an assembly. Themagneto number is shown for reference purpose only. Order component parts individually, as shown in parts list. (Refer to Division 5, Section B, page 36 for breakdown or Fiche 18B, Grid F-3
378	30547A 610767A 632242		Breaker Points (Use with Std. point i gn.) Condenser Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A, page A4-4 for breakdown or Fiche 18B, Grid D-3)
	730226 35824		SAE 5W30 4-Cycle Engine Oil (Quart) Muffler Optional