




		ty Description
	35371	Cylinder (CI liner)(3-5/16")(Incl.2,2 0 & 72)
	27652	Pin, Dowel
15	30699C	Rod Assy., Governor (Incl. 15A & 15B)
15B	650494	Screw, 6-40 x 5/16"
15A	30700	Yoke, Governor
	33454	Governor Lever Assy.
	29916	Clamp, Governor lever
	650548	Screw, 8-32 x 5/16"
	35319	Seal, Oil
		·
23	35256A	Blower Housing Baffle (With electric starter knockout) (Use
		as required)
25	35326	Baffle, Blower housing
	29536	Blower Housing Baffle (Without electric starter knockout)
20	20000	(Use as required)
		(OSC do required)
26	650561	Screw, 1/4-20 x 5/8"
30	35441A	Crankshaft
35	29826	Screw, 10-32 x 3/4"
36	29918	Lockwasher, #8 E.T.
	29216	Locknut, 10-32
	30322	Nut & Lockwasher, 8-32
	29642	Ring, Retaining
	34860A	Piston, Pin & Ring Set (Std.)(3-5/16")
	34861A	Piston, Pin & Ring Set (3.01.)(3-3/10)
	34862A	Piston, Pin & Ring Set (.020" OS)
	34863	Piston & Pin Ass'y. (Std.)(3-5/16")(I ncl.43)
	34864	Piston & Pin Ass'y. (.010" OS) (Incl. 43)
	34865	Piston & Pin Ass'y. (.020" OS) (Incl. 43)
	34866A	Ring Set (Std.) (3-5/16" Bore)
42	34867A	Ring Set (.010" OS)
42	34868A	Ring Set (.020" OS)
43	27888	Ring, Piston Pin retaining
45	35373A	Rod Assy., Connecting (Incl. 46, 47 & 49)
46	650908	Bolt, Connecting rod
	650882	Connecting Rod Bolt (2 pcs. on early Specs.)
	34034	Lifter, Valve
	35374	Dipper, Oil
	35375	Camshaft (MCR)
	33273A	Extension, Blower housing
	650802	Screw, 1/4-20 x 5/8"
	650128 35262	Screw, 10-24 x 1/2" * Cooket Florge
		* Gasket, Flange
	35376	Cover, Cylinder (Incl. 71, 75 & 80)
	35377	Bushing, Crankshaft
	27642	Plug, Oil drain
	35319	Seal, Oil
	31845	Shaft, Mechanical governor
81	30590A	Washer, Flat
82	35378	Gear Assy., Governor (Incl. 81)
83	30588A	Spool, Governor
	29193	Ring, Retaining
	650833	Screw, 1/4-20 x 1-3/16 (Use as requir ed)
	650832	Screw, 1/4-20 x 1-11/16" (Use as required)
	32589	Key, Flywheel
	611091	Flywheel (w/ring gear)
		• • • • • • • • • • • • • • • • • • • •
	650880 650881	Washer, Lock
	650881	Nut, 5/8-18
100	35135	Solid State Assy.


D-1 !!	Det Northean Of	Description
		Description
	650872	Stud, Solid state mounting
	650814	Screw, Torx T-15, 10-24 x 1"
108	29783	Pin, Crankshaft gear (Only serviceable when gear is pinned
		to crank.)
109	33245	Gear, Crankshaft
	34923A	* Gasket, Cylinder head
	34030A	Head, Cylinder
	27878A	Exhaust Valve (Std.) (Incl. 151)
	27880A	Exhaust Valve (1/32" OS) (Incl. 151)
	34035	Intake Valve (Std.) (Incl. 151)
	34036	Intake Valve (1/32" OS) (Incl. 151)
	650691	Washer (Do not use with No. 6021A scr ew.)
	650690	Washer, Belleville (Use as required)
	650727	Screw, 5/16-18 x 1-3/4 (Use as required)
	6021A	
130	0021A	Screw, 5/16-18 x 1-1/2" (Use as required, but do notuse No.
		650691 washer.)
130	650711	Screw, 5/16-18 x 1-5/8 " (Use as required) (Can use 6021A
		but discard 650691 washer.)
130	650694A	Screw, 5/16-18 x 2" (Use as required)
	650713	Screw, 5/16-18 x 5/8"
	650737	Screw, 1/4-20 x 1/2" (Use as required)
	650738	Screw, 1/4-20 x 1/2 (Ose as required) Screw, 1/4-20 x 5/8 (Use as required)
	650890	Washer, Internal Lock
	30747	·
		Clip, Spark plug shorting
	33636	Resistor Spark Plug
	33369	Bracket, Governor gear
	650836	Screw, 10-24 x 1/2"
	35862	Seal Assy., Intake valve
	27881	Spring, Valve
	32581	Cap, Lower valve spring
	27896A	* Gasket, Breather
	28423	Body, Breather
	28424	Element, Breather
	28425	Cover, Breather
	35350	Tube, Breather
	650128	Screw, 10-24 x 1/2"
	29752	Nut & Lockwasher, 1/4-28
	30088A	Screw, 1/4-28 x 1"
	33263	* Gasket, Carburetor
	34707	Pipe, Intake
	33878	Link, Governor lever-to-throttle
222A		Pop Rivet (Can be purchased locally)
	650378	Screw, Torx T-30, 5/16-18 x 1-1/8"
	27915A	* Gasket, Intake pipe
	33269A	Cover, Air cleaner
260	33375D	Blower Housing (For electric starter)
	650788	Screw, 5/16-18 x 3/4"
262	29747B	Screw, 5/16-24 x 21/32"
265	33272B	Cover, Cylinder head
275	33280A	Muffler
276	31588	Plate, Muffler locking
	35741	Plate, Muffler locking
	650729	Screw, 5/16-18 x 3-3/16" (Use as requ ired)
	651002	Screw, 5/16-18 x 4-1/4" (Use as requi red)
	35287	Cup, Starter
	35446	Screen, Starter
_50		


Ref #	Part Number	Qty	Description
287	29752		Nut, 1/4-28
290	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962		Fuel Line (Braided 32")(80cm)(As required)
	30705		Fuel Line (Braided 16")(40cm)(As required)
	26460		Fuel Line Clamp (Use as required)
	650665		Screw, 1/4-15 x 7/8"
	34186A		
300	34100A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
			builtwith different size fuel inlet openings. Tanks with the
			1-3/16" I.D. opening use fuel cap 34210. Tanks with the
			1-1/2" I.D. opening use fuel cap 35355.
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
			I.D.)
0044	0000		·
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
00 17 1	3.2.10		as required) (1.5" I.D.)
			. , , ,
	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
306	29673		* Gasket, Oil filler
310B	35941		Dipstick (Incl. 306)
310	31297		Dipstick (Incl. 307)
327	35392		Plug, Starter
338A	31291		Plug, Cover
	34154		Plate, Upper fuel tank mtg.
	34155		Bracket, Lower fuel tank mtg.
	650561		Screw, 1/4-20 x 5/8"
	30063		Screw, Torx T-30, 1/4-20 x 1/2"
	34346		Decal, Instruction
	35274		Decal, Instruction
	34686		Decal, Name
	631021		Inlet Needle, Seat & Clip Assy.
300	632242		Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A,
			page A4-4 for breakdown or Fiche 18B, Grid D-3)
390	590633		Rewind Starter (Refer to Division 5, Section C, page 30 for
			breakdown or Fiche 18B, Grid G-1)
			· · · · · · · · · · · · · · · · · · ·
395	35763A		Electric Starter Motor (12 Volt) (Refer to service number
			stamped on end cap of motor, or on decal, for identification.
			Refer to Division 5, Section D for breakdown or Fiche 18B,
			Grid G-6)
<i>/</i> /∩∩	33279G		* Gasket Set (Incl. items marked *)
	730225		SAE 30 4-Cycle Engine Oil (Quart)
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
422	35824		Muffler Optional

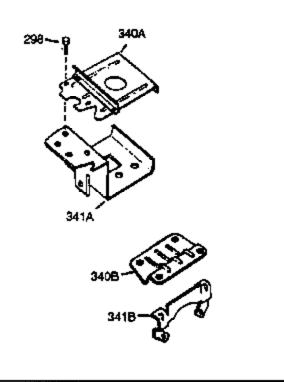


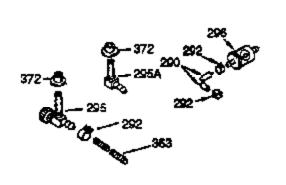


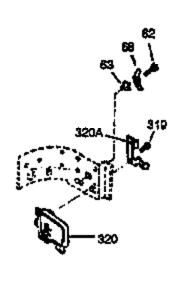


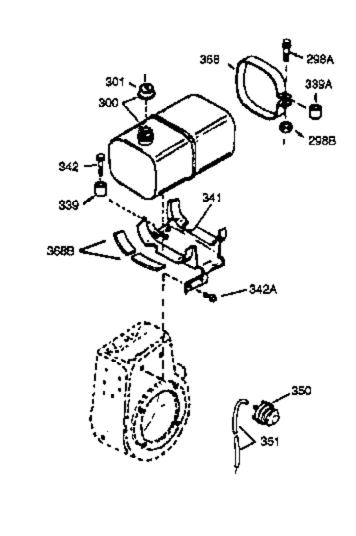

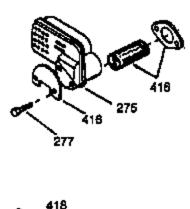


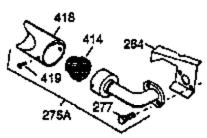

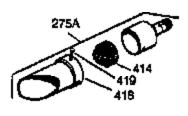

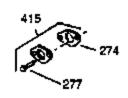

Ref #	Part Number	Qty	Description
37A	30322		Nut & Lockwasher, 8-32
64	650802		Screw, 1/4-20 x 5/8"
129	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
131A	650713		Screw, 5/16-18 x 5/8"
131	650737		Screw, 1/4-20 x 1/2" (Use as required)
131	650738		Screw, 1/4-20 x 5/8 (Use as required)
222A			Pop Rivet (Can be purchased locally)
250B	33269A		Cover, Air cleaner
274	35865		Gasket, Exhaust
275	33280A		Muffler
277	650729		Screw, 5/16-18 x 3-3/16" (Use as requ ired)
277	651002		Screw, 5/16-18 x 4-1/4" (Use as requi red)
290	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
	30962		Fuel Line (Braided 32")(80cm)(As required)
	26460		Fuel Line Clamp (Use as required)
	650665		Screw, 1/4-15 x 7/8"
300	34186A		Fuel Tank (Incl. 292 & 301) NOTE: These tanks were
			builtwith different size fuel inlet openings. Tanks with the
			1-3/16" I.D. opening use fuel cap 34210. Tanks with the
			1-1/2" I.D. opening use fuel cap 35355.
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
			I.D.)
201Λ	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
301A	33032		required) (1.5" I.D.)
			• • • • • • • • • • • • • • • • • • • •
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
			as required) (1.5" I.D.)
301A	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	29673		* Gasket, Oil filler
	35941		Dipstick (Incl. 306)
	31291		Plug, Cover
	34155		Bracket, Lower fuel tank mtg.
	650561		Screw, 1/4-20 x 5/8"
	33323		Opt.Muffler Screen (Mini-Bike applica tion)
	730130		Kit, Exhaust adapter (Incl. 274 & 277)
	33700		Cover & Tube, Muffler (use as require d)
	650578		Screw, 8-18 x 3/8" (use as required)
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
	35824		Muffler Optional
			•

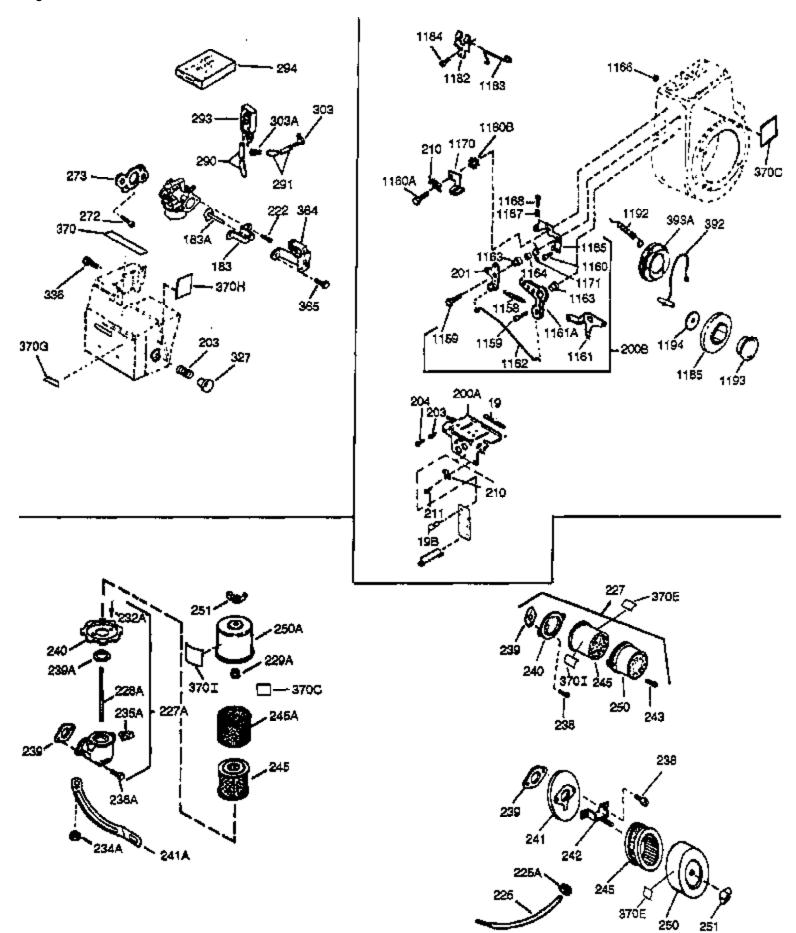

Ref #	Part Number	Qtv	Description
	30322	~-,	Nut & Lockwasher, 8-32
	650802		Screw, 1/4-20 x 5/8"
	650727		Screw, 5/16-18 x 1-3/4 (Use as requir ed)
	650713		Screw, 5/16-18 x 5/8"
	650737		Screw, 1/4-20 x 1/2" (Use as required)
	650738		Screw, 1/4-20 x 5/8 (Use as required)
	730152		Control Bracket (Incl.1158-1171)(As r eq.)
222A	700102		Pop Rivet (Can be purchased locally)
	730127		Air Cleaner Ass'y. (Incl. 238, 239, 242, 246, 250) (Use as
221	700121		required)
	28820		Screw, 10-32 x 1/2"
	27272A		* Gasket, Air cleaner
	33266		Bracket, Air cleaner
	33267		Bracket, Air cleaner
	33268		Element, Air cleaner
250B	33269A		Cover, Air cleaner
251	650513		Nut, Wing 1/4-20
290	29774		Fuel Line (Braided 8-1/4")(21cm)(As r equired)
290	30962		Fuel Line (Braided 32")(80cm)(As required)
291	30705		Fuel Line (Braided 16")(40cm)(As required)
293	33715		Impulse Fuel Pump NOTE: 34385 and 33715 (WIP)pumps
			are replaced by 35813 and 35800 (WIP) pumps. The 33010
			(3000 series) repair kit is still available. The 35791 repair kit
			is used with the 35813 and 35800 fuel pumps.
204	25701		
294	35791		Fuel Pump Repair Kit NOTE: 34385 and 33715 (WIP)pumps
			are replaced by 35813 and 35800 (WIP) pumps. The 33010
			(3000 series) repair kit is still available. The 35791 repair kit
			is used with the 35813 and 35800 fuel pumps.
301A	410144B		Fuel Cap (White Plastic)(Standard) (Use as required) (1.5"
			I.D.)
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as
			required) (1.5" I.D.)
0011	04040		. , , ,
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use
			as required) (1.5" I.D.)
301A	35355		Fuel Cap (Red Plastic)(1.75" I.D.)
	32958		Fitting, Fuel
	29673		* Gasket, Oil filler
	35941		Dipstick (Incl. 306)
	35392		Plug, Starter
	31291		Plug, Cover
	34346		Decal, Instruction
	35274		Decal, Instruction
	730226		SAE 5W30 4-Cycle Engine Oil (Quart)
	35824		Muffler Optional
	30312		Screw, 10-32 x 1/2"
	28820		Screw, 10-32 x 1/2"
	27070		Lockwasher
	33816		Hub & Screen Assy.
1100	00010		Tido a colecti Assy.



1 2 37A 64 72 90 94 95 96 100 102 103 129 131 131A 169 170 171 172 173 174 178 207 222A 238 239 241 242 245 250B 251 275	Part Number 35371 27652 30322 650802 27642 611091 33450 30886A 30845A 35135 650872 650872 650814 650727 650737 650738 650713 27896A 28423 28424 28425 35350 650128 29752 33878 28820 27272A 33266 33267 33268 33269A 650513 33280A 391026	Qty	Description Cylinder (Cl liner)(3-5/16")(Incl.2,2 0 & 72) Pin, Dowel Nut & Lockwasher, 8-32 Screw, 1/4-20 x 5/8" Plug, Oil drain Flywheel (w/ring gear) Lock Nut, 10-32 Spring, Governor bolt Bolt, Governor adjusting Solid State Assy. Stud, Solid state mounting Screw, Torx T-15, 10-24 x 1" Screw, 5/16-18 x 1-3/4 (Use as required) Screw, 1/4-20 x 1/2" (Use as required) Screw, 1/4-20 x 5/8 (Use as required) Screw, 5/16-18 x 5/8" * Gasket, Breather Body, Breather Element, Breather Cover, Breather Tube, Breather Tube, Breather Screw, 10-24 x 1/2" Nut & Lockwasher, 1/4-28 Link, Governor lever-to-throttle Pop Rivet (Can be purchased locally) Screw, 10-32 x 1/2" * Gasket, Air cleaner Bracket, Air cleaner Bracket, Air cleaner Bracket, Air cleaner Element, Air cleaner Cover, Air cleaner Nut, Wing 1/4-20 Muffler Muffler (Incl. 284, 284A & 416) (This spark arrester
276 277 277	31588 35741 650729 651002 410144B		mufflercan be used on any model.) Plate, Muffler locking Plate, Muffler locking Screw, 5/16-18 x 3-3/16" (Use as requ ired) Screw, 5/16-18 x 4-1/4" (Use as requi red) Fuel Cap (White Plastic)(Standard) (Use as required) (1.5" I.D.)
301A	33032		Fuel Cap (Red Plastic) (Spurt Resistant, Low Profile) (Use as required) (1.5" I.D.)
301A	34210		Fuel Cap (Red Plastic) (Spurt Resistant, High Profile) (Use as required) (1.5" I.D.)
306 310B 313A 338A 361 377 380	35355 29673 35941 33876 31291 30063 30547A 632242		Fuel Cap (Red Plastic)(1.75" I.D.) * Gasket, Oil filler Dipstick (Incl. 306) Gasket, Stator (Used only on Std. poi nt ign.) Plug, Cover Screw, Torx T-30, 1/4-20 x 1/2" Breaker Points (Use with Std. point i gn.) Carburetor (Incl. 184 & 379) (Refer to Division 5, Section A, page A4-4 for breakdown or Fiche 18B, Grid D-3)
421	730226		SAE 5W30 4-Cycle Engine Oil (Quart)

Ref # Part Number	Qty Description	
422 35824	Muffler Optional	