


ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.
VIEW 1 OF 3

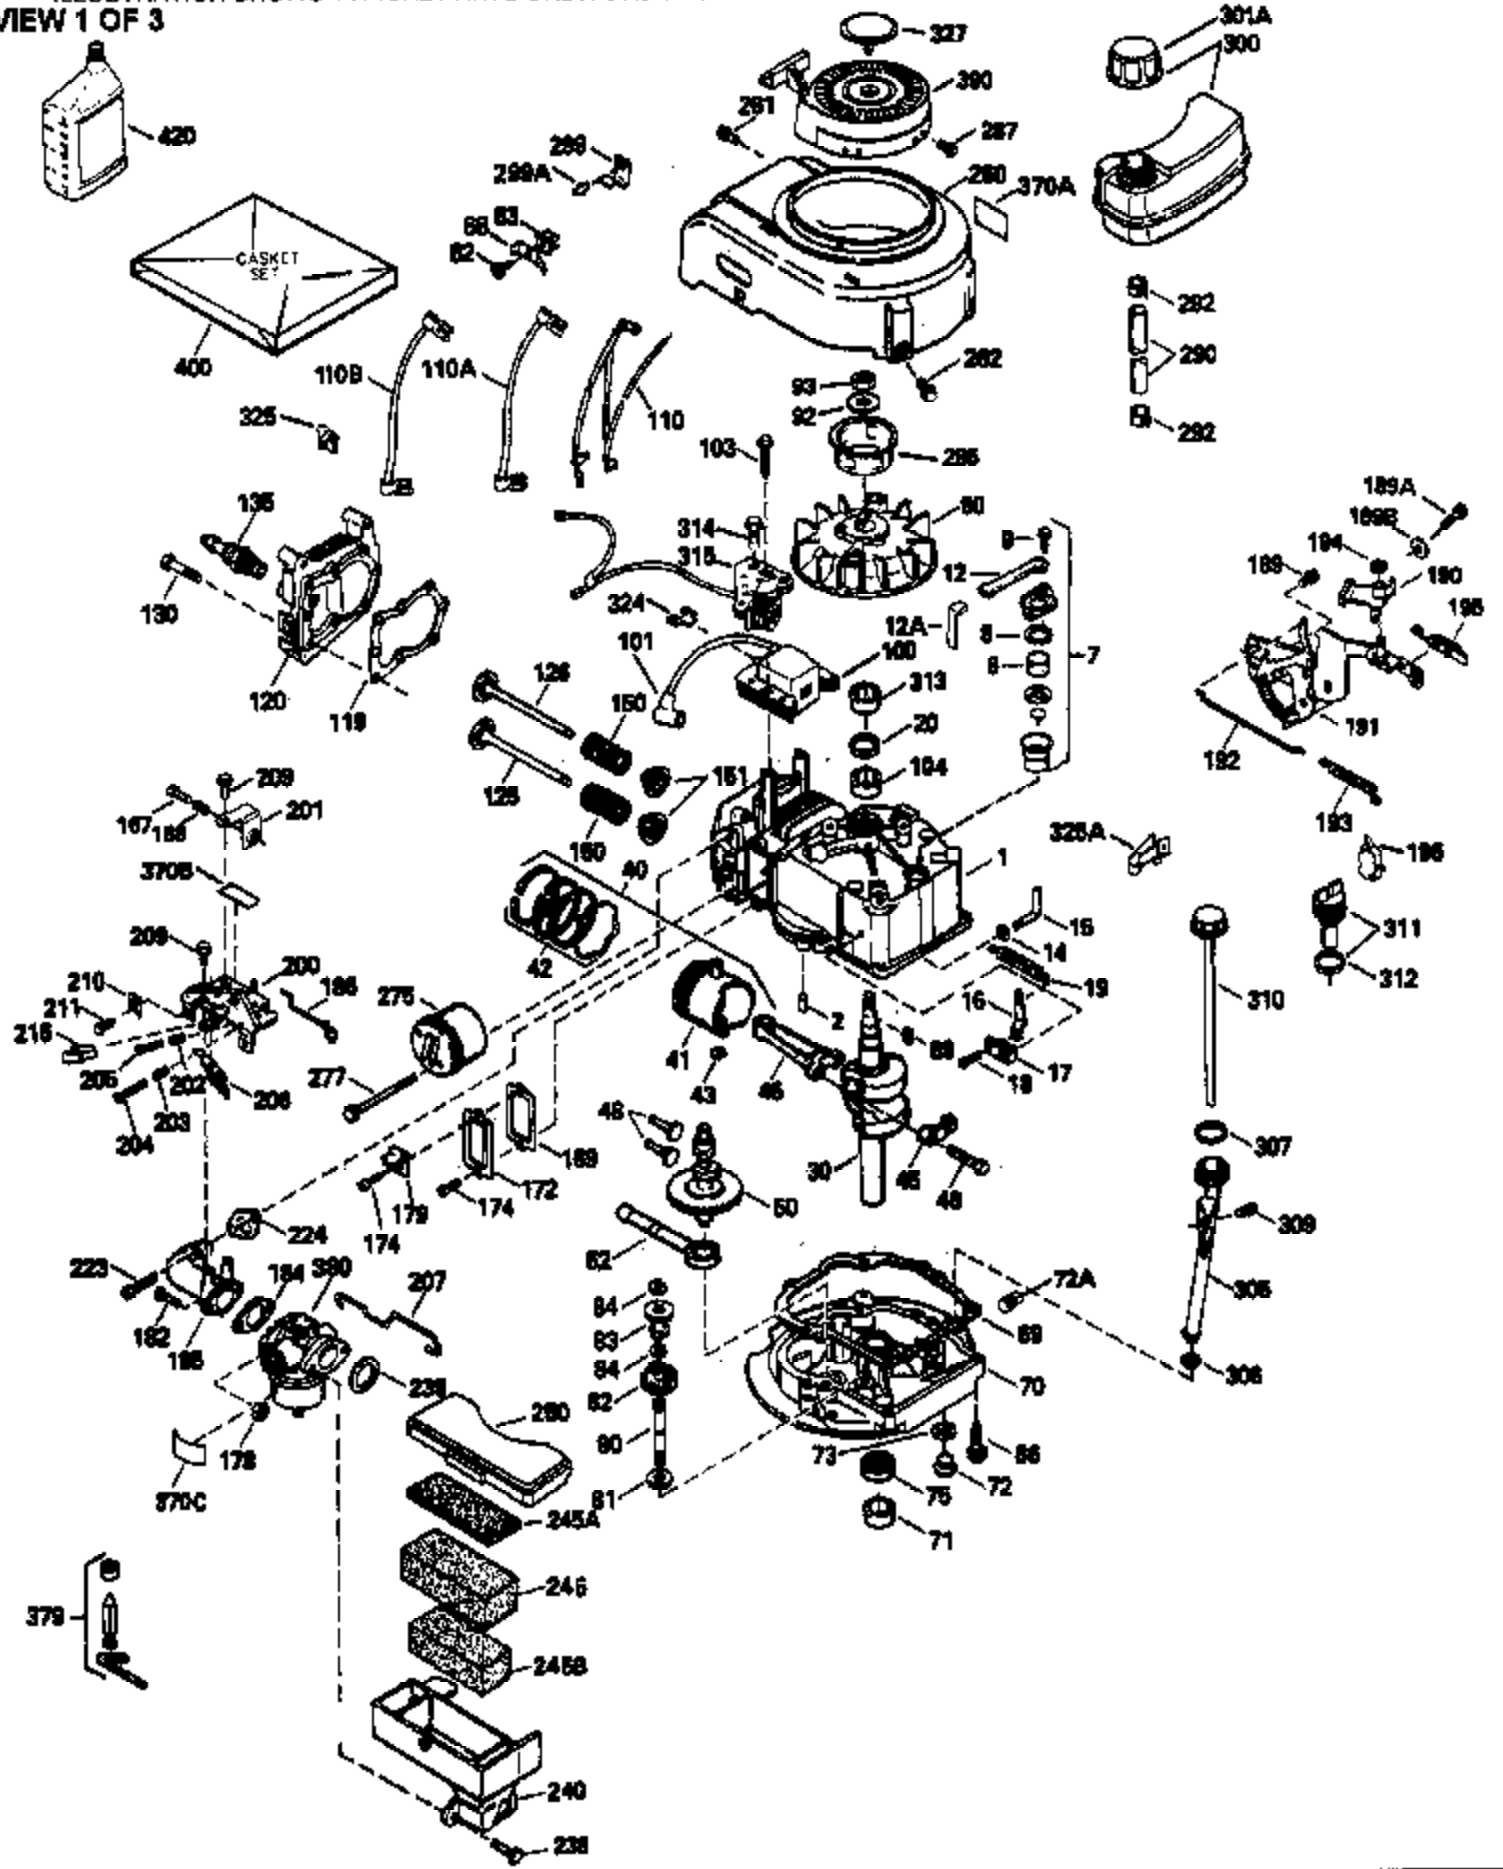


Ref #	Part Number	Qty	Description
1	35001	1	Cylinder (Incl. 2 & 20)
2	26727	2	Dowel Pin
6	33734	1	Breather Element
7	34214A	1	Breather Ass'y. (Incl. 6, 8 & 9)
8	33735	1	* Breather Gasket
9	30200	2	Screw, 10-24 x 9/16"
12	33886	1	Breather Tube
14	28277	1	Washer
15	30589	1	Governor Rod (Incl. 14)
16	31383A	1	Governor Lever
17	31335	1	Governor Lever Clamp
18	650548	1	Screw, 8-32 x 5/16"
19	31386	1	Extension Spring
20	32600	1	Oil Seal
30	34570A	1	Crankshaft
40	35544A	1	Piston, Pin & Ring Set (Std.)
40	35545A	1	Piston, Pin & Ring Set (.010" OS)
40	35546	1	Piston, Pin & Ring Set (.020" OS)
41	35541	1	Piston & Pin Ass'y. (Std.) (Incl. 43)
41	35542	1	Piston & Pin Ass'y. (.010" OS) (Incl. 43)
41	35543	1	Piston & Pin Ass'y. (.020" OS) (Incl. 43)
42	35547A	1	Ring Set (Std.)
42	35548A	1	Ring Set (.010" OS)
42	35549	1	Ring Set (.020" OS)
43	20381	2	Piston Pin Retaining Ring
45	32875	1	Connecting Rod Ass'y. (Incl. 46)
46	32610A	2	Connecting Rod Bolt
48	27241	2	Valve Lifter
50	33553	1	Camshaft (MCR)
52	29914	1	Oil Pump Ass'y.
69	35261	1	* Mounting Flange Gasket
70	34790C	1	Mounting Flange (Incl. 71, 72 & 75)
71	34837	1	Crankshaft Bushing
72	30572	1	Oil Drain Plug
75	27897	1	Oil Seal
80	30574	1	Governor Shaft
81	30590A	1	Washer
82	30591	1	Governor Gear Ass'y. (Incl. 81)
83	30588A	1	Governor Spool
84	29193	2	Retaining Ring
86	650488	6	Screw, 1/4-20 x 1-1/4"
89	611004	1	Flywheel Key
90	611044	1	Flywheel
92	650815	1	Belleville Washer
93	650816	1	Flywheel Nut
100	34443A	1	Solid State Ignition
101	610118	1	Spark Plug Cover
103	650814	2	Screw, Torx T-15, 10-24 x 1"
104	34836	1	Crankshaft Bushing
110	35017	1	Ground Wire
110A	34970	1	Ground Wire
119	33015A	1	* Cylinder Head Gasket
120	34342	1	Cylinder Head
125	34776	1	Exhaust Valve (Std.) (Incl. 151)
125	29315C	1	Exhaust Valve (1/32" OS) (Incl. 151)
126	29314B	1	Intake Valve (Std.) (Incl. 151)
126	29315C	1	Intake Valve (1/32" OS) (Incl. 151)
130	6021A	8	Screw, 5/16-18 x 1-1/2"

Ref #	Part Number	Qty	Description
	135 35395	1	Resistor Spark Plug (RJ19LM)
	150 31672	2	Valve Spring
	151 31673	2	Valve Spring Cap
	167 32924	1	Speed Adjusting Spring
	168 650688	1	Screw, 10-32 x 1"
	169 27234A	1	* Valve Cover Gasket
	172 32755	1	Valve Cover
	174 650128	2	Screw, 10-24 x 1/2"
	178 29752	2	Nut & Lock Washer, 1/4-28
	182 6201	2	Screw, 1/4-28 x 7/8"
	184 26756	1	* Carburetor To Intake Pipe Gasket
	185 33004A	1	Intake Pipe (Incl. 224)
	186 34337	1	Governor Link
	189A 650831	2	Screw, 1/4-20 x 15/32"
	189B 650841	2	Washer
	190 35831	1	Brake Lever
	191 35015B	1	S.E. Brake Bracket (Incl. 195)
	192 34966	1	Brake Control Link
	193 34965	1	Brake Spring
	194 32309	1	Retaining Ring
	195 610973	1	Terminal
	200 33155A	1	Control Bracket (Incl. 206)
	201 33150	1	Over-ride Control Bracket
	206 610973	1	Terminal
	207 34336	1	Throttle Link
	209 30200	2	Screw, 10-24 x 9/16"
	210 27793	1	Conduit Clip
	211 28942	1	Screw, 10-32 x 3/8"
	223 650451	2	Screw, 1/4-20 x 1"
	224 34690A	1	* Intake Pipe Gasket
	225 35043	1	Carburetor Tube
	235 35533	1	Air Cleaner Elbow Fitting
	239 34338	1	* Air Cleaner Gasket
	245A 34783	1	Air Cleaner Filter
	245 34782	1	Air Cleaner Filter
	250 35535	1	Air Cleaner Cover
	260 35564	1	Blower Housing
	261 30200	2	Screw, 10-24 x 9/16"
	262 650831	2	Screw, 1/4-20 x 1/2"
	275 391019	1	Muffler
	277 650795	2	Screw, 1/4-20 x 2-1/4"
	285 35000	1	Starter Cup
	287 650884	2	Screw, 8-32 x 1/2"
	290 30705	1	Fuel Line
	292 26460	3	Fuel Line Clamp
	300 34114D	1	Fuel Tank (Incl. 292 & 301)
	305 35577	1	Oil Fill Tube
	306 34265	1	"O" Ring
	307 35499	1	"O" Ring
	309 650562	1	Screw, 10-32 x 1/2"
	310 35578	1	Dipstick
	313 34080	1	Spacer
	327 35392	1	Starter Plug
	370A 34346	1	Lubrication Decal
	380 632090	1	Carburetor (Incl. 184)
	390 590635	1	Rewind Starter

Ref #	Part Number	Qty	Description
400	33238D	1	*Gasket Set (Incl. items marked PK in notes) Incl. (1) each of the following: 26754A, 26756, 27234A, 27272A, 28833, 29673, 29953C, 30081A, 31619A,31688A, 32643A, 32649A, 32752A, 32760A, 33015A, 33051, 33670A, 33735,34338, 34690A, 35261, 35815
420	730225	1	SAE 30 4-Cycle Engine Oil (Quart)







ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.
VIEW 2 OF 3

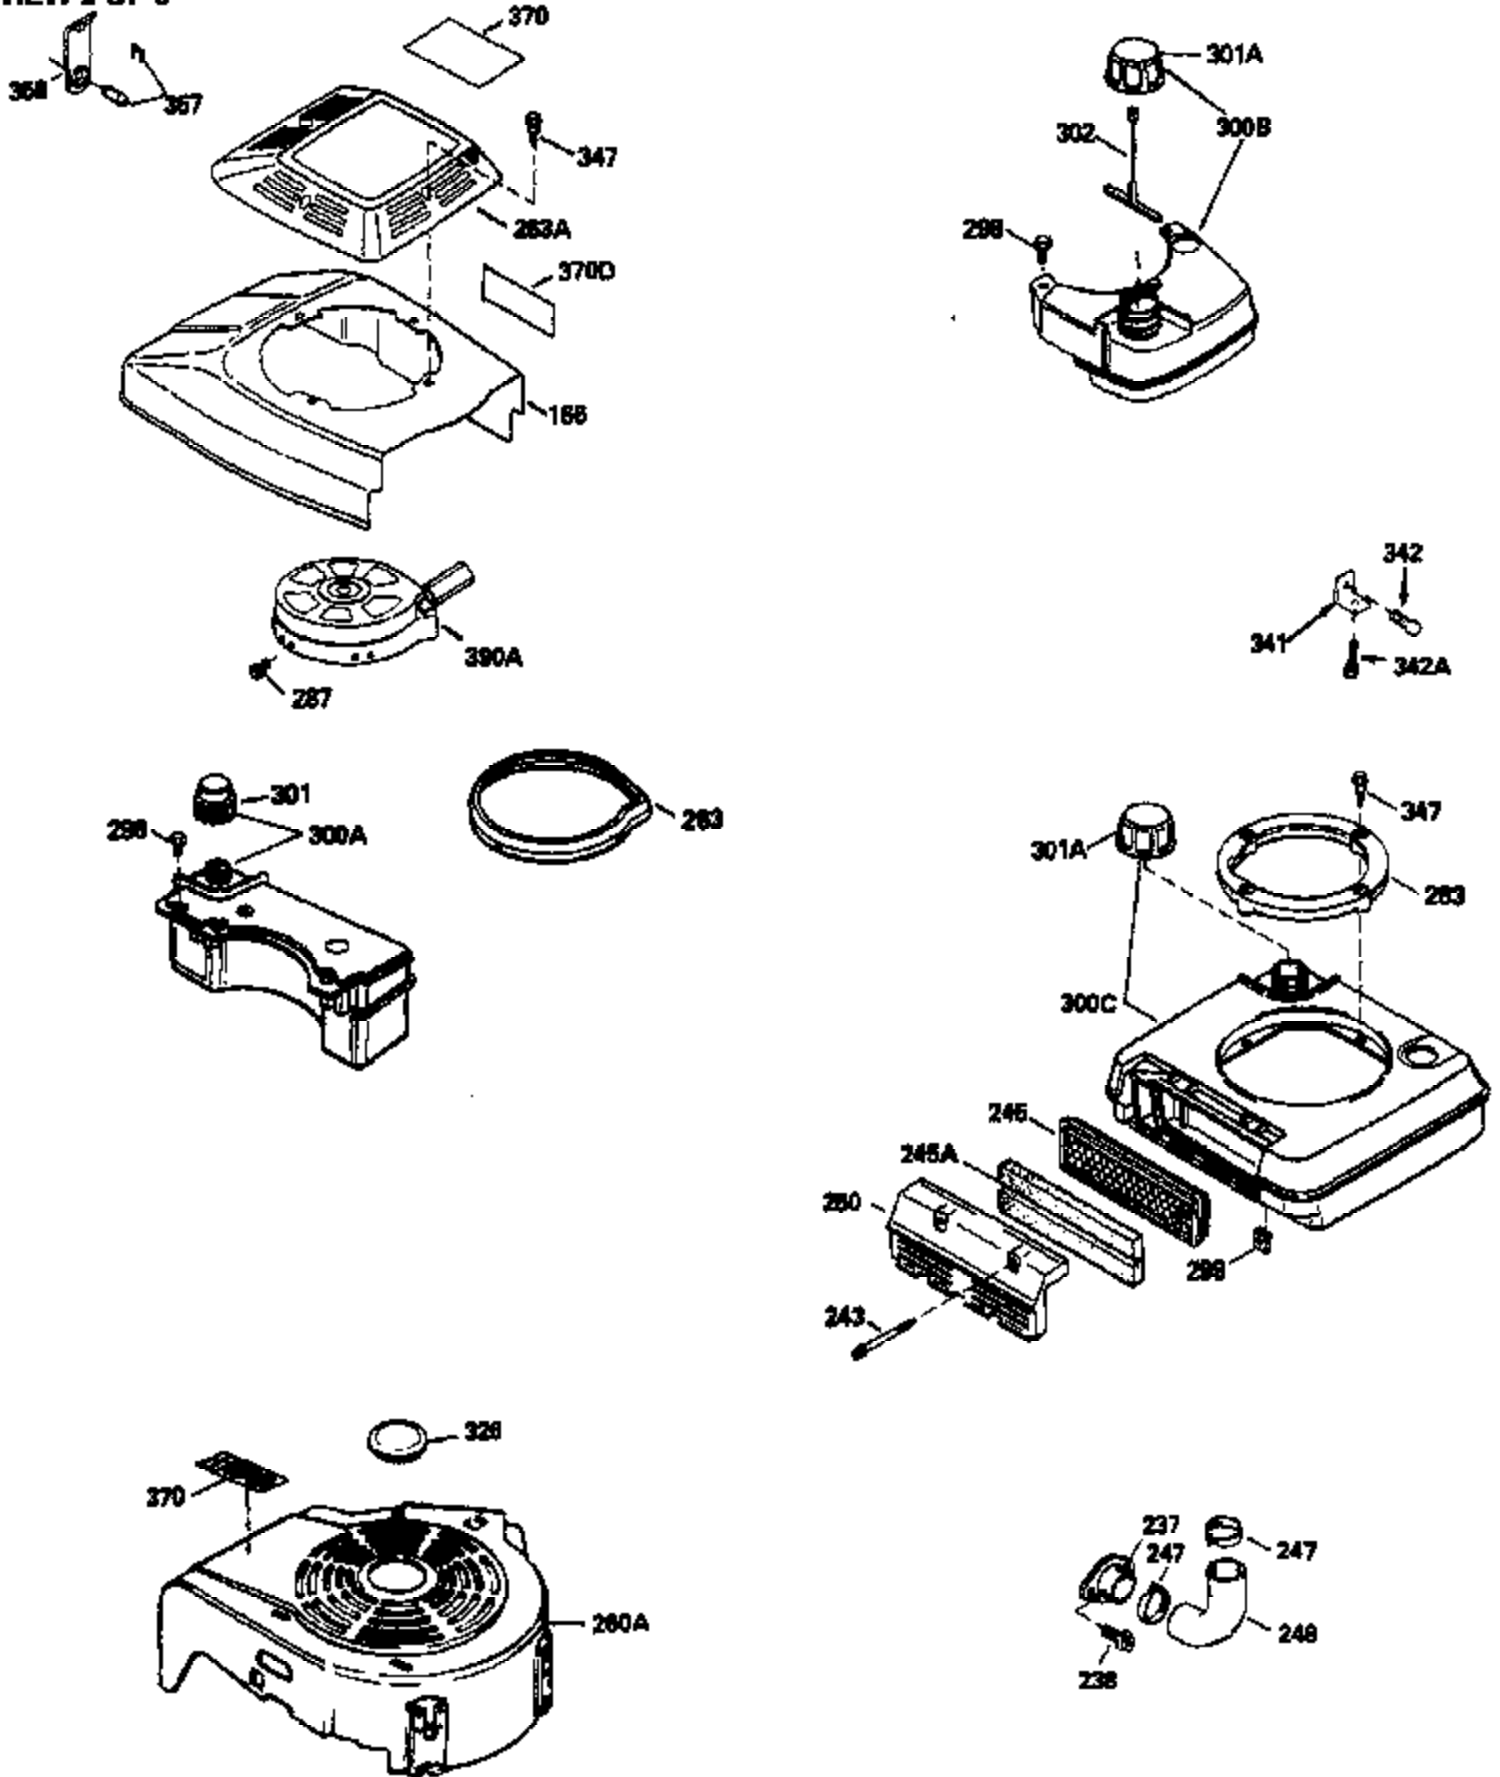

Ref #	Part Number	Qty	Description
225	35043	1	Carburetor Tube
235	35533	1	Air Cleaner Elbow Fitting
243	650940	2	Screw, 10-32 x 3/4"
245	34782	1	Air Cleaner Filter
245A	34783	1	Air Cleaner Filter
250	35535	1	Air Cleaner Cover
287	650884	2	Screw, 8-32 x 1/2"
298	28763	3	Screw, 10-32 x 35/64"
301	33032	1	Fuel Cap
370	34704	1	Instruction Decal

ILLUSTRATION SHOWS TYPICAL PARTS ONLY. ORDER BY PART NUMBER. PARTS NOT LISTED ARE SUPPLIED BY OEM.

VIEW 3 OF 3

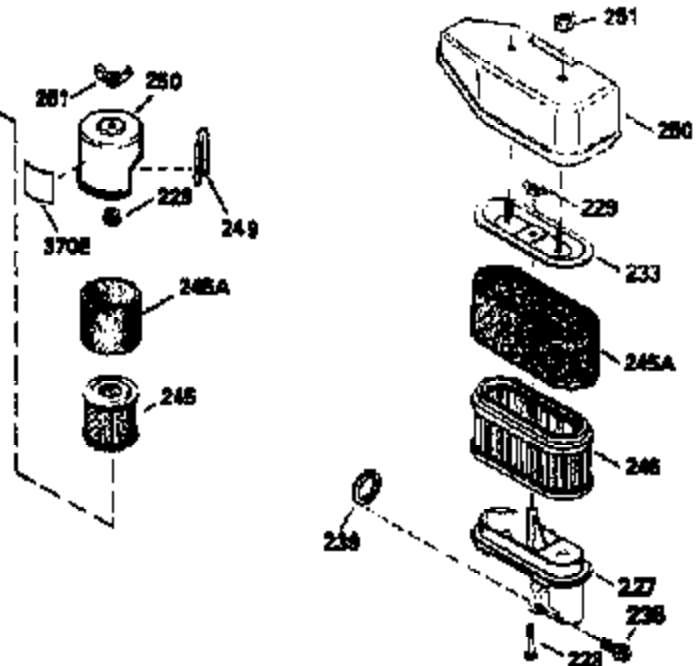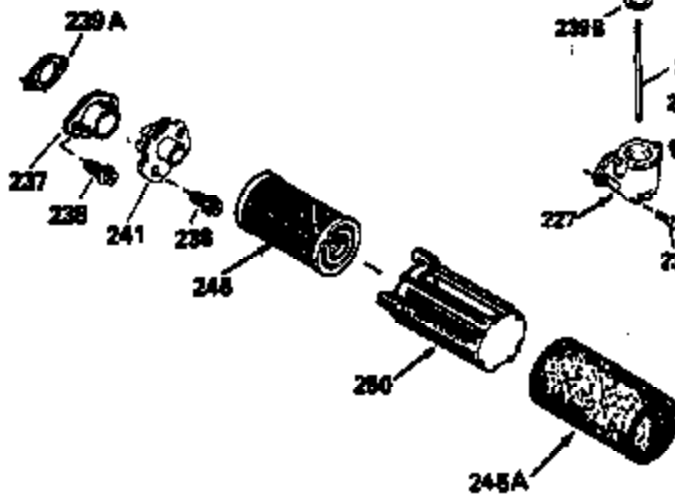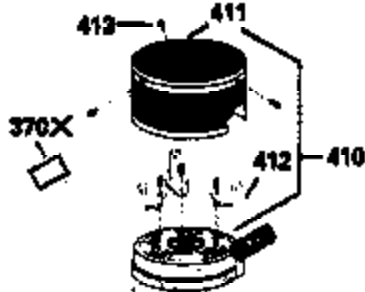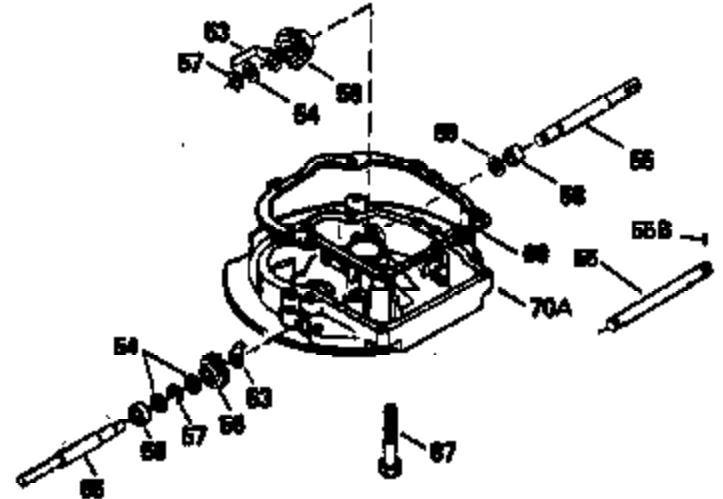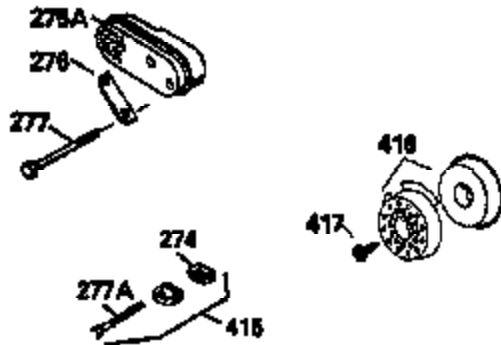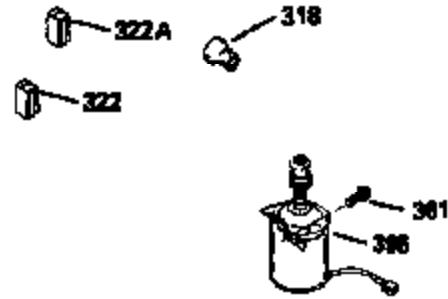

Ref #	Part Number	Qty	Description
	19 31386	1	Extension Spring
	69 35261	1	* Mounting Flange Gasket
	182 6201	2	Screw, 1/4-28 x 7/8"
	185 33004A	1	Intake Pipe (Incl. 224)
	186 34337	1	Governor Link
	223 650451	2	Screw, 1/4-20 x 1"
	225 35043	1	Carburetor Tube
	227 35917	1	Air Cleaner Elbow Ass'y.
	228 650826	1	Stud
	229 650825	1	Nut & Lock Washer, 1/4-20
	232 xxxxx	2	Pop Rivet (Can be purchased locally)
	233 34699	1	Air Cleaner Bracket
	235 35533	1	Air Cleaner Elbow Fitting
	239 34338	1	* Air Cleaner Gasket
	239A 35815	1	Air Cleaner Gasket
	239B 34698A	1	Air Cleaner Gasket
	245 34782	1	Air Cleaner Filter
	245A 34783	1	Air Cleaner Filter
	249 35536	1	Air Cleaner Cover Seal
	250 35535	1	Air Cleaner Cover
	251 650513	1	Wing Nut
	260 35564	1	Blower Housing
	276 33753	1	Locking Plate
	277 650795	2	Screw, 1/4-20 x 2-1/4"